



Body Parts Manual

DRAFT



Trademaster

Read First: Top Tips on Using This Online Manual

Browse pages with Bookmarks (hyperlinks) or thumbnails

A **bookmark**, at the left of the screen, is a hyperlink to a page. From any page in this document, you can use bookmarks to jump to any section heading.

To jump to a topic by using its bookmark, point to the bookmark name, and when the arrow becomes a pointing hand, click on the name. If a triangle (or + sign) appears to the left of the bookmark, click the triangle (or + sign) to show or hide subordinate bookmarks.




Thumbnails are visual icons of the actual pages. After selecting the thumbnail view button (Acrobat Reader ver. 3.0) or tab (ver. 4.0), you can quickly browse for parts sections just by the “look” of the page. Click on the appropriate thumbnail to view that page.




Use the Zoom and Fit tools for magnification of page sections

 Select the Zoom tool. (**In ver. 4.0, when the Hand tool is selected, you can temporarily change to the Zoom tool by holding down the Ctrl key and the space bar at the same time.**) Click and drag to draw a rectangle around the area you want to magnify.



To return to an overview, you can click on one of the following buttons:

 - The Fit Page button scales the *entire* page to display within the main window.
- The Fit Width button scales the page *width* to display within the main window.



Use the Text tool for copying selected text into other applications

You can select text in a PDF document, copy it to the Clipboard, and paste it into another application. **By pasting parts descriptions and numbers into your email or parts form template, you can order parts much faster than through phoning or faxing.** To select text and copy it to the Clipboard:

1. Click the Text Selection tool.
2. Click and drag over the text you want to select. When you release the mouse button, the selected text stays highlighted.
3. Hold down the Ctrl key and press C on the keyboard to copy the selected text to the Clipboard.



Find parts or procedures with the Find tool

Use the Find tool to search for a fragment of a word, a complete word, or multiple words in the active document. To **find** a word (e.g., a part name):

1. Click the Find tool.
2. In the Find What text box, enter the text to be found and click Find. When the program finds the text, the Find dialog box closes and the page containing the text is displayed with the text highlighted.
3. To find the **next occurrence** of the word, press F3, press Ctrl + G, or reopen the Find dialog box and click Find Again.



Revision Control

Revision (DRAFT)

JUNE 2003

Important Notices

©2003, Utilimaster®

Printed in U.S.A.

Title: *Trademaster—Body Parts Manual*

Utilimaster Corporation attempts to provide information that is accurate, complete, and useful. All information contained in this manual is based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice. Should you find inadequacies in the text, please send your comments to the following address:

Utilimaster
Attn: Designer of Technical Publications
65906 State Road 19, P.O. Box 585
Wakarusa, Indiana, 46573-0585, U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

This material is confidential and the property of Utilimaster. It is shared with your company for the sole purpose of helping you with the operation of the described equipment.

Utilimaster makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Utilimaster shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Utilimaster expressly disclaims all responsibility and liability for the installation, use, performance, maintenance, and support of third-party products. Customers are advised to make their independent evaluation of such products.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Utilimaster.

Utilimaster®, Trademaster®, and Aerocap® are registered trademarks of Utilimaster Corporation. All other trademarks are products of their respective companies.

Browse the award-winning web site www.utilimaster.com for more information about Utilimaster and its products.

Contents

<i>Revision Control</i>	3
<i>Important Notices</i>	3
<i>Introduction</i>	6
<i>Decoding Part Numbers</i>	6
<i>Finding Part Numbers</i>	6
<i>Item Numbers</i>	6
<i>Part Number with a Suffix</i>	7
<i>Part Descriptions</i>	7
<i>Vehicle Identification Number (VIN)</i>	8
<i>Unit (or Body) Serial Number and Federal Certification Label</i>	8
<i>Work Order Numbers</i>	8
<i>Ordering Parts</i>	9
<i>How to Order</i>	9
<i>Returns</i>	9
<i>Customizable Parts Order Form</i>	9
<i>Faxable Parts Order Form</i>	11
<i>Filing Warranty Claims</i>	11
<i>Reporting Safety Defects (U.S. Only)</i>	12
<i>More Information</i>	13
<i>Utilimaster Quick Reference Parts Guide</i>	13
<i>Utilimaster Glossary of Terms</i>	13
<i>Utilimaster Body Service Manual</i>	13
<i>Download Files</i>	13
<i>Contact Utilimaster</i>	13

<i>Diagrams and Parts Lists</i>	14
1—Subframe and Cargo Floor	14
2—Rear Bumpers	16
3—Rear Structure, FRP	18
3—Rear Structure, Steel Frame	20
4—Doors, Rear Swing	22
5—Doors, Compartment	24
6—Sidewalls	26
7—Side Compartments	28
8—Front Wall, Narrow Body	30
8—Front Wall, Aerocap	32
9—Roof Assembly	34
9—Roof Front Caps	36
10—Electrical Harnesses	38
11—Options, Shelving	42
11—Options, Central Locking System	46
11—Options, Roof Ladder	48
12—Cabover Option	50
<i>Appendixes</i>	52
06402141—Roof Metal	52
22800102—Front Sheet Radius	53
53301006—FRP Sidewalls	53
54300521—FRP Front Wall with Aerocap	54
54301004—FRP Front Walls	54
<i>Index</i>	55

Introduction

This manual lists parts for Utilimaster Trademaster bodies. It contains exploded-view drawings and parts lists to aid in ordering replacement parts. This manual covers only those assemblies manufactured by or installed by Utilimaster® Corporation. Items such as chassis and drive train components or certain interior furnishings are covered by separate manufacturer-supplied information.



All information, specifications, and illustrations contained in this manual are based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice.

Decoding Part Numbers


Finding Part Numbers

This manual contains exploded-view drawings and parts lists for standard factory parts. The drawings illustrate the various parts and their general locations. The parts list accompanying a drawing describes each part and gives the corresponding Utilimaster part number. Some parts may appear on multiple drawings and lists.

Item Numbers

Drawings have item numbers identifying each part in the drawing:

- Item numbers lead with the section number (e.g., all **8.X** numbers are Front Wall parts).
- The item numbers are listed numerically in the parts lists (e.g., **8.1**, **8.2**, **8.3**) followed by the Utilimaster part number and part descriptions.
- The corresponding side of the vehicle (if applicable) is identified by a **RH** (Right Hand) or **LH** (Left Hand) suffix. (See the directional icon here and on the parts list pages.)
- A numerical suffix (e.g., **1.5.1**) indicates a part variation, a component of the preceding part, or fasteners for the preceding part.
- Other item number suffixes might indicate vehicle height, width, or other information that specifies that part (e.g., **1.9-16**).
- Parts that are not shown have the **X.NS** suffix.
- Assembly numbers (**X.Ref**) are listed only for Utilimaster parts representatives to cross-reference.

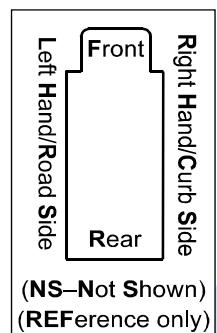

Part Number with a Suffix

A **part number with a suffix** might require you to include more information:

- The **Width** suffix (e.g., 12345678-W) is asking for the **body width**.
- The **Height** suffix is asking for the **body height**.
- The **Length** suffix needs the **length of the part** being replaced.
- An **Appendix** suffix requires cross-referencing the number with an appendix in the back of this manual. (See the Table of Contents.)
- A part number with a **Chart** suffix depends on various body options to accurately replace the part. Customer Service will consult your vehicle body options from your supplied Body Serial Number.

In some cases specific part numbers are replaced by a code.

- **Parts Guide** refers to the *Utilimaster Quick Reference Parts Guide*. (See the More Information section.)
- **BSNR** means the **Body Serial Number is Required**. (See the Utilimaster Body Serial Number section.)


Our Customer Service Department will gladly help if you need assistance.

Part Descriptions

Two asterisks (**) in front of the part description indicates that this part number is not currently used in Utilimaster production. These parts may take longer to deliver or may be replaced (superseded) by a different part number.



*LA-5
Vehicle Identification Number*

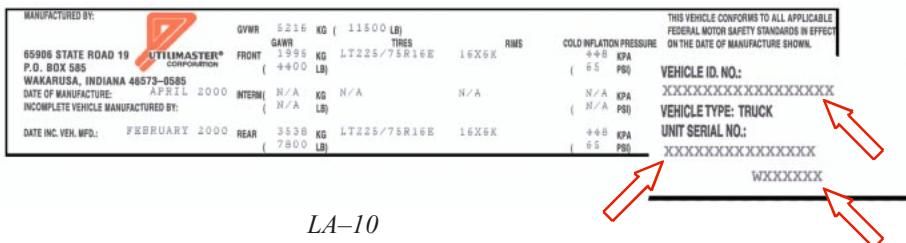

*LA-10
Federal Certification Label*



*LA-20
Label on C-post*

Vehicle Identification Number (VIN)

The chassis **Vehicle Identification Number (VIN)** is the legal identifier for this vehicle and is the number recorded in the license plate registration. The VIN appears on a small metal plate on the dash on the driver's side. You can read the VIN if you look through the windshield. The number is also recorded on the Federal Certification Label. (See Illustrations LA-5 and LA-10.)

Unit (or Body) Serial Number and Federal Certification Label

The **Utilimaster Unit (or Body) Serial Number** is recorded on the **Federal Certification Label**. This label is a plastic decal (about 11" long and 2" high) that contains a variety of manufacturing information (including the VIN). This label is found on the C-post. (See Illustration LA-10 and LA-20.)

Work Order Numbers

A **Work Order Number** appears below the **Unit Serial Number** on the **Federal Certification Label** and is also stamped on the left-hand base rail. This number can be used when the body is no longer mounted on the original chassis. (See Illustrations LA-10 and LA-30.)



*Illustration LA-30
Work Order Number*

Ordering Parts

How to Order

To order parts for this vehicle, gather the following information:

- Model and year of vehicle (200x-Customer name).
- Chassis VIN or Utilimaster Body Number (see page 8).
- Complete shipping address.
- Preferred method of shipping.
- Complete description of all the parts necessary (see parts lists).
- Method of payment.

NOTE: Customer Service prefers payment by Visa, MasterCard, Discover, or American Express credit cards. Purchase Orders from customers with established open accounts are also accepted.



Then contact Utilimaster Customer Service by using one of the following methods:

- Email your order to CustSvc@Utilimaster.com. (See Customizable Parts Order Form below.)
- Fax your order to **574-862-7637**.
- Call **800-237-7806** (574-862-3219) and ask for the Parts Department.
- Mail or express service your order to the following address:

Utilimaster Corp.
Attn: Parts Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

Returns

To return parts for credit, call the Customer Service Department for prior authorization. All returns must be shipped prepaid freight. A restocking fee will be charged to all returns. Special-order parts are not returnable.

Customizable Parts Order Form

The **Parts Order Form** on the next page can be photocopied from this manual. Then one of the copies can be filled in with the relevant information and faxed or mailed to Utilimaster Customer Service.

You can also download a customizable form template file from the Utilimaster web site www.utilimaster.com. That template is similar to the form on the next page, but it has a header that you can customize with your name and address. Then, to order parts, you only have to enter the specific information about the vehicle—saving retyping the same address information repeatedly. After completing the form information, the file can be emailed as an attachment. That form can also be used for mailing or faxing.

Service Center Name _____

Contact Person _____

Email _____

Address _____

City, State, Zip _____

Phone _____

Fax _____

To **Utilimaster Parts Department**
65528 State Road 19, P.O. Box 585
Wakarusa, IN 46573-0585, U.S.A.

FAX 574-862-7637

Date _____

Preferred Shipping _____

(i.e., type of carrier and service priority)

Re **Parts Order** _____
or Request for Quote Only _____

Credit Card # _____

(or PO# for customers with open accounts)

Special Instructions _____
(e.g., different shipping address)

Signature _____


Service center representative's signature

Vehicle Model		Utilimaster Body S/N or Chassis VIN		Application
				Maintenance <input type="checkbox"/> Accident <input type="checkbox"/> or Warranty <input type="checkbox"/>
Order Item #	Utilimaster Part Number	Part Description	Quantity	Comments (optional)
1.				
2.				
3.				
4.				
5.				
6.				
7.				
8.				
9.				
10.				
11.				
12.				
13.				
14.				
15.				
16.				

Filing Warranty Claims

If a problem on the Utilimaster body is caused by a defect in materials or workmanship, it will be covered by our Limited Warranty. Chassis, engine, tires, and battery failures are covered by the individual manufacturers.

Claims must meet the requirements listed below. Failure to meet these requirements may result in a denied or delayed claim.

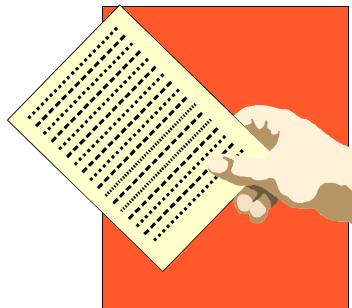

Complete a repair order with the following information:

- Owner's and/or service facility's name.
- Service center representative's signature.
- Chassis VIN or Utilimaster Body Serial Number (see page 8).
- Date vehicle was repaired.
- Mileage at time of failure.
- Itemized description of the problem.

Complaint

Cause of failure (if known)

Correction (describe in detail)

- Service center labor rate and total time of repair.
- Total claim amount, including cost of parts, labor, miscellaneous charges, and sales tax (if applicable).
- Your claim or repair order number.

NOTE: The claim or repair order number is the number used to match Utilimaster payment with the work done. It will be noted on your payment.

- Utilimaster authorization number (for repairs costing over \$150 U.S.).

The claim can be mailed, faxed, emailed, or performed on-line on our web site (assuming all required information is included).

- Warranty claims should be **mailed** to:

Utilimaster
Attn: Warranty Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

- Alternately, you can **fax** your claim (if no photographs are involved) with the above information to **574-862-7637**. (The resolution of the received copies must be acceptable, or you will be asked to mail your hard copies.)
- Or you can **email** your claim with the above information to **Warranty@Utilimaster.com**. (You can download a customizable **Warranty Claim Form template** from the Utilimaster web site **www.utilimaster.com**. The template has a header that you can customize with your name and address. Then, to file a claim, you only have to enter the specific information about the vehicle—saving retying the same address information repeatedly. After completing the form information, the file can be emailed as an attachment. This form can also be used for mailing or faxing.)

Other claim requirements:

- Any repairs **over \$150 U.S. or for structural warranty require prior authorization** from Utilimaster, and that number must appear on the repair order.
- Any claim that is not **legible and complete** will be returned for completion.
- **All paint claims** require pictures, estimates, and prior authorization.
- **Shipping damage claims** also require pictures, estimates, and prior authorization. The damage must also be noted on the Delivery Acceptance form. This form requires the signature of the carrier driver.
- **Sublet work** must have the sublet repair order attached to the service facility's repair order that is being submitted.
- Claims must be **submitted within 30 days** after the repair is completed.

If the return of a failed part is requested, contact a Utilimaster warranty representative for a return goods authorization (RGA). Please reference that number with the returned part and enclose a copy of the repair order. Shipping charges should be entered on the same repair order that is submitted for warranty payment. COD charges for a returned parts will not be accepted, and the part will be returned.

Claims are paid semimonthly. Utilimaster generally does not pay sales tax on claims. If you do not have our tax exemption number on file, please call 800-528-3454 or 574-862-4561 and ask for the accounting department to obtain the number.

Reporting Safety Defects (U.S. Only)

If you believe that your vehicle has a defect that could cause a crash, injury, or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA), in addition to notifying Utilimaster.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Utilimaster.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at **1-800-424-9393**; in the Washington, D.C., area call **202-366-0123** or write to:


**NHTSA
U.S. Department of Transportation
400 Seventh Street
Washington, DC 20590**

You can also obtain other information about motor vehicle safety from the Hotline.

More Information


Utilimaster Quick Reference Parts Guide

Easily find commonly replaced parts for most Utilimaster vehicles in the *Utilimaster Quick Reference Parts Guide*. This illustrated document includes more part numbers for bumpers, door hardware, electrical components, mirrors, vents, mud flaps, roll-up door parts, and many other parts. It also includes sealants and repair kits.

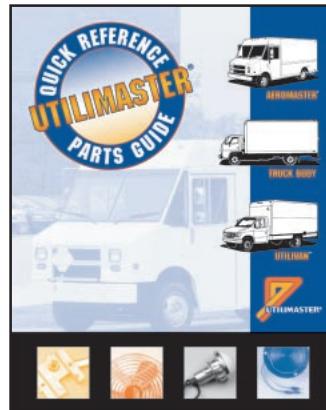


Utilimaster Glossary of Terms

If you are not familiar with some of the terminology used in this manual, you can find many Utilimaster and industry associated terms and definitions in the *Utilimaster Glossary of Terms—Body Information Guide*.

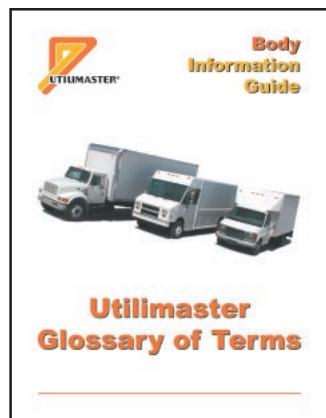

Utilimaster Body Service Manual

Read about routine maintenance procedures, troubleshooting, proper adjustment methods, vehicle repair, aftermarket upgrades, and much more in the *Utilimaster Vehicles—Body Service Manual*.

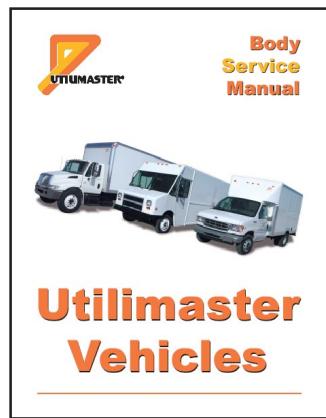

Download Files

Many support documents are downloadable (as Adobe® Acrobat® PDF files) from our web site at www.utilimaster.com. Click on the Ordering Parts button, to access the download page. To view the files you must have the Adobe Acrobat Reader version 3.0 or higher installed on your computer. Acrobat readers are available free for all leading computer operating systems on the Adobe web site (www.adobe.com).

Contact Utilimaster

Browse our site for more information about Utilimaster and its products or contact Utilimaster Customer Service by using one of the following methods:


- Call **800-237-7806** (or 574-862-3219).
- Fax to **574-862-7637**.
- Email to CustSvc@Utilimaster.com.
- Mail to the following address:

Utilimaster
Attn: Customer Service Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

Diagrams and Parts Lists

1—Subframe and Cargo Floor

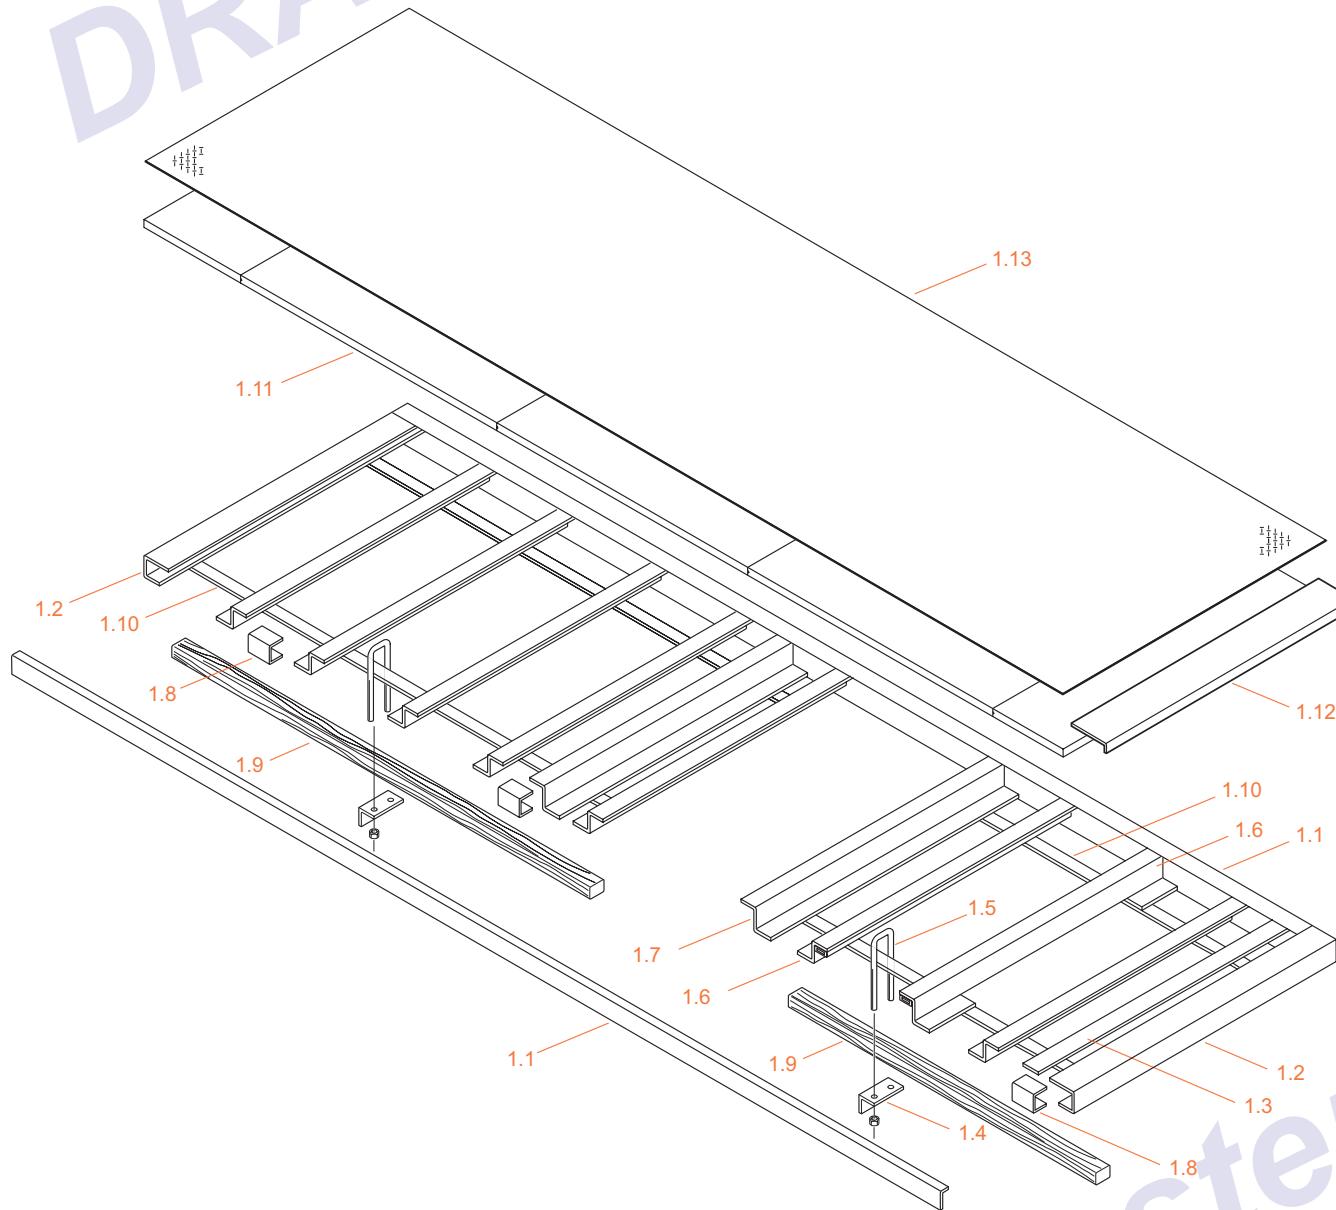

Subframe


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
1.0		Trademaster Subframe and Cargo Floor	
1.1-12	22816924	PERIM RAIL 12GA 1.5 x 3.0 x 148.38	
1.1-14	22817397	PERIM RAIL 12GA 1.5 x 3.0 x 172.38	
1.2	22816941	XMBR FRT & RR 10GA x 2.88 x 48.63	
1.3	22817082	STEEL 10GA x 2.5 x 48	
1.4	22300309	BAR ANGLE TIE .38 x 2 x 2 x 6 HP	
1.5.1	11006002	U-BOLT 5/8 x 3.5 x 13	
1.5.2	11008511	WASHER 5/8 LOCKPLAIN	
1.5.3	11007115	NUT HEX 5/8-11 PLAIN	
1.6	22817551	XMBR WLD "Z" 2.88 x 48.63 GM RR TNK	
1.7	22816940	XMBR "Z" 10GA x 2.88 x 48.63	
1.8	22816141	KEEPER WOOD RISER	
1.9-16	02805065	OAK MOUNTING 1.62 x 2 x 16.0	
1.9-30	02805066	OAK MOUNTING 1.62 x 2 x 30.0	
1.9-42	02804747	OAK MOUNTING 1.62 x 2 x 42.5	
1.9-46	02804996	OAK MOUNTING 1.62 x 2 x 46.5	
1.9-50	02805067	OAK MOUNTING 1.62 x 2 x 50.0	
1.9-62	02804593	OAK MOUNTING 1.62 x 2 x 62.5	
1.9-84	02805068	OAK MOUNTING 1.62 x 2 x 84.0	
1.9-82	02804997	OAK MOUNTING 1.62 x 2 x 82.5	
1.9-144	02805363	OAK MOUNTING 1.62 x 2 x 144.0	
1.10	01701249-Length	BAR STL 3/8 x 2 x Length HR	
1.11	02804823	PLY S/PNE T&G 1-1/8 x 48.0 x 47.94	
1.12	06922681	THRSHLD RR DR .100 x 8 x 48.75	
1.13		TREADPLATE	
1.Ref	51351005	12'S/FRM WELDMENT TRADEMASTER	
1.Ref	51351010	14'S/FRM WLDmnt TMSTR GM RR TANK	
1.Ref	51351008	14'SUBFRAME WELDMENT TRADEMASTER	
1.Ref	51351011	U-BOLT MNTNG OAK L/OUT 14'S/FRM GM	
1.Ref	51351009	U-BOLT MOUNTING OAK LAYOUT 14'S/FRM	
1.Ref	51351006	L/OUT U-BOLT MOUNTING TRADEMASTER 12'	
1.Ref	52351002	12'PLYWOOD FLOOR L/OUT TRADEMASTER	
1.Ref	52351004	14'PLYWOOD FLR LA YOUT (RR TANK) GM	

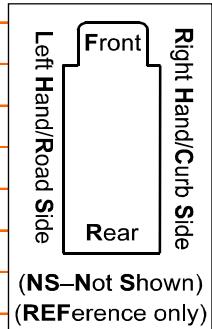

2—Rear Bumpers

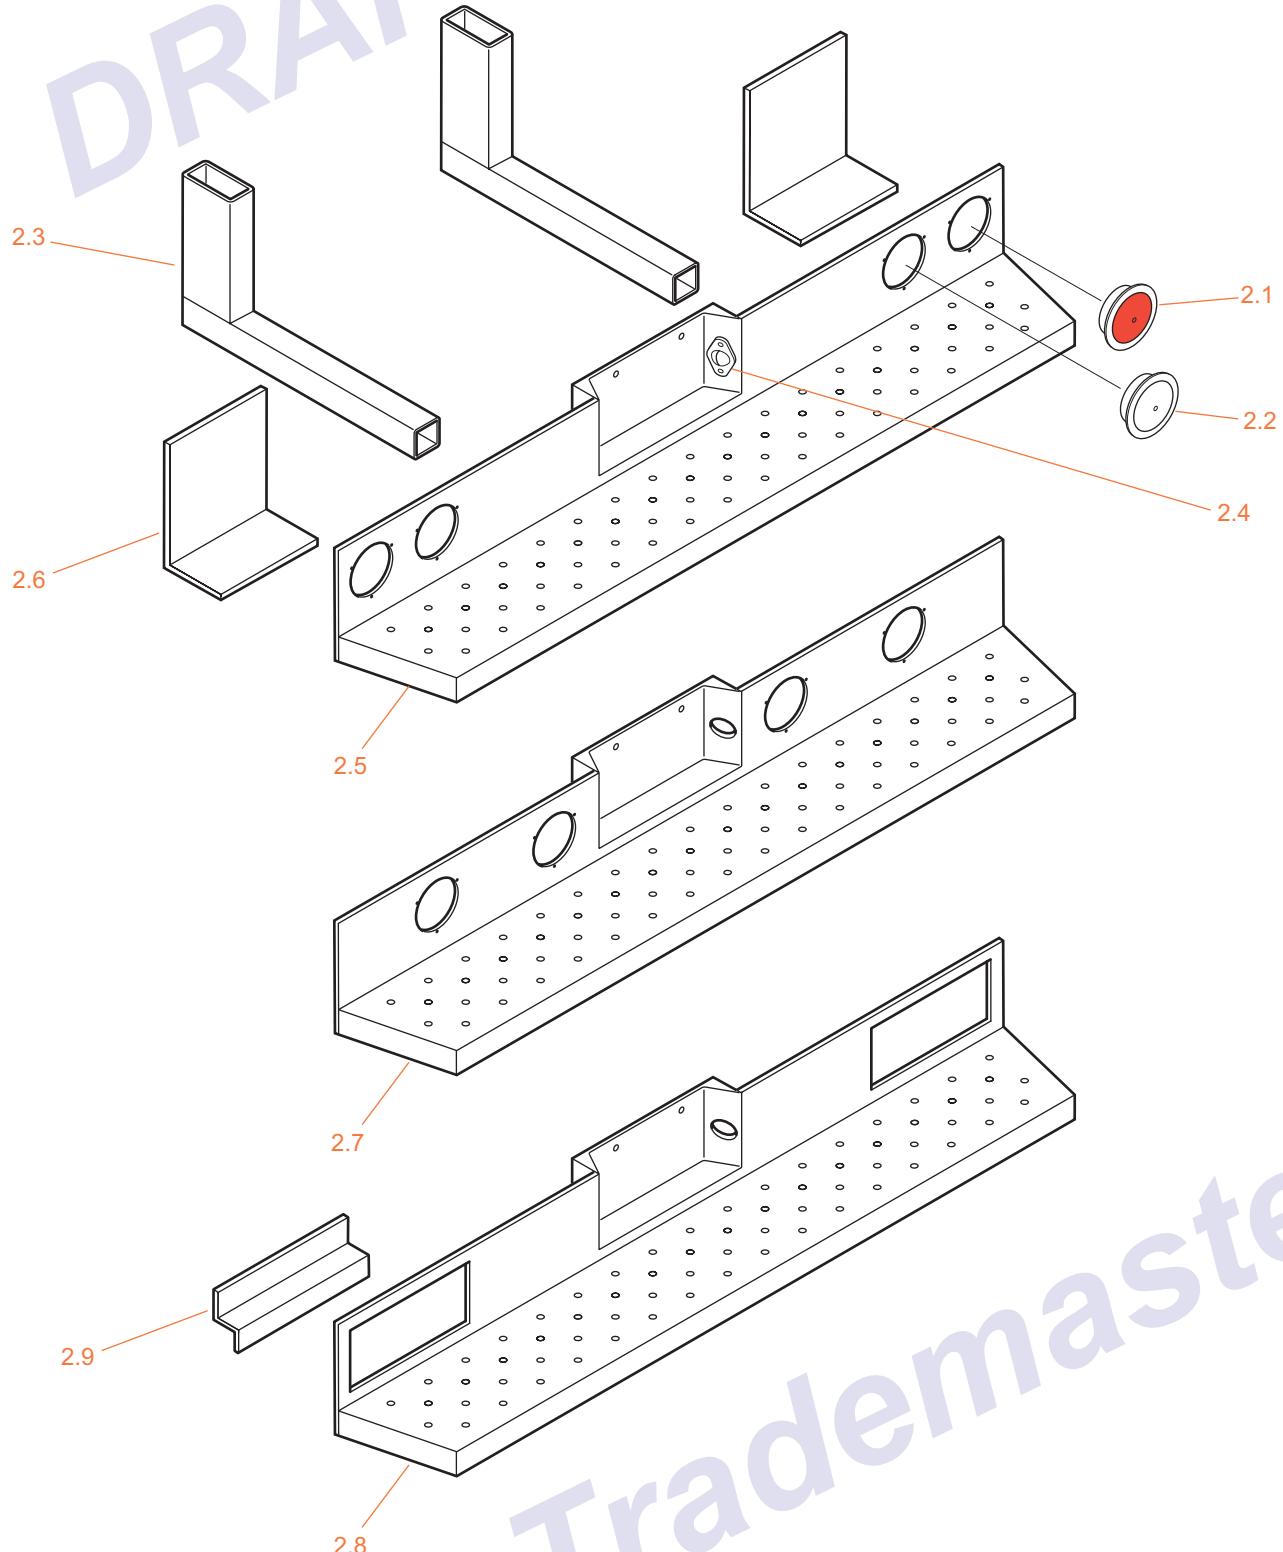

Rear Bumpers


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
2.0		Trademaster Rear Bumpers
2.1.1	15202114	LIGHT TAIL W/GRND
2.1.2	16513007	LIGHT ROUND ST/TN/TL LED KIT
2.2	15202115	LIGHT B/UP W/GRND
2.3.1	22818163	WELDMENT BUMPER SUPPORT 14.63
2.3.2	22818164	WELDMENT BUMPER SUPPORT 16.63
2.4	16500153	LIGHT LICENSE PLATE
2.5	51351001	WLD RR BMPR 71" P00CH PNTD TMSTR
2.6	06922901	SPLASH GUARD TAIL LIGHT TRADEMASTER
2.7	51351012	WLDMT RR BMPR 87" POOCH PNTD TMSTR
2.8	51351015	WELDMENT REAR BUMPER POOCHEDE 82.78W (IZU)
2.9	22818993	BRACKET TAILLIGHT MOUNT TMSTR
2.Ref	51351016	BUMPER ASSEMBLY TMSTR CAB 90"W

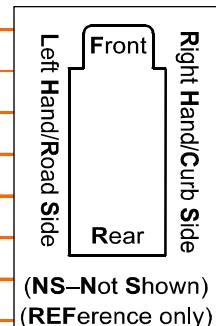

3—Rear Structure, FRP

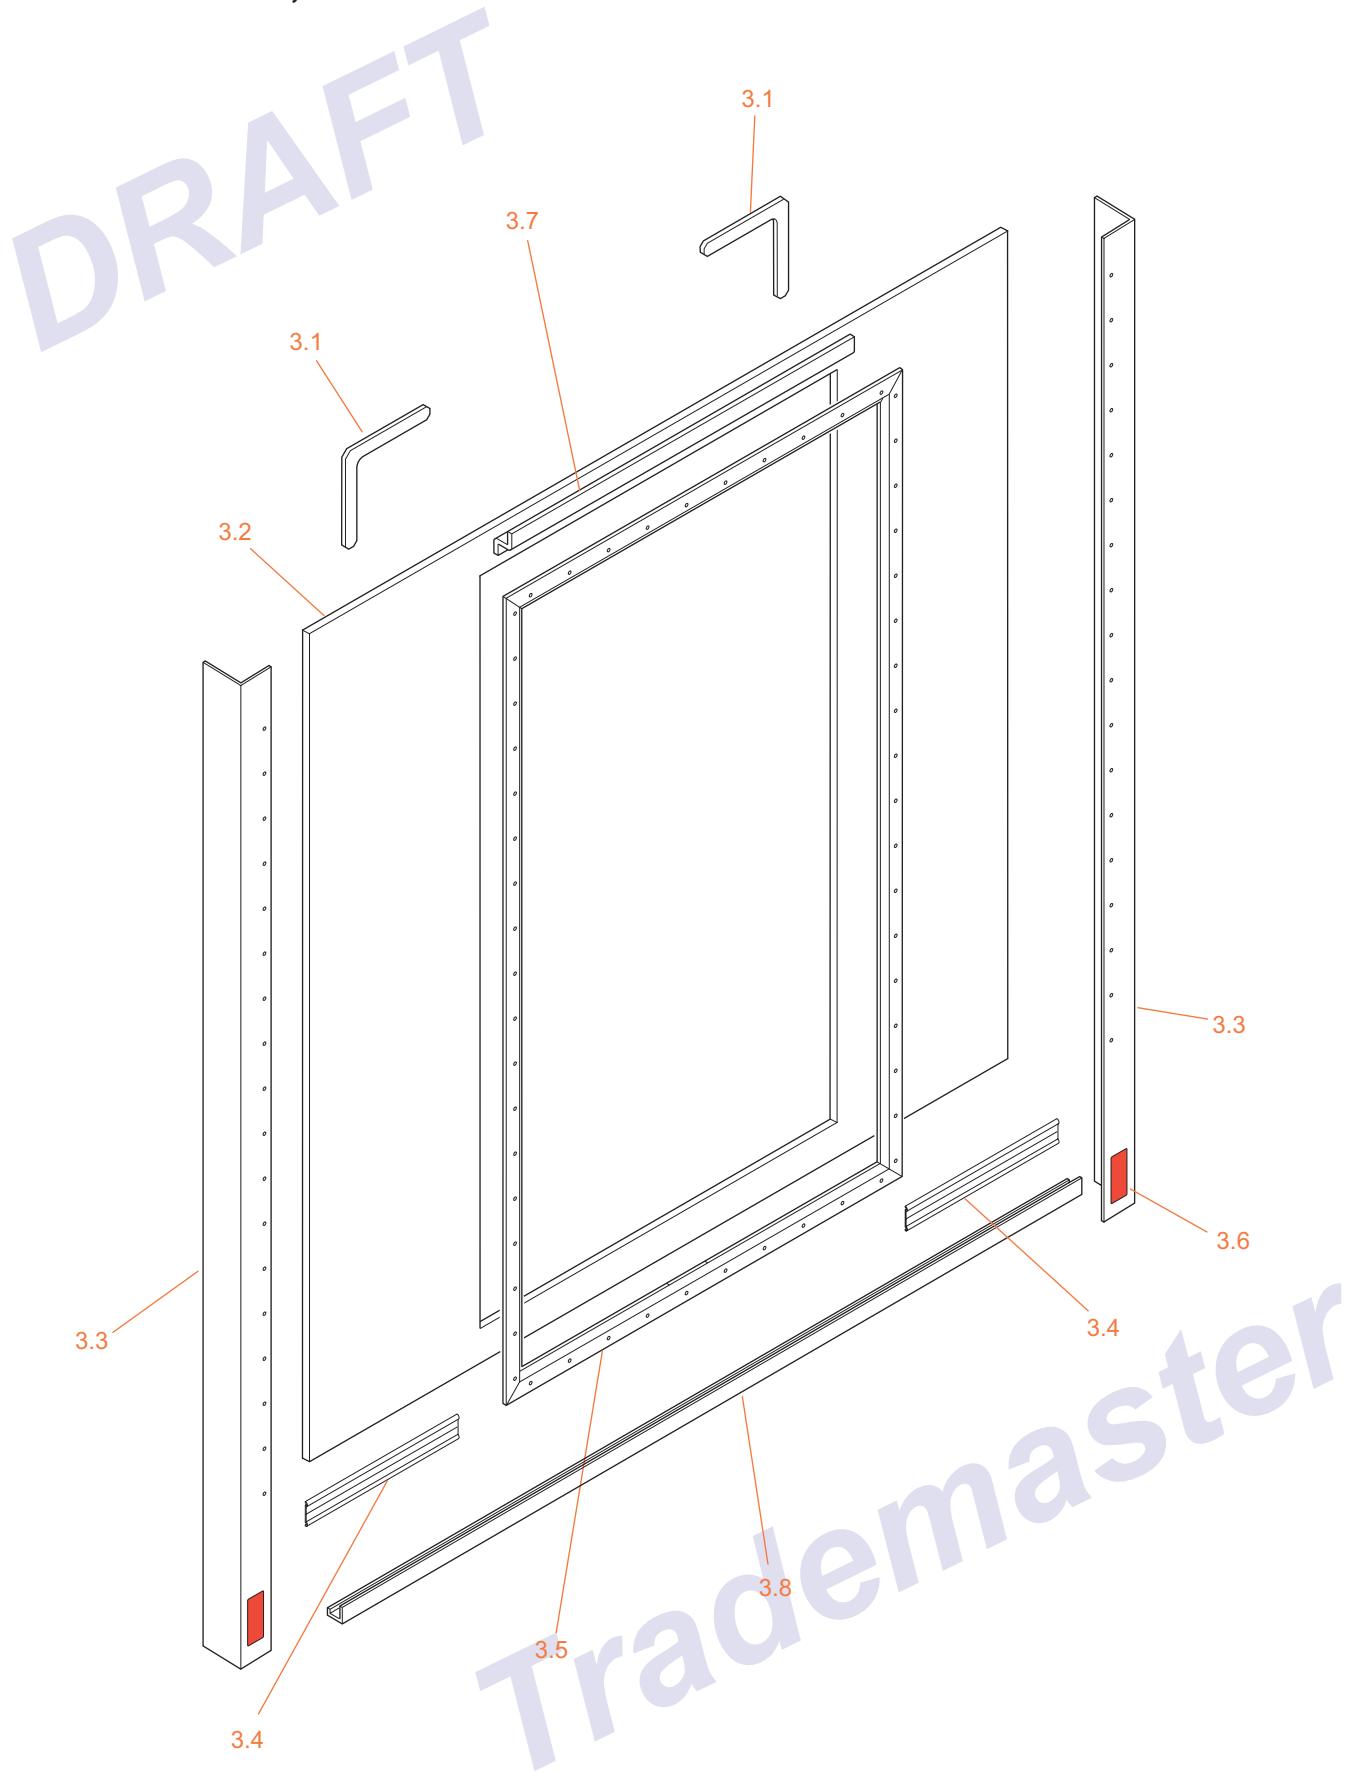

Rear Structure, FRP


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
3.0		Trademaster Rear Structure	
3.1	22817417	BRACKET REAR DOOR FRAME SUPPORT	
3.2	02804825	FRP REAR WALL 3/8 x 78.75 x 92.3	
3.3 LH	06921494	POST RR LH .125 x 3.5 x 3.5 x 87.5	
3.3 RH	06921493	POST RR RH .125 x 3.5 x 3.5 x 87.5	
3.4	06013047-01788	IA4741 RAIL 17.88 06013047	
3.5	57351017	EXT FRAME WLDMT DR 52.50 x 73.88	
3.6	15200498	REFLECTOR RED TAPE	
3.7	06922964-05200	IA1212 Z 52.00 06011300	(NS—Not Shown) (REFerence only)
3.8	08704347	HANDLE ALUM GRAB	
3.9-76	22816995	STIFFENER RR WALL 12GA x 6.2 x 76	
3.9-92	22816685	STIFFENER RR WALL 12GA x 6.2 x 92	
3.10	06013170-Length	IA5488 3/8" PNL CAP 06013170	
3.Ref	64351010	REAR STRUCTURE LAYOUT W/DRIP RAIL	
3.Ref	55351002	WALL ASSY REAR 96"W TRADEMASTER	

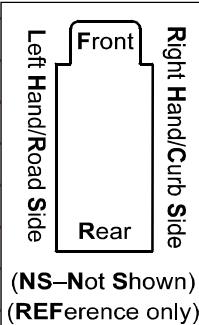

3—Rear Structure, Steel Frame

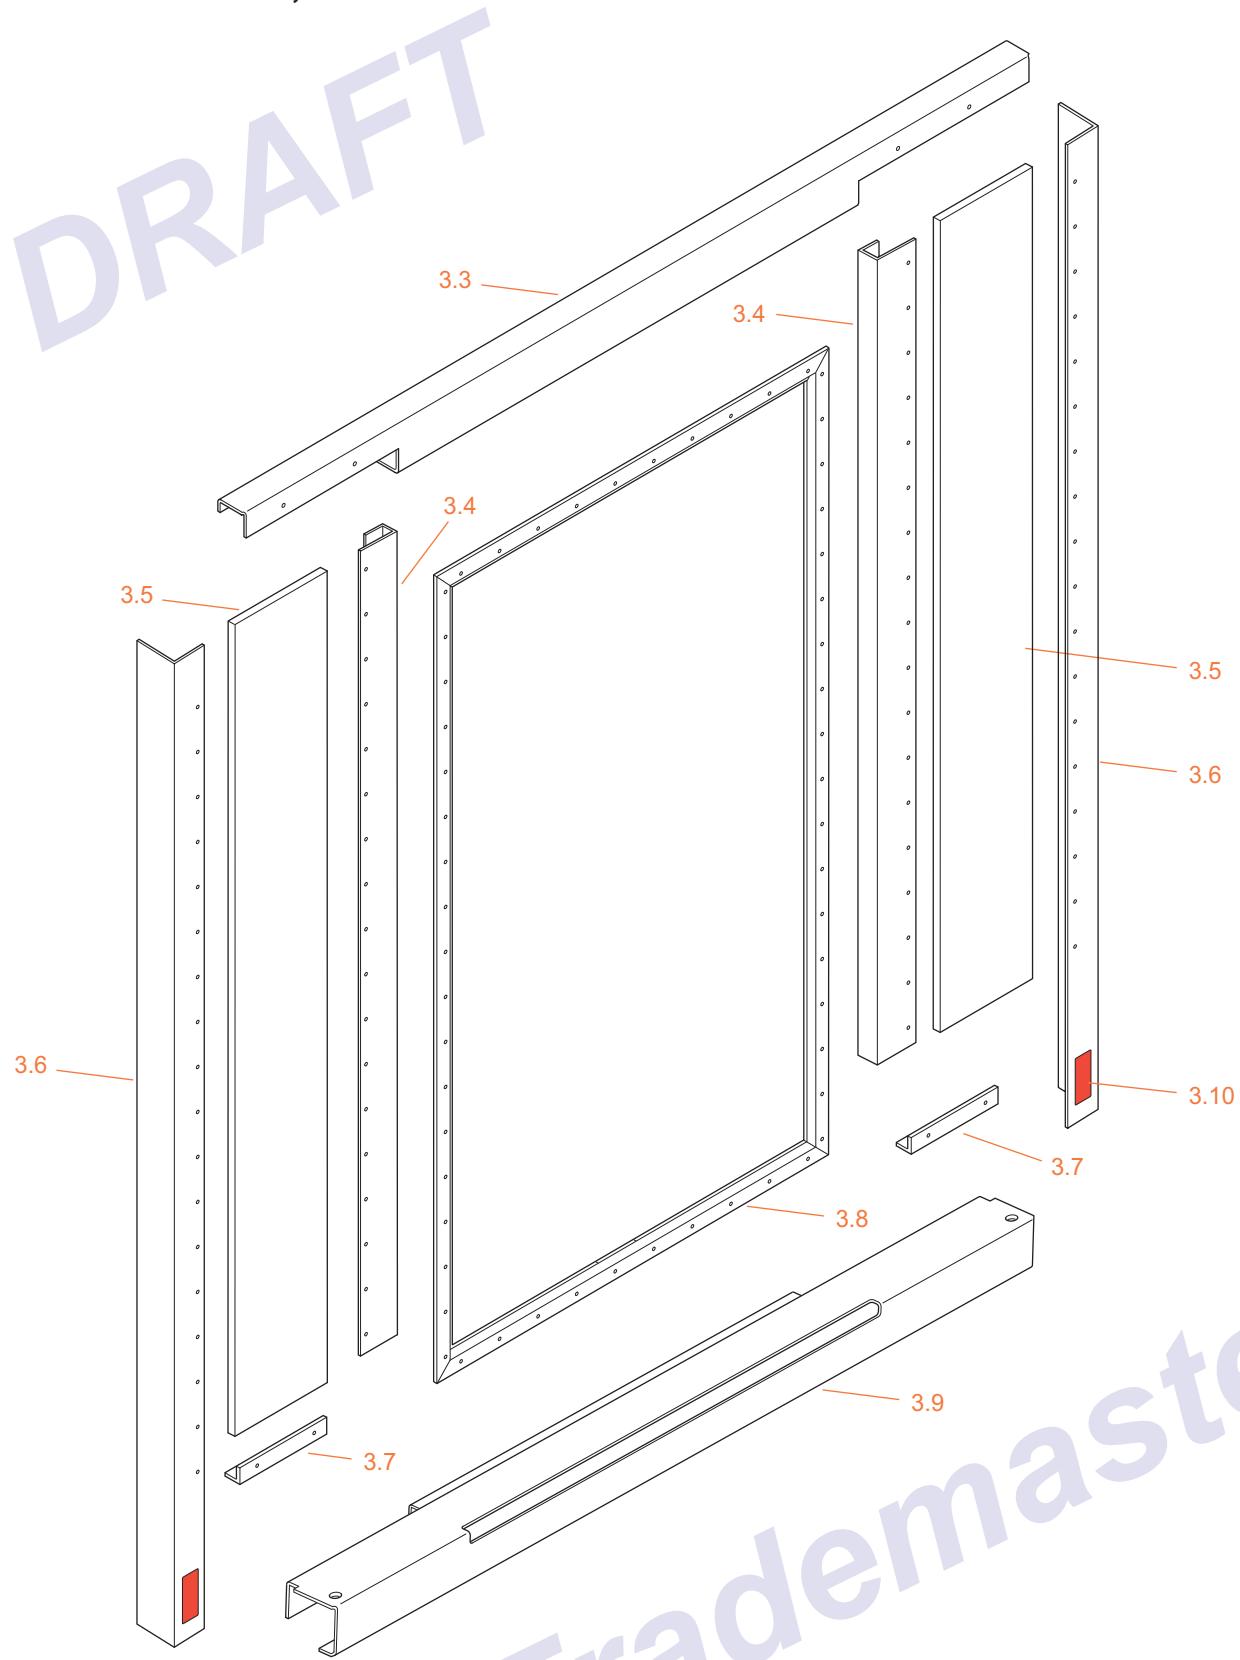

Rear Structure, Steel Frame


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
3.0		Trademaster Rear Structure	
3.1-92		STIFFENER REAR WALL 12GA x 6.2 x 92	
3.2		BRACKET REAR DOOR FRAME SUPPORT	
3.3	22818801	HEADER	
3.4	22818802	DR POST	
3.5		FRP	
3.6 LH	22818804	CORNER POST LH	
3.6 RH	22818803	CORNER POST RH	
3.7	01701950-01150	FLR ANGLE	(NS—Not Shown) (REFerence only)
3.8	06926623	DR FRAME	
3.9	22818798	THRESHOLD	
3.10	15200498	REFLECTOR RED TAPE	

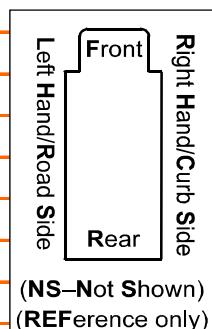

4—Doors, Rear Swing

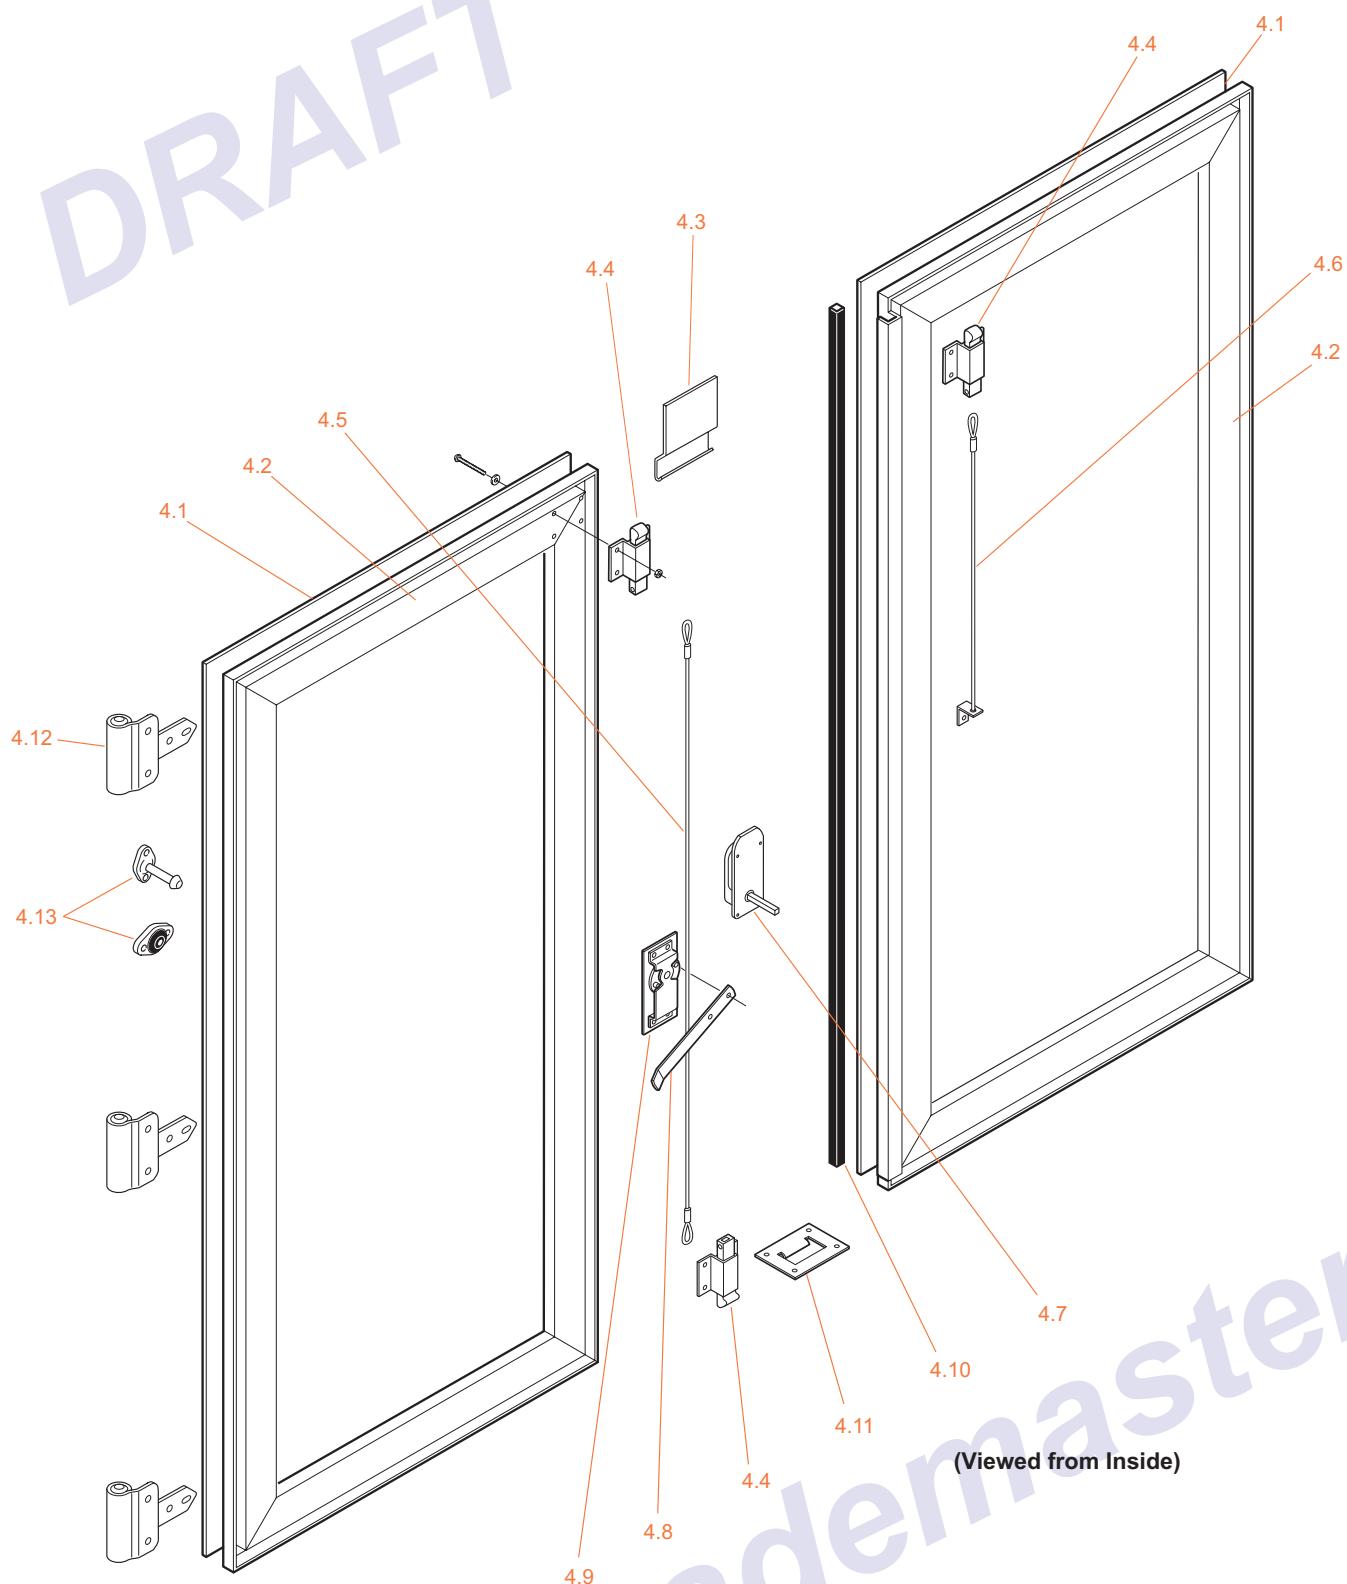

Doors, Rear Swing


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
4.0		Trademaster Rear Swing Doors	
4.1.1 LH	06922734	PANEL DOOR .125 x 23.59 x 69.06 LH	
4.1.1 RH	06922735	PANEL DOOR .125 x 23.59 x 69.06 RH	
4.1.2 LH	06926631	PANEL REAR DOOR LH 25.09 x 69.06 CAB	
4.1.2 RH	06926630	PANEL REAR DOOR RH 25.09 x 69.06 CAB	
4.2.1 LH	57351011	DOOR FRAME WELDMENT 23.91 x 69.38 LH	
4.2.1 RH	57351014	DOOR FRAME WELDMENT 23.91 x 69.38 RH CAB	
4.2.2 LH	06926628	WLDMLT RR DOOR FRAME LH 25.41 x 69.38 CAB	
4.2.2 RH	06926629	WLDMLT RR DOOR FRAME RH 25.41 x 69.38 CAB	
4.3	22818009	PLATE UPPER STRIKER TRADEMASTER	
4.4		SLAM LOCK	
4.5		CABLE LONG	
4.6	08611051	LATCH FINGER PULL KASON	
4.7	08706646	HNDL KASON RR BLK N/PUSH 5/16	
4.8	08704374	INT HANDLE	
4.9.1	08780011	LATCH ASY SLAMLOCK	
4.9.2	08704403	LATCH KASON INT 3/8" SHAFT	
4.10	05402091	SEAL REAR DOOR	
4.11	22101157	PLATE LWR D/BOLT STRIKE KASON	
4.12	08610373	HINGE SDN DR ZERKS ALUMINUM (Replaces 08611041)	
4.13-F	08611055	DOOR HOLDER SOCKET	
4.13-M	08611054	DOOR HOLDER MALE	
4.Ref	57351012	DR S/ASY 23.91 x 69.38 LH PAINTED	
4.Ref	57351013	DOOR ASSY LH RR 23.91x 69.38 TRADMSTR	
4.Ref	57351015	DR S/ASY 23.91 x 69.38 RH PAINTED	
4.Ref	57351016	DOOR ASSY RH RR 23.91x 69.38 TRADMSTR	
4.Ref	57351041	DOOR SUBASY 25.41 x 69.38 LH PAINTED CAB	
4.Ref	57351042	DOOR SUBASY 25.41 x 69.38 RH PAINTED CAB	
4.Ref	57351043	RR DOOR ASSEMBLY LH 25.41 x 69.38 CAB	
4.Ref	57351044	RR DOOR ASSEMBLY RH 25.41 x 69.38 CAB	

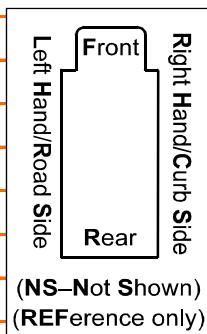

5—Doors, Compartment

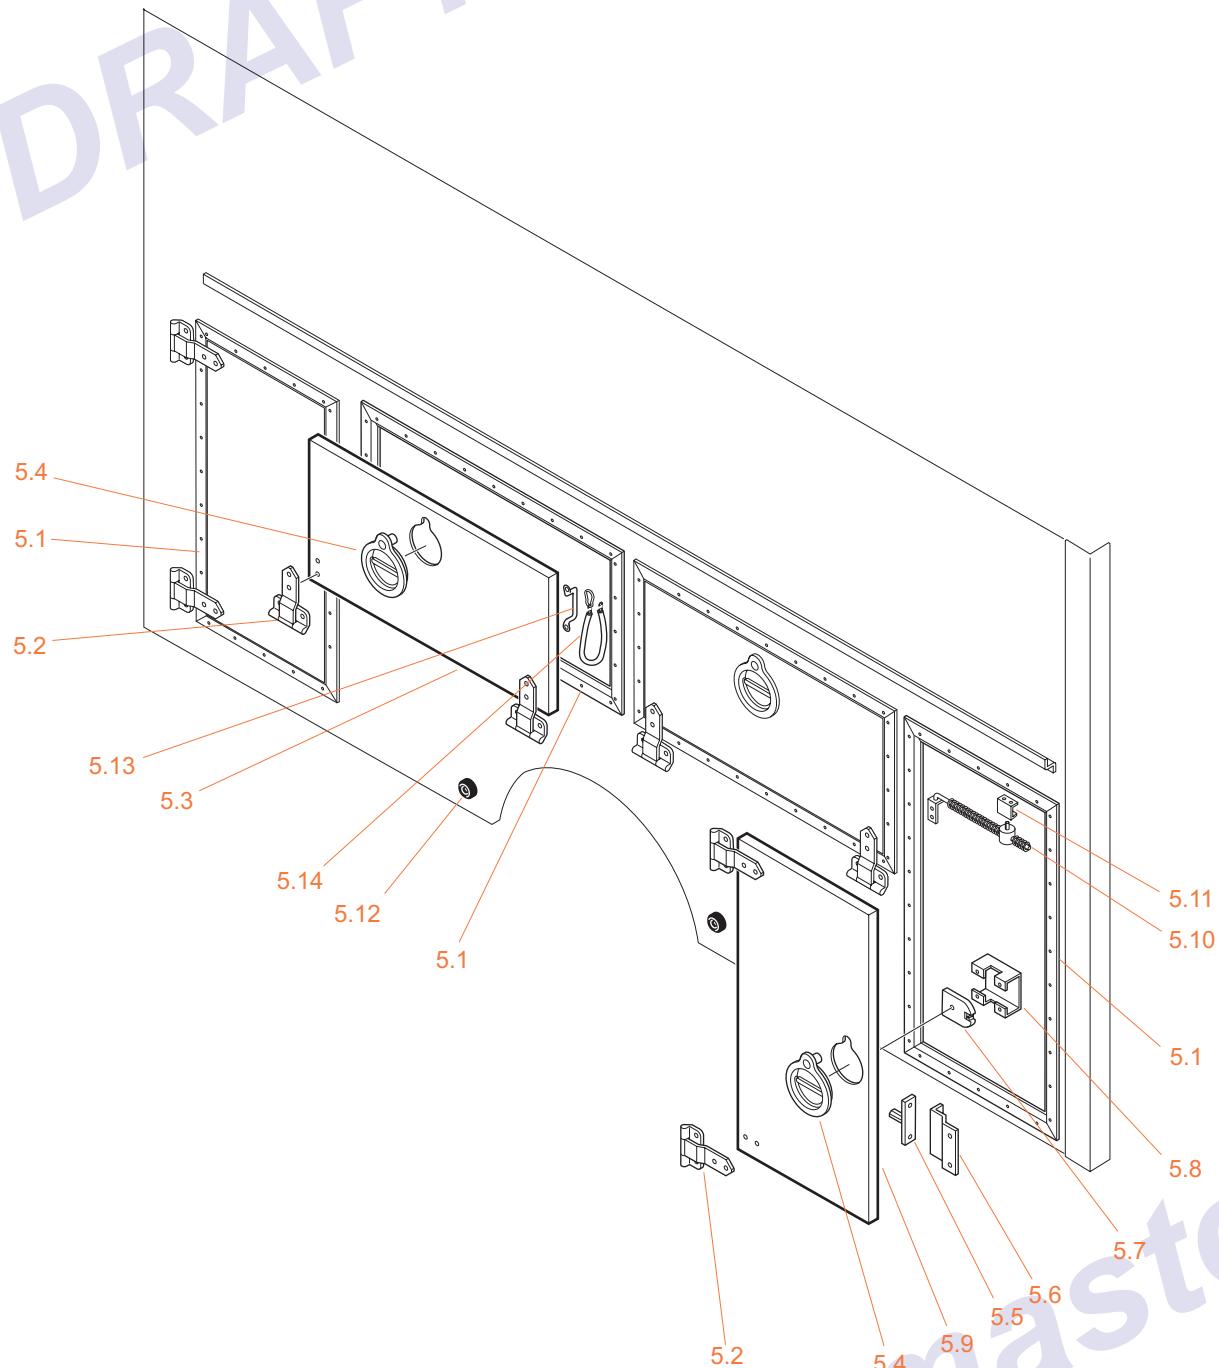

Doors, Compartment


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
5.0		Trademaster Compartment Doors	
5.1.1	57351004	EXTER FRAME WLDMT DR 23.13 x 42.63* (PAINTED)	
5.1.2	57351025	EXTER FRAME WLDMT DR 23.0 x 47.12* (PAINTED)	
5.1.3	57351010	EXTER FRAME WLDMT DR 25.13 x 47.13* (PAINTED)	
5.2	08610373	HINGE SDN DR ZERKS ALUMINUM	
5.3-38	57351002	DOOR SUBASSY 18.5 x 38 (PAINTED ASSY)	
5.4	08611042	HNDL DRNG W/GSKT SQRD 2"	
5.5	08610273	STRIKER EBERHARD	
5.6	08611011	BRACKET STRIKER 4.25 x 1.25 x 2.25	
5.7	08610208	LATCH SLAM EBERHARD	
5.8	22817324	BRACKET LOCK LATCH FOR D-RING TRDMST	
5.9-18 LH	57351021	DOOR SUBASSY 18.38 x 42.5 LH (PAINTED ASSY)	
5.9-18 RH	57351023	DOOR SUBASSY 18.38 x 42.5 RH (PAINTED ASSY)	
5.9-20 LH	57351006	DOOR SUBASSY 20.5 x 42.5 LH (PAINTED ASSY)	
5.9-20 RH	57351008	DOOR SUBASSY 20.5 x 42.5 RH (PAINTED ASSY)	
5.10	08611057	DOOR CHECK	
5.11		BRKT DR CHECK	
5.12	05705473	RUBBER BMPR 1.5 DIA x .625	
5.13	08611033	FOOTMAN LOOP STEEL	
5.14.1	08706320	CHAIN VINYL COVERED	
5.14.2	08611061	SNAP SPRING LOADED .25	
5.Ref	57351022	DOOR ASSY LH 18.38 x 42.5 TMSTR (Vert)	
5.Ref	57351024	DOOR ASSY RH 18.38 x 42.5 TMSTR (Vert)	
5.Ref	57351003	DOOR ASSY 18.50 x 38.00 TMSTR (Horz)	
5.Ref	57351007	DOOR ASSY LH 20.5 x 42.5 TRADEMASTER (Vert)	
5.Ref	57351009	DOOR ASSY RH 20.5 x 42.5 TRADEMASTER (Vert)	
	*These dimensions are to the outside edges of the door frame.		

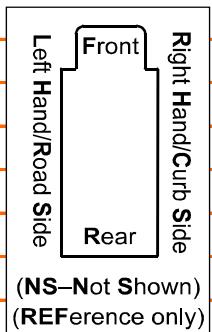

6—Sidewalls

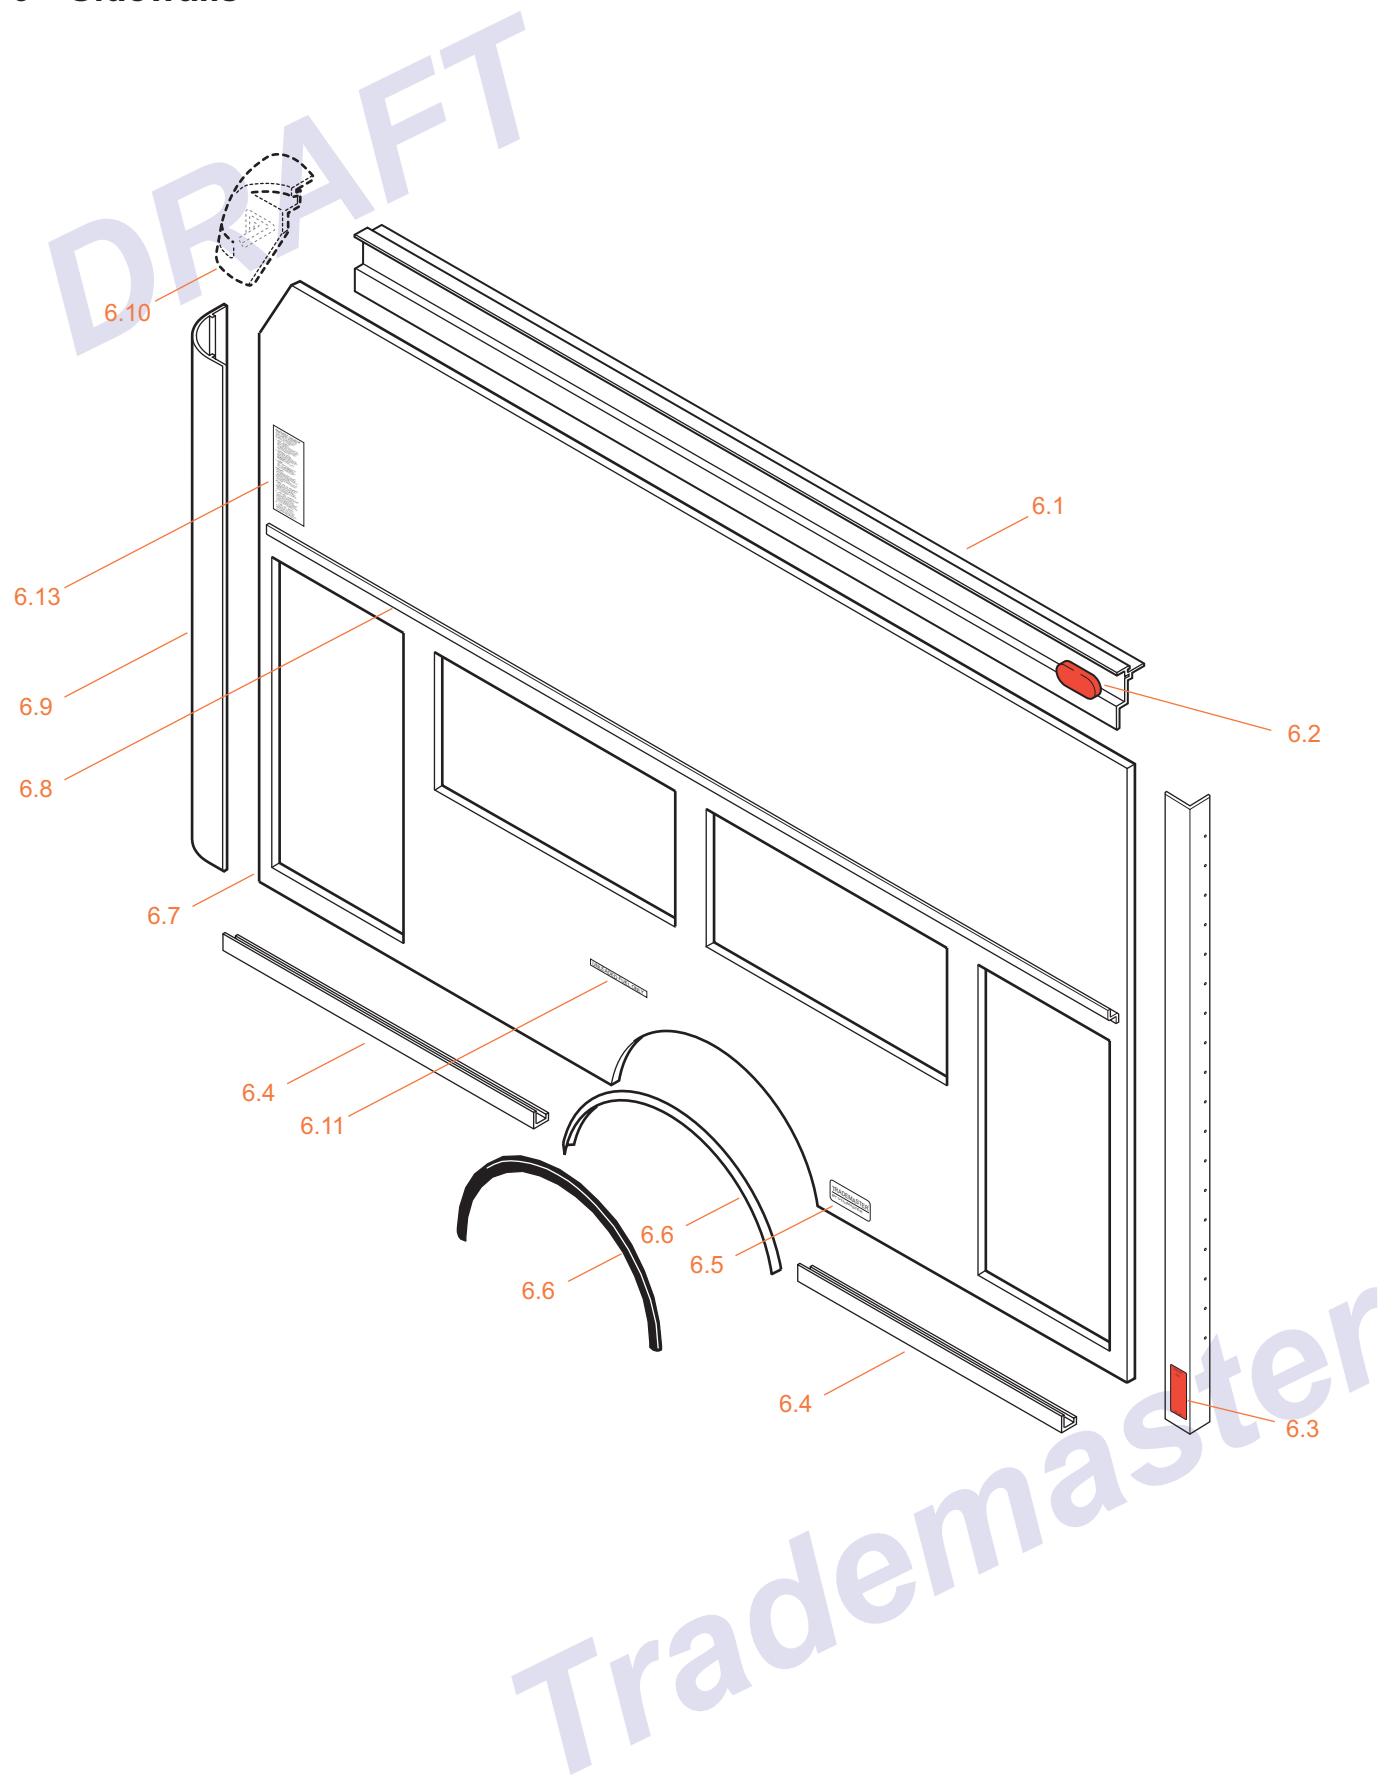

Sidewalls


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
6.0		Trademaster Sidewalls	
6.1	06000846-Length	IA9401 ROOF RAIL 06000846	
6.2	See Roof Section	LIGHT RED	
6.3 LH	06921494	POST RR LH .125 x 3.5 x 3.5 x 87.5	
6.3 RH	06921493	POST RR RH .125 x 3.5 x 3.5 x 87.5	
6.4	06013170-Length	IA5488 3/8" PNL CAP 06013170	
6.5	03102477	DECAL TRADEMASTER BY UTILIMASTER	
6.6	06910555	PANEL CAP W/RADIUS 62.12 06013170	
6.6.3	01303592	RUBBER FENDER MOLDING	
6.7-10 LH		FRP LH 3/8 10' AERO TM	
6.7-10 RH		FRP RH 3/8 10' AERO TM	
6.7-12 LH	02804983	FRP LH 3/8 x 87.42 x 143.21 12' AERO TM	
6.7-12 RH	02804984	FRP RH 3/8 x 87.42 x 143.21 12' AERO TM	
6.7-14 LH	02805005	FRP LH 3/8 x 87.42 x 167.21 14' AERO TM	
6.7-14 RH	02805006	FRP RH 3/8 x 87.42 x 167.21 14' AERO TM	
6.8	06922964-Length	IA1212 Z 192.00 PAINTED FW 06011300	
6.9	06923633-Length	FRONT CRNR POST AERO 06013020	
6.10	See Roof Section	CAP/CASTING FRONT WALL	
6.11-D		DECAL, DIESEL FUEL ONLY	
6.11-G	03000607	DECAL UNLEADED FUEL ONLY	
6.12	15200498	REFLECTOR RED TAPE	
6.13	03000855	DECAL MAINTENANCE TRUCK BODY	
6.Ref	64351009	TRADEMASTER LOGO LOCATIONS	

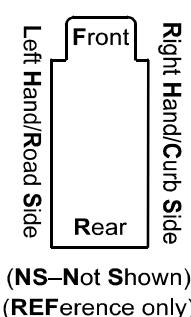

7—Side Compartments

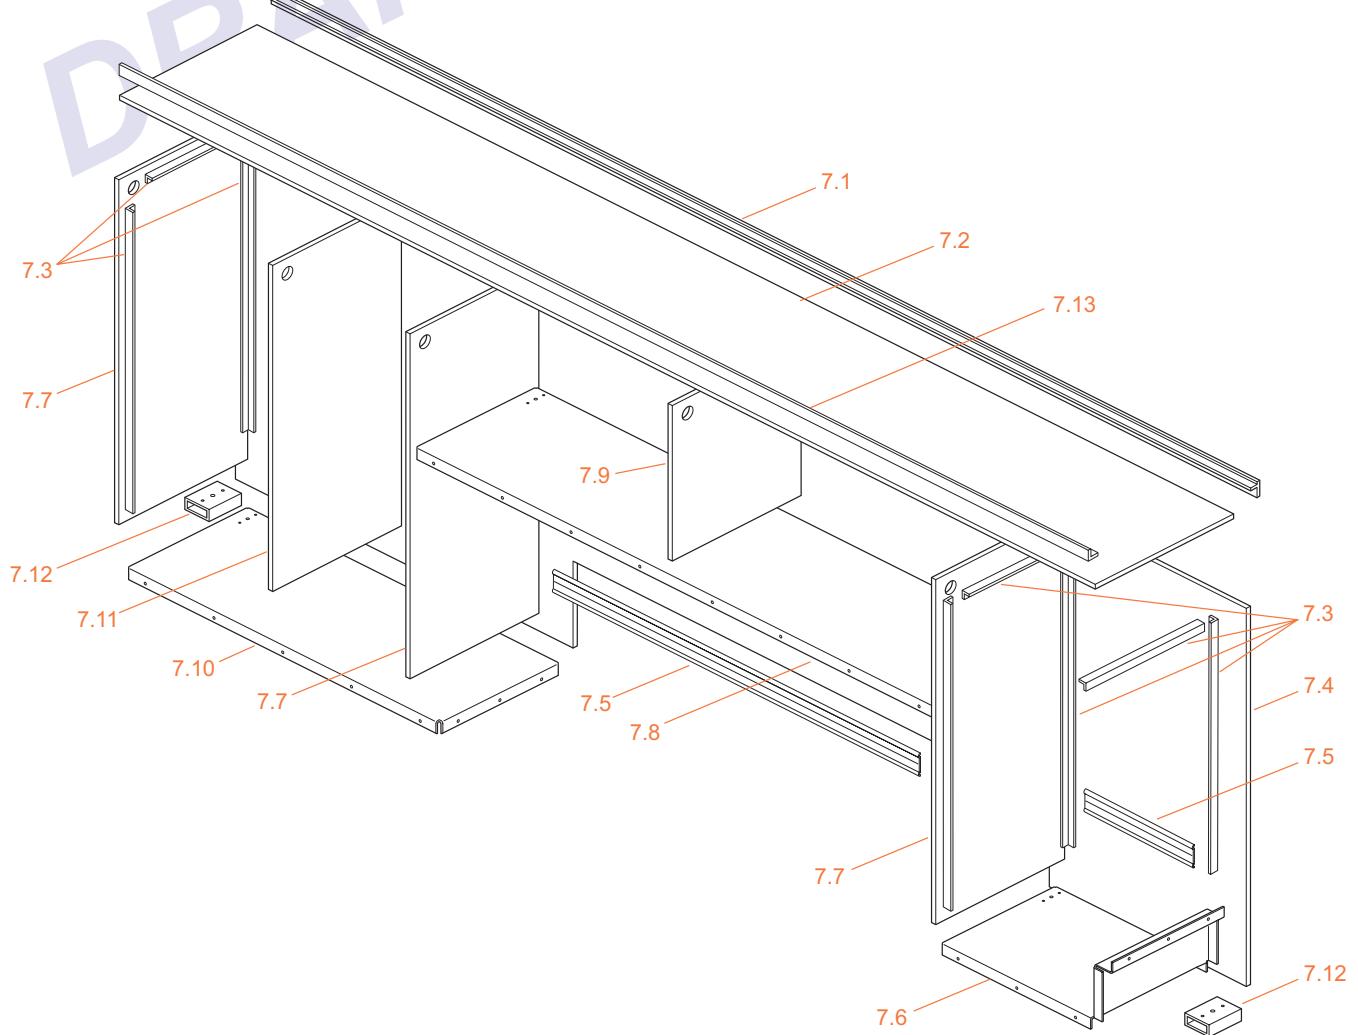

Side Compartments


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
7.0		Trademaster Sidewall Compartments
7.1	06003007-Length	IA5764 COR/LEDGE 06003007
7.2-12	02804596	SHELF UPPER FRP 3/8 x 22.4 x 144
7.2-14	02804990	FRP SHELF UPPER 3/8 x 22.4 x 168
7.3.1	06002050-Length*	AE ANGLE .125 x 1.5 x 1.5 IA637
7.3.2	06003907-Length*	AE ANGLE .125 x 1.5 x 2 W7983
7.4-14	02804991	FRP COMPT WALL 47.75 x 168.00 TMSTR
7.5	06013047-Length	IA4741 RAIL 06013047
7.6	06922618	PAN COMPT BTM .100 x 22.15 x 28.4 (Rear)
7.7	02804597	VERTICAL PARTITION 22.12 x 47.75
7.8-14	06923807	PAN COMPT BTM .100 x 22.15 x 88.84 TM
7.9	02804598	VERTICAL PARTITION 22.13 x 21.13 (Horz Comp)
7.10-14	06923808	PAN COMPT BTM .100 x 22.15 x 48.58 TM (Forward)
7.11	02804994	VERTICAL PARTITION 22.13 x 44.94 TM
7.12	06922274	IAH718 DRAIN COMPRTMENT PAN 06000355
7.13	06000879-Length	IA1837 STRUCT ANGLE
7.Ref	53351003	COMPARTMENT ASSY LH 10' STD TRDMSTR
7.Ref	53351004	COMPARTMENT ASSY RH 10' STD TRDMSTR
7.Ref	53301096	**COMPARTMENT ASSY LH 10' TRDMSTR
7.Ref	53301097	**COMPARTMENT ASSY RH 10' TRDMSTR
7.Ref	53351001	COMPARTMENT ASSY LH 12' NB TRDMSTR
7.Ref	53351002	COMPARTMENT ASSY RH 12' NB TRDMSTR
7.Ref	53351027	COMPT ASSY LH 12' STD TRDMSTR
7.Ref	53351028	COMPT ASSY RH 12' STD TRDMSTR
7.Ref	53351029	COMPT ASSY LH 14' TRADEMASTER
7.Ref	53351030	COMPT ASSY RH 14' TRADEMASTER
	*Verify the angle flanges as 1-1/2 x 1-1/2 or 1-1/2 x 2, and replace with the same.	

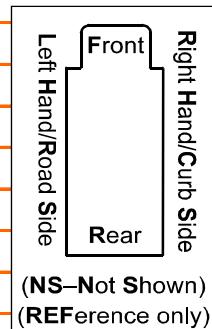

8—Front Wall, Narrow Body

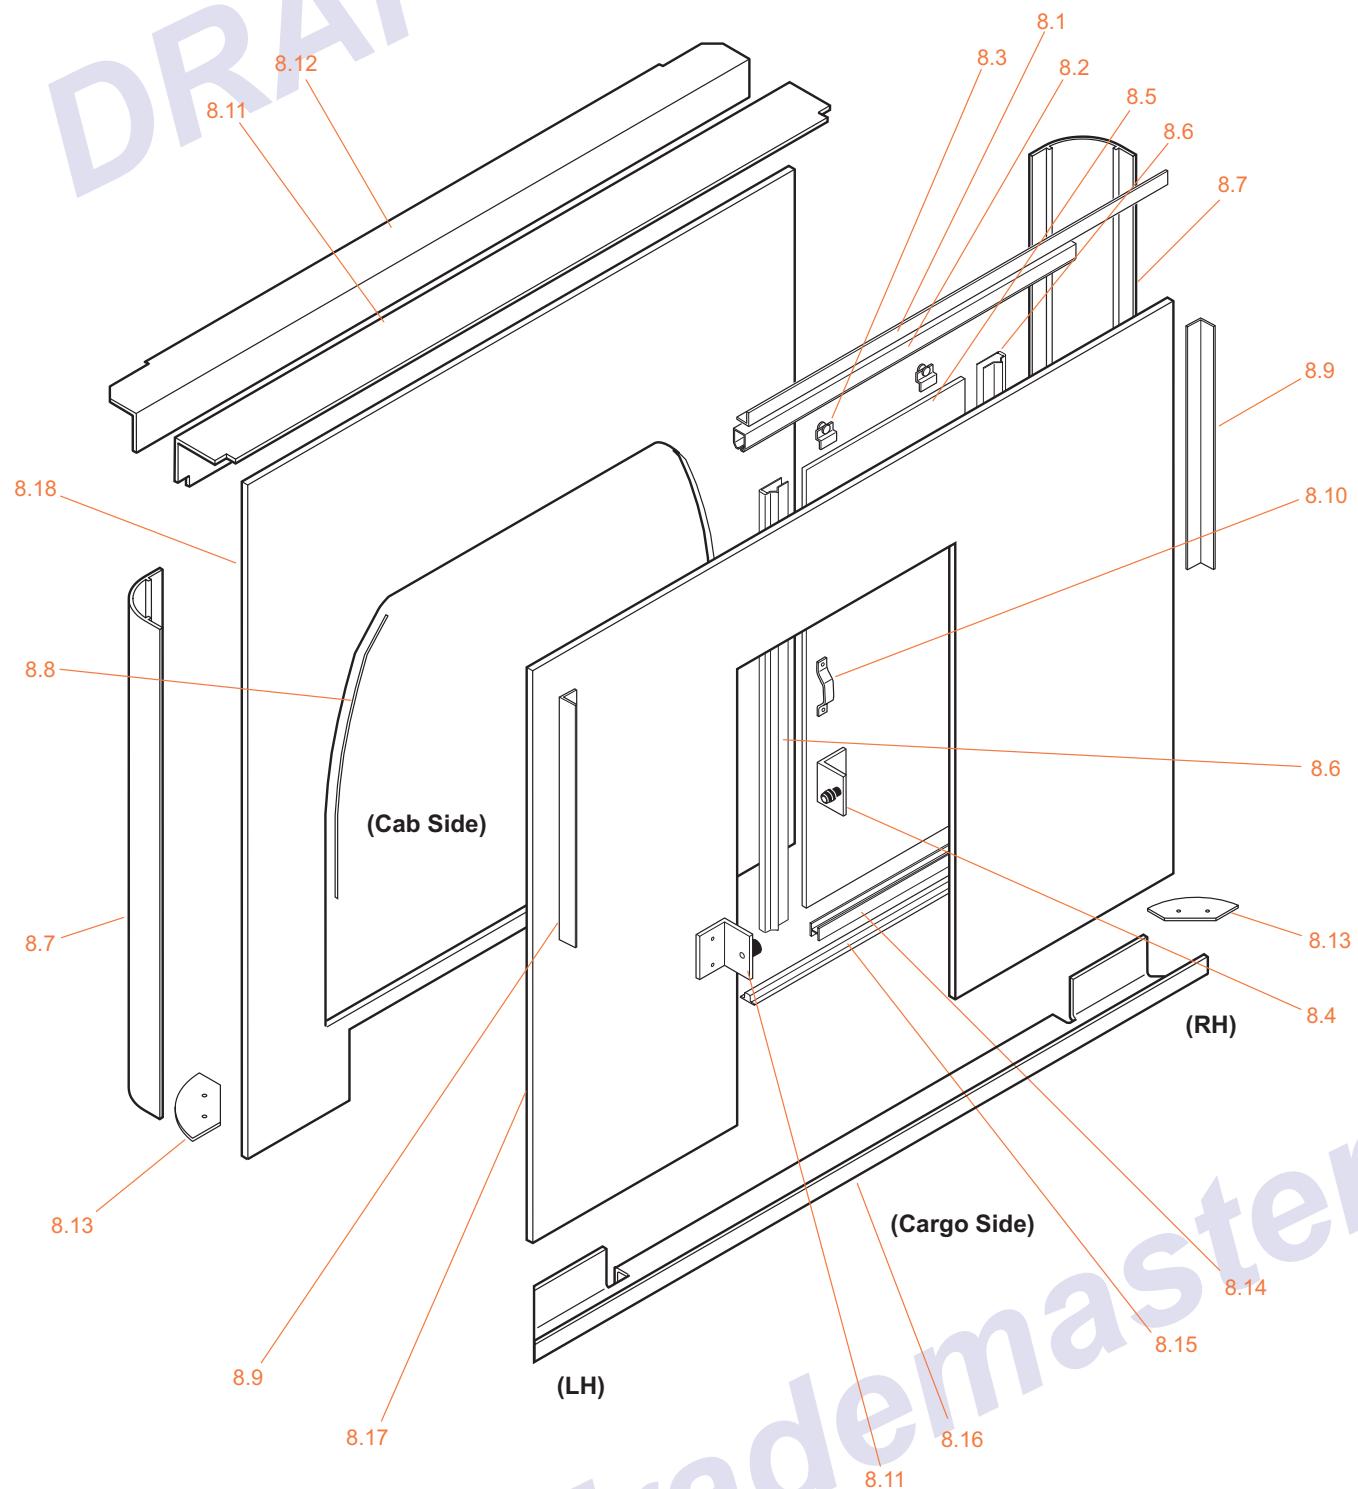

Front Wall, Narrow Body


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
8.0		FRP Front Wall, Narrow Body
8.1	06002050-06000	IA 637 ANGLE 60.00 06002050
8.2		TRACK
8.3	08220102	HANGER B/H SLDR DR
8.4.0	06910943	BRKT DR STOP WITH/HOLES 06002047
8.4.1	08611172	DOOR HOLDER HARD W/MALE PLUG
8.5	BSNR	FRP PANEL, DOOR
8.6.1	06000359-Length	AE B/H DOOR W/SEAL IA 7246
8.6.2	05402091-Length	SEAL REAR DOOR
8.7	06923633	FRONT CRNR POST AERO 87.50 06013020
8.8	05705636	TRIM PLASTIC U-CHNL 7/16" x 14' x 731S
8.9	06923638	ANGLE BHD MOUNTING .125 x 2 x 2 x 37.38
8.10	08610122	HANDLE DOOR
8.11		CLOSE OUT
8.12		U-ATT
8.13	06600069	PLATE CRNR SEAL .063 x 2 x 6.62
8.14	06013110-Length	ALUM EXT BTM B/H DR IA5129
8.15		HAT TRACK
8.16	06922720	U ATTACH MID BTM SLDR W/CAB LIP
8.17	BSNR	FRP PANEL, BULKHEAD
8.18	BSNR	FRP PANEL, FRONT WALL
8.NS	05001605	REVERSE COVE 1-1/2 FW
8.Ref	57351018	DR ASSY SLDG BH 1/2" x 26 x 47 TRDMST

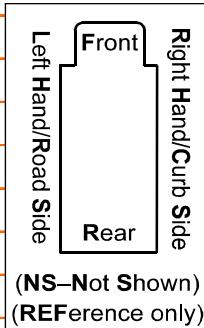

8—Front Wall, Aerocap

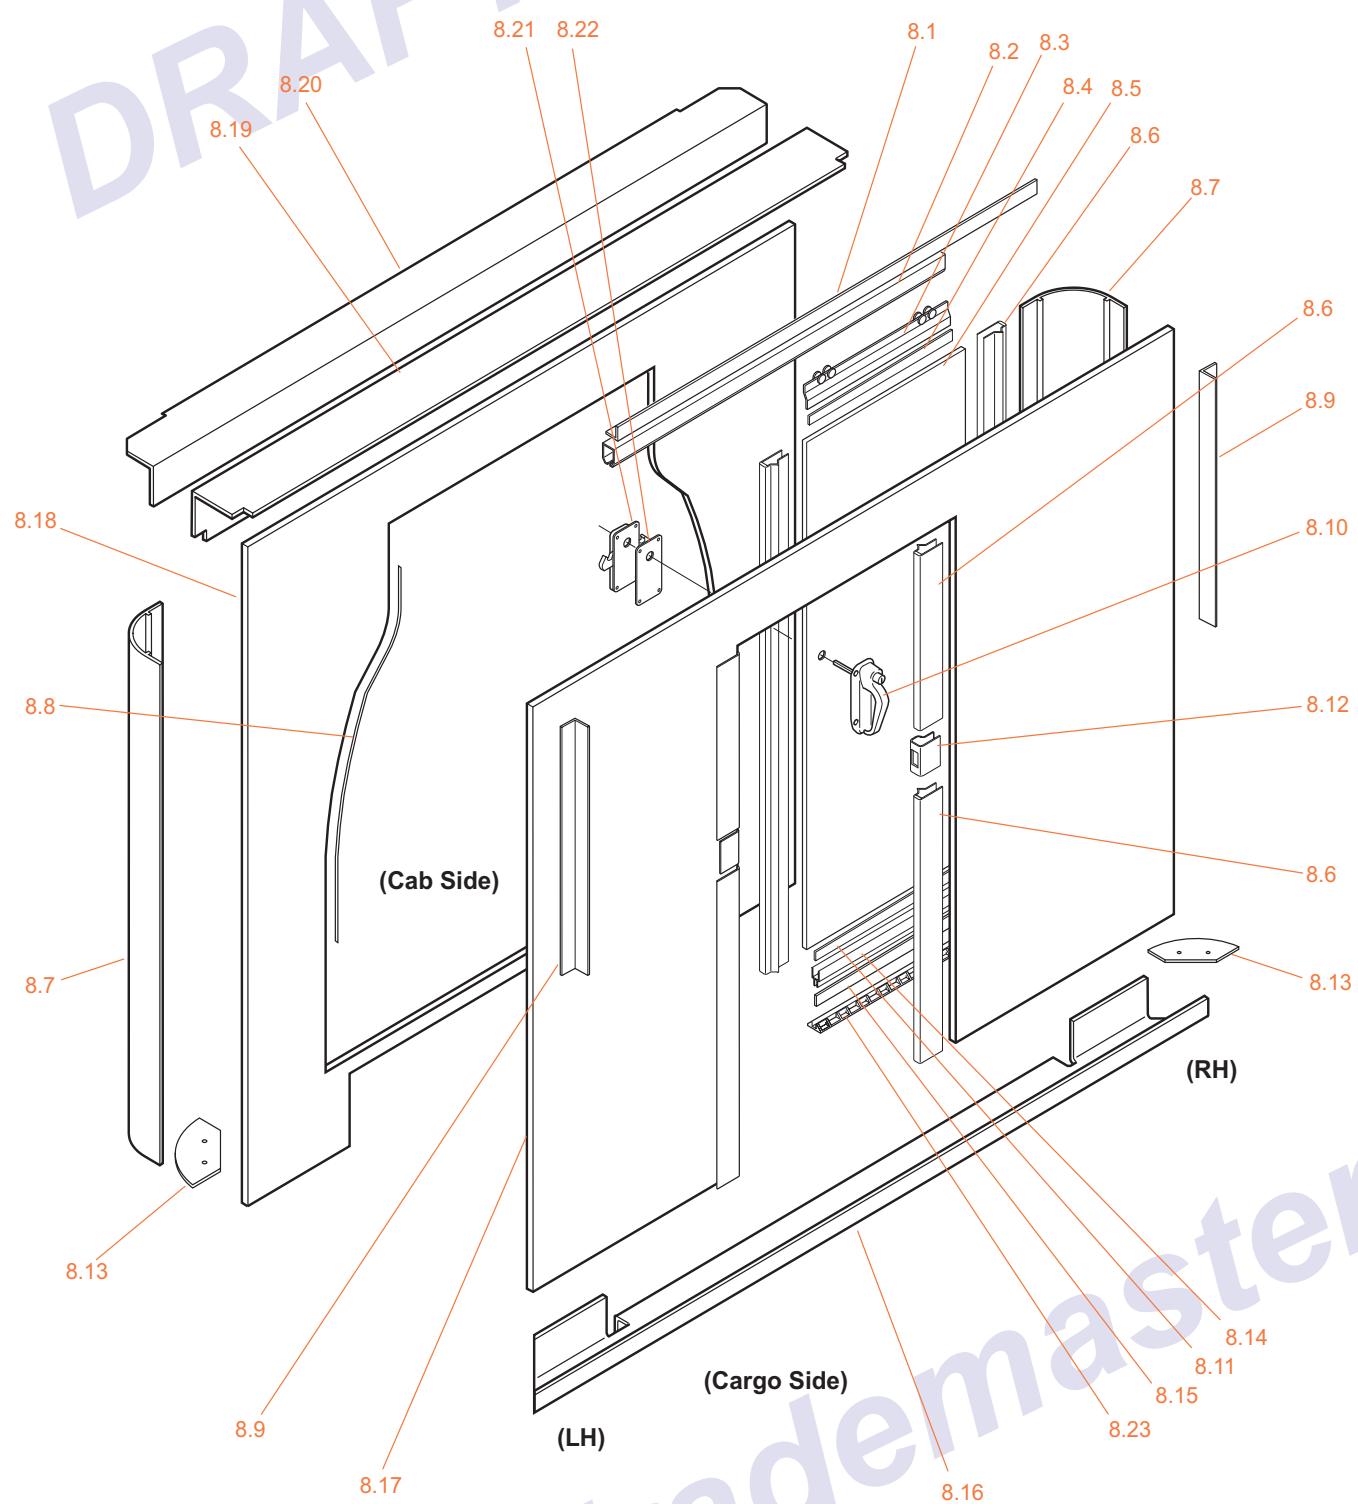

Front Wall, Aerocap


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
8.0		FRP Front Wall, Aerocap	
8.1	06002050-06000	IA 637 ANGLE 60.00 06002050	
8.2	08220043	TRACK BH DR 16GA x 60"	
8.3	08610351	ROLLER ASY BHD DR 33"	
8.4	06922310	ALUM .100 x 1.25 x 28	
8.5	02804982	FRP 3/8 x 31.62 x 65.38 TMSTR DOOR	
8.6.1	06013164-Length	IA 5349 SEAL BHD 06013164	
8.6.2	05402091	SEAL DOOR	
8.7	06923633	FRONT CRNR POST AERO 88.50 06013020	
8.8	05705636	TRIM PLASTIC U-CHNL 7/16" x 14' x 731S	
8.9	06923638	ANGLE BHD MOUNTING .125 x 2 x 2 x 38.38	
8.10	08706641	HANDLE CRM 3/8 PUSH	
8.11	06922309	ALUM .100 x .75 x 30	
8.12.1	08401266	CATCH SLDG DR FRT	
8.12.2	06922855	SHIM .125 x 3.0 x 4.0 W/SLOTS TRDMAS	
8.13	06600069	PLATE CRNR SEAL .063 x 2 x 6.62	
8.14	06013149-03481	IA 5398 EDGE 34.81 06013149	
8.15	08611001	GUIDE DOOR WHMW 1/4 x 2 x 34.5	
8.16	06922720	U ATTACH MID BTM SLDR W/CAB LIP	
8.17	02804977	FRP AERO MID 3/8 x 94 x 72.75 TMSTR W/DR	
8.18	02804976	AEROCAP F/WALL 3/8 x 85.6 x 88.42 C/OUT	
8.19	06923787	CLOSEOUT AERO MID WALL T/MSTR 93.25	
8.20	06924057	"U" B/HEAD ATTACH T/MSTR 91.75	
8.21	08704403	LATCH INT 3/8" SHAFT	
8.22	01700696	SHIM DOOR .25 x 5.50 x 2.5	
8.23	10002275	THRESHOLD CASTING	
8.NS	05001605	REVERSE COVE 1-1/2 FW	
8.Ref	57351026	SLIDING BLKHD DOOR ASSY 34 x 65.38 TM	
8.Ref	54351012	BLKHD WALL/DOOR ASSY 34 x 65.38 DR TM	
8.Ref	54351011	WALL ASSY MIDSHIP 72.75 x 94 TMST AERO	

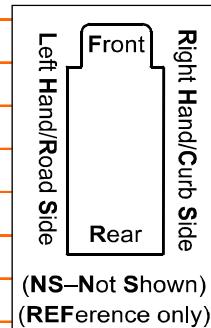

9—Roof Assembly

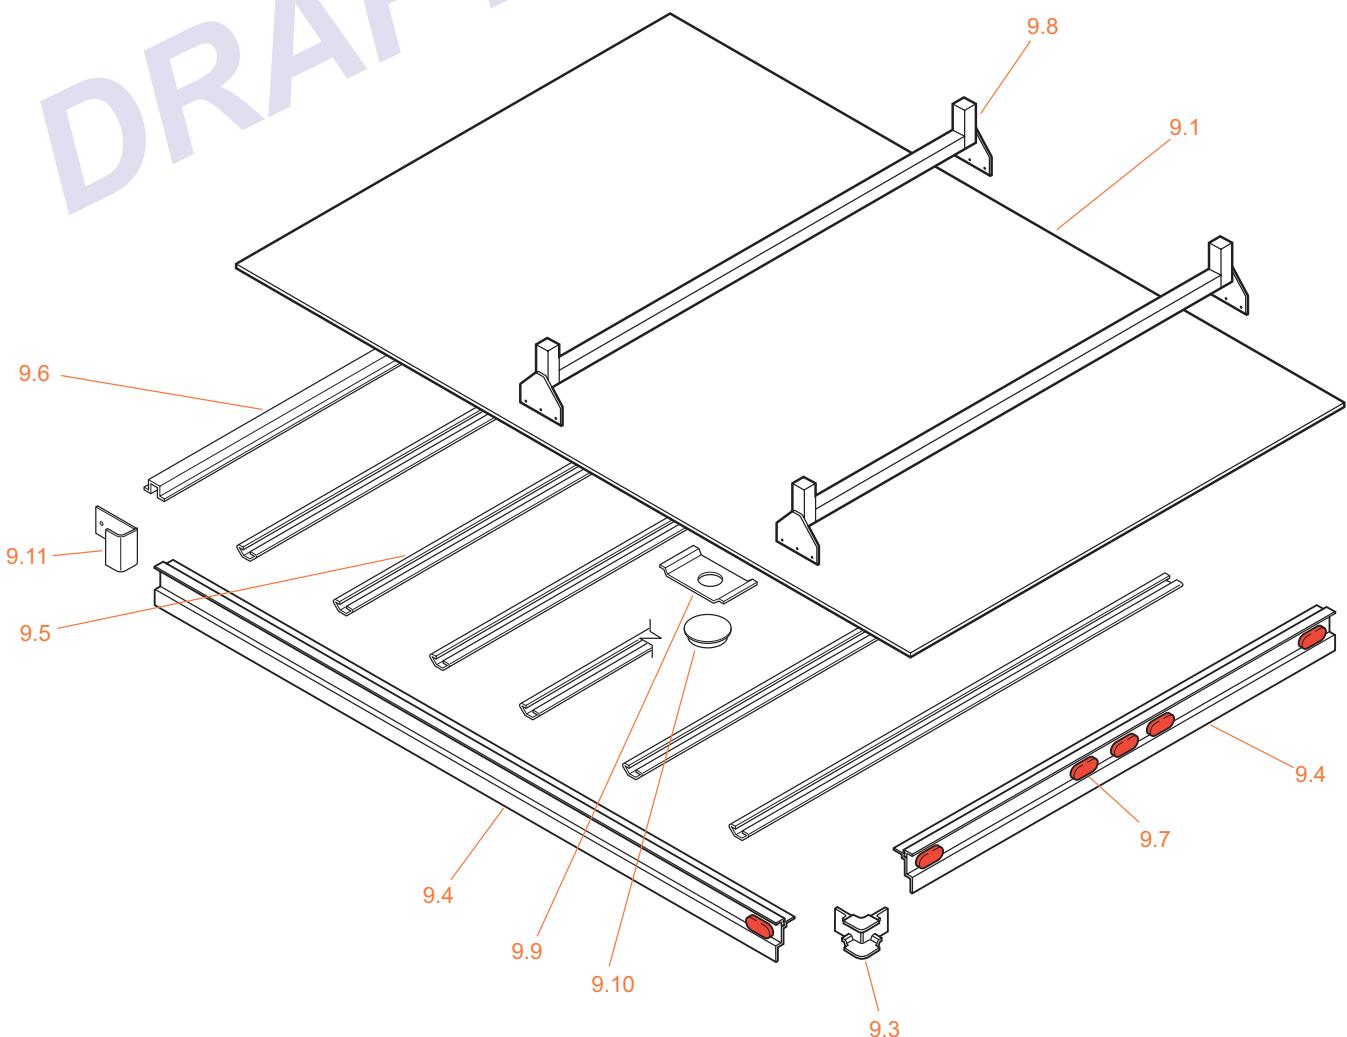

Roof Assembly


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
9.0		Trade Master Roof
9.1-A	06402104-Length	ALUM COIL .032 x 96W .456 (Specify Length)
9.1-T	20510883-Chart	EXT ROOF TRANSLUCENT CHART (Specify Width and Length)
9.2	21311262	PIPE TROUGH AL 10'L x 9.5 x 6.0
9.3	06800086	CORNER CASTING
9.4	06000846-Length	IA 9401 ROOF RAIL 06000846
9.5	01760003	ROOF BOW ANTI SNAG 92.5"
9.6	01760005	ROOF BOW FRONT 92.5"
9.7		LIGHT
9.8-90	06926657	WELDMENT LADDER RACK 90"W
9.8-96	06922209	WELDMENT LADDER RACK 96"W
9.9	06600675	PLATE LIGHT MNTG .100 x 9 x 25
9.10.1	15202125	LIGHT-COMBO W/CLEAR
9.10.2	15202126	LIGHT KD12V CARGO
9.10.3	15202111	LIGHT CLEAR
9.11 LH	06916727	PLUG ROOF RAIL F/GLASS CAP LH
9.11 RH	06916731	PLUG ROOF RAIL F/GLASS CAP RH
9.NS	12400712	SIKAFLEX ALUM 11FL OZ 221
9.NS	11600108-0306S	RIVET BR HD 3/16 x 3/8
9.NS	11400023	MAGNA-LOC 1/4" STL
9.NS	12605952	SEALANT GRAY ALUM
9.Ref	56351006	ROOF ASSEMBLY 12L x 96"W TRDMSTR
9.Ref	56351009	ROOF ASSEMBLY 14L x 96"W TM

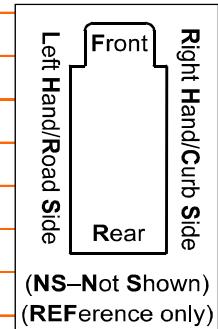

9—Roof Front Caps

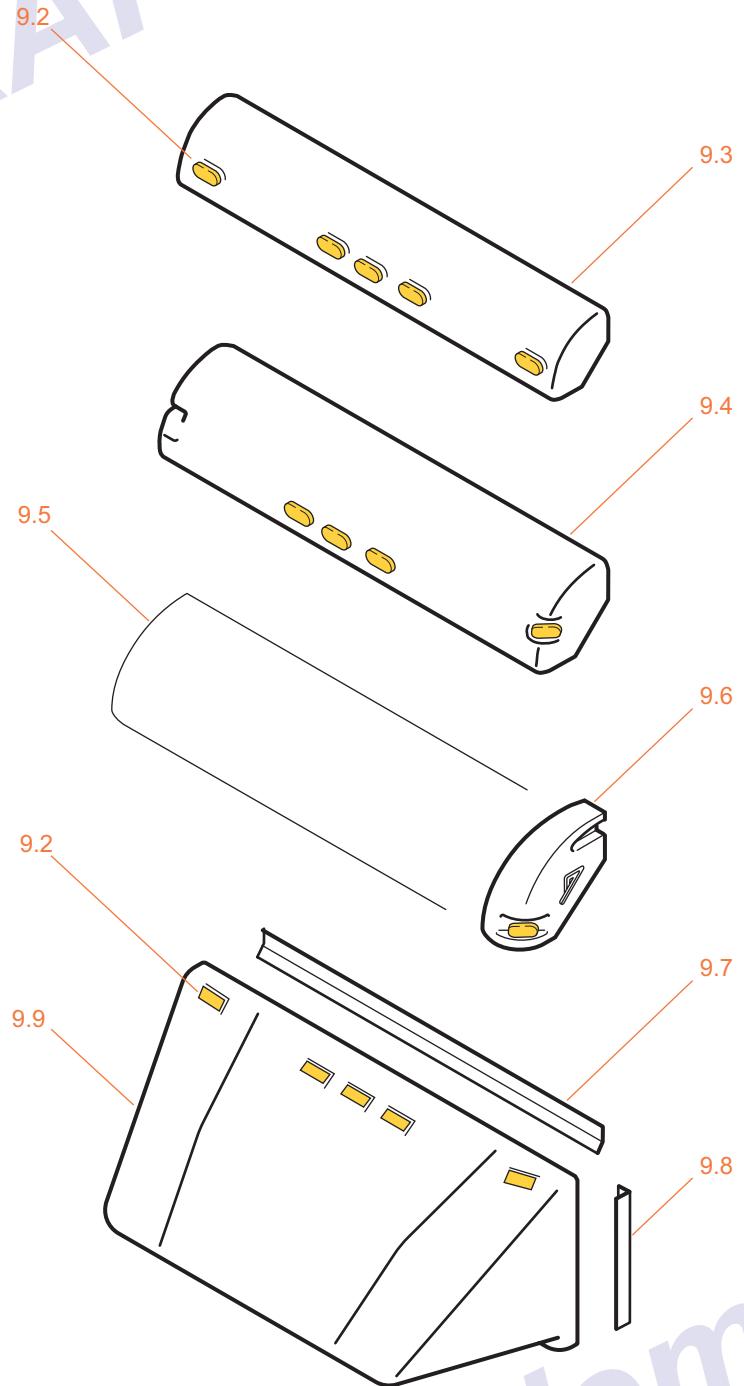

Roof Front Caps


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
9.0		Trade Master Roof Caps	
9.1	20510701	CAP FIBERGLASS 5" RADIUS WHITE 80W	
9.2.1		LIGHT, STD	
9.2.2		LIGHT, LED	
9.2.3		LIGHT, AERO CAP	
9.2.4		LIGHT, AERO CAP LED	
9.3		F/G FRONT RADIUS CAP	
9.4-96	20510575	CAP F/GLASS 12" RAD WHITE-COLOR	
9.5	Appendix 22800102	FRONT RADIUS	(NS—Not Shown) (REFERENCE only)
9.6 LH	06924889	CASTING 12" RAD FRONT CRNR L/H W/LOGO	
9.6 RH	06924888	CASTING 12" RAD FRONT CRNR R/H W/LOGO	
9.7		ANGLE, TOP	
9.8		ANGLE, SIDE	
9.9-F	01903144	AERO CAP TRDMST FORD DUAL REAR WHEELS	
9.9-FN	01903191	AERO CAP TRADEMASTER FORD N/BODY SRW	
9.9-G	01903145	AERO CAP TRDMST GM DUAL REAR WHEELS	
9.9-GN	01903192	AERO CAP TRADEMASTER GM NB SRW	
	See also Aerocap Headliner Section		

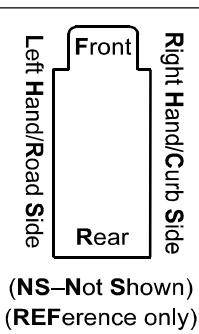

10—Electrical Harnesses

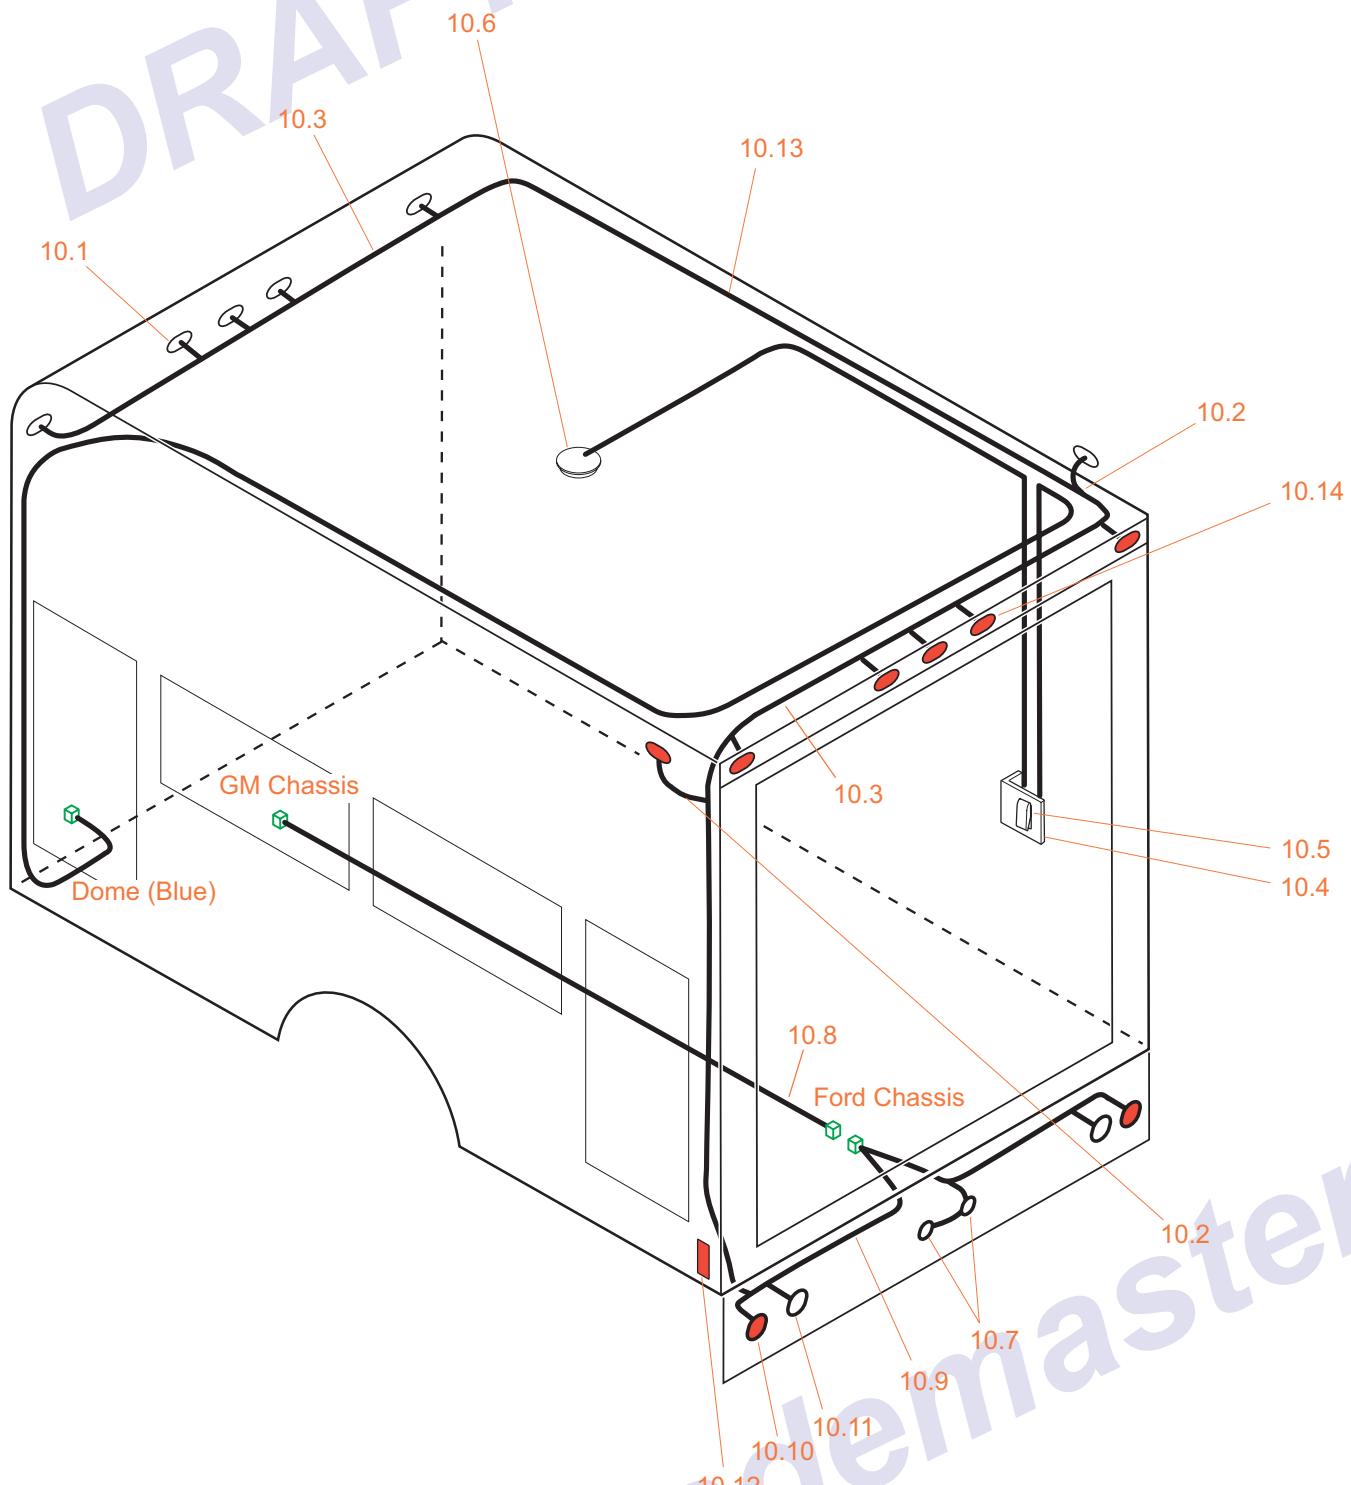

Electrical Harnesses


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
10.0		Electrical Wiring Layout	
10.1	16513197	FLUSH MOUNT CAB MARKER LAMP (Amber)	
10.2 LH	16512639	HARNESS LH CLEARANCE LIGHTS	
10.2 RH	16512638	HARNESS RH CLEARANCE LIGHTS	
10.3	16512637	HARNESS CLEARANCE LIGHTS	
10.4	06922959	BRACKET LIGHT SWITCH .063 ALUM	
10.5.1	16511544	SWITCH RCKR LITED	
10.5.2	16000048	SWITCH 3-WAY CONCEPT	
10.6.1	15202125	LIGHT-COMBO W/CLEAR	
10.6.2	15202126	LIGHT KD12V CARGO	
10.6.3		LIGHT	
10.7	16500153	LIGHT LICENSE PLATE	
10.8		GM JUMPER	
10.9-G	16513423	WIRING HARNESS (GM) TRADEMASTER	
10.9-F	16400381	HARNESS WIRE 10'-16' (Ford)	
10.9-Z		HARNESS, TAIL LIGHT (Isuzu)	
10.10		LIGHT, STOP/TURN/TAIL	
10.11		LIGHT, REVERSE	
10.12	15200498	REFLECTOR RED TAPE	
10.13		HARNESS, MAIN	
10.14-L	16513066	LENS OVAL CLR/MKR RED (Lens Only)	
10.14-B	16513068	LAMP BASE CLR/MKR W/PTAIL (Base Only)	
10.14-P	16513198	TWIST-IN SOCKET PIGTAIL (Only)	
10.NS	16500071	BUSHING SNAP 1/2"	
10.NS	16500073	BUSHING SNAP 7/8"	
10.NS	16602400	CLAMP "P" 1" PLASTIC	
10.NS	16602350	CLAMP "P" 1/2" PLASTIC	
10.NS	16510019	CONDUIT PLASTIC 3/8" SLIT	
10.NS	16101122	FUSE 15 AMP	
10.NS	16500101	GROMET BLK 11/16	
10.NS	16512650	INLINE FUSE HOLDER 15 AMP	
10.NS	16512507	WIRE CLIP W/ADH	

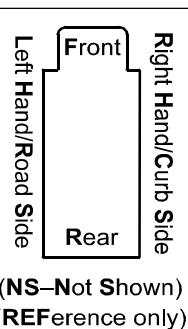

continued

10—Electrical Harnesses (Continued)

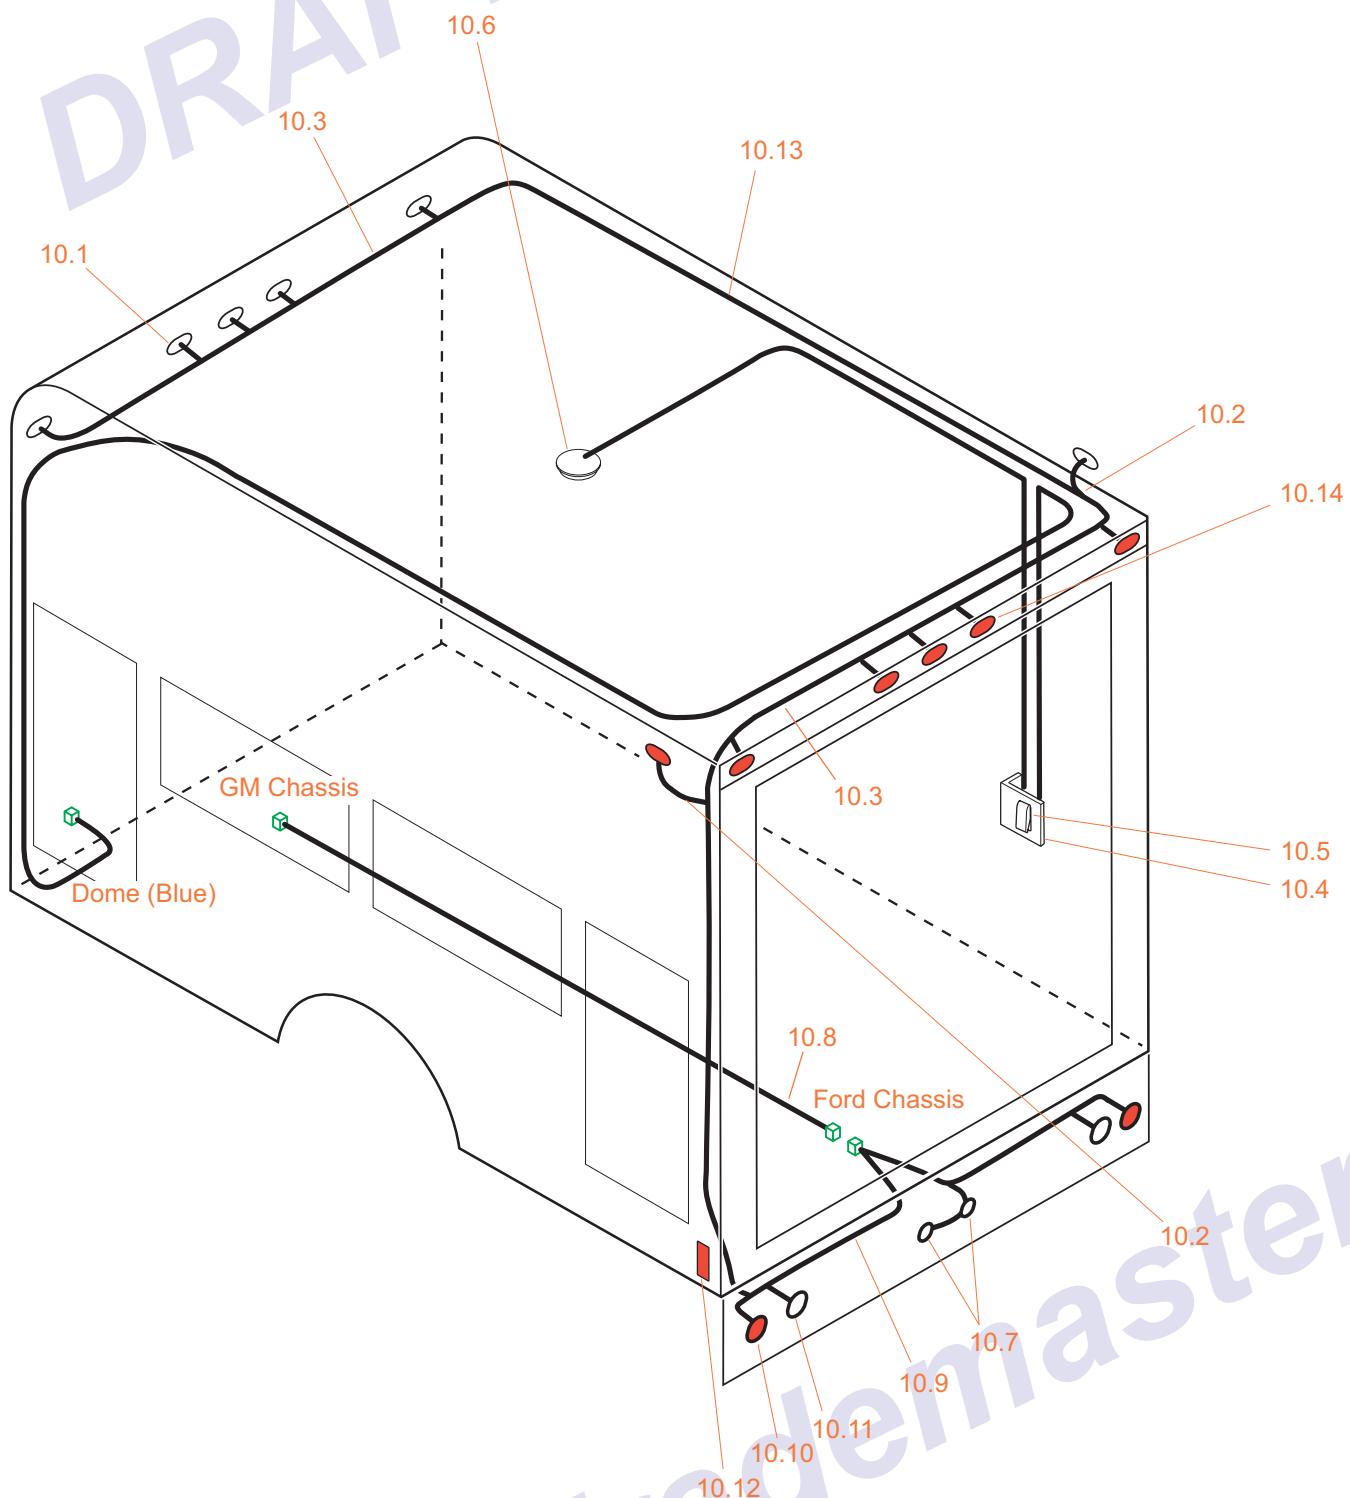

Electrical Harnesses

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item		Description
10.Ref	16512131	WIRING MODIFICATION GM
10.Ref	16513057	WIRING LAYOUT ROOF SHORT CUTAWAY
10.Ref	58301002	CAB WIRING GM CUTAWAY 03

See also the *Utilimaster Quick Reference Parts Guide*.

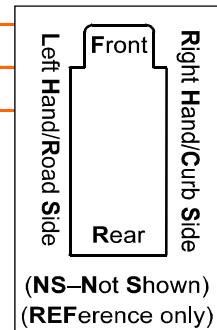

11—Options, Shelving

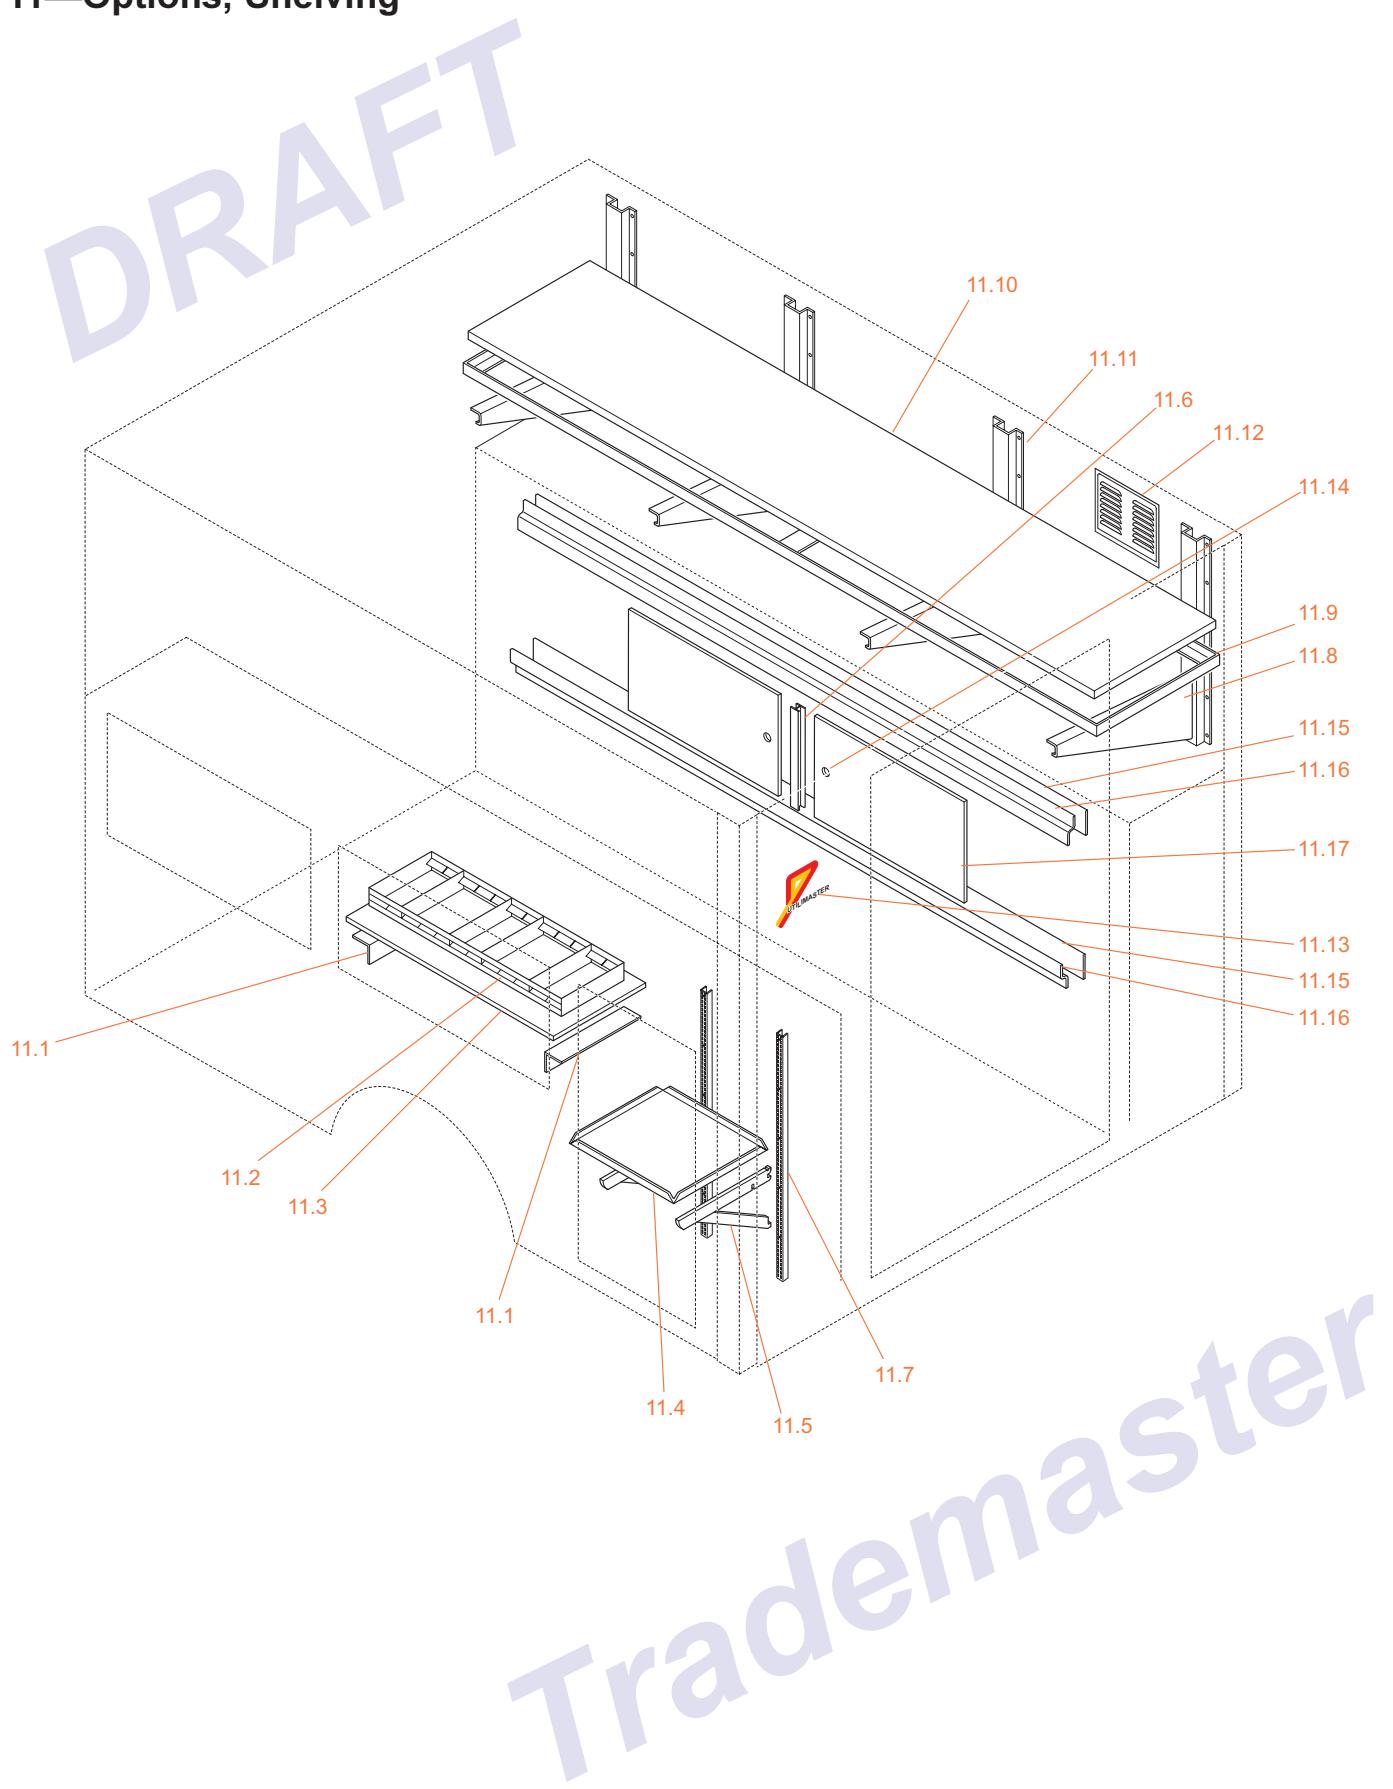

Options, Shelving


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
11.0		Trademaster Cargo Options
11.1	06000711-Length	IA4599 ANGLE 06000711
11.2	08611095	PARTS TRAY 3"H x 37"W x 12"D
11.3.1	02804897	FRP SHELF 3/8 x 12 x 41.50
11.3.2	02804898	FRP SHELF 3/8 x 12 x 46.50
11.4.1	22817123	SHELF FRMD 16GA GALV x 18 x 24
11.4.2	22817428	SHELF FRMD 16GA GALV x 18 x 22
11.5	08611097	FAST-MOUNT DOUBLE BRACKET
11.6	06013110-01400	IA5129 "I" 14.00 06013110
11.7	08611101-Length	FAST-MOUNT UPRIGHT
11.8.1 LH	06919999	GUSSET SHELF LH .125 AL x 7 x 18.25
11.8.1 RH	06920012	GUSSET SHELF RH .125 AL x 7 x 18.25
11.8.2 LH	06923293	GUSSET SHELF LH 12" TRDMST N/B
11.8.2 RH	06923294	GUSSET SHELF RH 12" TRDMSTR NB
11.9.1	06923817	WLDMT SHELF FRAME 20.38 x 163.38
11.9.2	06923356	WLDMT SHELF FRAME 12.38 x 115.38
11.10-10P	02804915	PLYWOOD 3/4 x 12 x 57.50 10' SHELF
11.10-10F		10' FRP
11.10.12P		12' PLYWOOD
11.10-12F	02804596	FRP SHELF UPPER 3/8 x 22.4 x 144
11.10-14P	02804998	PLYWOOD 3/4 x 20 x 81.50 14' SHELF
11.10-14F	02804990	FRP SHELF UPPER 3/8 x 22.4 x 168
11.11	06923044	IA4860 ALUM H/DUTY STUD 35.00 W/HLS
11.12.1	07200278	VENTILATOR ALUM 10 x 12 (W/Closer)
11.12.2	07200275	VENTILATOR ALUM 10 x 12 (Louver Only)
11.12.3	03102154	DECAL BUTTERFLY VENT OPEN/CLOSED
11.13	03000346	DECAL U/MSTR LOGO
11.14	16500082	BUSHING SNAP 1-1/2"
11.15	06926624	ALUM STRIP .100 x 1.88 x 66.00
11.16	06926620	TRACK INT ACCESS SLD DOOR
11.17	02805428	PANEL INT ACCESS SLD DOOR
11.NS	11007502	NUT-T1/4-20 x 7/16
11.NS	11600858	SCREW 1/4-20 x 1-1/2 TORX PNHD ZINC

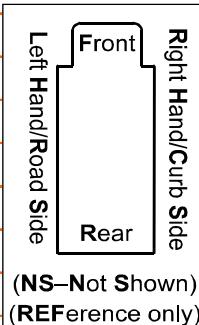

continued

11—Options, Shelving (Continued)

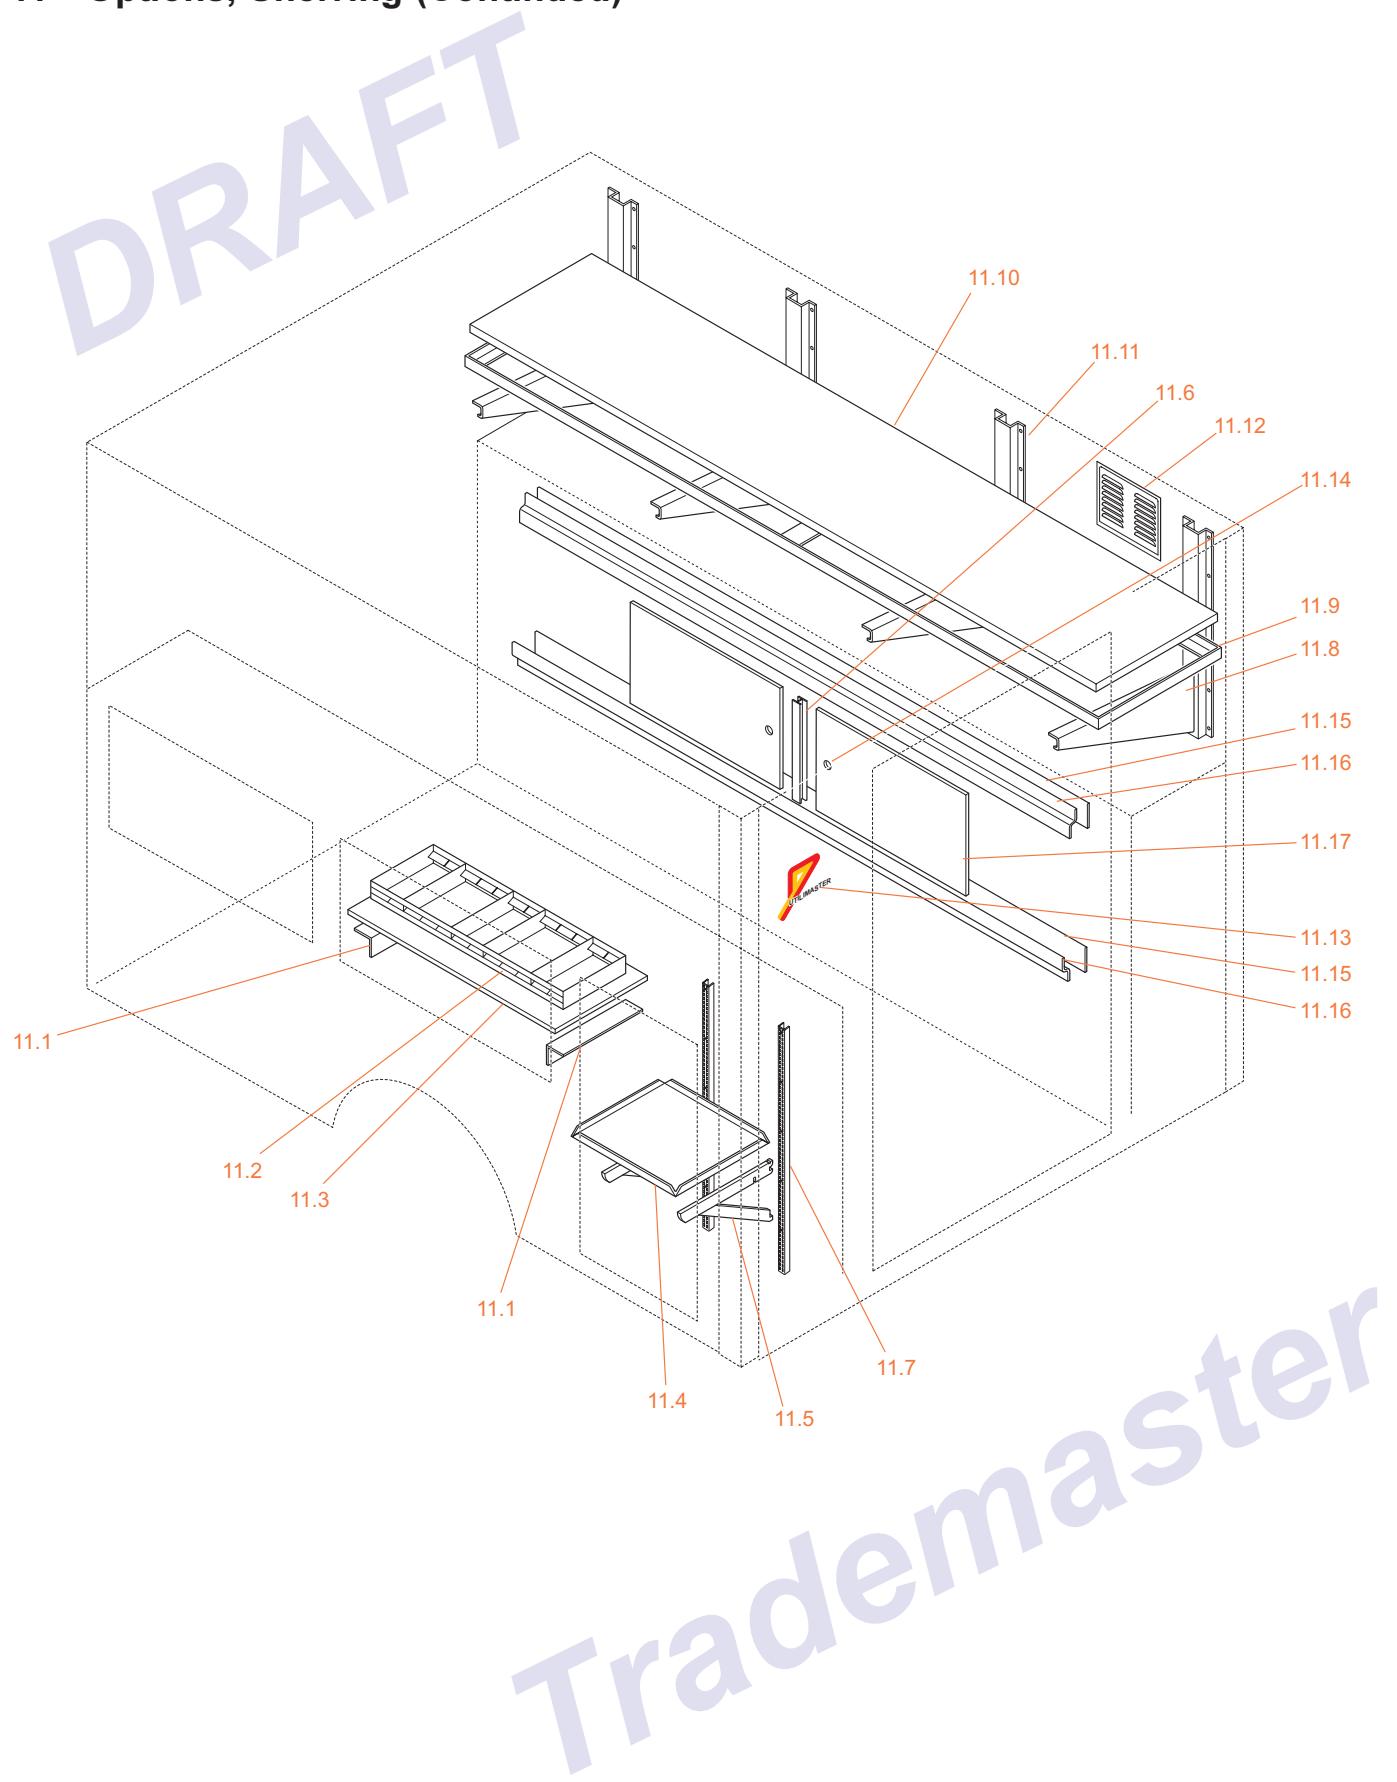

Options, Shelving


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item		Description	
11.Ref	53351049	ASSY INT ACCESS SLD DOOR	
11.Ref	02805427	INNER WALL W/CUTOUT 47.75 x 144.00	
11.Ref	53351034	SHELVING LA YOUT LH WALL 14' DUAL TM	
11.Ref	53351035	SHELVING LA YOUT RH WALL 14' DUAL TM	
11.Ref	53351016	SHELF ASSY 18" x 24" STANDARD BODY	
11.Ref	53351031	SHELF ASSY 18" x 22" STD 14' BODY	
11.Ref	53351032	INSTL BIN/SHELF 14' STD LH	
11.Ref	53351033	INSTL BIN/SHELF 14' STD RH	
11.Ref	53351013	INSTL BIN/SHELF 12' STD LH	
11.Ref	53351014	INSTL BIN/SHELF 12' STD RH	
11.Ref	53351017	SHELVING LA YOUT L/H WALL 10' NB T/M	
11.Ref	53351018	SHELVING LA YOUT R/H WALL 10' NB T/M	
11.Ref	53351011	INSTL BIN/SHELF 12' NB LH TRDMST	
11.Ref	53351012	INSTL BIN/SHELF 12' NB RH TRDMST	
11.Ref	53351007	INSTL BIN/SHELF 10' NB LH TRDMST	
11.Ref	53351008	INSTL BIN/SHELF 10' NB RH TRDMST	
11.Ref	53351009	INSTL BIN/SHELF 10' STD LH TRDMST	
11.Ref	53351010	INSTL BIN/SHELF 10' STD RH TRDMST	

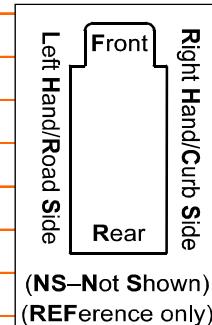

11—Options, Central Locking System

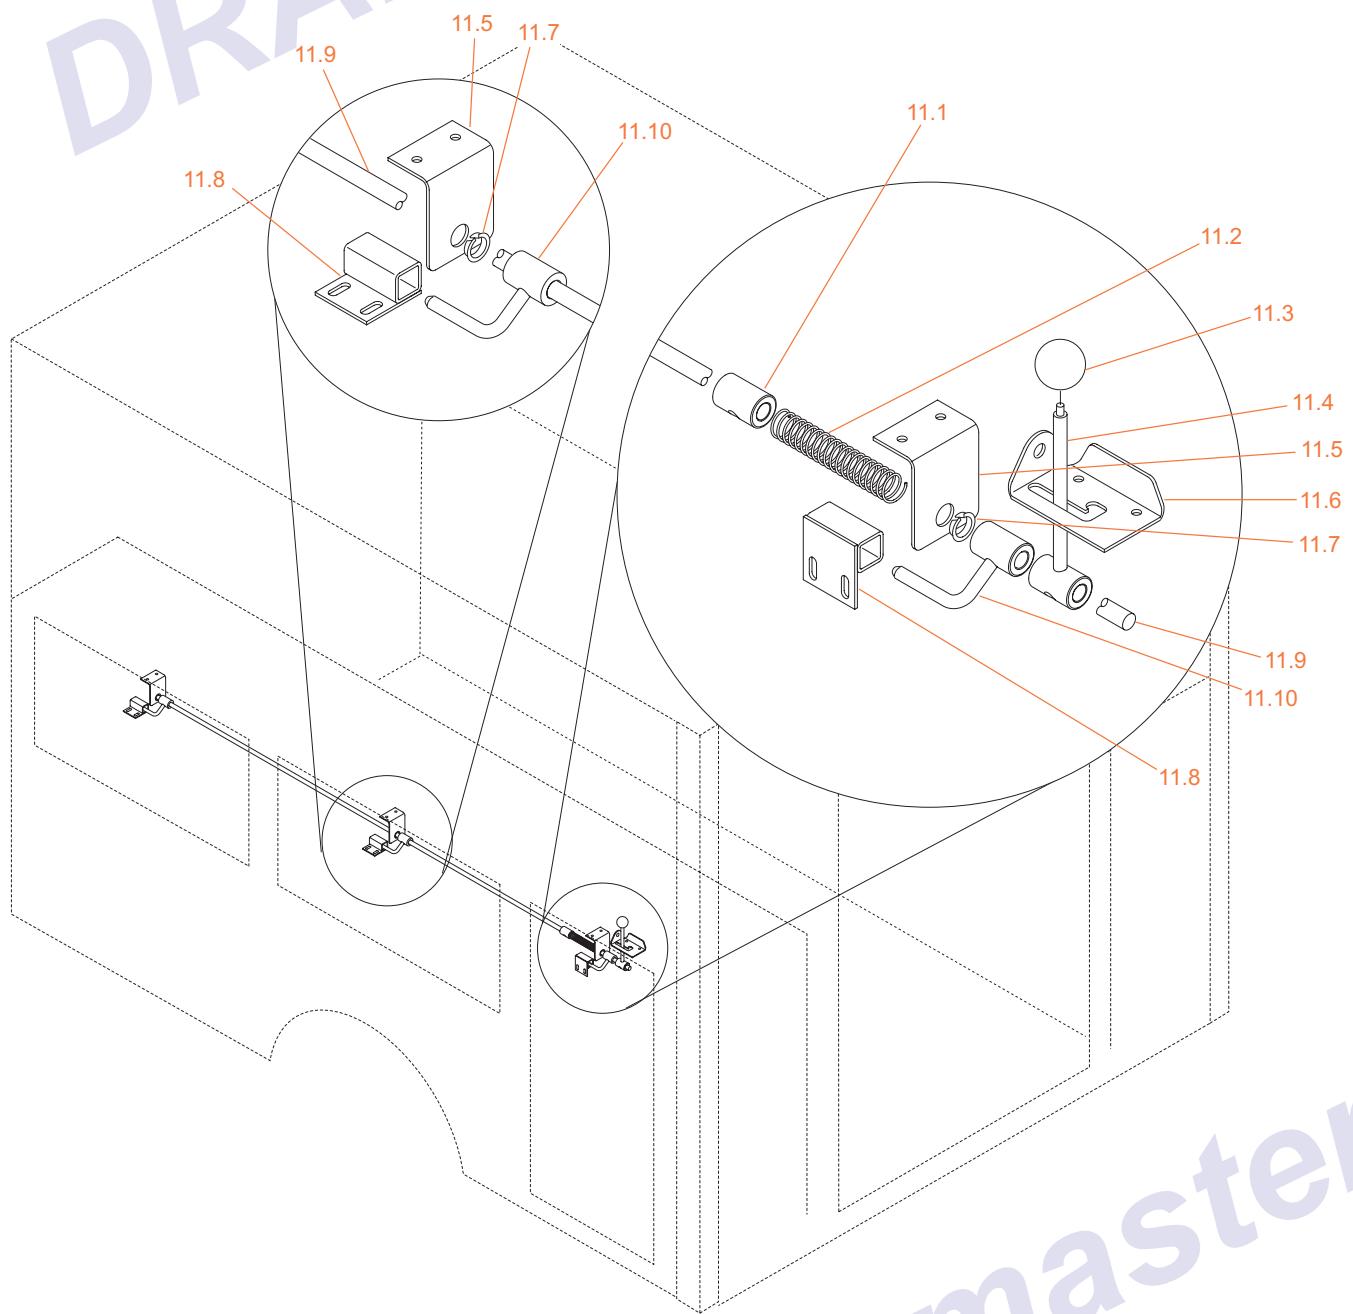

Options, Central Locking System


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
11.0		Central Locking System	
11.1.0	22818589-PAINT	LOCK PIN	
11.1.1	08611308	SCREW SET 1/4-20x3/8 STL BLK OXIDE	
11.2	08611309-00550	SPRG CMPSRN .781 OD x 4 COIL/IN	
11.3	08610638	KNOB POS PRESS HAND ACTUATOR	
11.4.0	22818619	WLDMT COLLAR LOCK LEVER	
11.4.1	08611308	SCREW SET 1/4-20x3/8 STL BLK OXIDE	
11.5	22818584	SUPPORT ROD	
11.6-LH	22818599	PLATE LOCK LH	
11.6-RH	22818598	PLATE LOCK RH	
11.7	20510878	BEARING NYLON 5/8"	
11.8	22818592	WELDMENT RECEPT LOCK PIN	
11.9	22818812	ROD 1/2" DIA SS 304 12' CHART	
11.10.0	22818591	WELDMENT LOCK PIN	
11.10.1	08611308	SCREW SET 1/4-20x3/8 STL BLK OXIDE	
11.Ref		INSTALL CENTRAL LOCK 10' TRADEMASTER	
11.Ref		INSTALL CENTRAL LOCK 12' TRADEMASTER	
11.Ref	53351043	INSTALL CENTRAL LOCK 14' TRADEMASTER	

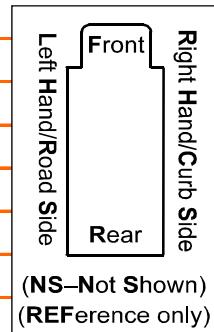

11—Options, Roof Ladder

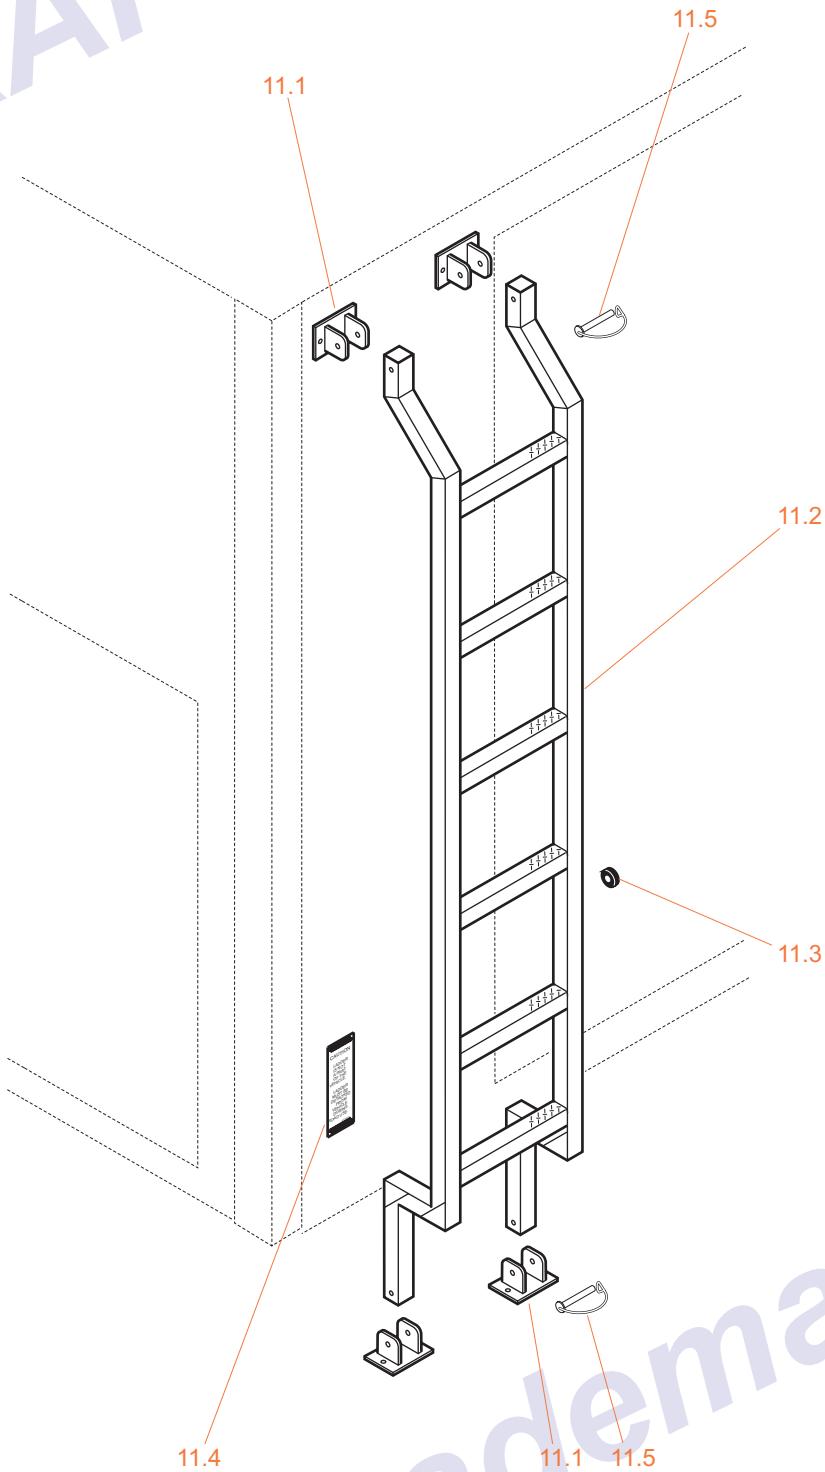

Options, Roof Ladder


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
11.0		Trademaster Ladder
11.1	01903283	BRKT LADDER TOP MNTG WLD ALUM .188
11.2.1	64351011	ALUM LADDER ACCESS 11"W x 87.25"L
11.2.2	64351016	LADDER ALUM ACCESS 11"W x CHART (Cab)
11.3	05705473	RUBBER BMPR 1.5 DIA x .625
11.4	03102615	DECAL TM LADDER REMOVAL CAUTION
11.5	08611079	SNAP PIN 5/16 x 2.50

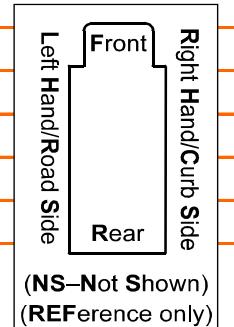

12—Cabover Option

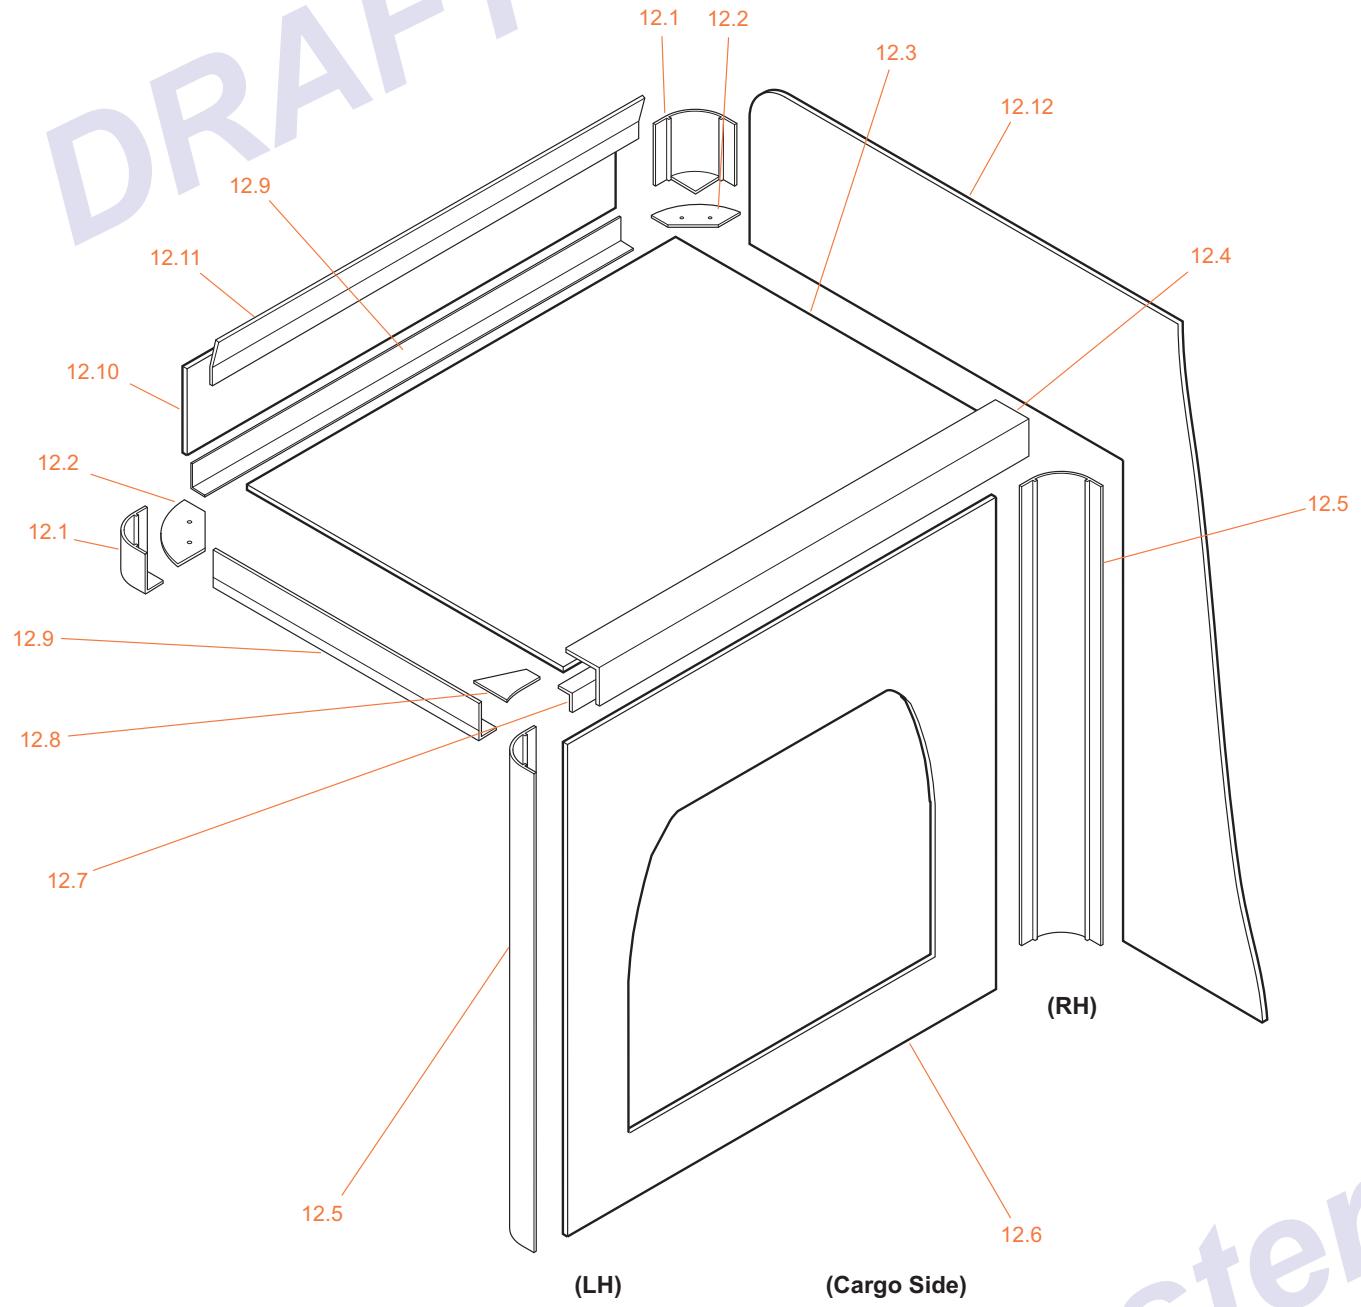

Cabover Option


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
12.0		Trademaster Cabover	
12.1	06923265	POST WLDMNT UPPER VERT 7.25 TRDMST	
12.2	06921496	PLATE CRNR SEAL .063 x 2.5 x 6.22	
12.3	02802571	LAM 1-1/8 PLY/040 x 42 x 93.75 FW	
12.4	06600919	ANGLE .080 x 3.5 x 3.5 x 94 NTCH	
12.4-N	06600918	ANGLE .080 x 3.5 x 3.5 x 92 NTCH	
12.5	06013020-Length	FRONT CRNR POST 06013020	
12.6	Reference Only	See Front Wall Section	
12.7	06002050-Length	IA637 ANGLE 06002050	
12.8	06531281	GUSSET C/O .125 x 5.5 x 2.5 x 4.62	
12.9	06003006-Length	ALUM EXT CABOVER B/RAIL IA5762	
12.10	BSNR	FRP FRT WALL C/O	
12.11	06919083	CLOSEOUT WIRE 4.5 x 85.62	
12.12	Reference Only	See Sidewall Section	
12.NS	12301751	TAPE GREY BUTYL 1/16 x 1-1/2 50'	
12.Ref	06923266	BASERAIL WLDMT C/O LH 71.0 42" DECK	
12.Ref	06923267	BASERAIL WLDMT C/O RH 71.0 42" DECK	

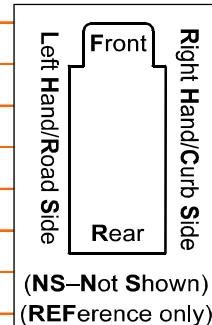

Appendices

06402141—Roof Metal

APPENDIX 06402141: ROOF METAL		
Part Number	Replacement Number	Description
06402141	06402104-Length	ALUM .032 x 90W x 10' ROOF METAL
06402143	06402104-Length	ALUM .032 x 90W x 12' ROOF METAL
06402145	06402104-Length	ALUM .032 x 90W x 14' ROOF METAL
06402147	06402104-Length	ALUM .032 x 90W x 16' ROOF METAL
06402149	06402104-Length	ALUM .032 x 90W x 18' ROOF METAL
06402151	06402104-Length	ALUM .032 x 90W x 20' ROOF METAL
06402153	06402104-Length	ALUM .032 x 90W x 22' ROOF METAL
06402155	06402104-Length	ALUM .032 x 90W x 24' ROOF METAL
06402157	06402104-Length	ALUM .032 x 90W x 26' ROOF METAL
06402159	06402104-Length	ALUM .032 x 90W x 28' ROOF METAL
06402121	06402104-Length	ALUM .032 x 96W x 10' ROOF METAL
06402122	06402104-Length	ALUM .032 x 96W x 12' ROOF METAL
06402123	06402104-Length	ALUM .032 x 96W x 14' ROOF METAL
06402124	06402104-Length	ALUM .032 x 96W x 16' ROOF METAL
06402125	06402104-Length	ALUM .032 x 96W x 18' ROOF METAL
06402126	06402104-Length	ALUM .032 x 96W x 20' ROOF METAL
06402120	06402104-Length	ALUM .032 x 96W x 22' ROOF METAL
06402127	06402104-Length	ALUM .032 x 96W x 24' ROOF METAL
06402128	06402104-Length	ALUM .032 x 96W x 26' ROOF METAL
06402129	06402104-Length	ALUM .032 x 96W x 28' ROOF METAL
06402171	06502013-Length	ALUM .040 x 102W x 10' ROOF METAL
06402173	06502013-Length	ALUM .040 x 102W x 12' ROOF METAL
06402175	06502013-Length	ALUM .040 x 102W x 14' ROOF METAL
06402177	06502013-Length	ALUM .040 x 102W x 16' ROOF METAL
06402179	06502013-Length	ALUM .040 x 102W x 18' ROOF METAL
06402181	06502013-Length	ALUM .040 x 102W x 20' ROOF METAL
06402183	06502013-Length	ALUM .040 x 102W x 22' ROOF METAL
06402185	06502013-Length	ALUM .040 x 102W x 24' ROOF METAL
06402187	06502013-Length	ALUM .040 x 102W x 26' ROOF METAL
06402189	06502013-Length	ALUM .040 x 102W x 28' ROOF METAL

Parts in grayed-out areas are nonstocked items and may be substituted.

22800102—Front Sheet Radius

APPENDIX 22800102: FRONT SHEET RADIUS		
Part Number	Description	Width
22800102	STAINLESS 12" FRT RADIUS 86"L	86"
06701226	CAP FRT 12" RADIUS 88"L	88"
06701230	CAP FRT 12" RADIUS 96"W	92"
22800101	CAP RADIUS FRT 12" S.STEEL 96W	92"
06701232	CAP FRT 12" RADIUS 102"W	98"
22800103	CAP RADIUS FRT 12"S.STEEL 102W	98"

53301006—FRP Sidewalls

APPENDIX 53301006: FRP SIDEWALL											
Description	72" H	78" H	84" H	90" H	96" H	102" H	108" H	Core	Int Finish	Ent Finish	
FRP 3/8 TEDLAR	02804069	02804070	02804071	02804072	02804073	NA	NA	3/8 Ply	Wht Resin	Wht Tedlar	
FRP 3/8 GEL	02804074	02804075	02804076	02804077	02804078	NA	NA	3/8 Plywd	Wht Resin	Wht Gelc	
FRP 3/8 GEL/GEL	02804155	02804156	02804157	02804158	02804159	NA	NA	3/8 Plywd	Wht Gelc	Wht Gelc	
FRP 1/2 TEDLAR	02804079	02804080	02804081	02804082	02804083	02804084	02804085	1/2 Plywd	Wht Resin	Wht Tedlar	
FRP 1/2 GEL	02804086	02804087	02804088	02804089	02804090	02804091	02804092	1/2 Plywd	Wht Resin	Wht Gelc	
FRP 5/8 TEDLAR	02804093	02804094	02804095	02804096	02804097	02804098	02804099	5/8 Plywd	Wht Resin	Wht Tedlar	
FRP 5/8 GEL	02804100	02804101	02804102	02804103	02804104	02804105	02804106	5/8 Plywd	Wht Resin	Wht Gelc	
FRP 5/8 GEL/GEL	02804107	02804108	02804109	02804110	02804111	02804112	02804113	5/8 Plywd	Wht Gelc	Wht Gelc	

54300521—FRP Front Wall with Aerocap

APPENDIX 54300521: FRP FRONT WALL W/AEROCAP					
Part No.	Height	Core	Etr Finish	Int Finish	Where Used
02803640	84"	3/8"	TEDLAR	WHITE RESIN	7' WHEELWELL
02803642	84"	3/8"	GELCOAT	WHITE RESIN	7' WHEELWELL
02804134	83"	3/8"	TEDLAR	WHITE RESIN	7' WHEELWELL
02804135	83"	3/8"	GELCOAT	WHITE RESIN	7' WHEELWELL
02803644	84"	1/2"	TEDLAR	WHITE RESIN	7' WHEELWELL
02803646	84"	1/2"	GELCOAT	WHITE RESIN	7' WHEELWELL
02804136	83"	1/2"	TEDLAR	WHITE RESIN	7' WHEELWELL
02804137	83"	1/2"	GELCOAT	WHITE RESIN	7' WHEELWELL
02803650	84"	5/8"	GELCOAT	WHITE RESIN	7' WHEELWELL
02804138	83"	5/8"	TEDLAR	WHITE RESIN	7' WHEELWELL
02804139	83"	5/8"	GELCOAT	WHITE RESIN	7' WHEELWELL
02803652	78"	3/8"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02803654	78"	3/8"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02804140	77"	3/8"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02804141	77"	3/8"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02803655	78"	1/2"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02803656	78"	1/2"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02804142	77"	1/2"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02804143	77"	1/2"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02803657	78"	5/8"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02803658	78"	5/8"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02804144	77"	5/8"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02804145	77"	5/8"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR

54301004—FRP Front Walls

APPENDIX 54301004: FRP FRONT WALL						
Part No. 90" W	Part No. 96" W	Part No. 102" W	Core	Interior Finish	Exterior Finish	Description
02804048	02804049	02804050	3/8 Plywood	White Resin	White Gelcoat	FRP 3/8 GELCOAT
02804051	02804052	02804053	3/8 Plywood	White Resin	White Tedlar	FRP 3/8 TEDLAR
02804054	02804055	02804056	1/2 Plywood	White Resin	White Gelcoat	FRP 1/2 GELCOAT
02804057	02804058	02804059	1/2 Plywood	White Resin	White Tedlar	FRP 1/2 TEDLAR
02804060	02804061	02804062	5/8 Plywood	White Gelcoat	White Gelcoat	FRP 5/8 GEL/GEL
02804063	02804064	02804065	5/8 Plywood	White Resin	White Gelcoat	FRP 5/8 GELCOAT
02804066	02804067	02804068	5/8 Plywood	White Resin	White Tedlar	FRP 5/8 TEDLAR
02804257	02804258	02804259	1/2 Encore	White Resin	White Tedlar	FRP 1/2 ENCORE/TEDLAR
02804311	02804312	02804313	1/2 Plywood	White Gelcoat	White Gelcoat	FRP 1/2 GEL/GEL

Index

A

Address
National Highway Traffic Safety Administration 12
U.S. Department of Transportation 12
Utilimaster
Customer service 13
Parts department 9
Publications department 3
Warranty department 11
Aerocap 32, 36, 54
Appendices 7, 52

B

Body serial number 8
BSNR 7
Bumpers 13, 16

C

Cabover 50
Central locking system 46
Chart 7. *See also* Appendixes
Compartments, sidewall 28
Crossmembers 14
Customer service 9, 11, 13

D

Door
Bulkhead 30, 32
Compartment 24
Entry 22
Hardware 13, 22, 24, 30, 32
Mid-ship wall 30, 32
Rear 22

E

Electrical components 13
Electrical harnesses 38
Electrical system 38
Email 9, 11, 13

F

Federal Certification Label 8
Floor, cargo 14
Forms 9, 11
Front sheet radius 36, 53
Front wall
Front sheet radius 36, 53
FRP 30, 32, 54

FRP

Front wall 26, 30, 32, 54
Sidewalls 53

G

Glossary of terms 13
Grab handles 18
Gusset 42

H

Harnesses, electrical 38
Header, rear 18, 20

I

Item numbers 6

L

Ladder 48
Lights 16, 26, 34, 36, 38. *See also* Quick Reference Parts Guide
Locking system 46
Locks, compartments 46

M

Master locking system 46
Mid-ship wall 30, 32
Mirrors 13
Mud flaps 13

N

Numbers
Item 6
Part 6
Phone 9, 11, 12, 13
Unit serial 8
VIN 8
Work order 8

P

Parts
Guide 13
Lists 14
Numbers 6
Order form 11
Ordering 9
Returns 9
Phone numbers 9, 11, 12, 13

R

Racks 34, 42
Rear
Corner post 18, 20
Doors 22
Structure 18, 20
Revision 3
Roof 34, 36, 52
Roof ladder 48

S

Safety defect reporting 12
Serial number 8
Service manual 13
Shelving 42
Sidewalls 26, 53
Storage compartments 28
Subframe 14
Switches 13, 38

T

Tray 42
Treadplate 14

U

Unit serial number 8
Utilimaster Body Service Manual 13
Utilimaster Glossary of Terms 13
Utilimaster Quick Reference Parts
Guide 13

V

Vents 13, 42
VIN 8

W

Warranty claims 11
Web site 3, 9, 11, 13
Wheel well trim 26
Wiring. See Electrical harnesses
Wiring schematics 13
Work order number 8

Trademaster

DRAFT

DRAFT



Utilimaster Body Parts Manual

ademaster

Part Number: 03101937-PY00EN

©Utilimaster Corporation, 65906 State Road 19, P.O. Box 585, Wakarusa, Indiana, 46573-0585, USA