



Body Parts Manual



1981-2001
Utilivan

Read First: Top Tips on Using This Online Manual

Browse pages with Bookmarks (hyperlinks) or thumbnails

A **bookmark**, at the left of the screen, is a hyperlink to a page. From any page in this document, you can use bookmarks to jump to any section heading.

To jump to a topic by using its bookmark, point to the bookmark name, and when the arrow becomes a pointing hand, click on the name. If a triangle (or + sign) appears to the left of the bookmark, click the triangle (or + sign) to show or hide subordinate bookmarks.




Thumbnails are visual icons of the actual pages. After selecting the thumbnail view button (Acrobat Reader ver. 3.0) or tab (ver. 4.0), you can quickly browse for parts sections just by the “look” of the page. Click on the appropriate thumbnail to view that page.




Use the Zoom and Fit tools for magnification of page sections

 Select the Zoom tool. (**In ver. 4.0, when the Hand tool is selected, you can temporarily change to the Zoom tool by holding down the Ctrl key and the space bar at the same time.**) Click and drag to draw a rectangle around the area you want to magnify.



To return to an overview, you can click on one of the following buttons:

 - The Fit Page button scales the *entire* page to display within the main window.
- The Fit Width button scales the page *width* to display within the main window.



Use the Text tool for copying selected text into other applications

You can select text in a PDF document, copy it to the Clipboard, and paste it into another application. **By pasting parts descriptions and numbers into your email or parts form template, you can order parts much faster than through phoning or faxing.** To select text and copy it to the Clipboard:

1. Click the Text Selection tool.
2. Click and drag over the text you want to select. When you release the mouse button, the selected text stays highlighted.
3. Hold down the Ctrl key and press C on the keyboard to copy the selected text to the Clipboard.



Find parts or procedures with the Find tool

Use the Find tool to search for a fragment of a word, a complete word, or multiple words in the active document. To **find** a word (e.g., a part name):

1. Click the Find tool.
2. In the Find What text box, enter the text to be found and click Find. When the program finds the text, the Find dialog box closes and the page containing the text is displayed with the text highlighted.
3. To find the **next occurrence** of the word, press F3, press Ctrl + G, or reopen the Find dialog box and click Find Again.



Revision Control

Revision	Print Date
Rev. A	March 2003

Important Notices

©2003, Utilimaster.®

Printed in U.S.A.

Title: *1981–2001 Utilivan—Body Parts Manual*

Utilimaster Corporation attempts to provide information that is accurate, complete, and useful. All information contained in this manual is based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice. Should you find inadequacies in the text, please send your comments to the following address:

Utilimaster
Attn: Designer of Technical Publications
65906 State Road 19, P.O. Box 585
Wakarusa, IN 46573–0585, U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

This material is confidential and the property of Utilimaster. It is shared with your company for the sole purpose of helping you with the operation of the described equipment.


Utilimaster makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Utilimaster shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Utilimaster expressly disclaims all responsibility and liability for the installation, use, performance, maintenance, and support of third-party products. Customers are advised to make their independent evaluation of such products.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Utilimaster.

Utilimaster®, Utilivan®, Aerocap®, Trademaster™, and Metromaster™ are registered trademarks of Utilimaster Corporation. All other trademarks are products of their respective companies.

Browse the award-winning web site www.utilimaster.com for more information about Utilimaster and its products.

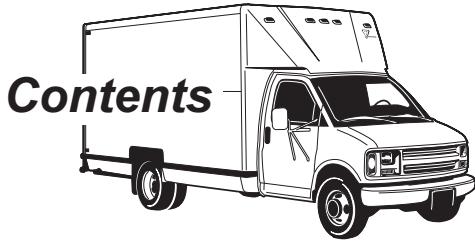

Contents

<i>Revision Control</i>	3
<i>Important Notices</i>	3
<i>Introduction</i>	6
<i>Decoding Part Numbers</i>	6
<i>Finding Part Numbers</i>	6
<i>Item Numbers</i>	6
<i>Part Number with a Suffix</i>	7
<i>Part Descriptions</i>	7
<i>Vehicle Identification Number (VIN)</i>	8
<i>Body (or Unit) Serial Number and Federal Certification Label</i>	8
<i>Work Order Numbers</i>	8
<i>Ordering Parts</i>	9
<i>How to Order</i>	9
<i>Returns</i>	9
<i>Customizable Parts Order Form</i>	9
<i>Faxable Parts Order Form</i>	11
<i>Filing Warranty Claims</i>	11
<i>Reporting Safety Defects (U.S. Only)</i>	12
<i>More Information</i>	13
<i>Utilimaster Quick Reference Parts Guide</i>	13
<i>Utilimaster Glossary of Terms</i>	13
<i>Utilimaster Body Service Manual</i>	13
<i>Download Files</i>	13
<i>Contact Utilimaster</i>	13

<i>Diagrams and Parts Lists</i>	14
1— <i>Chassis Interface</i>	14
2— <i>Rear Bumpers</i>	18
3— <i>Cargo Floor, Low Mount</i>	22
3— <i>Cargo Floor, Flat</i>	24
4— <i>Rear Structure, Full-width Door</i>	26
4— <i>Rear Structure, Narrow Door</i>	28
4— <i>Rear Structure, RV Door</i>	30
5— <i>Rear Doors, Swing</i>	32
5— <i>Rear Doors, Slam Lock Hardware</i>	34
5— <i>Rear Doors, Cam Lock Hardware</i>	36
5— <i>Rear Door, Roll-up</i>	38
6— <i>Sidewalls</i>	42
6— <i>Sidewalls, Skirt Option</i>	46
7— <i>Roof</i>	48
7— <i>Roof Options</i>	50
8— <i>Front Bulkhead Wall</i>	52
8— <i>Mid-ship Wall, Solid</i>	54
8— <i>Mid-ship Wall, Mesh</i>	56
9— <i>Electrical Harnesses</i>	58
10— <i>Cargo Options, Interior</i>	62
10— <i>Cargo Options, Exterior</i>	64
11— <i>Heater, Auxiliary</i>	66
12— <i>Cabover Option</i>	68
<i>Appendices</i>	70
01901753— <i>Fiberglass Aerocaps</i>	70
59260003— <i>Laminated Roof Metal</i>	71
<i>Index</i>	72

Introduction



This manual lists parts for Utilimaster® Utilivan® PDV (Parcel Delivery Van) bodies built on cutaway chassis. It contains exploded-view drawings and parts lists to aid in ordering replacement parts for units built from 1981 to the major model change in 2001. **Parts information on Utilivans built after 2001 (as well as all Trademaster™ and Metromaster™ PDVs) are covered in a different manual.** This manual covers only those assemblies manufactured by or installed by Utilimaster® Corporation. Items such as chassis and drive train components or certain interior furnishings are covered by separate manufacturer-supplied information.

All information, specifications, and illustrations contained in this manual are based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice.

NOTE: This information is generic. Details in illustrations and part numbers may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible part in every vehicle. Nevertheless, the most common body options are described here. Use this information as a guideline where it applies.

Decoding Part Numbers


Finding Part Numbers

This manual contains exploded-view drawings and parts lists for standard factory parts. The drawings illustrate the various parts and their general locations. The parts list accompanying a drawing describes each part and gives the corresponding Utilimaster part number. Some parts may appear on multiple drawings and lists.

Item Numbers

Drawings have item numbers identifying each part in the drawing:

- Item numbers lead with the section number (e.g., all 7.X numbers are Roof parts).
- The item numbers are listed numerically in the parts lists (e.g., 7.1, 7.2, 7.3) followed by the Utilimaster part number and part descriptions.
- The corresponding side of the vehicle (if applicable) is identified by a **RH** (Right Hand) or **LH** (Left Hand) suffix. (See the directional icon here and on the parts list pages.)
- A numerical suffix (e.g., 7.4.1) indicates a part variation, a component of the preceding part, or fasteners for the preceding part.
- Other item number suffixes might indicate vehicle height, width, or other information that specifies that part (e.g., 7.1-FF or 7.12-T).
- Parts that are not shown have the X.NS suffix.
- Assembly numbers (X.Ref) are listed only for Utilimaster parts representatives to cross-reference.

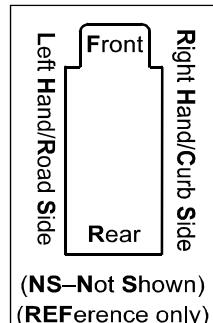

Part Number with a Suffix

A **part number with a suffix** might require you to include more information:

- The **Width** suffix (e.g., 12345678-W) is asking for the **body width**.
- The **Height** suffix is asking for the **body height**.
- The **Length** suffix needs the **length of the part** being replaced.
- An **Appendix** suffix requires cross-referencing the number with an appendix in the back of this manual. (See the Table of Contents.)
- A part number with a **Chart** suffix depends on various body options to accurately replace the part. Customer Service will consult your vehicle body options from your supplied Body Serial Number.

In some cases specific part numbers are replaced by a code.

- **Parts Guide** refers to the *Utilimaster Quick Reference Parts Guide*. (See the More Information section.)
- **BSNR** means the **Body Serial Number is Required**. (See the Utilimaster Body Serial Number section.)
- **DSNR** means the Roll-up **Door Serial Number is Required**. This number is stamped on a metal plate on the interior side of the door.


Our Customer Service Department will gladly help if you need assistance.

Part Descriptions

Two asterisks (**) in front of the part description indicates that this part number is not currently used in Utilimaster production. These parts may take longer to deliver or may be replaced (superseded) by a different part number.



*Illustration LA-5
Vehicle Identification Number*

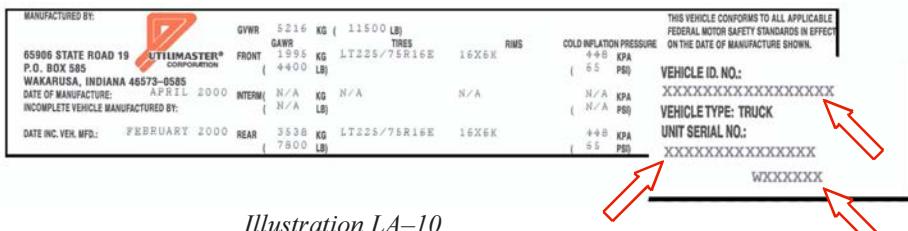

*Illustration LA-10
Federal Certification Label*



*Illustration LA-20
Label on C-post*

Vehicle Identification Number (VIN)

The 17-digit chassis **Vehicle Identification Number (VIN)** is the legal identifier for this vehicle and is the number recorded in the license plate registration. The VIN appears on a small metal plate on the dash on the driver's side. You can read the VIN if you look through the windshield. The number is also recorded on the Federal Certification Label. (See Illustrations LA-5 and LA-10.)

Body (or Unit) Serial Number and Federal Certification Label

The 15-digit **Utilimaster Body (or Unit) Serial Number** is recorded on the **Federal Certification Label**. This label is a plastic decal (about 11" long and 2" high) that contains a variety of manufacturing information (including the VIN). This label is found on the C-post or door edge. (See Illustration LA-10 and LA-20.)

Work Order Numbers

A 7-digit **Work Order Number** appears below the Body Serial Number on the Federal Certification Label. This number (without the leading W) is also stamped (since 1999) on the left-hand base rail. On vehicles built before 1999, the Body Serial Number was stamped on the base rail. Either number can be used to identify the body if it is no longer mounted on the original chassis. (See Illustrations LA-10 and LA-30.)



*Illustration LA-30
Work Order Number*

Ordering Parts

How to Order

To order parts for this vehicle, gather the following information:

- Model and year of vehicle (200x-Customer name).
- Chassis VIN or Utilimaster Body Number (see page 8).
- Complete shipping address.
- Preferred method of shipping.
- Complete description of all the parts necessary (see parts lists).
- Method of payment.

NOTE: Customer Service prefers payment by Visa, MasterCard, Discover, or American Express credit cards. Purchase Orders from customers with established open accounts are also accepted.



Then contact Utilimaster Customer Service by using one of the following methods:

- Email your order to CustSvc@Utilimaster.com. (See Customizable Parts Order Form below.)
- Fax your order to **574-862-7637**.
- Call **800-237-7806** (574-862-3219) and ask for the Parts Department.
- Mail or express service your order to the following address:

Utilimaster Corp.
Attn: Parts Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

Returns

To return parts for credit, call the Customer Service Department for prior authorization. All returns must be shipped prepaid freight. A restocking fee will be charged to all returns. Special-order parts are not returnable.

Customizable Parts Order Form

The **Parts Order Form** on the next page can be photocopied from this manual. Then one of the copies can be filled in with the relevant information and faxed or mailed to Utilimaster Customer Service.

You can also download a customizable form template file from the Utilimaster web site www.utilimaster.com. That template is similar to the form on the next page, but it has a header that you can customize with your name and address. Then, to order parts, you only have to enter the specific information about the vehicle—saving retyping the same address information repeatedly. After completing the form information, the file can be emailed as an attachment. That form can also be used for mailing or faxing.

Service Center Name _____

Address _____

Contact Person _____

City, State, Zip _____

Email _____

Phone _____

Fax _____

To **Utilimaster Parts Department**
65528 State Road 19, P.O. Box 585
Wakarusa, IN 46573-0585, U.S.A.

FAX 574-862-7637

Date _____

Preferred Shipping _____

(i.e., type of carrier and service priority)

Re **Parts Order** _____
or Request for Quote Only _____

Credit Card # _____

(or PO# for customers with open accounts)

Special Instructions _____
(e.g., different shipping address)

Signature _____


Service center representative's signature

Vehicle Model		Utilimaster Body S/N or Chassis VIN		Application
Order Item #	Utilimaster Part Number	Part Description	Quantity	Comments (optional)
1.				Maintenance <input type="checkbox"/> Accident <input type="checkbox"/> or Warranty <input type="checkbox"/>
2.				
3.				
4.				
5.				
6.				
7.				
8.				
9.				
10.				
11.				
12.				
13.				
14.				
15.				
16.				

Filing Warranty Claims

If a problem on the Utilimaster body is caused by a defect in materials or workmanship, it will be covered by our Limited Warranty. Chassis, engine, tires, and battery failures are covered by the individual manufacturers.

Claims must meet the requirements listed below. Failure to meet these requirements may result in a denied or delayed claim.

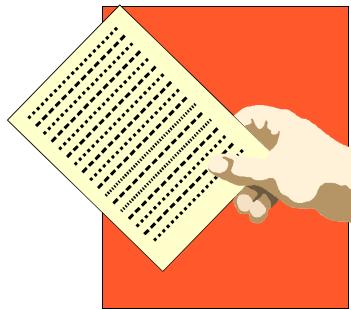

Complete a repair order with the following information:

- Owner's and/or service facility's name.
- Service center representative's signature.
- Chassis VIN or Utilimaster Body Serial Number (see page 8).
- Date vehicle was repaired.
- Mileage at time of failure.
- Itemized description of the problem.

Complaint

Cause of failure (if known)

Correction (describe in detail)

- Service center labor rate and total time of repair.
- Total claim amount, including cost of parts, labor, miscellaneous charges, and sales tax (if applicable).
- Your claim or repair order number.

NOTE: The claim or repair order number is the number used to match Utilimaster payment with the work done. It will be noted on your payment.

- Utilimaster authorization number (for repairs costing over \$150 U.S.).

The claim can be mailed, faxed, emailed, or performed on-line on our web site (assuming all required information is included).

- Warranty claims should be **mailed** to:

Utilimaster
Attn: Warranty Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

- Alternately, you can **fax** your claim (if no photographs are involved) with the above information to **574-862-7637**. (The resolution of the received copies must be acceptable, or you will be asked to mail your hard copies.)
- Or you can **email** your claim with the above information to **Warranty@Utilimaster.com**. (You can download a customizable **Warranty Claim Form template** from the Utilimaster web site **www.utilimaster.com**. The template has a header that you can customize with your name and address. Then, to file a claim, you only have to enter the specific information about the vehicle—saving retying the same address information repeatedly. After completing the form information, the file can be emailed as an attachment. This form can also be used for mailing or faxing.)

Other claim requirements:

- Any repairs **over \$150 U.S. or for structural warranty require prior authorization** from Utilimaster, and that number must appear on the repair order.
- Any claim that is not **legible and complete** will be returned for completion.
- **All paint claims** require pictures, estimates, and prior authorization.
- **Shipping damage claims** also require pictures, estimates, and prior authorization. The damage must also be noted on the Delivery Acceptance form. This form requires the signature of the carrier driver.
- **Sublet work** must have the sublet repair order attached to the service facility's repair order that is being submitted.
- Claims must be **submitted within 30 days** after the repair is completed.

If the return of a failed part is requested, contact a Utilimaster warranty representative for a return goods authorization (RGA). Please reference that number with the returned part and enclose a copy of the repair order. Shipping charges should be entered on the same repair order that is submitted for warranty payment. COD charges for a returned parts will not be accepted, and the part will be returned.

Claims are paid semimonthly. Utilimaster generally does not pay sales tax on claims. If you do not have our tax exemption number on file, please call 800-528-3454 or 574-862-4561 and ask for the accounting department to obtain the number.

Reporting Safety Defects (U.S. Only)

If you believe that your vehicle has a defect that could cause a crash, injury, or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA), in addition to notifying Utilimaster.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Utilimaster.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at **1-800-424-9393**; in the Washington, D.C., area call **202-366-0123** or write to:


**NHTSA
U.S. Department of Transportation
400 Seventh Street
Washington, DC 20590**

You can also obtain other information about motor vehicle safety from the Hotline.

More Information


Utilimaster Quick Reference Parts Guide

Easily find commonly replaced parts for most Utilimaster vehicles in the *Utilimaster Quick Reference Parts Guide*. This illustrated document includes more part numbers for bumpers, door hardware, electrical components, mirrors, vents, mud flaps, roll-up door parts, and many other parts. It also includes sealants and repair kits.

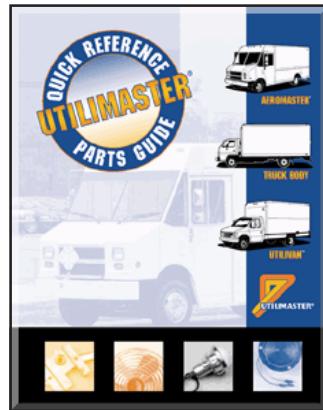


Utilimaster Glossary of Terms

If you are not familiar with some of the terminology used in this manual, you can find many Utilimaster and industry associated terms and definitions in the *Utilimaster Glossary of Terms—Body Information Guide*.

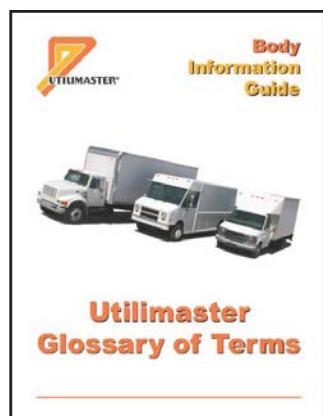

Utilimaster Body Service Manual

Read about routine maintenance procedures, troubleshooting, proper adjustment methods, vehicle repair, aftermarket upgrades, and much more in the *Utilimaster Vehicles—Body Service Manual*.

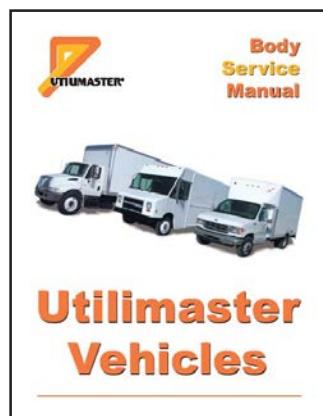

Download Files

These and other support documents are downloadable (as Adobe® Acrobat® PDF files) from our web site at www.utilimaster.com. Click on the Technical Manuals button, to access the download page. To view the files you must have the Adobe Acrobat Reader version 3.0 or higher installed on your computer. Acrobat readers are available free for all leading computer operating systems on the Adobe web site (www.adobe.com).

Contact Utilimaster

Browse our site for more information about Utilimaster and its products or contact Utilimaster Customer Service by using one of the following methods:


- Call **800-237-7806** (or 574-862-3219).
- Fax to **574-862-7637**.
- Email to CustSvc@Utilimaster.com.
- Mail to the following address:

Utilimaster
Attn: Customer Service Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

Diagrams and Parts Lists

1—Chassis Interface

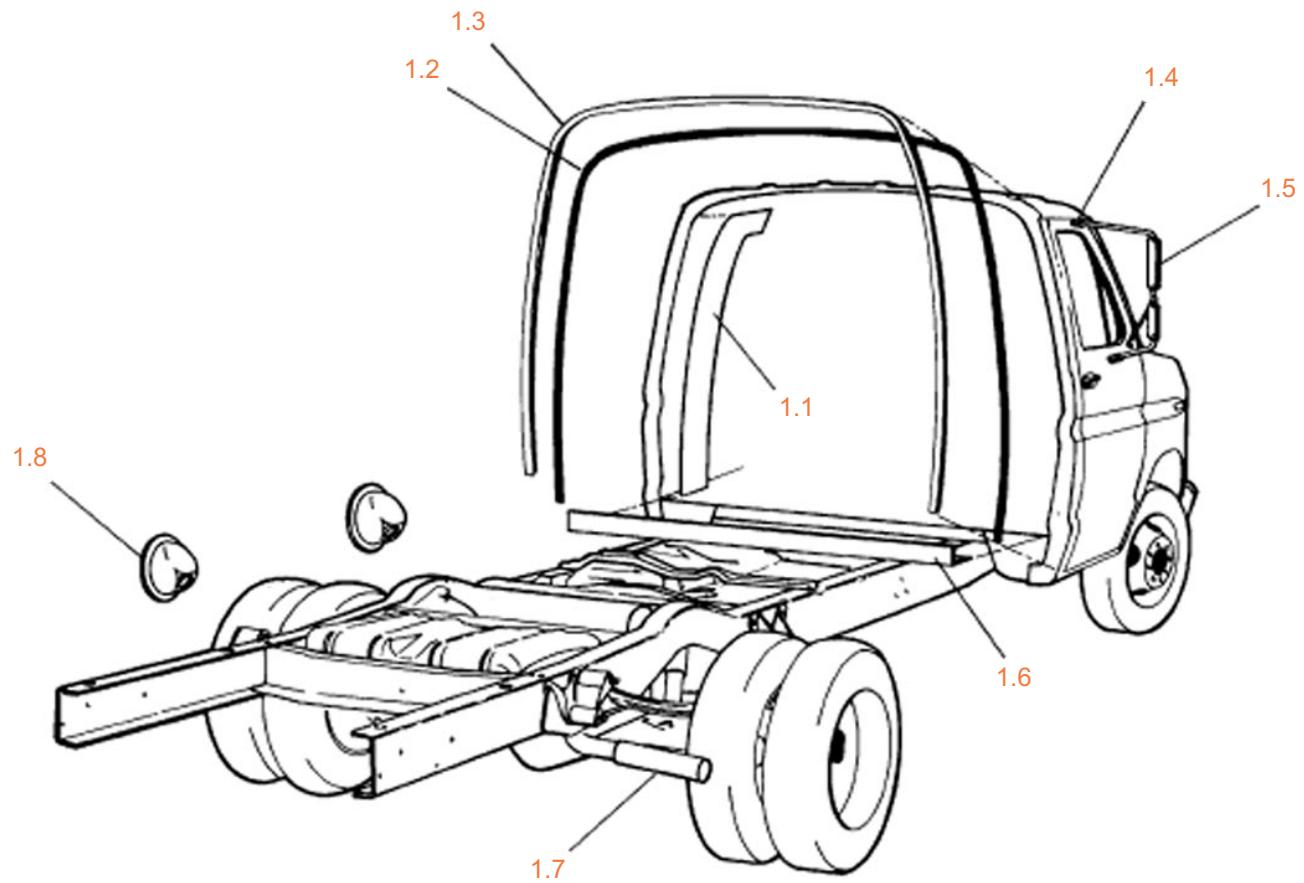

Chassis Interface


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
1.0		Chassis Interface	
1.1	01900613	**ABS PLASTIC SHT FW .100 x 38 x 60 GM	
1.2.1	12301749	TAPE BLACK RBR 1/16 x 1"	
1.2.2	12300840	TAPE BUTYL 1/8 x 1-1/4 50' RL	
1.3	05001605	REVERSE COVE 1-1/2 FW	
1.4	08713302	CAB FOOT (Specify LH or RH)	
1.5.0	08713319	MIRROR WIDE PDV FW	
1.5.1	11008175	WASHER NEOBOND GALV 1/4	
1.5.2	08713318	MIRROR WDANG 107 CHRM	
1.5.3	08713317	MIRROR WDANG 107DW CW ASY	
1.5.4	08713303	MIRROR HD CONVEX CW Convex Head	
1.5.5	08713304	MIRROR HD FLAT CW REPL Flat Head	
1.5.6	08713300	BRACKETS VAN MIRROR	
1.5.7	08713034	MIRROR NONRET 92/NWR WID ANGL FW ASY	
1.5.8	13300134	CONVEX MIRROR HD FW	
1.5.9	13300133	FLAT MIRROR HD FW	
1.5.10	08713035	MIRROR 92 S/STEEL FORD NONRET	
1.5.11	08706566	MIRROR CONVEX SS '92FD	
1.5.12	08706565	MIRROR FLAT SS '92FD	
1.5.13	08705822	MIRROR 2015 BLACK FORD	
1.5.14	08713304	MIRROR HEAD ONLY FLAT CW REPL	
1.5.15	08713280	MIRROR CONVX PC/RPL HD FW GM	
1.5.16	08713279	MIRROR FLAT PC/RPLCMT HDS GM	
1.5.17	08700347	MIRROR GMC	
1.5.18	08713154	CLAMP KIT MIRROR	
1.5.19	08713150	MIRROR GLASS CONVEX	
1.5.20	08713152	MIRROR GLASS Economate	
1.5.21	08611201	MIRROR WHT NONRET WD AGL GM	
1.5.22	11305103	SCREW 1/4-20 x 1 PHIL TR MS SS	

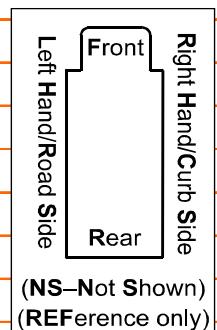

Continued

1—Chassis Interface (continued)

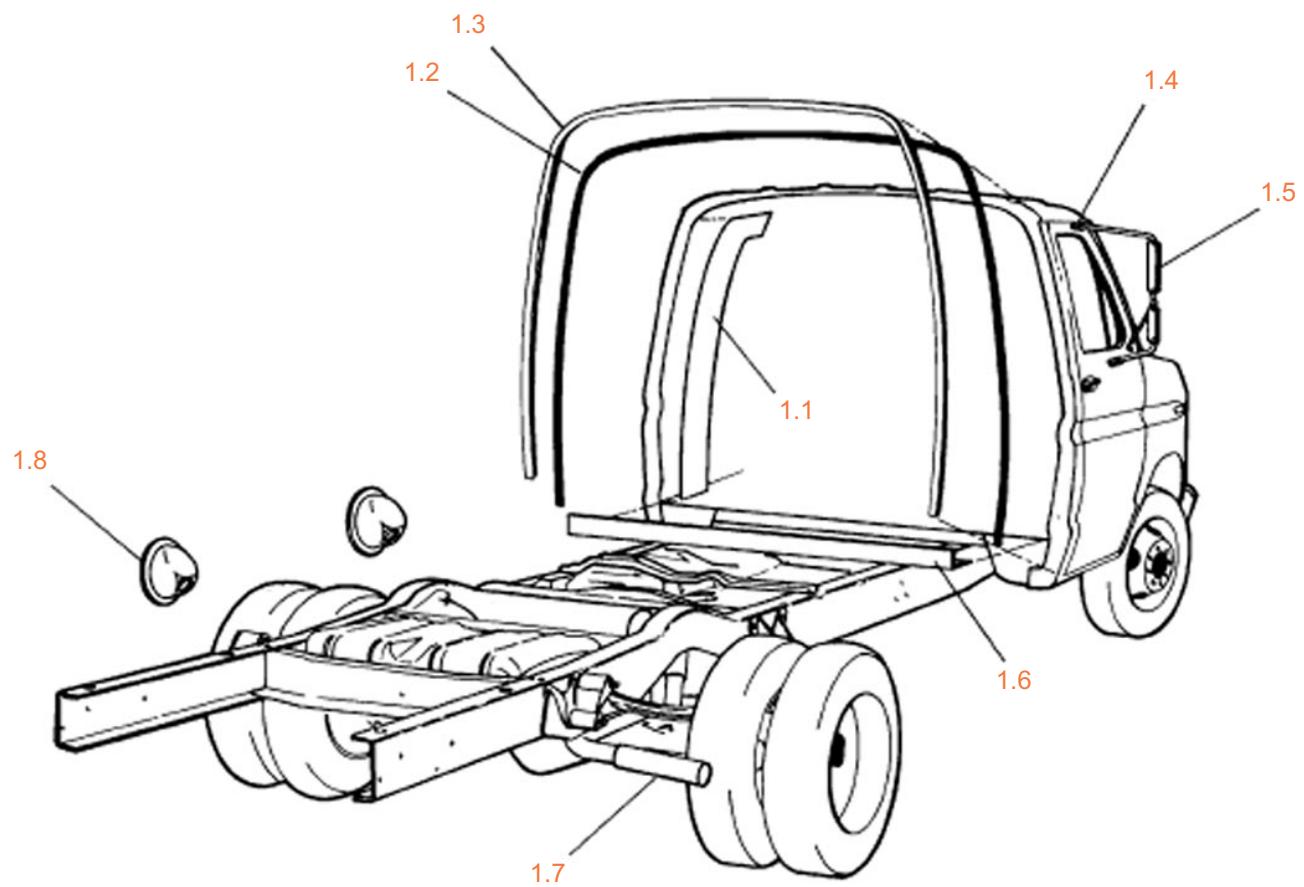

Chassis Interface


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
1.6.1	52260153	FRONT FLOOR TRIM
1.6.2	52260149	FRONT FLOOR TRIM, FLAT FLOOR
1.6.3	06600845	CAP FRT FLR .063 x 2.50 x 65.75 FD
1.6.4	06600846	CAP FRT FF .063 x 8.5 x 77 NTC FD
1.6.5	06917522	CAP FRT FLR GMT WW 1.5 x 2.38 x 77
1.6.6	06917809	CAP FRONT FLR GMT FLT FLR PDV
1.7.1	01107020	EXHAUST PIPE EXTENSION - 460 ENGINE
1.7.2	01107021	EXHAUST PIPE EXTENSION - 2-1/2" Dia.
1.7.3	01107025	EXHAUST PIPE EXTENSION - 2-1/4" Dia.
1.8	Chassis Supplied	FUEL FILL DISH (Available From Chassis Mfg.)
1.NS	12301751	TAPE GREY BUTYL 1/16 x 1-1/2 50' Roll

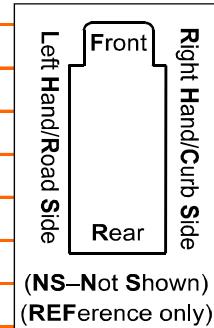

2—Rear Bumpers

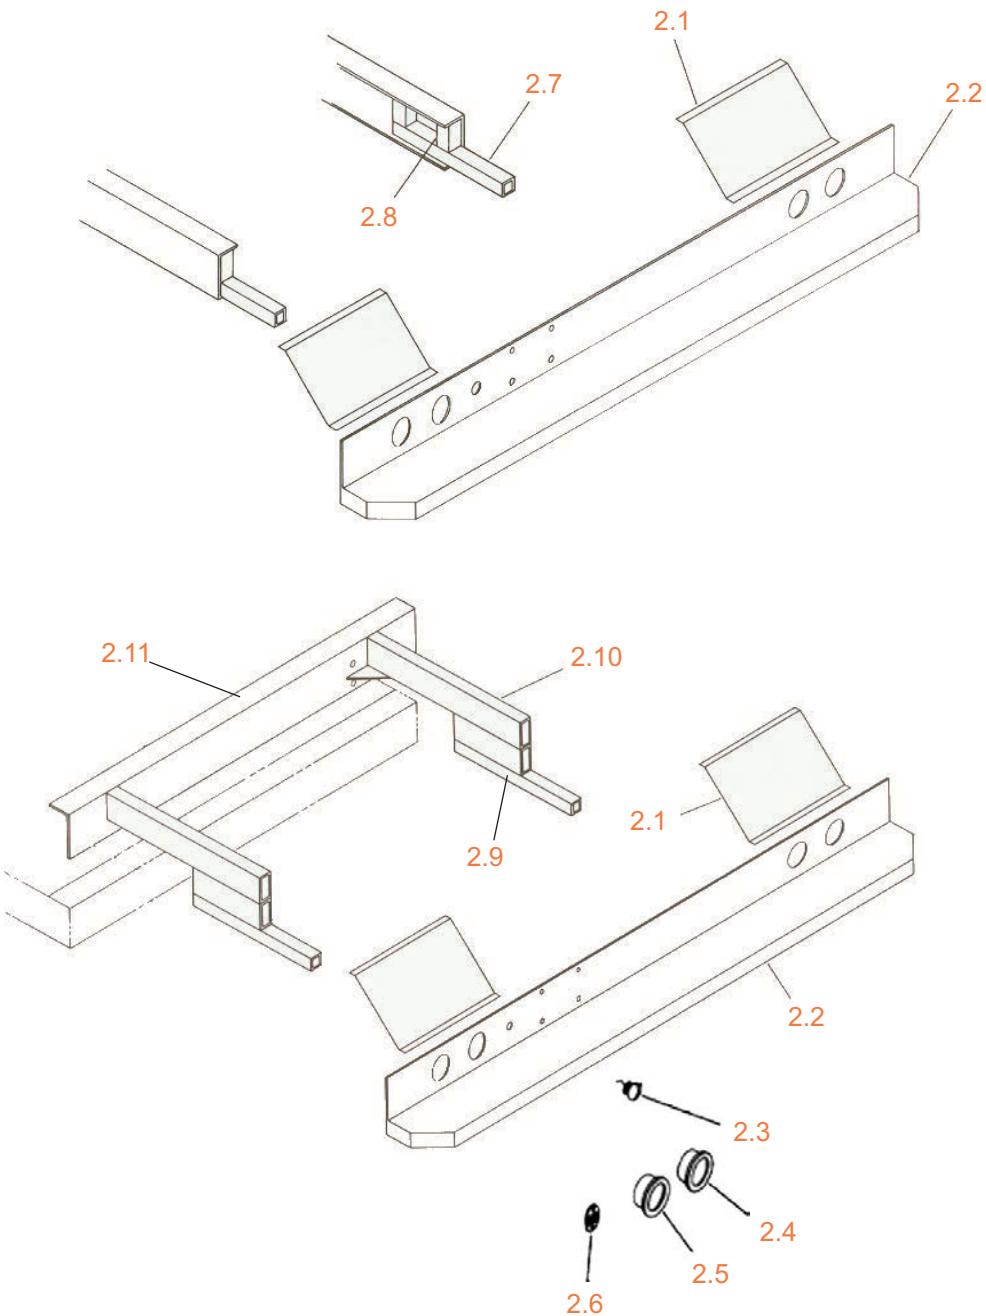

Rear Bumpers


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
2.0		Rear Bumper	
2.1.1	51260110	SPLASH SHIELD WW PDV	
2.1.2	64260148	**SHIELD SPLASH T/LITE FF PDV	
2.1.3	06630742	SHIELD SPLASH PDV FF W/LIC PLT	
2.1.4	06926380	SPLASH SHIELD TAIL LIGHT	
2.2.1	51260241	REAR STEP BMPR WLD MT STD W/W 94"	
2.2.2	51303915	** BUMPER WLD STD 96W 2-HLS FF	
2.2.3	01901631	BUMPER BODY 8"STEPx94 GM GPPDV	
2.2.4	BSNR	REAR STEP BMPR WLD MT	
2.2.5	51260240	STEP BMPR WELDMNT STD W/W Narrow Body	
2.2.6	51260244	BMPR WELDMNT RR STEP STD Flat Floor PDV	
2.2.7	51260245	BMPR WELDMNT RR STEP Narrow Body Flat Floor	
2.2.8	51303913	BUMPER WLD STD 96W 2-HOLES W/RMP	
2.2.9	01100354	BMPR WLD MT CHICAGO STYLE PDV	
2.2.10	55310081	BUMPER WLD MT 12" HD CHNL PDV TB	
2.2.11	55310074	BUMPER WLD MT 12" HD CHNL W/RMP TB	
2.2.12	51260268	BUMPER WELDMNT 12" STEP x 94 PDV	
2.2.13	51260324	REAR FLAT FLOOR BUMPER PDV	
2.2.14	01901631	BUMPER BODY 8" STEP 94 GM GP PDV (Aerocap)	
2.2.15	51260759	REAR BUMPER PROP 8"	
2.2.16	01901613	REAR FLAT FLOOR GP W/RAMP	
2.3	16500153	LIGHT LICENSE PLATE	
2.4.1	15202115	LIGHT BACKUP W/GRD	
5.4.2	11401226	RIVET POP STEEL	
2.4.3	15202114	LIGHT TAIL W/GRND	
2.5.1	Parts Guide	LIGHT STOP/TURN/TAIL	
2.5.2	15200321	TAILIGHT ECONOMATE (No Lic Bracket)	
2.5.3	15200322	T/LIGHT W/LIC BRKT ECONOMATE	
2.5.4	11401226	RIVET POP STEEL	
2.5.5	Parts Guide	LIGHT BACKUP	
2.6.1	15200319	RED REFLECTOR OVAL	
2.6.2	16200034	REFLECTOR RED TAPE ROUND	

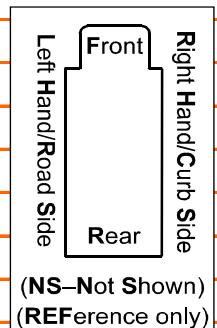

Continued

2—Rear Bumpers (continued)

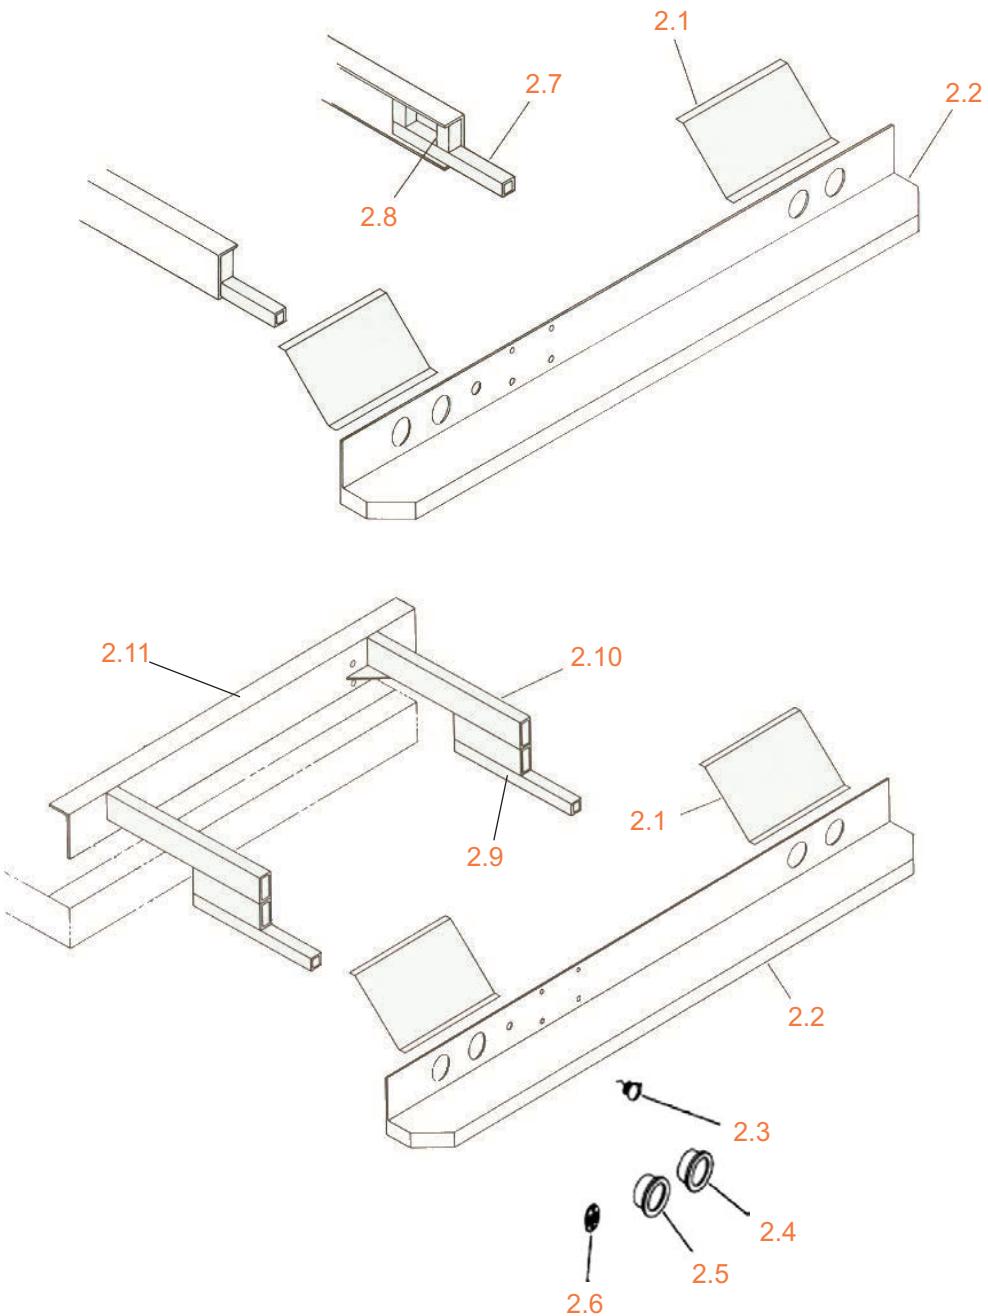

Rear Bumpers


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
2.7	01701413	TUBE 12GA x 2 x 2 x 37-1/4	
2.8	22250041-00375	TUBE 12GA x 2 x 2 x 3.75	
2.9	01701412	TUBE 12GA x 2 x 2 x 24"	
2.10.1	01701606-Length	TUBE 12GA x 2 x 4 x C/L	
2.10.2	01701852-Length	TUBE 3/16 x 2 x 8 x C/L	
2.11	01707920	BMPR EXT PLATE CHEV	
2.NS	12300902	PVC FOAM TAPE	
2.NS	01700599	TRDPL 12GA x 48 x 96 5.25#SF	(NS—Not Shown) (REFerence only)
2.NS	01700401	LICENSE PLATE HOLDER 12GA PDV	
2.NS	01701406	TUBE - 2 x 2 STEEL	
2.NS	01701606-Length	TUBE 12GA x 2 x 4	
2.NS	01701412	TUBE 12GA x 2 x 2 x 24"	
2.NS	11004430	BOLT RIB 1/2-13 x 3	
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .	

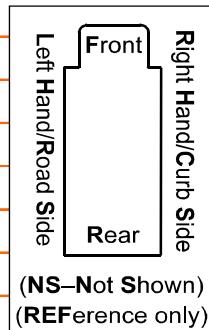

3—Cargo Floor, Low Mount

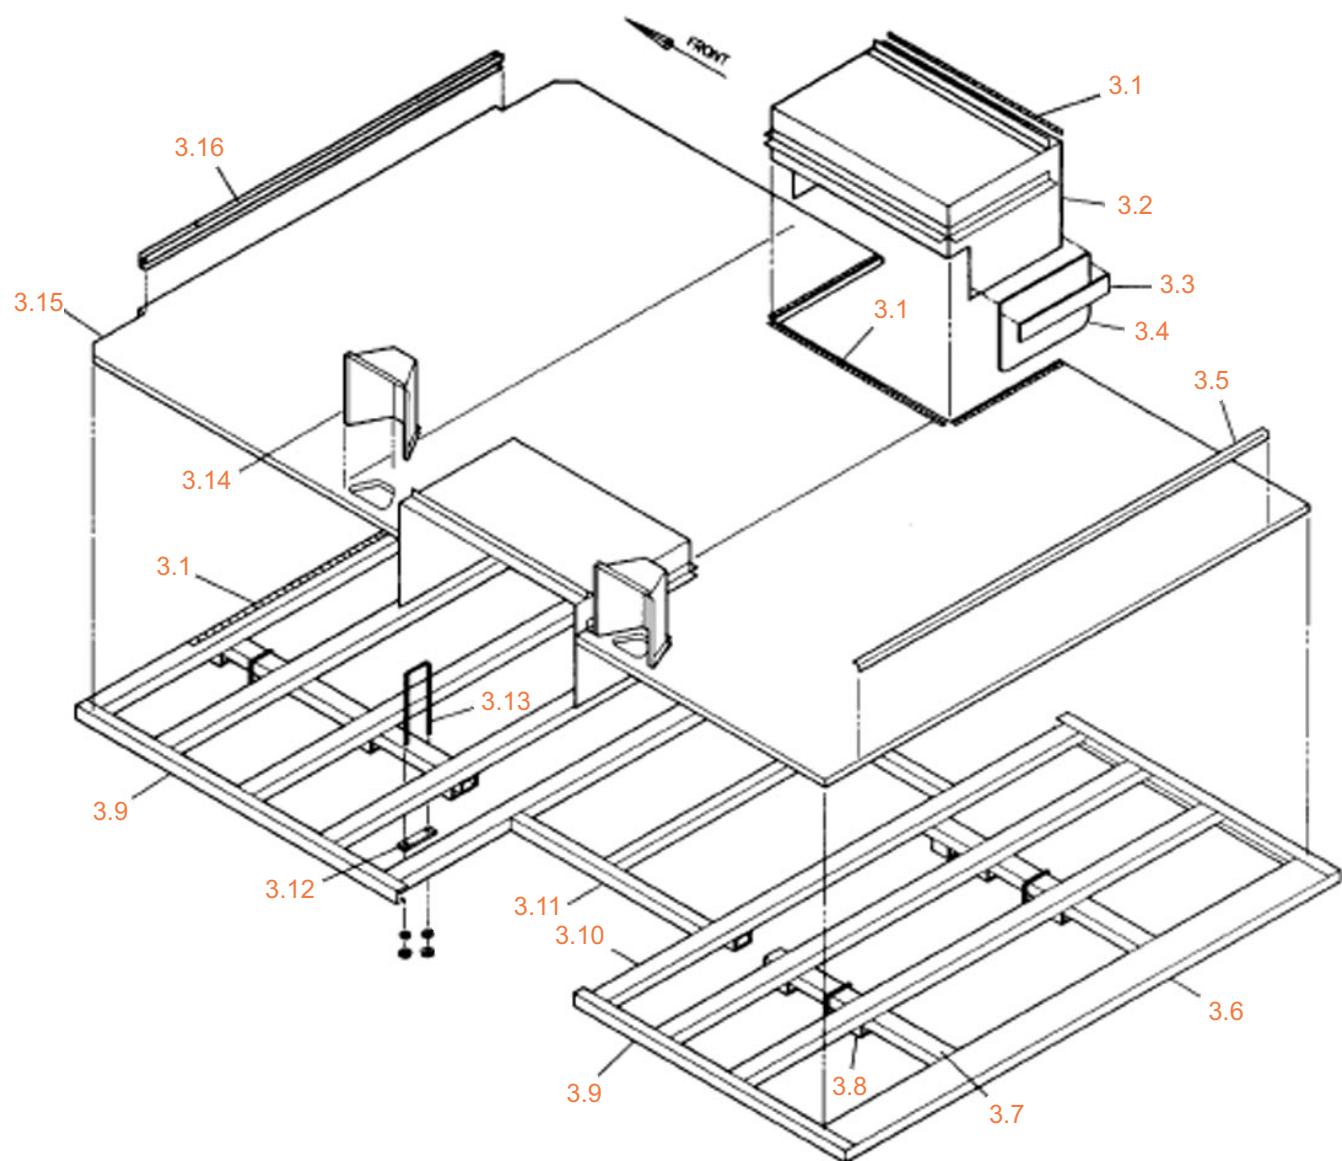

Cargo Floor, Low Mount


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
3.0		Cargo Floor, Low Mount
3.1	12300840	TAPE BUTYL 1/8 x 1-1/4 50' RL
3.2.1	01302154	WHEEL WELL 90" UTILIVAN 81 GAL
3.2.2	22814298	WHEEL WELL BODY 12GA x 7.62 STD CUT
3.2.3	22814315	WHEEL WELL BODY 12GA x 8.00 90W CUT
3.2.4	01302162	WHEEL WELL UTILIVAN HD
3.2.5	01302152	WHEEL WELL 79" UTILIVAN 81GAL (Narrow Body)
3.3	64260186	ANTI-SAIL STRIP (Option)
3.3-N	64260187	ANTI-SAIL STRIP (Narrow Body)
3.4	01505054	MUDFLAP DRW 12 x 18 W / LOGO
3.4-N	01520040	MUDFLAP (Narrow Body)
3.5	01700160	CAP REAR FLR GALV 14G x 1.125 x 90
3.5-N	01700161	CAP REAR FLOOR 79" GALV UTILI (Narrow Body)
3.6.1	51260117	RUB RAIL REAR
3.6.2	01715138	RUB RAIL REAR
3.6-N	51260151	REAR RUB RAIL (Narrow Body)
3.7	01701506	TUBE - 2 x 3 STEEL
3.8	01720043	SPACER-STEEL 1.5 X 3 X 3 FORD
3.9.1	22810596	PERIM RAIL 13GA x 99.06
3.9.2	01715275	PERIM RAIL 13GA x 82.81
3.10.1	51260114	CROSS SILL 2 x 3
3.10.2	01706941	CROSS SILL 2 x 3 x 95.38
3.10-N	51260150	CROSS SILL (Narrow Body)
3.11	01701406	TUBE - 2 x 3 STEEL
3.12	11006003	BOLT U TIE BAR 1/2 x 1-1/2 x 6
3.13.1	11006002	U-BOLT 5/8
3.13.2	11006011	U-BOLT 5/8
3.14	06625007	KNEE CVR GAS 14GA 9.5 x 6 x 10 PDV
3.14-H	06625006	GAS FILL KNEE COVER (Heavy Duty)
3.15	02101119	PLYWD FIR T&G 1-1/8 x 48 x 93-7/8
3.16	06012005-Length	IA3880 B/H FW 06012005
3.NS	22810573	CHANNEL RAIL CONNECTOR
3.NS	11301772	SCREW 8 x 1 QRD WS ZC

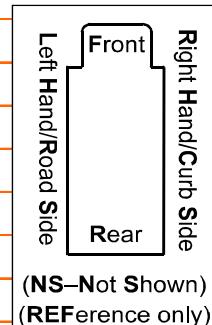

3—Cargo Floor, Flat

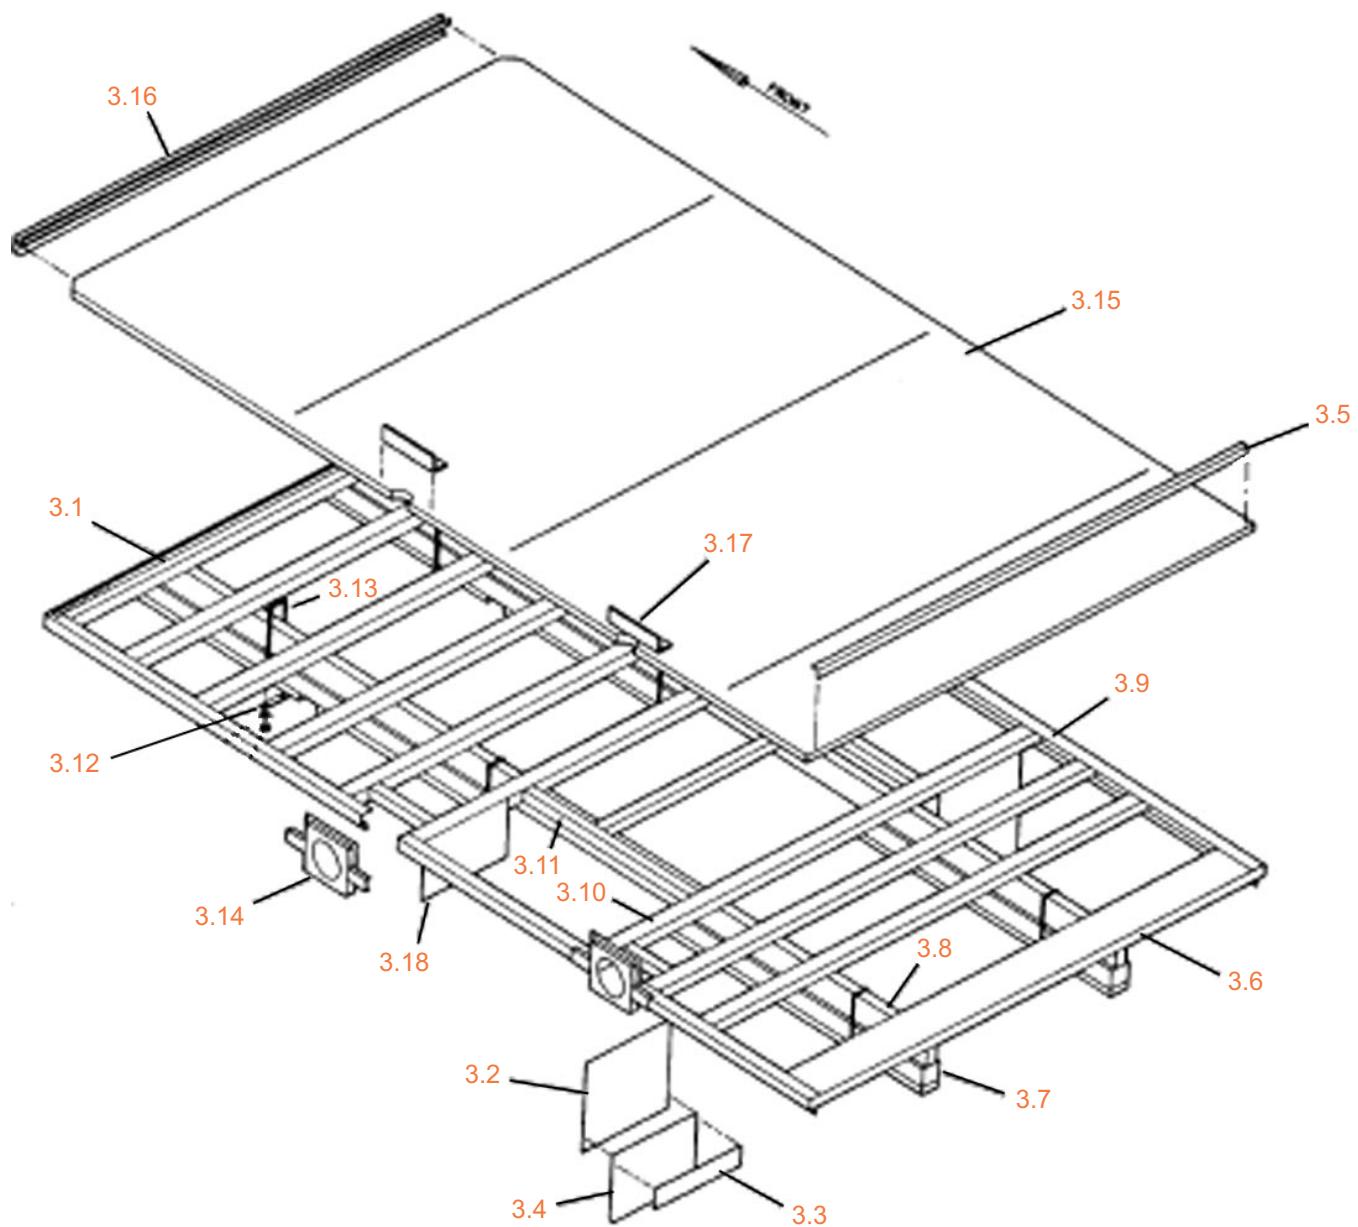

Cargo Floor, Flat


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
3.0		Cargo Floor, Flat
3.1	12300840	TAPE BUTYL 1/8 x 1-1/4 50' RL
3.2	22000287	PLATE MUD FLAP 12GA x 17 x 18
3.2-N	64260177	MUD FLAP BRACKET (Narrow Body)
3.3.1	01520043-00001	** ANTI SAIL BRACKET CHART
3.3.2	64260186	ANTI SAIL STRIP
3.3-N	64260187	ANTI SAIL STRIP (Narrow Body)
3.4.1	01505054	MUDFLAP DRW 12 x 18 W/ LOGO
3.4.2	01505056	MUDFLAP 18 x 27-1/2 W/ LOGO
3.4-N	01505055	M/FLAP SRW 11-3/8 x 12 W/ LOGO (Narrow Body)
3.5	01700160	CAP REAR FLR GALV 14G x 1.125 x 90
3.5-N	01700161	CAP REAR FLOOR 79" GALV UTILI (Narrow Body)
3.6	01715138	RUB RAIL REAR 95.4375
3.6-N	01719006	RAIL RUB REAR 84-3/16 (Narrow Body)
3.7	01706941	CROSS SILL 2 x 3 x 95.38
3.7-N	22151040	CROSSMEMBER 2 x 3 x 84.19 13GA
3.8	22255033-Length	TUBE - 2" x 5" STEEL
3.9	22814984	RAIL PERIM 13GA x 111.06
3.10	01706941	CROSS SILL 2 x 3 x 95.38
3.10-N	22151040	CROSSMEMBER 2 x 3 x 84.19 13GA
3.11	22250041-Length	TUBE 12GA x 2 x 2 STEEL
3.12	11006003	TIE BAR
3.13	11006011	U-BOLT 5/8 x 2 x 3.5 x 19-1/2
3.14.1	01400512	SPACER WLD FUEL FILL PDV
3.14.2	01901662	SPACER WLD FUEL FILL '94 and Later PDV
3.15	02101119	PLYWD FIR T&G 1-1/8 x 48 x 93-7/8
3.16	06012005	FRONT FLOOR CAP
3.17	06600166	COV GAS FILL FF FD 125 x 3 x 3 x 11
3.18	64260153	BODY WRAP PLATE FLT FLR FRT 11 x 18
3.NS	22810573	CHANNEL RAIL CONNECTOR

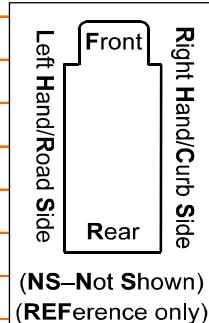

4—Rear Structure, Full-width Door

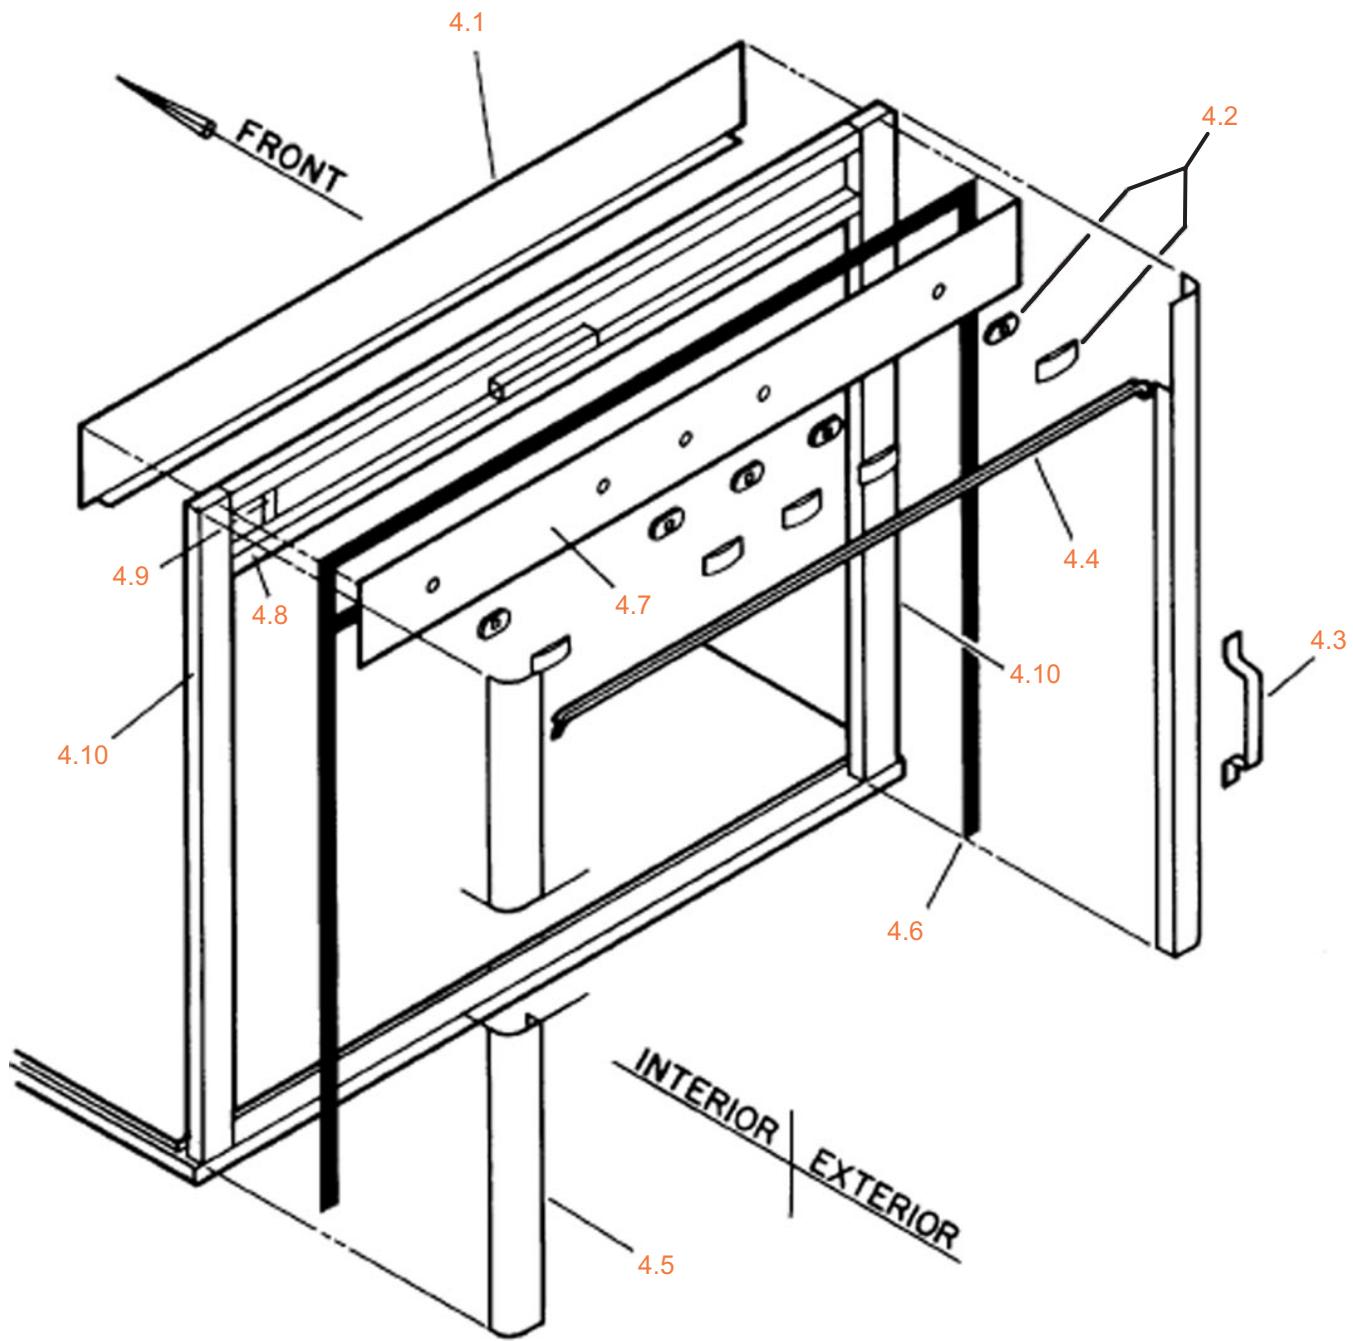

Rear Structure, Full-width Door


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
4.0		Rear Structure, Full Roll-up and Full Swing Doors
4.1	06625135	HEADER INT RR .040 x 10.5 x 90 FRMD
4.2	Parts Guide	LIGHT IDENTIFICATION
4.3	08704354	HANDLE GRAB ANODIZED
4.4-N	64200028	DRIP RAIL 80"BODY 06011300
4.4.1	64200030	DRIP RAIL 91"BODY 06011300
4.4.2	06011300-Length	DRIP RAIL IA1212 Z 06011300
4.5.1	06630306	AL RR COR PST .040 x 11.25 x 84 FW
4.5.2	06625107	AL RR COR PST.040 13-1/2 x 97
4.6	12300902	TAPE PV 1/16 x 11/2 x 100' MYLR/ADHE
4.7	06630310	HEADER EXT RR .040 x 11 x 86.25 FRM
4.8	01701406	TUBE - 2" x 2" STEEL
4.9	01701800	FLAT - 2" x 6" STEEL
4.10	22250039-Length	TUBE 12GA x 2 x 4 PROFILE
See also the <i>Utilimaster Quick Reference Parts Guide</i> .		

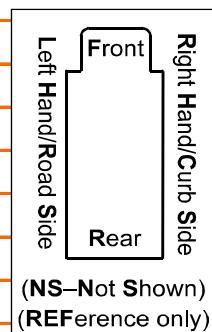

4—Rear Structure, Narrow Door

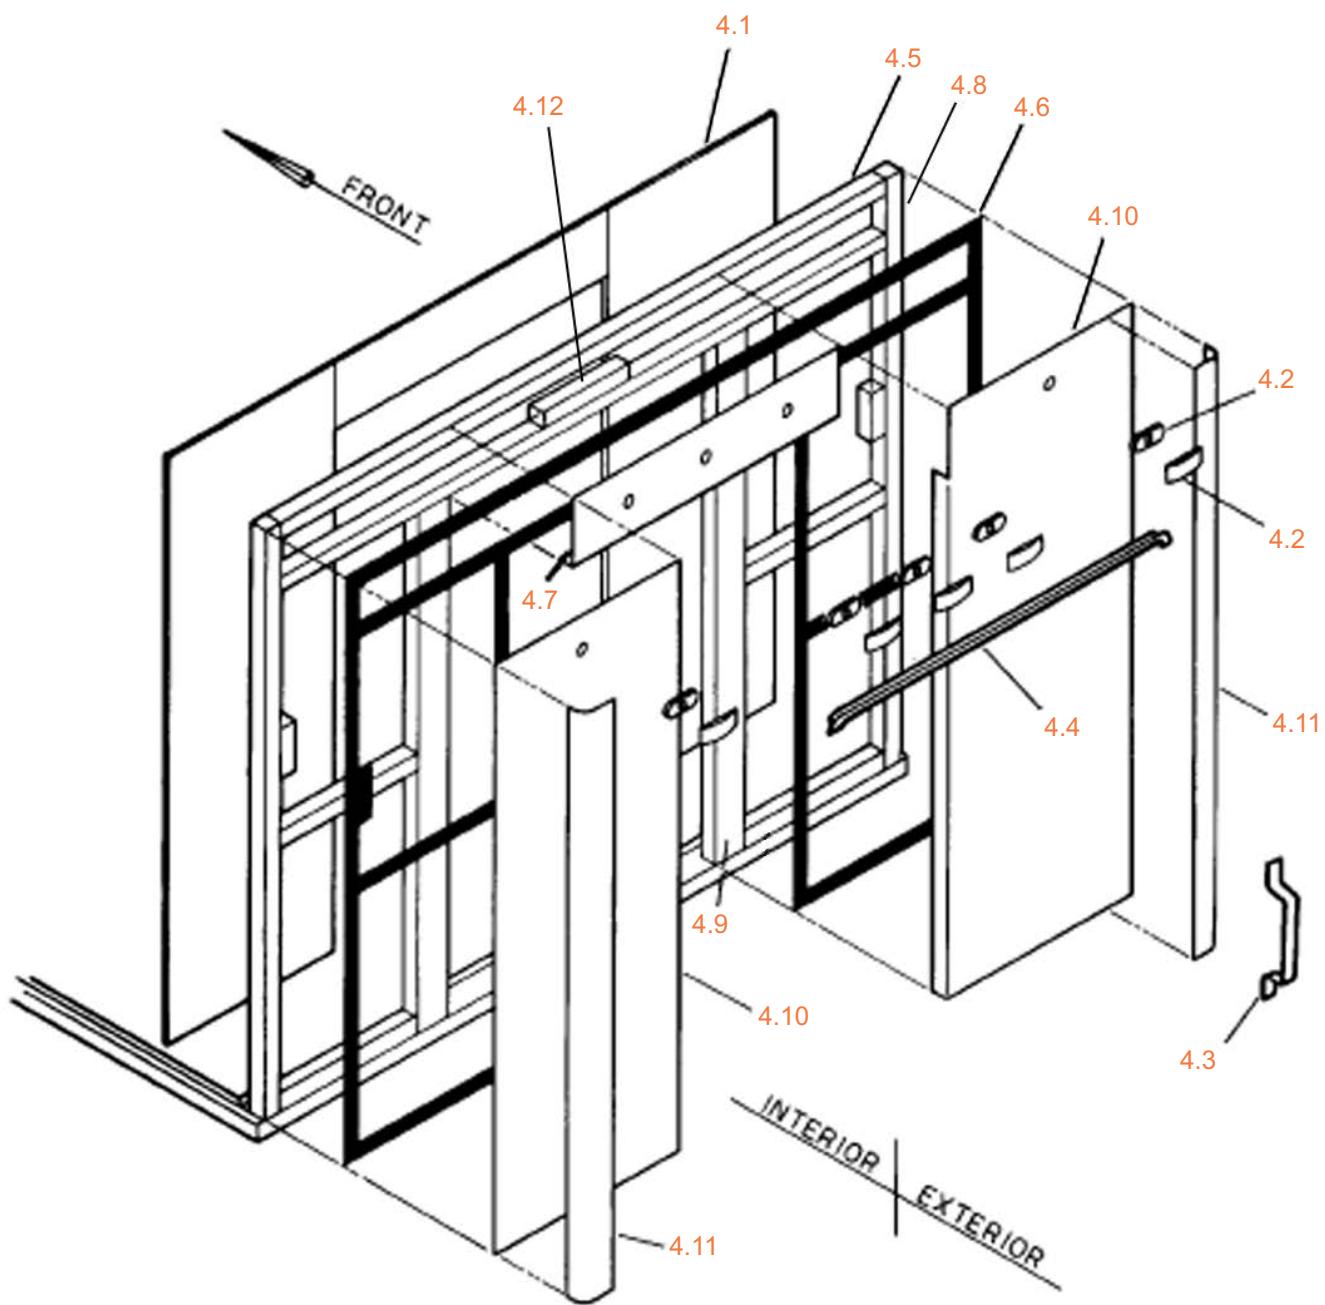

Rear Structure, Narrow Door


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
4.0		Rear Structure, Narrow Swing Doors
4.1	BSNR	LINER INTR
4.2	Parts Guide	LIGHT IDENTIFICATION
4.3	08704354	HANDLE GRAB ANODIZED
4.4	06011300	ALUM EXT Z .5 X 1 X .75 IA 1212
4.5	22250041-Length	TUBE 12GA x 2 x 2
4.6	12300902	TAPE PV 1/16 x 11/2 x 100' MYLR/ADHE
4.7	06630310	HEADER EXT RR .040 x 11 x 86.25 FRM
4.8	22250033-Length	TUBE 12GA x 2 x 5
4.9	22250039-Length	TUBE 12GA x 2 x 4 PROFILE
4.10.1	06320649	ALUM .040 x 29.75 x 91 (19" Doors) CW
4.10.2	06320756	ALUM .040 x 29.75 x 91(19" Doors) FW
4.11.1	06625120	AL FRT&RR CNR PST 040 6 x 84 CW
4.11.2	06625125	CORNER WRAP - 97"
4.11.3	06630309	AL FT COR PST.040 x 6 x 84 FW
4.12	22250041-Length	TUBE 12GA x 2 x 2
4.NS	11401219	RIVET FW 3/16 x 1/16-1/4
4.NS	11401221	RIVET FW 3/16 x 1/4-1/2
4.NS	11401215	RIVET 3/16 x 1/16-1/4
4.NS	01700521	PLATE 12GA x 3 x 7
4.Ref	55200002	RR STR WELDMT 7' PDV TWIN 19"
4.Ref	55200011	RR STR WELD 7'-0 FULL SWNG/ROLLUP
	See also the <i>Utilimaster Quick Reference Parts Guide</i> .	

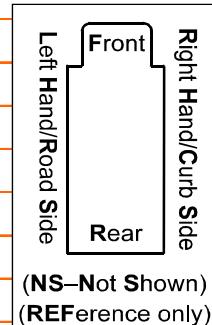

4—Rear Structure, RV Door

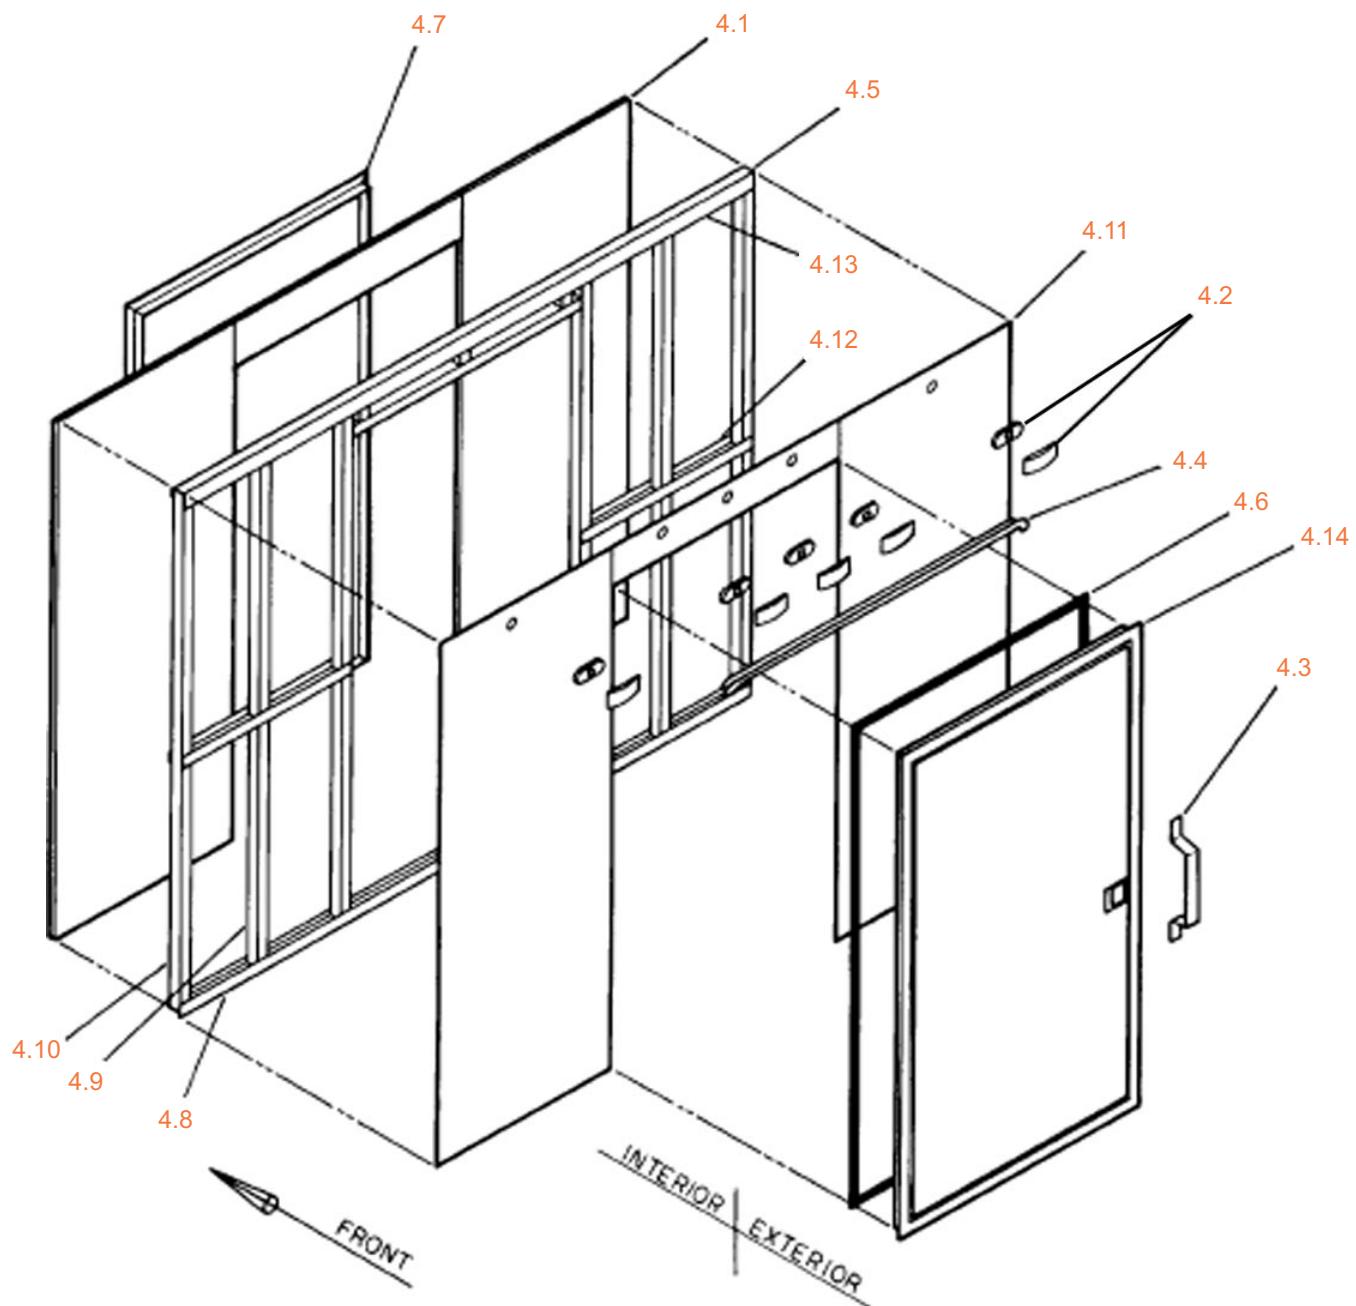

Rear Structure, RV Door


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
4.0		Rear Structure, RV Door	
4.1	BSNR	INTR LINER	
4.2	Parts Guide	INDENT LIGHTS	
4.3	08704354	HANDLE GRAB ANODIZED	
4.4	64200052	DRIP RAIL	
4.5	BSNR	REAR STRUCTURE WELDMENT	
4.6	12300836	TAPE BUTYL 1/8 x 1-1/2 50' RL	
4.7	06002025-Length	ANGLE ALUM.75 x 1.25 IA1999	
4.8	06001500-Length	ALUM EXT H 1-1/2 W5666 IA997	
4.9	06000200-Length	TUBE - 1-3/8" x 1-3/8"	
4.10	06012991-Length	ALUM EXT TOP RAIL 062 IA2414	
4.11	BSNR	EXTR MTL .040	
4.12	06000700-Length	I CHANNEL - 1-1/2" x 1-1/2"	
4.13	06001798-Length	IA3949 U-CHANNEL 06001798	
4.14	BSNR	RV DOOR ASSY	
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .	

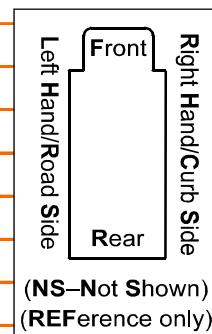

5—Rear Doors, Swing

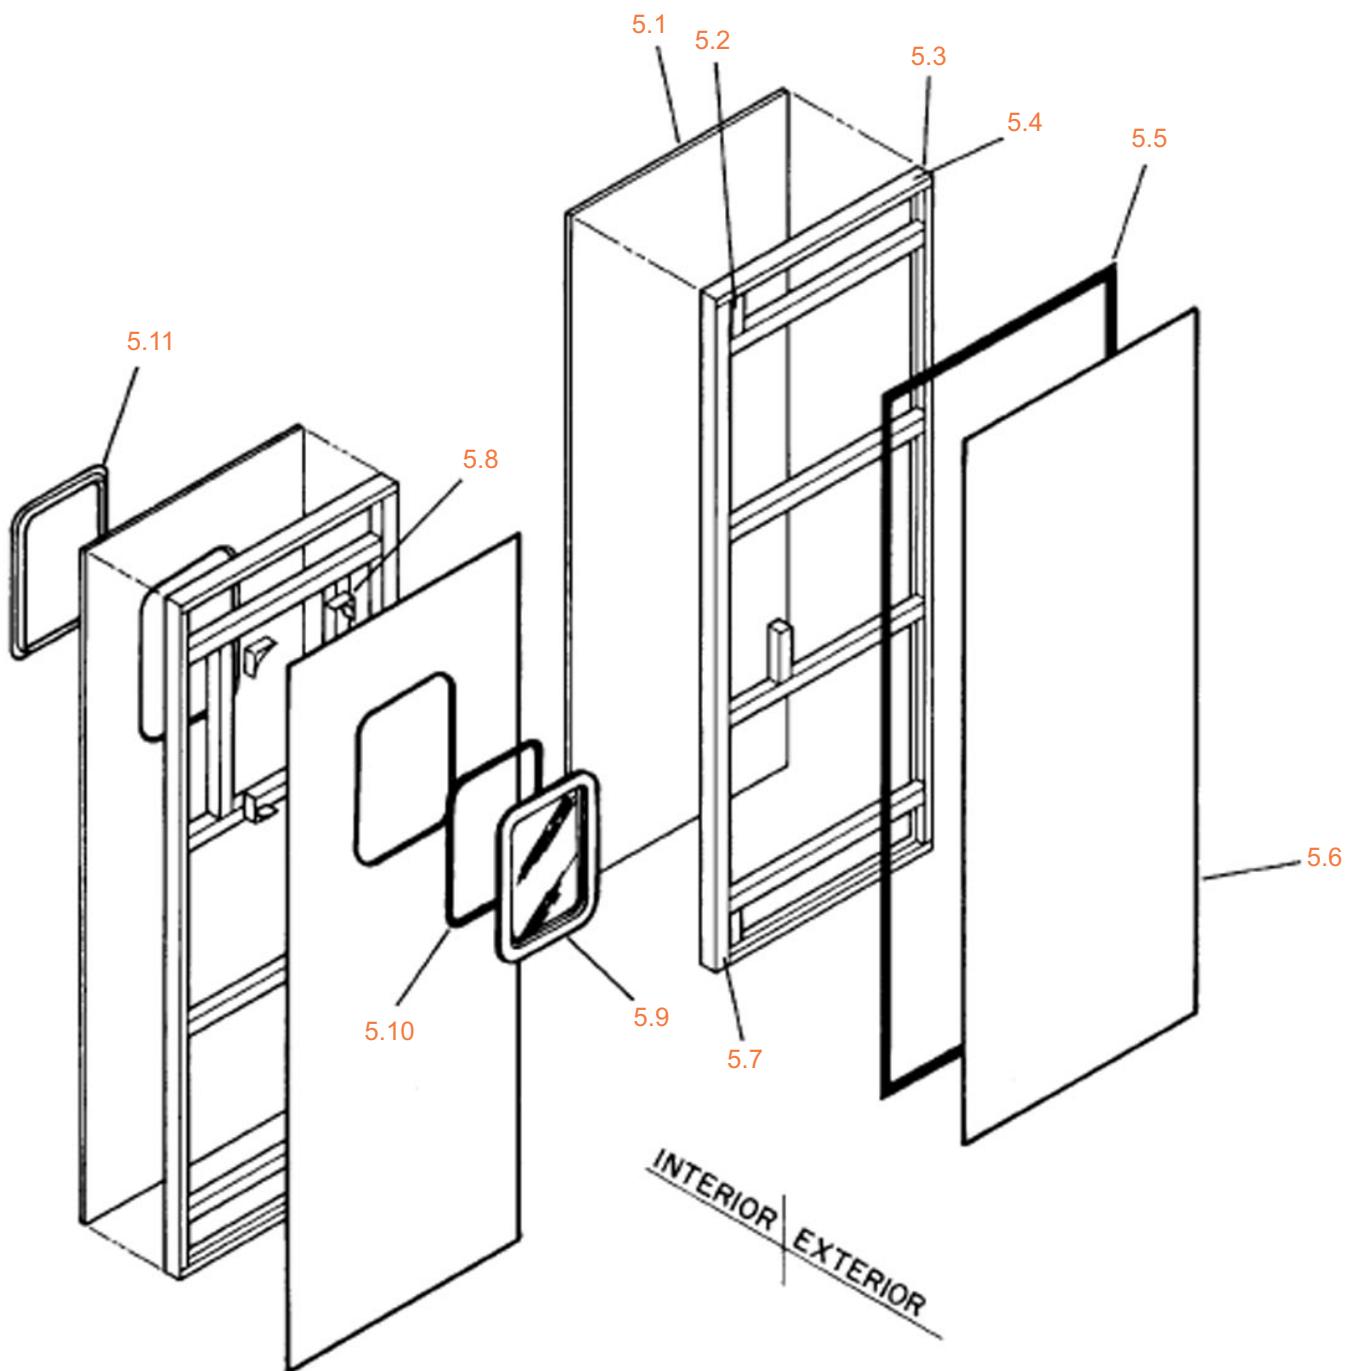

Rear Doors, Swing


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
5.0		Rear Doors, Swing	
5.1	02100500	PLYWD CDX FIR UL 3/8 x 4 x 8	
5.2	06000199-Length	AE 1.353 SQ TUBE IAH724	
5.3	BSNR	DOOR FRAME WELDMENT	
5.4	06001300-Length	ALUM EXT C 1-1/2 IA995 W1106	
5.5	12300810	TAPE SEALER BLK SPNGE RUB 3/8 x 1	
5.6	BSNR	ALUM SKIN .063"	
5.7	06000199-08375	AE 1.353 SQ TUBE IAH724 x 83.75	
5.8	09300300	RADIUS BLOCK	
5.9	09030050	WIND TRIM - 12" x 18" (EXR)	
5.10	12300836	TAPE BUTYL 1/8 x 1-1/2 50' RL	
5.11	09202001	TRIM RING (INT)	
5.NS	08700291	HINGE W/GUSSET W/ZERK	
5.NS	08700033	SUPPORT DOOR CATCH ASY ECONOMATE	
5.NS	08710825	HINGE OFFSET 8GA ZC	
5.NS	08740204	**HINGE 5/16 OFFSET ZINC	
5.NS	08740205	HINGE 3/16 OFFSET ZINC	
5.NS	08610373	HINGE SDN DR ZERKS ALUMINUM	
5.Ref	57261095	DOOR ASSY LH W/3-HINGES CHART	
5.Ref	57261096	DOOR ASSY RH W/3-HINGES CHART	
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .	

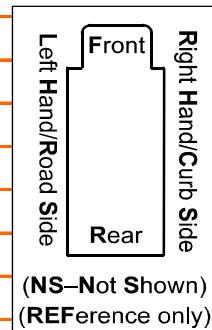

5—Rear Doors, Slam Lock Hardware

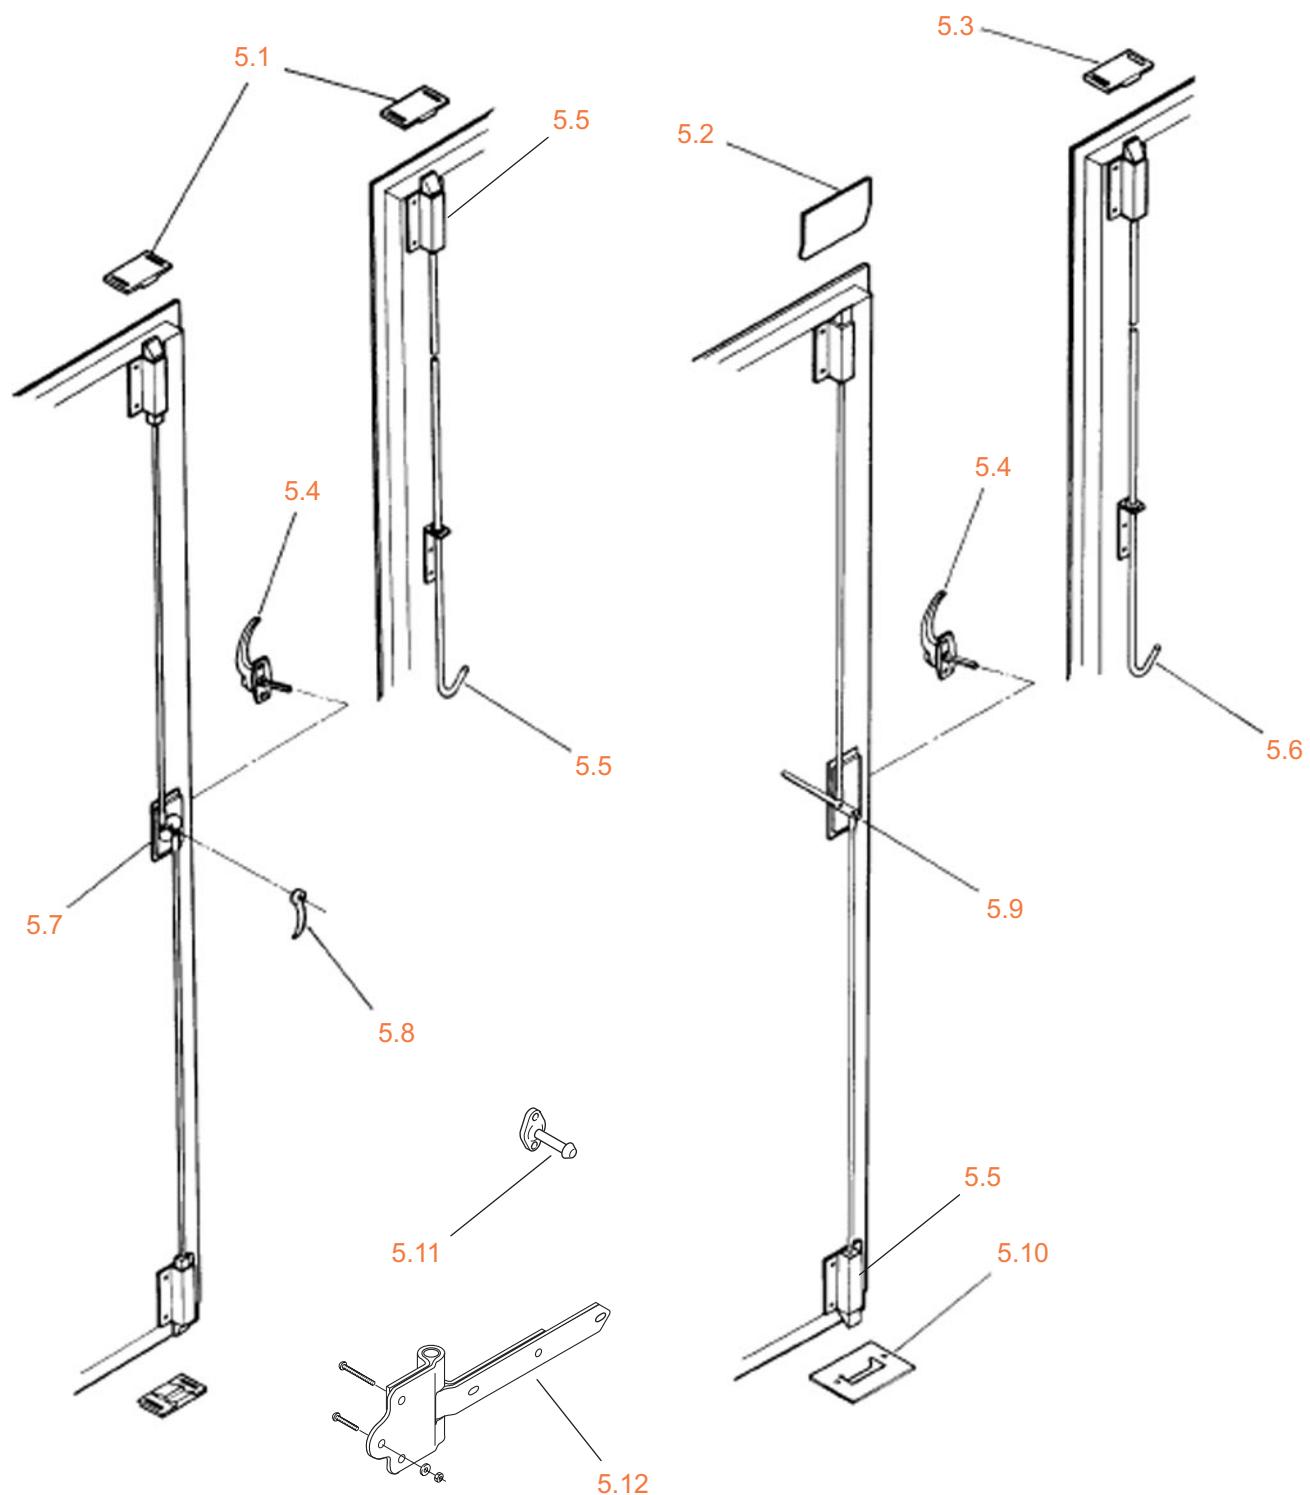

Rear Doors, Slam Lock Hardware


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
5.0		Rear Door Hardware	
5.1	08401213	CATCH SWING DR BRASS	
5.2.1	01700564	PLATE UPR D.BLT SDR	
5.2.2	22100025	PLATE SLAM LOCK UPR STRIKE 12G	
5.3	08401209	CATCH LATCH	
5.4.1	08610615	HANDLE RR KAN PUSH CRM	
5.4.2	08700079	HANDLE O/SIDE BLIND MT	
5.4.3	11303663	SCREW 10-24 x 1 PHIL FLAT SS	
5.4.4	11001090	NUT JACK 10-24	
5.4.5	11000917	INSERT THREAD 10-24	
5.4.6	11303649	SCREW 10-24 x 3/4 TRS	
5.5.1	08700597	BOLT OFFSET W/3/8" HOLE	
5.5.2	08700596	BOLT OFFSET W/1/4" HOLE	
5.6.1	08704379	LOCK L/H DR DEAD BLT ASSY	
5.6.2	08700004	ROD 36" W/FINGER PULL	
5.6.3	08706093	ROD GUIDE ONLY	
5.7.0	08780011	LATCH ASY SLAMLOCK KASON	
5.7.1	08704381	HANDLE ASSY RR DOOR HANSEN SLAMLOCK	
5.8	08704380	HANDLE INSIDE ZINC	
5.9.1	08706094	LOCK CENTER CONTROL	
5.9.2	08706090	ROD 36" LONG ZINC	
5.9.3	08706095	ROD DEADBOLT 3/8 x 48"	
5.9.4	08706336	ROD 48"	
5.9.5	08704374	HANDLE INSIDE	
5.10	01700563	PLATE LWR D.BLT STRIKER	
5.11.1	08210003	PLUNGER-ZINC PLATED 3"	
5.11.2	08210004	SOCKET W/RUB INSERT	
5.12	BSNR	HINGE ALUM	
5.Ref	57260862	HARDWARE RR DOOR TWIN SLAMLOCK	
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .	

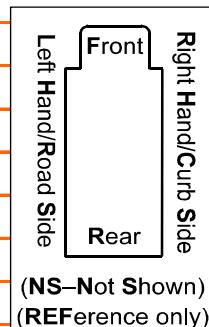

5—Rear Doors, Cam Lock Hardware

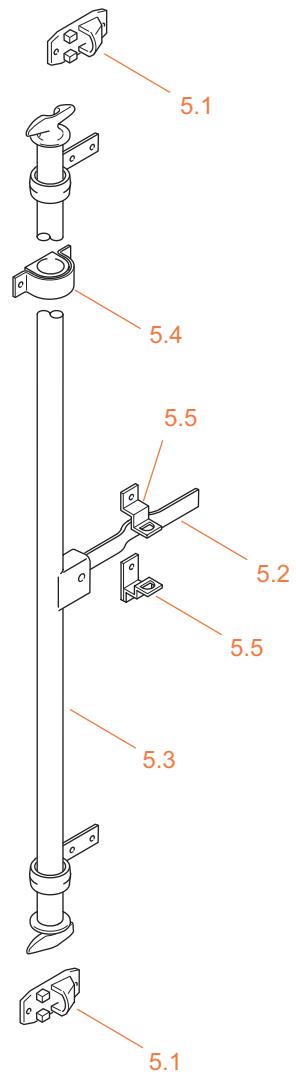

Rear Doors, Cam Lock Hardware


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
5.0		Rear Door Cam Lock Hardware
5.1.1	08706122	KEEPERS C/LOCK
5.1.2	08706118	#2 CAMLOCK BOX (Upper)
5.1.3	08706119	#3 CAMLOCK BOX (Lower)
5.1.4	08700284	CAMLOCK BOX
5.2	08706117	CAMLOCK HANDLE ONLY
5.3	BSNR	BAR ASSY
5.4	BSNR	CAMLOCK BUSHING
5.5	08700039	HASP POLAR
5.Ref	57261095	DOOR ASSY LH W/3-HINGES CHART
5.Ref	57261096	DOOR ASSY RH W/3-HINGES CHART
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .

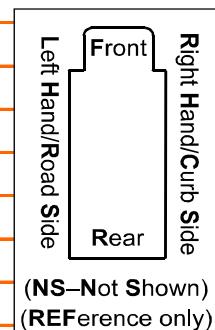

5—Rear Door, Roll-up

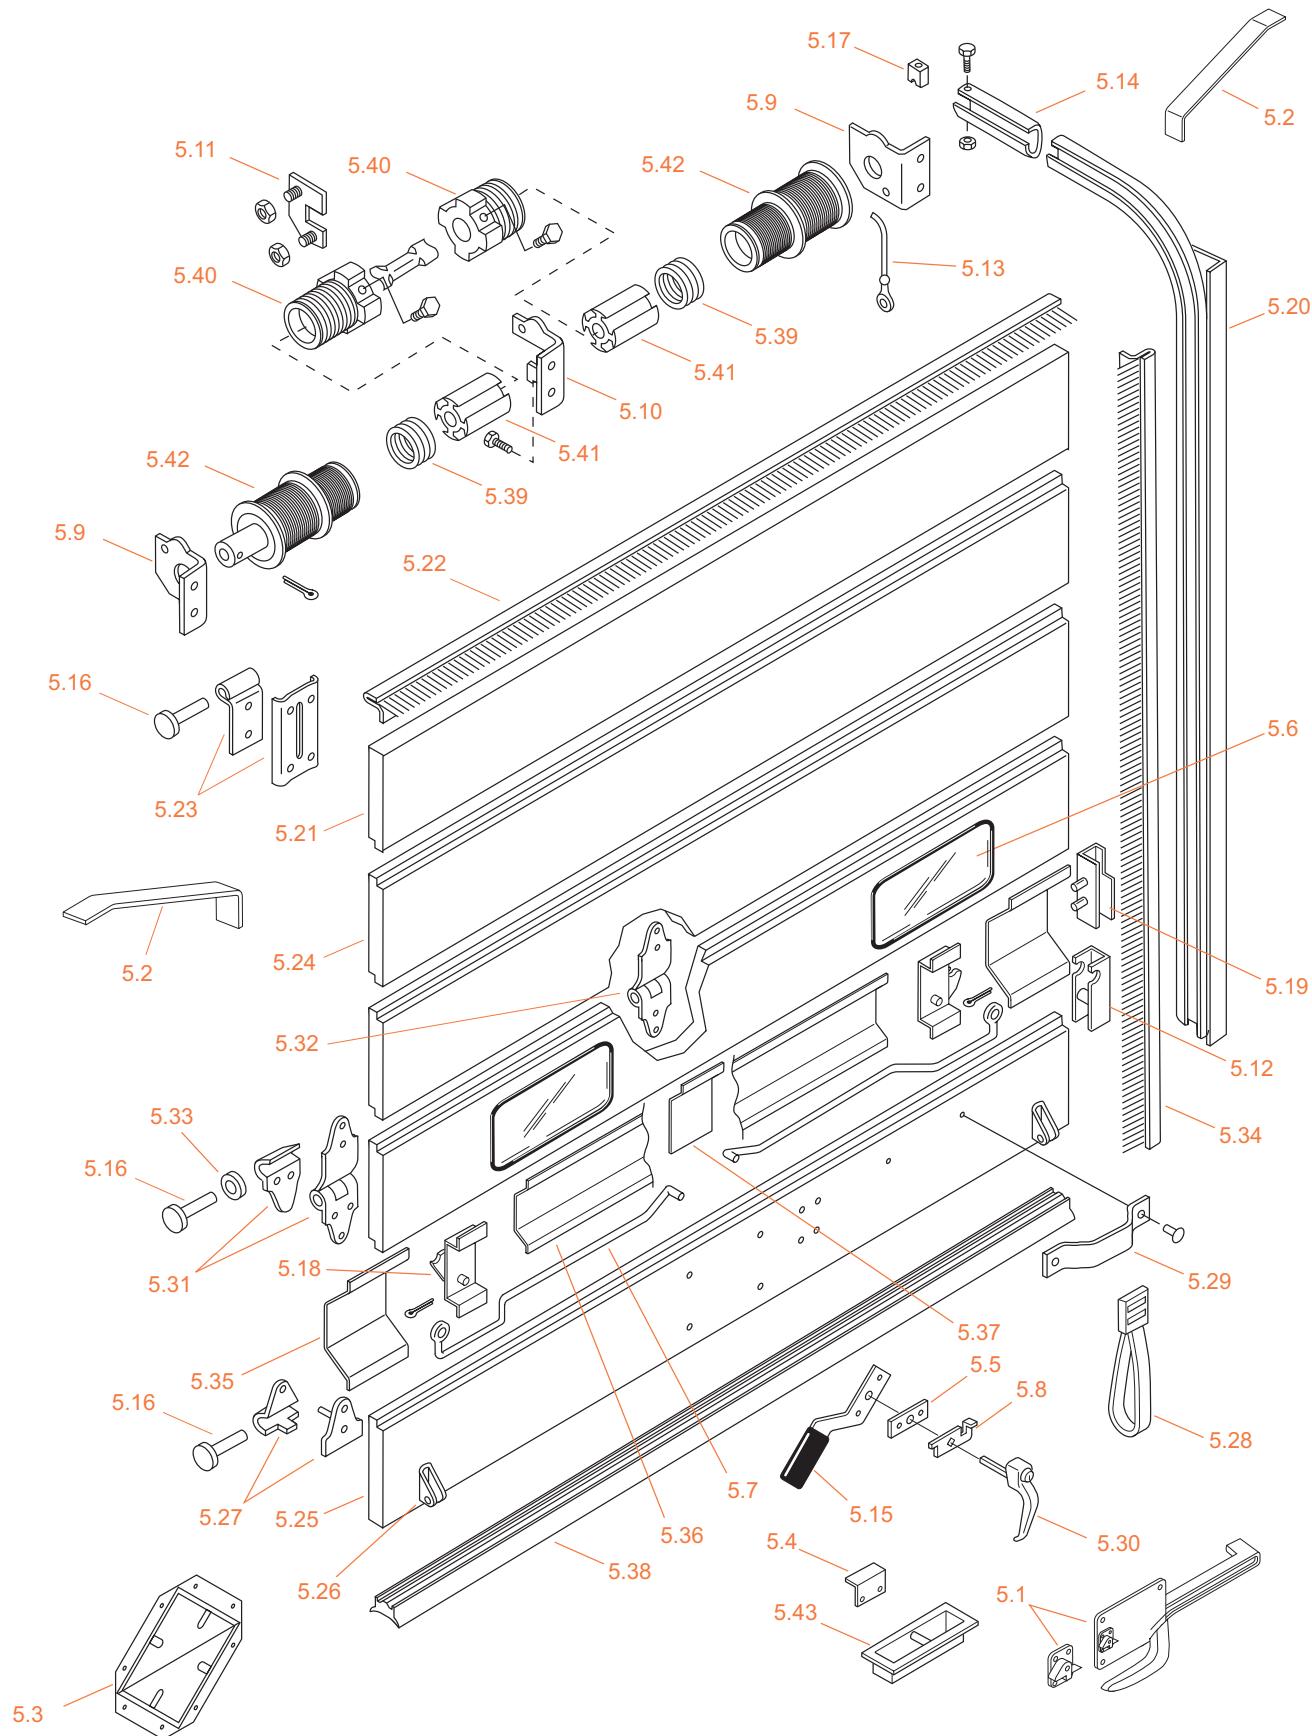

Rear Door, Roll-up


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
5.0		REAR ROLL-UP DOOR
5.1	DSNR	MASTER SECURITY (BANANA) LOCK
5.2	DSNR	GUSSET NARROW RU DOORS
5.3.1	03101840	PLACARD HAZMAT SPLIT
5.3.2	03101864	PLACARD HAZMAT SPLIT
5.3.3	03101871	PLACARD HAZMAT SPLIT
5.3.4	11401221	RIVET FW 3/16 x 1/4-1/2
5.4	22813833	CATCH ASSY RU DR MSL #30-36
5.5	DSNR	BOTTOM PLATE
5.6.1	09080405	GLASS 8" x 19" x .219 RAD R-UP DOOR
5.6.2	09080444	GLASS 1/4 x 17-5/8 x 11-5/8
5.6.3	09801338	GLASS 9 x 22 x .219 RAD RU DR
5.6.4	20600021	WINDOW CUTOUT WITH GASKET
5.6.5	05705480	RUBBER RU DR WDO 9 x 22
5.6.6	05402084	GLAZING WINDOW R/UP 8 x 19
5.6.7	05402073	WINDSHIELD RUBBER 12 x 18
5.7	DSNR	LOCK ROD
5.8	DSNR	ACTUATOR
5.9 LH	DSNR	BALANCER BRACKET LH
5.9 RH	DSNR	BALANCER BRACKET RH
5.10	DSNR	BALANCER BRACKET CENTER
5.11	DSNR	BALANCER BRACKET CLAMP (CENTER)
5.12	DSNR	LATCH PLATE
5.13.1	10999958	** 30" ROLLUP DOOR CABLE
5.13.2	10999700	CABLE ASSEMBLY TO 100"
5.13.3	10999701	CABLE ASSEMBLY 105"-120"
5.14 LH	10997164	TRACK HORIZONTAL RUD LH
5.14 RH	10997246	TRACK HORIZONTAL RUD RH
5.15	DSNR	HANDLE, INTERIOR WITH PLASTIC GRIP
5.16	10999980	STEEL ROLLERS ROLL-UP DR
5.17	DSNR	2" TRACK STOP BUMPER
5.18 LH	DSNR	LATCH ASSY LH
5.18 RH	DSNR	LATCH ASSY RH
5.19 LH	DSNR	LATCH PLATE MOUNT LH

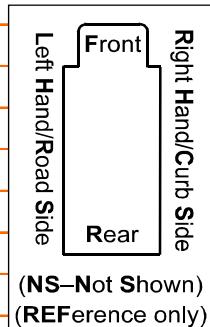

5—Rear Door, Roll-up (continued)

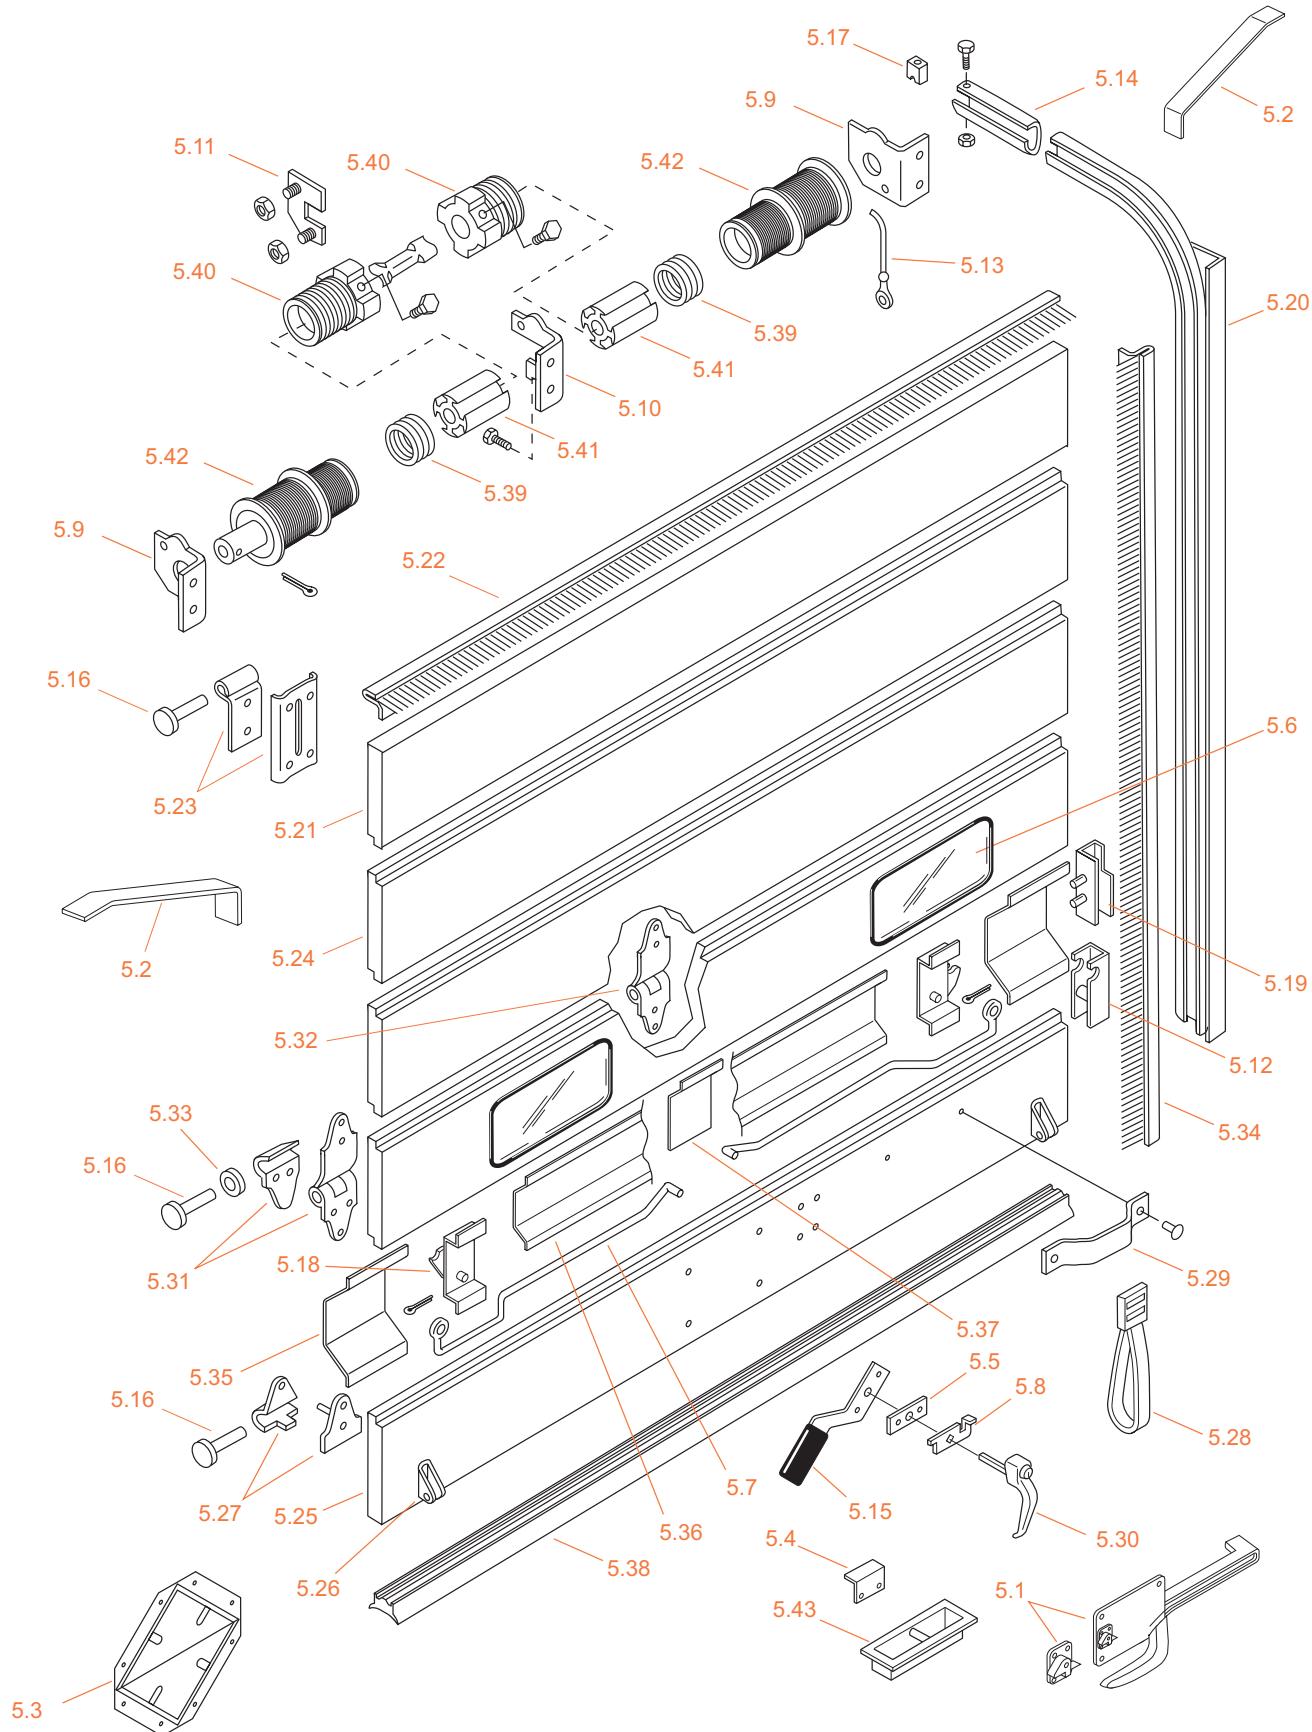

Rear Door, Roll-up


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
5.20	DSNR	VERTICAL TRACK AND MOUNTING ANGLE	
5.21	DSNR	TOP PANEL ASSY	
5.22	DSNR	DOOR TOP SEAL	
5.23.0	DSNR	TOP CLOSURE ASSEMBLY	
5.23.1	10997420	BRACKET TOP ROLLER WHIT	
5.24.1	10997119	PANEL INTERMEDIATE RU DR	
5.24.2	23000470	PANEL INTERMEDIATE RU DR	
5.25	10997135	BOTTOM PANEL ASSEMBLY	
5.26	DSNR	CABLE ANCHORS	
5.27	10997421	BRACKET BOTT ROLLER	
5.28.0	10999964	PULL STRAP ROLL UP DOOR	
5.28.1	10999715	PULL STRAP RETAINER	
5.28.2	10999716	SPLIND CAR BOLT 1/4 x 1.5	
5.29.0	10999962	GRAB HANDLE	
5.29.1	10999697	RIVET 1 "R/VDR	
5.30	DSNR	HANDLE, EXTERIOR	
5.31.1	10997121	HINGE OUTER	
5.31.2	10999709	HINGE OUTER	
5.32.0	10997120	HINGE CENTER WHITING	
5.32.1	DSNR	GASKET, ROLLER HINGE	
5.33	DSNR	SPACER, WASHER (FOR ROLLERS)	
5.34	10999992	SEAL SIDE ROLL-UP DOOR	
5.35	DSNR	LATCH COVER	
5.36	DSNR	COVER ASSY, LOCK PANEL	
5.37.0	DSNR	PLATE ASSY	
5.37.1	DSNR	PIN, ACTUATOR	
5.38	DSNR	LOWER DOOR SEAL	
5.39	10999939	SPRING #4 x 1.75 I.D. x 40"	
5.40	DSNR	CABLE DRUM BEARING ASSEMBLY	
5.41	DSNR	SPRING SPACER	
5.42	DSNR	WINDING CONE	
5.43	DSNR	CATCH MSL	
5.NS	10997310	QUICK RELEASE MECHANISM	
5.NS	10997311	SAFETY CABLE QUICK RELEASE MECHANISM	
	See also the <i>Utilimaster Quick Reference Parts Guide</i> .		

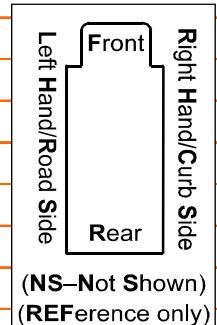

6—Sidewalls

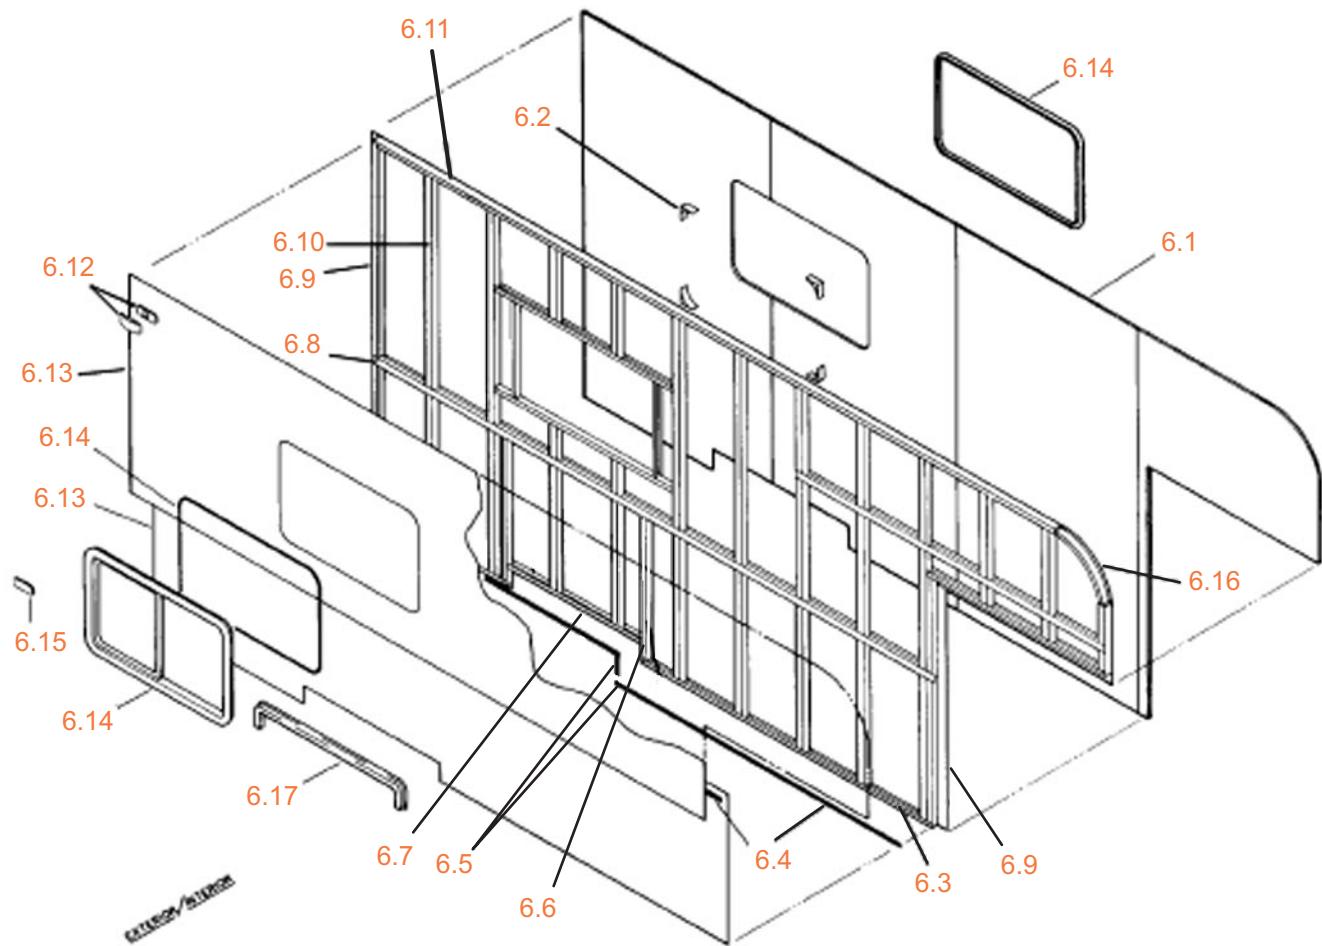

Sidewalls


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
6.0		Sidewall Assembly
6.1	02100501	PLYWD CDPTS 3/8 x 4 x 8 Spec 132
6.2	09300300	BLOCK WIND
6.3	06001500-Length	ALUM EXT H 1-1/2 W 5666 IA997
6.4	12300902	TAPE PV 1/16 x 11/2 x 100' MYLR/ADHE
6.5	12300838	TAPE BUTYL 1/8 x 1-1/2 50' RL
6.6	06001100-Length	ALUM EXT U CHANNEL 1-3/8 IA994
6.7	06001300-Length	C CHANNEL - 3/4" x 1-1/2"
6.8	06000700-Length	ALUM EXT "I" 1-1/2 W 10157 IA993
6.9	06000550-08375	ALUM EXT H 2 1/8 X 1.380 IA2626
6.9-H	06012989	h CHANNEL - 1-9/16" x 2-7/8" (Heavy Duty)
6.10	06001798-08375	IA3949 U-CHANNEL 06001798
6.10-H	06013003-Length	ALUM EXT WALL STUD 090 IA3948 (Heavy Duty)
6.11	06012991-Length	ALUM EXT TOP RAIL 062 IA2414
6.11-H	06012992-Length	ALUM EXT TOP PLATE 090 IA2415 (Heavy Duty)
6.12.1	15200416	LIGHT CLEAR/WPD RED
6.12.2	15200416	LIGHT CLEAR/WPD RED
6.12.3	Parts Guide	LIGHT CLEAR/WPD RED
6.13.1	06320749	ALUM .040 x 43 x 93.75 FW
6.13.2	06320746	ALUM .040 x 43 x 178 FW
6.13.3	06320744	ALUM .040 x 43 x 240 FW
6.14 LH	09018316	WNDW 22 x 34 RS/LH
6.14 RH	09018312	WNDW SLD 22 x 34 CS/RH
6.14.1	09081113	RING TRIM
6.14.2	12300836	TAPE BUTYL 1/8 x 1-1/2 50' RL
6.15	15200319	RED REFLECTOR OVAL
6.16	64260330	RADIUS CURVES 14"
6.17	01303460	FENDER POLYETHYLENE

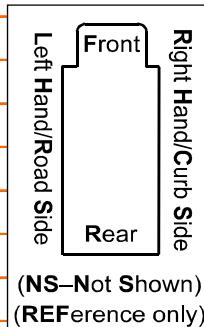

Continued

6—Sidewalls (continued)

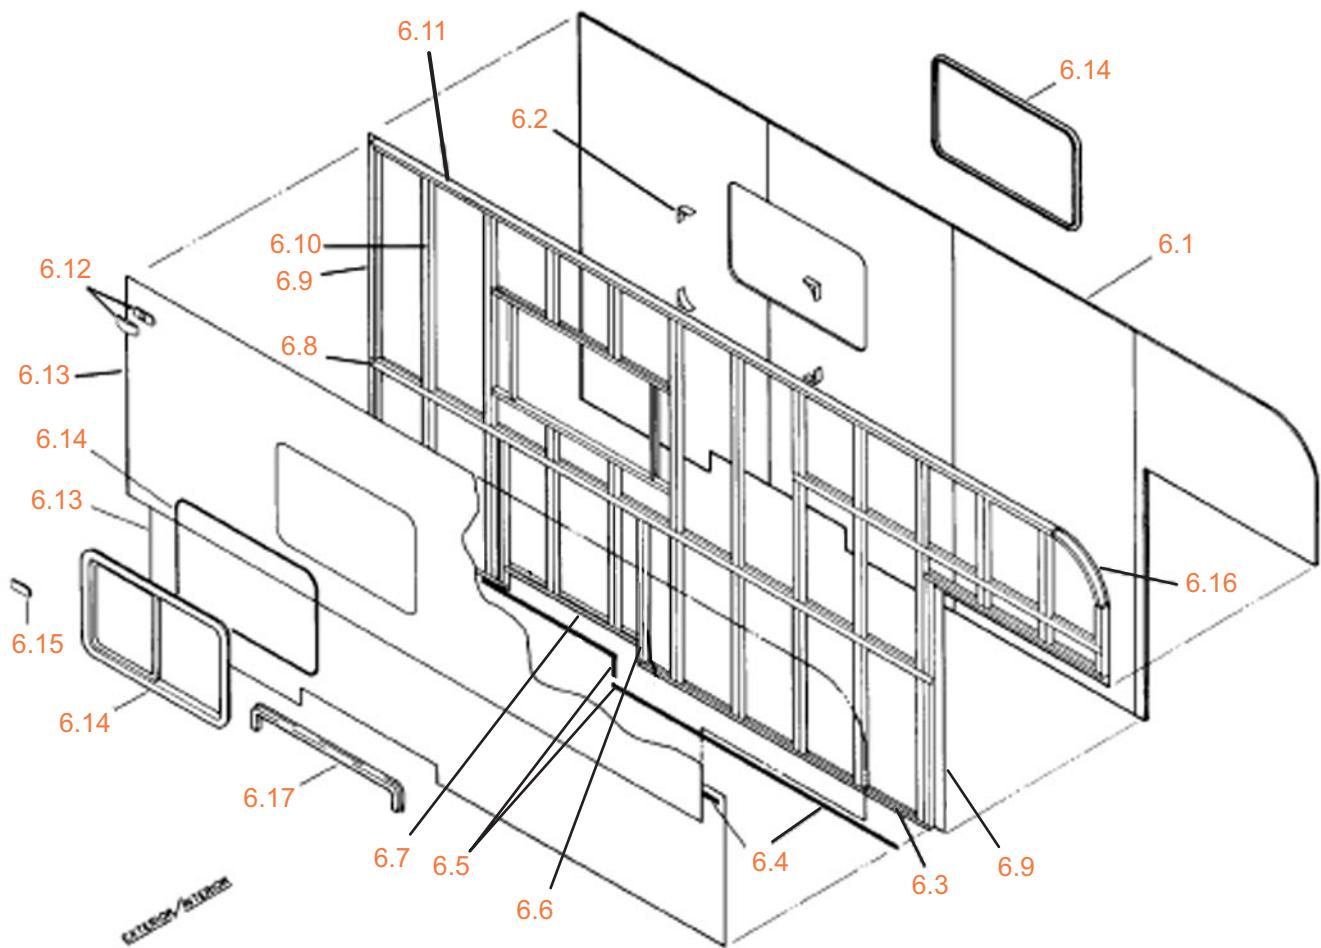

Sidewalls


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
6.NS	11401222	RIVET 3/16 x 1/4-1/2 BLACK	
6.NS	11401218	RIVET POP CW	
6.NS	11401216	RIVET 3/16 x 1/4-1/2 MILL FINISH (Plywood Rivets)	
6.NS	11305159	SCREW 1/4-20 x 2-1/2 TORX FLAT	
6.NS	11302313	SCREW 8 x 1-1/2 QDFL	
6.NS	11306208	SCREW 14 x 1-1/2 HXWS	
6.NS	11401219	RIVET FW 3/16 x 1/16-1/4	
6.NS	11401221	RIVET FW 3/16 x 1/4-1/2 FROST WHITE	
6.Ref	53264409	TYP 3/8PLY INT LINING RIVET PATTERN	
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .	

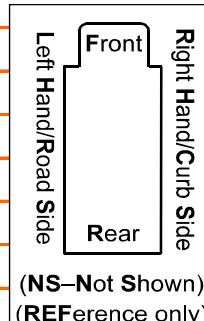

6—Sidewalls, Skirt Option

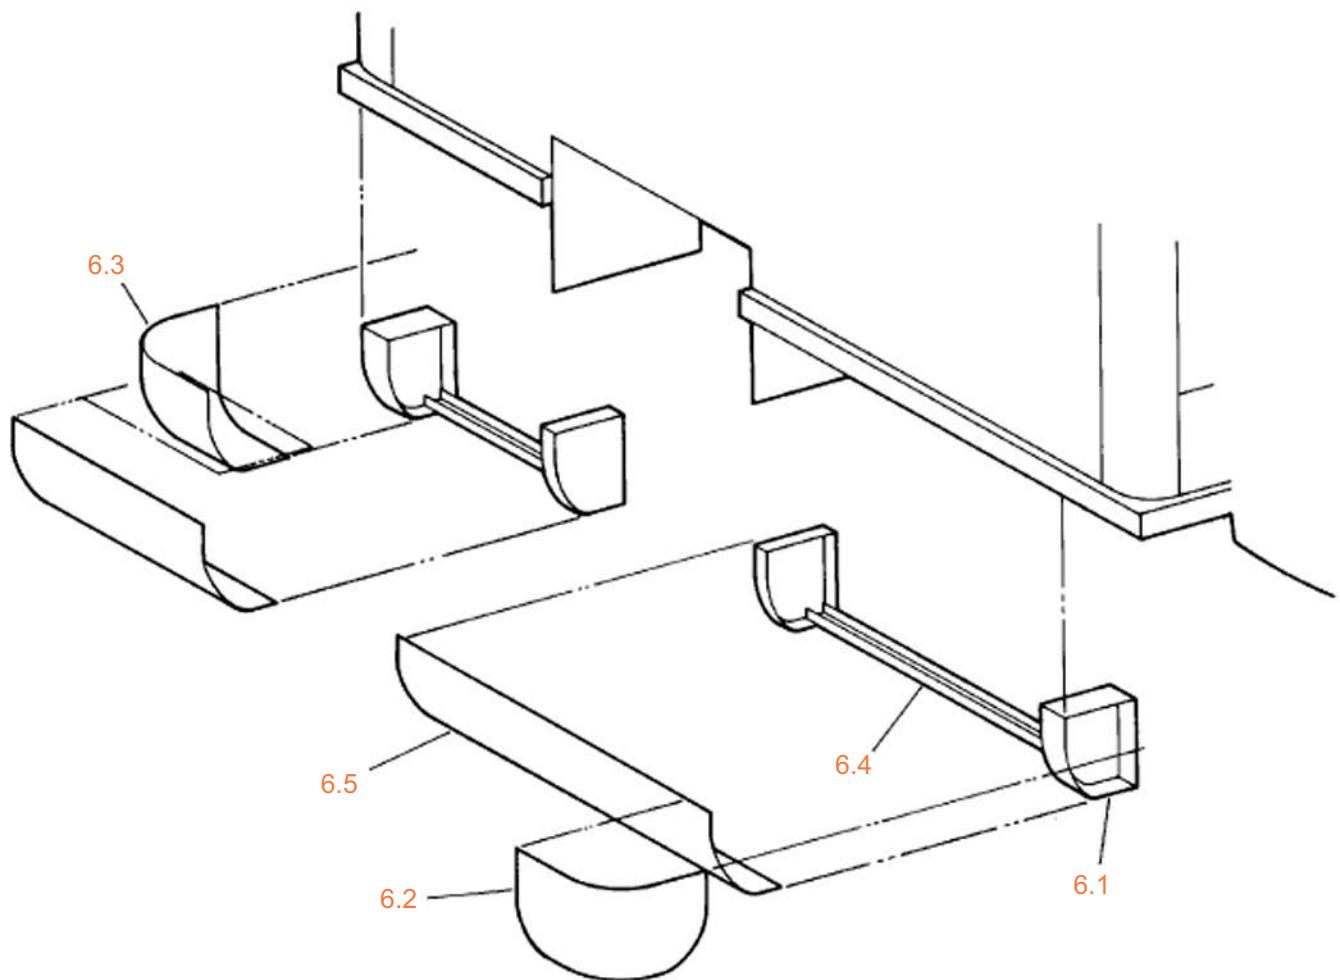

Sidewalls, Skirt Option


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
6.0		Sidewall Skirt	
6.1	01001500	BLOCK-FLOOR CORNER	
6.2.1	01800960	CAP CORNER RIGHT FRONT (Frost White)	
6.2.2	01800961	CAP CORNER LEFT FRONT (Frost White)	
6.2.3	01800706	BOTTOM WRAP CORNER CAPS SET NATURAL	
6.2.4	01800707	BOTTOM WRAP CORNER CAPS SET FW	
6.2.5	01800713	CAP CORNER LH FRONT UTIL CW	
6.3.1	01800700	CAP CORNER RH REAR UTIL FW	
6.3.2	01800701	CAP CORNER LH REAR UTIL FW	(NS—Not Shown) (REFerence only)
6.3.3	01800711	CAP CORNER LH REAR UTIL CW	
6.3.4	01800710	CAP CORNER RH REAR UTIL CW	
6.4	06001100-07700	ALUM EXT U CHANNEL 1-3/8 IA994 77.00	
6.5.1	06625115	AL BOTTOM WRA 040 12.625 x 77 RE CW	
6.5.2	06630298	ALUM BTM WRAP 77 x 12.625 x .040 FW	
6.5.3	06625138	ALUM BTM WRAP 100 x 12.625 x .040 FW	
6.NS	11401221	RIVET FW 3/16 x 1/4-1/2	
6.NS	11301772	SCREW 8x1 QRD WS ZC (20)	
6.NS	11400600	RIVET 3/16 x 3/16-7/16 (24)	
6.NS	11401218	RIVET POP CW (66)	

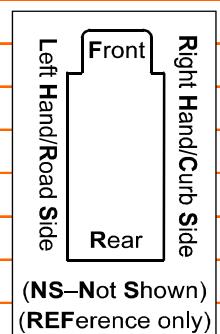

7—Roof

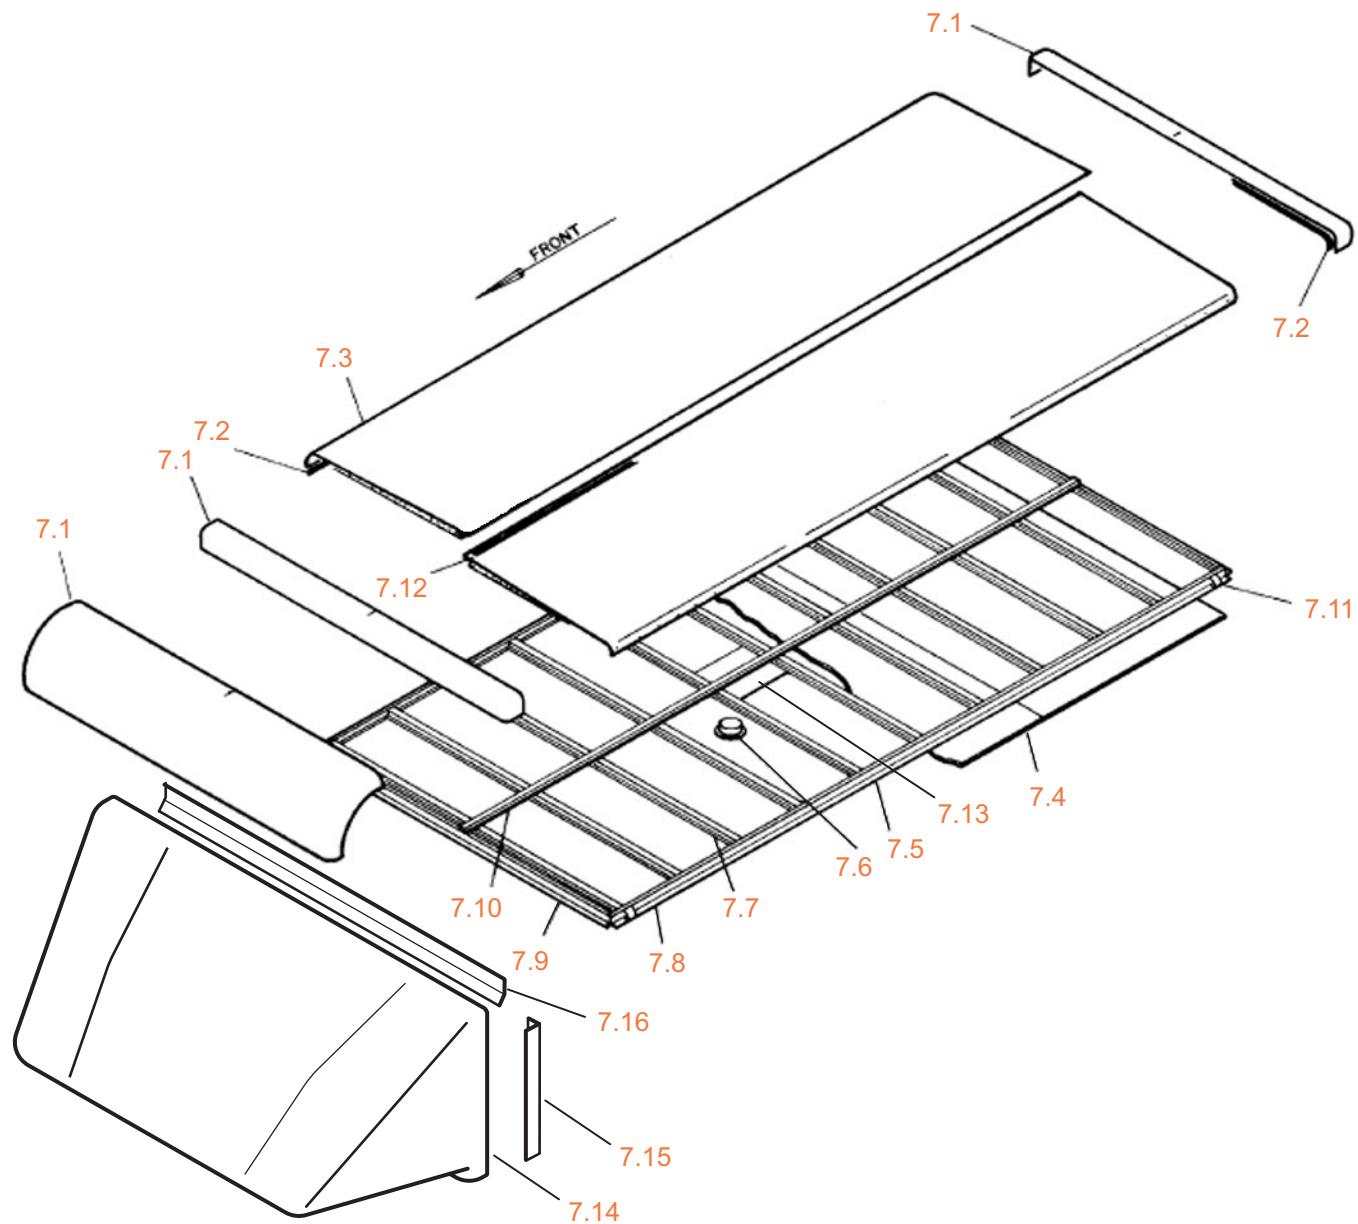

Roof


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.



Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
7.0		Roof Assembly	
7.1-FF	01900547	CAP FBGLS ROOF 2" FROST WHI 94"	
7.1-FC	01900498	CAP FBGLS ROOF 2" COLONIAL 94"	
7.1-FN1	01900050	**CAP FBRGLS 2"R FW 83" (Narrow Body)	
7.1-FN2	01900506	CAP FBRGLS 2"R FW 83" (Narrow Body)	
7.1-N14	01900503	CAP FBRGLS 14"RAD 83" BODY FW (Narrow Body)	
7.1-C14	01900502	CAP FBGLS 14"R COLONIAL 94"	
7.1-F14	01900548	CAP FBGLS 14"R FROST WHI 94"	
7.2	12300902	TAPE PV 1/16 x 11/2 x 100' MYLR/ADHE	
7.3	Appendix 59260003	METAL ROOF	
7.4.1	02100098	LUAN 5/32 48 x 96 3.6UL	
7.4.2	02100115	LUAN 2.7UL x 24 x 93-7/8	
7.4.3	11401215	RIVET 3/16 x 1/16-1/4	
7.5	BSNR	ROOF STRUCTURE WELDMENT	
7.6.1	15202125	LIGHT COMBO W/CLEAR	
7.6.2	Parts Guide	LIGHT CARGO	
7.6.3	16500071	BUSHING SNAP 1/2"	
7.7	06000700-09000	ALUM EXT "I" 1-1/2 W10157 IA993	
7.8	06013131	AE ROOF H .062 IA5249	
7.9.1	06000400-09000	ALUM EXT ROOF "H" IA992	
7.9.2	06001300-09000	ALUM EXT C 1-1/2 IA995 W1106 RAD	
7.10	06011640-Length	ALUM EXT OPEN BOX IA1010	
7.11	06011400	CONTOUR BLOCKS	
7.12-T	12300841	TAPE ALUMI WRAP 4" x 50' (Top)	
7.12-B	12300840	TAPE BUTYL 1/8 x 1-1/4 50' RL (Bottom)	
7.13	06321512	ALUM .040 x 10 x 15.75 DR TRK BKR	
7.14	Appendix 01901753	AREOCAP FOR CUTAWAY CHASSIS TB/PDV	
7.15	06002025-Length	ANGLE ALUM IA1999	
7.16	06010031	SUPPORT 45° AEROCAP HEADLINER	
7.NS	12400302	SEALANT SILICONE WHITE	
7.NS	02100119	LUAN BENDING 48 x 96 2.7UL	
7.NS	12300841	TAPE ROOF 4" x 50' WHITE	
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .	

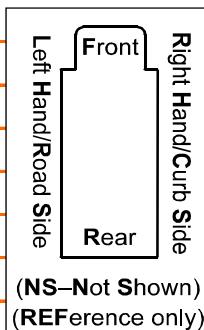

7—Roof Options

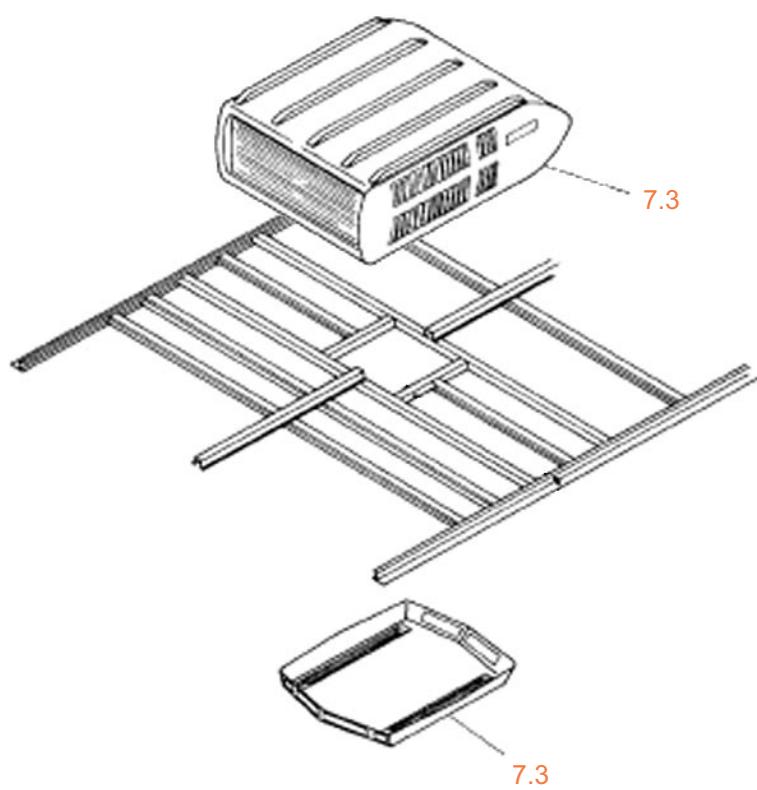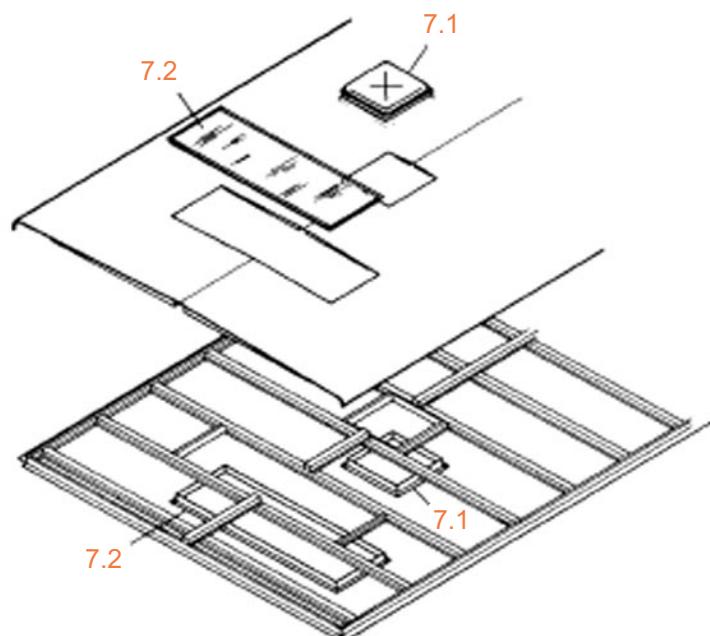

Roof, Options


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
7.0		Roof Options	
7.1.1	07200166	VENT RF MAN W/WH CV (Non-Powered)	
7.1.2	07200167	VENT RF 12V W/WH CV (Powered)	
7.1.3	07200063	COVER DOME VENT	
7.1.4	07200282	BLADE FOR HV212379	
7.1.5	07200168	GARNISH CRNR 2-1/2"	
7.1.6	07205101	GARNISH 1-1/2"	
7.1.7	BSNR	ROOF VENT (Other)	
7.2.1	01900746	KEM .060 x 16.5 x 16.5	
7.2.2	20510122	KEMLITE .060 x 17 x 49	
7.2.3	07205000	GARN SKYLIGHT ABS WO/KRD	
7.2.4	Parts Guide	SKYLIGHT (Other)	
7.3.1	BSNR	AC ROOF MOUNTED	
7.3.2	17000853	INSIDE SHROUD W/HEAT STRIP	
7.NS	12300843	TAPE ROOF 4" x 75' WHITE	
7.NS	12300841	TAPE ALUMI WRAP 4" x 50'	
7.NS	01900746	KEM .060 x 16.5 x 16.5	
7.NS	20510122	KEMLITE .060 x 17 x 49	
	See also the <i>Utilimaster Quick Reference Parts Guide</i> .		

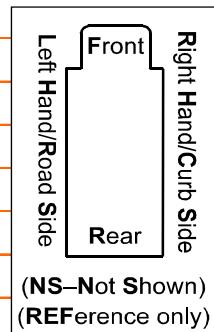

8—Front Bulkhead Wall

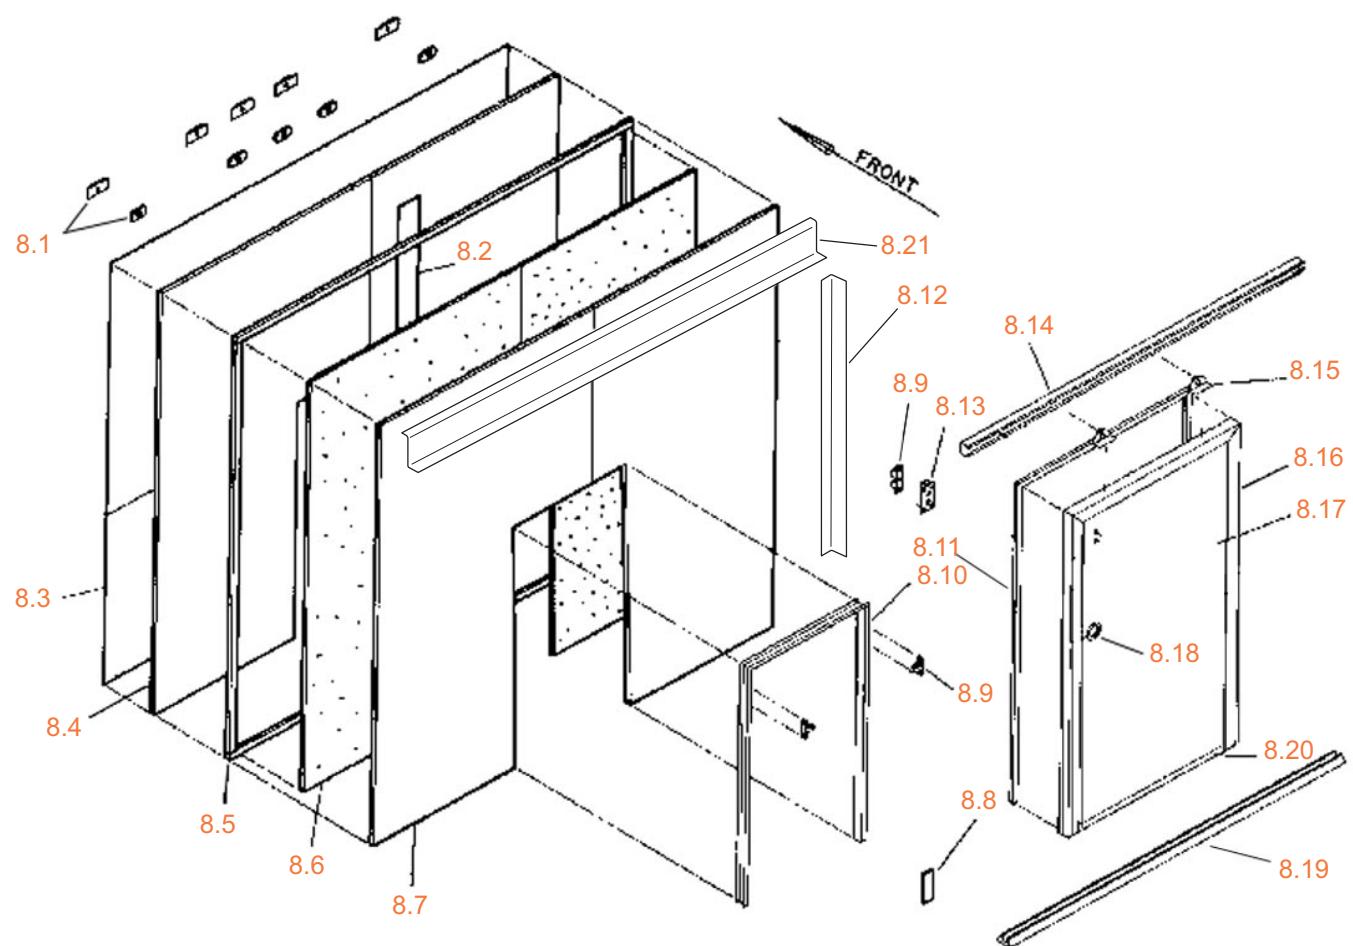

Front Bulkhead Wall

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Previous No.	Current No.	Description
8.0			Front Wall Assembly
8.1	BSNR	15200516	LIGHT CLEAR/WPD AMB
8.2		06510360	ALUM .063 x 4 x 84
8.3	06320752	06321506	ALUM .030 x 43 x 90.25 CW
8.4		02100098	LUAN 5/32 48 x 96 3.6UL
8.5		02101119	PLYWD FIR T&G 1-1/8 x 48 x 93-7/8
8.6	20200990	20200992	POLYSTYRENE .875 x 48 x 87.625 1.5#
8.7		02100499	PLYWD FIR CDPTS 3/8 x 4 x 7
8.8		57260182	DOOR STOP
8.9	08704391	08611172	DOOR HOLDER HARD W/MALE PLUG
8.10		06001300-Length	ALUM EXT C 1-1/2 IA995 W1106
8.11		12300602	SEAL BLACK BULB (B/H)
8.12		06910908	ANGLE BH MOUNT .100 x 1.5 x 52.5
8.13		06013004	ALUM EXT CATCH SUPPORT IA4009
8.14	08220020	06910908	ANGLE BH MOUNT .100 x 1.5 x 52.5
8.15	08220101	08220102	HANGER B/H SLDR DR
8.16	06012999	06000359-Length	AE B/H DOOR W/SEAL IA7246
8.17.1	57260235	57260675	DR ASY BHD SLD 26" x 78"
8.17.2	57260070	57260626	DR ASY B/H SLIDE W/WELL 24 x 46 PDV
8.17.3	57260179	57260625	DR ASY B/H SLIDE FLT FLR 24 x 40 PDV
8.17.4		02803014	FRP 1/2 x 24.50 x 40.25 TEDLAR FW
8.17.5		06320752	ALUM .030 x 43 x 90.25 FW (Door Metal Only)
8.18		08220200	PULL FINGER BROWN
8.19	08220021	06013110-Length	IA5129 "I" 06013110
8.20.1	06001300-Length	06000270-04800	AE GUIDE RAIL SOLID IA7467
8.20.2		08220347	TRACK LOWER B/H GUIDE B1379
8.20.3	06800035	NA	CASTI TRACK LWR DOOR 25.5"
8.21		06910910	CLOSEOUT B/HEAD Z .125 x 5 x 90
8.NS		08610122	HANDLE DOOR
8.NS		08704605	DEADBOLT LOCK 1" TAYLOR
8.NS		11305087	SCREW 1/4-20 x 11/16 TORX PAN EMPIGA
8.NS		11007502	NUT-T 1/4-20 x 7/16 RDBSE DOMESTC
8.NS		11301321	SCREW 8 x 1/2 RWQDAZ QUAD 812RWQAZ
8.Ref		57260670	DR ASY SLDG BH 1/2" FRP FW 26 x 41
	See also the <i>Utilimaster Quick Reference Parts Guide</i> .		

8—Mid-ship Wall, Solid

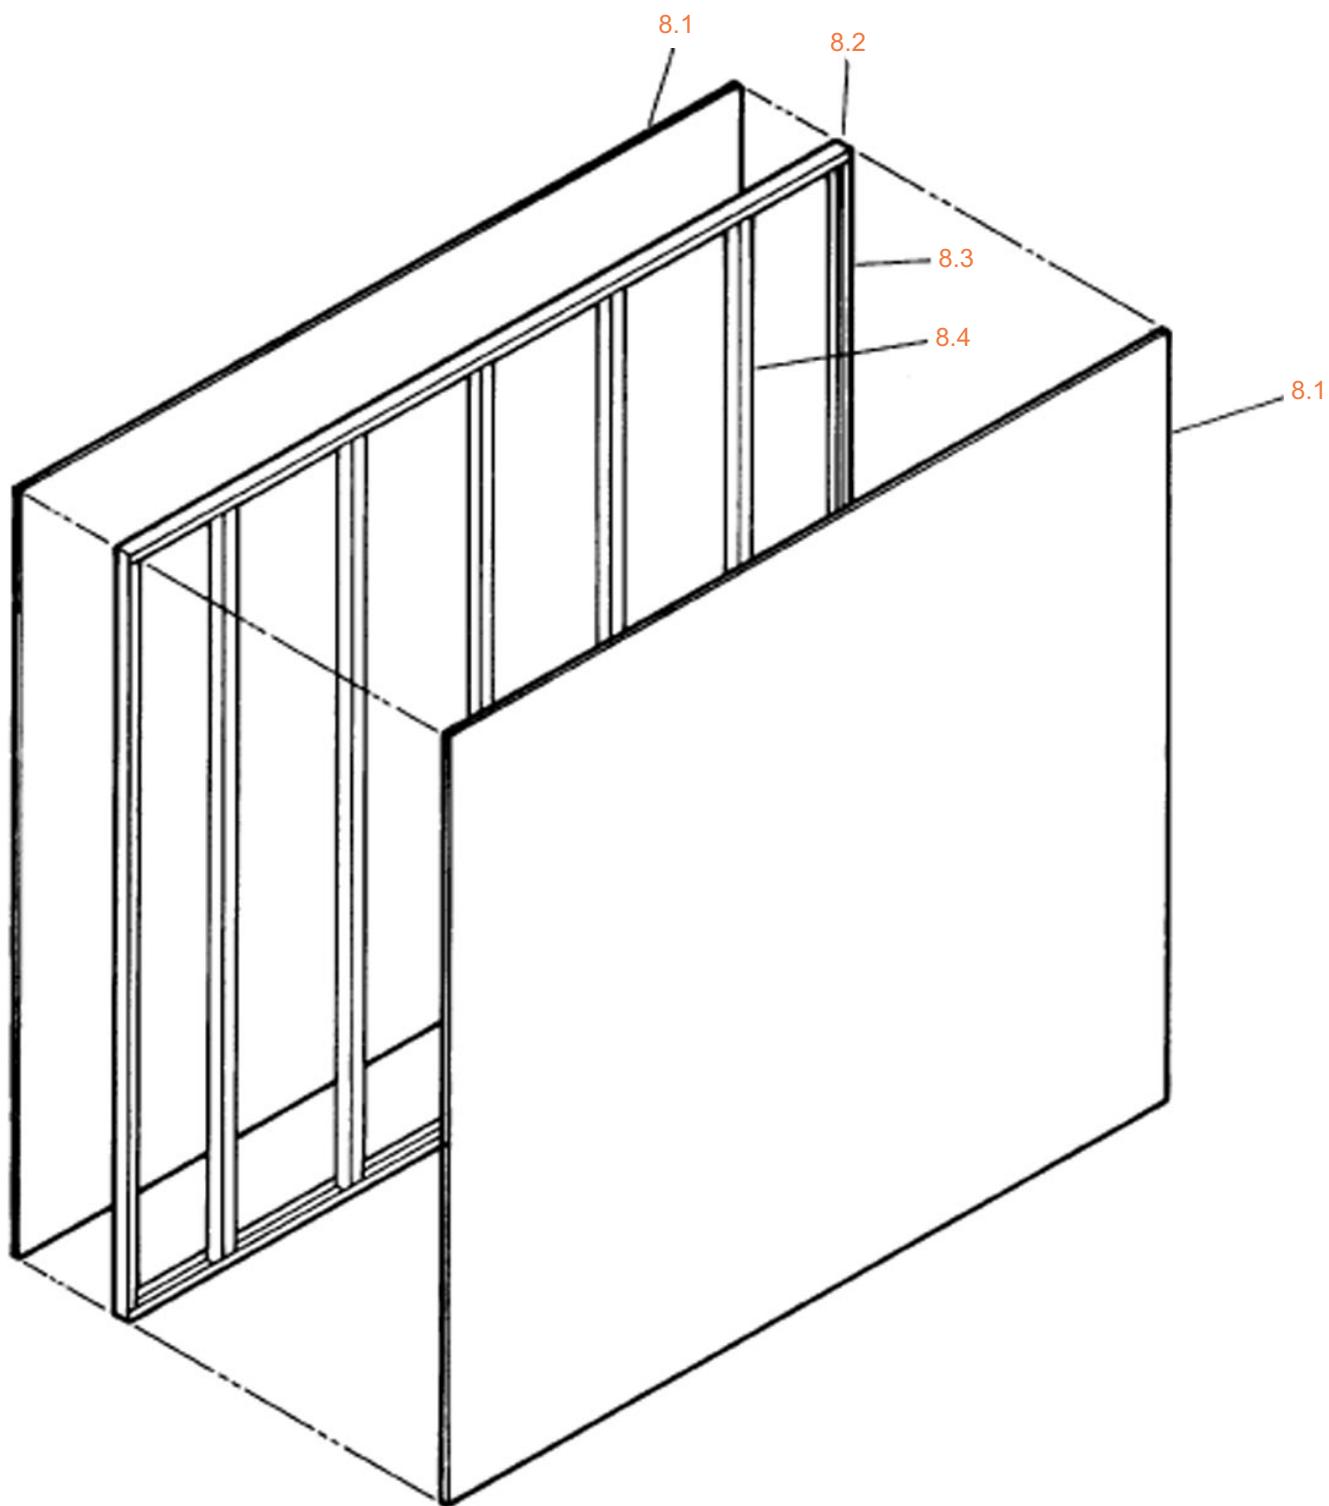

Mid-ship Wall, Solid


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
8.0		Mid-ship Wall, Solid
8.1	02100499	PLYWD FIR CDPTS 3/8 x 4 x 7
8.2	06001300-Length	ALUM EXT C 1-1/2 IA995 W1106
8.3	06001100-Length	ALUM EXT U CHANNEL 1-3/8 IA994
8.4	06001798-L	IA3949 CHANNEL 06001798

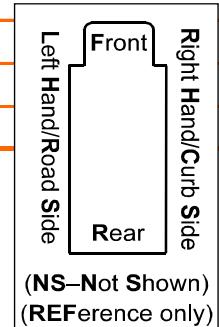

8—Mid-ship Wall, Mesh

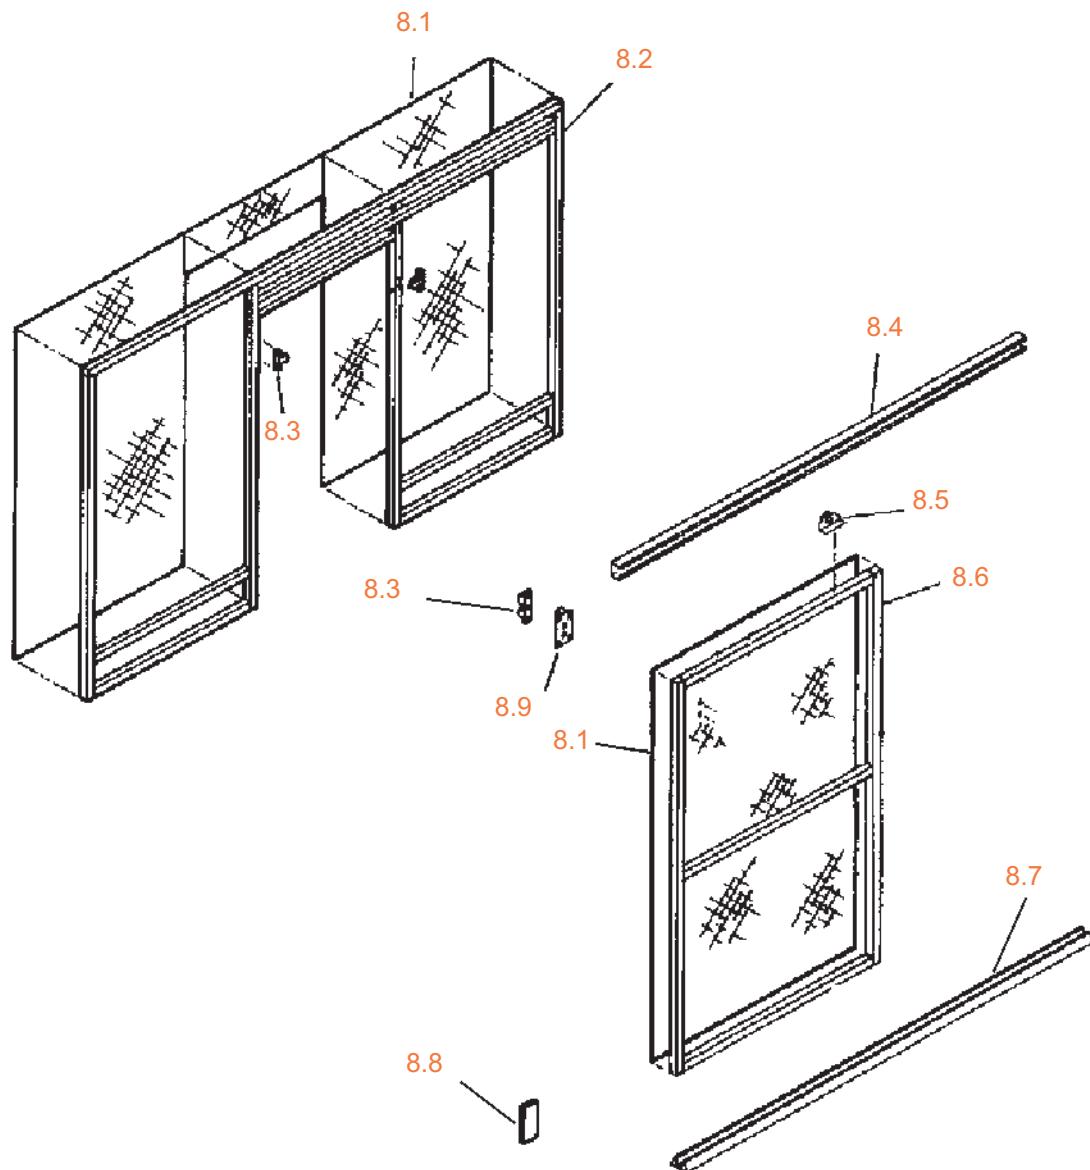

Mid-ship Wall, Mesh


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
8.0		Mid-ship Wall, Mesh
8.1	01700200	MESH 3/4" 13GA.FLT. X 48 X 96 GLVNZD
8.2.1	54260052	SOLID MESH BULKHEAD
8.2.2	54260084	SOLID MESH BULKHEAD, NARROW BODY
8.2.3	54260116	SOLID MESH BULKHEAD, FLAT FLOOR
8.2.4	54260085	SOLID MESH BULKHEAD, NARROW BODY FLAT FLOOR
8.2.5	54260069	MESH BULKHEAD W/ DOOR
8.2.6	54260077	MESH BULKHEAD W/ DOOR, NARROW BODY
8.2.7	54260117	MESH BULKHEAD W/ DOOR, FLAT FLOOR
8.2.8	54260087	MESH BULKHEAD W/ DOOR, NARROW BODY FLAT FLOOR
8.3	08704391	LATCH BRASS DOUBLE BALL
8.4	08220020	TRACK DOOR UPPER 57-3/8
8.5	08220101	LATCH BRASS DOUBLE BALL
8.6.1	57260027	MESH DOOR
8.6.2	57260180	MESH DOOR, FLAT FLOOR
8.7	08220021	TRACK DOOR LWR 57-3/8
8.8	57260182	DOOR STOP
8.9	08740105	LABOR ON CATCH SUPPORT
8.NS	06000150	TUBE - 1" x 1"
See also the <i>Utilimaster Quick Reference Parts Guide</i> .		

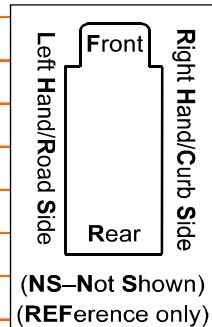

9—Electrical Harnesses

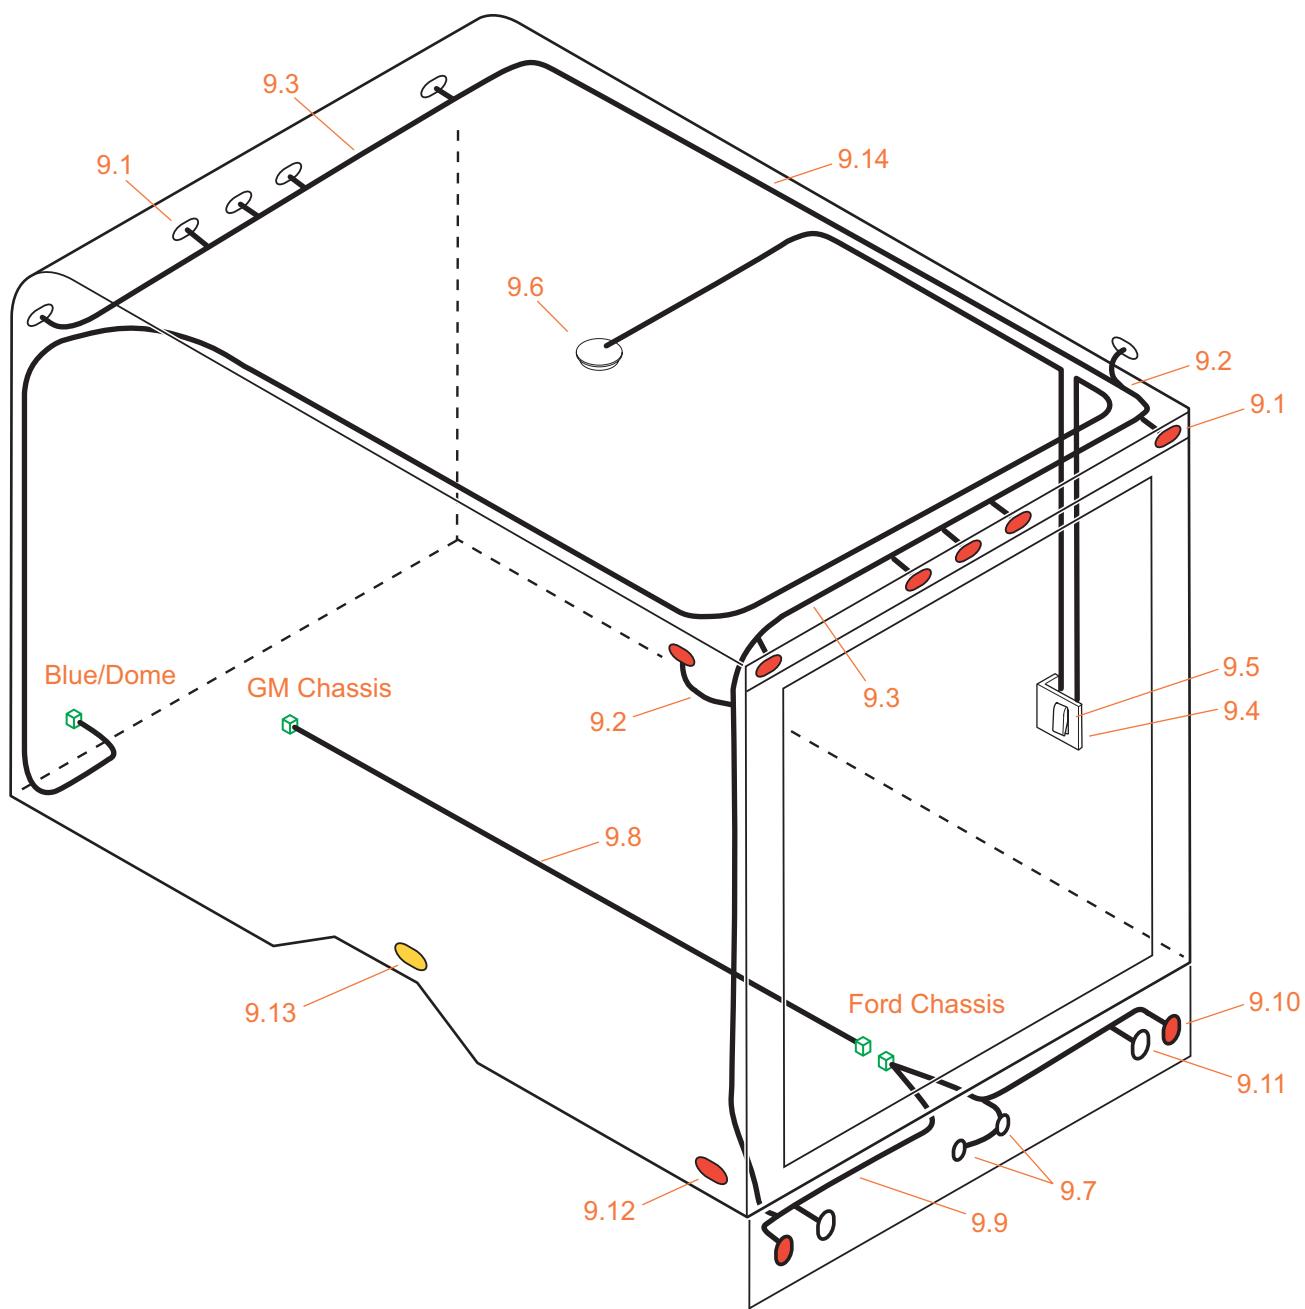

Electrical Harnesses


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
9.0		Electrical Layout	
9.1.1	15200516	LIGHT CLEAR/WPD AMB	
9.1.2	15200416	LIGHT CLEAR/WPD RED	
9.1.3	Parts Guide	LIGHT CLEAR	
9.2.1	16512637	HARNESS CLEA RANCE LIGHTS	
9.2 LH	16512639	HARNESS LH CLEA RANCE LIGHTS	
9.2 RH	16512638	HARNESS RH CLEA RANCE LIGHTS	
9.3	16512637	HARNESS FRT/RR CLEA RANCE LIGHTS	
9.4	08711021	BRACKET CARGO SWITCH SWING DRS	(NS—Not Shown) (REFerence only)
9.5.1	16511544	SWITCH RCKR LITED	
9.5.2	16000048	SWITCH 3-WAY CONCEPT RKR	
9.6.1	15202125	LIGHT-COMBO W/CLEAR	
9.6.2	Parts Guide	LIGHT, CARGO	
9.7.1	16500153	LIGHT LICENSE PLATE	
9.7.2	Parts Guide	LIGHT LICENSE PLATE	
9.8	BSNR	CHASSIS JUMPER HARNESS (GM Only)	
9.9.1	16400962	WIRE HARNESS CHEVY GAS	
9.9.2	16400381	WIRE HARNESS 10/16 FORD '92 PDV	
9.9.3	16400960	HARNESS WIRE 10/14 FD	
9.9.4	16400961	HARNESS WIRE 15/16 FD	
9.10	Parts Guide	LIGHT STOP/TURN/TAIL	
9.11	Parts Guide	LIGHT REVERSE	
9.12.1	15200319	RED REFLECTOR OVAL	
9.12.2	16200034	REFLECTOR RED TAPE ROUND	
9.13	15200320	AMBER REFLECTOR OVAL 70-78-060	
9.14	16512640	HARNESS CLR LTS AEROCAP JUMPER	

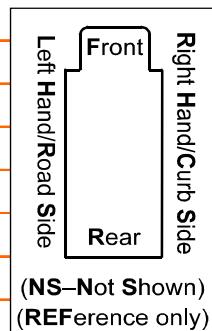

Continued

9—Electrical Harnesses (continued)

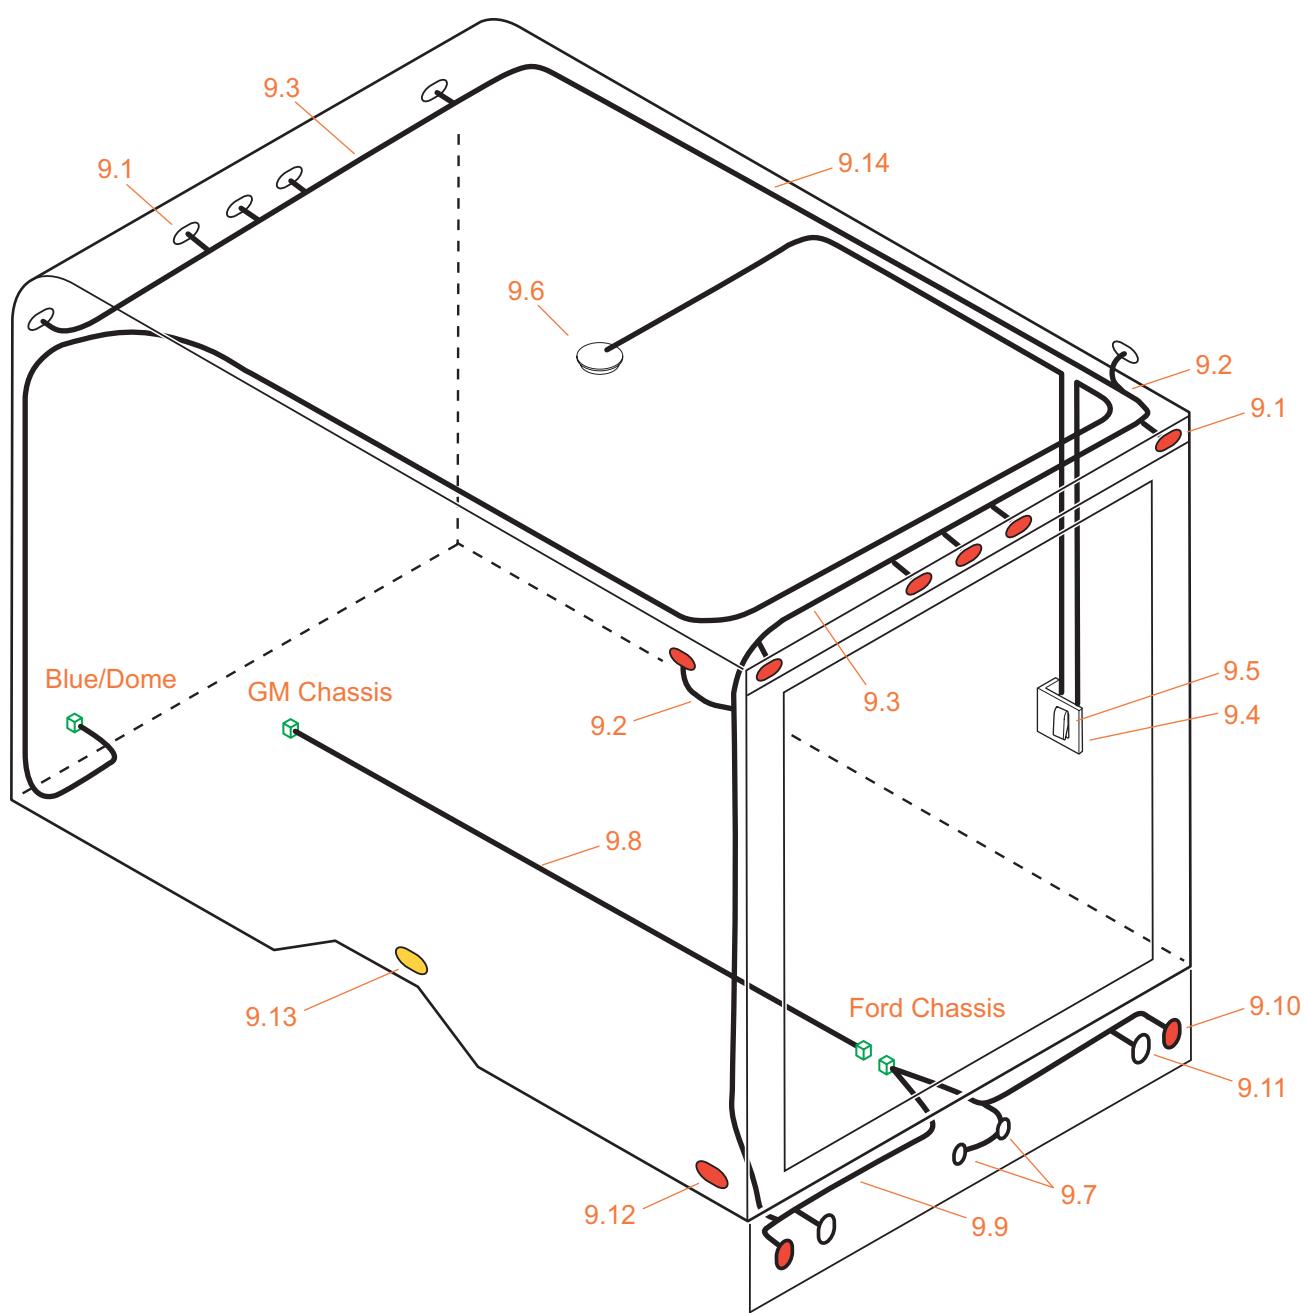

Electrical Harnesses


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
9.NS	16602350	CLAMP "P" 1/2" PLASTIC
9.NS	16602400	CLAMP "P" 1" PLASTIC
9.NS	16510019	CONDUIT PLASTIC 3/8"SLIT
9.NS	16400381	WIRE HARNESS 10'-16' FORD
9.NS	16500071	BUSHING SNAP 1/2"
9.NS	19601212	GROMMET 1-1/2
9.NS	16500137	GROMMET 7/8" OD
9.NS	16101293	FUSE HOLDER SELF STRIP
9.NS	16512650	INLINE FUSE HOLDER 15 AMP
9.NS	16605698	STRAP PLAS TIE BLK 8.5"
9.NS	16605701	STRAP WIRE TIE BLK 15.5"
9.NS	16512507	WIRE CLIP W/ADH.
9.NS	16101122	FUSE 15 AMP
9.NS	16101124	FUSE 20 AMP
9.Ref	16513057	WIRING LAYOUT ROOF SHORT CUTAWAY
9.Ref	16513058	WIRING LAYOUT ROOF LONG CUTAWAY
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .

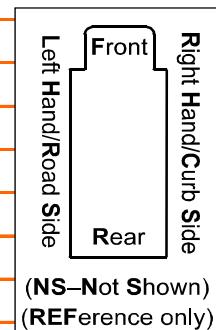

(NS—Not Shown)
(REFerence only)

10—Cargo Options, Interior

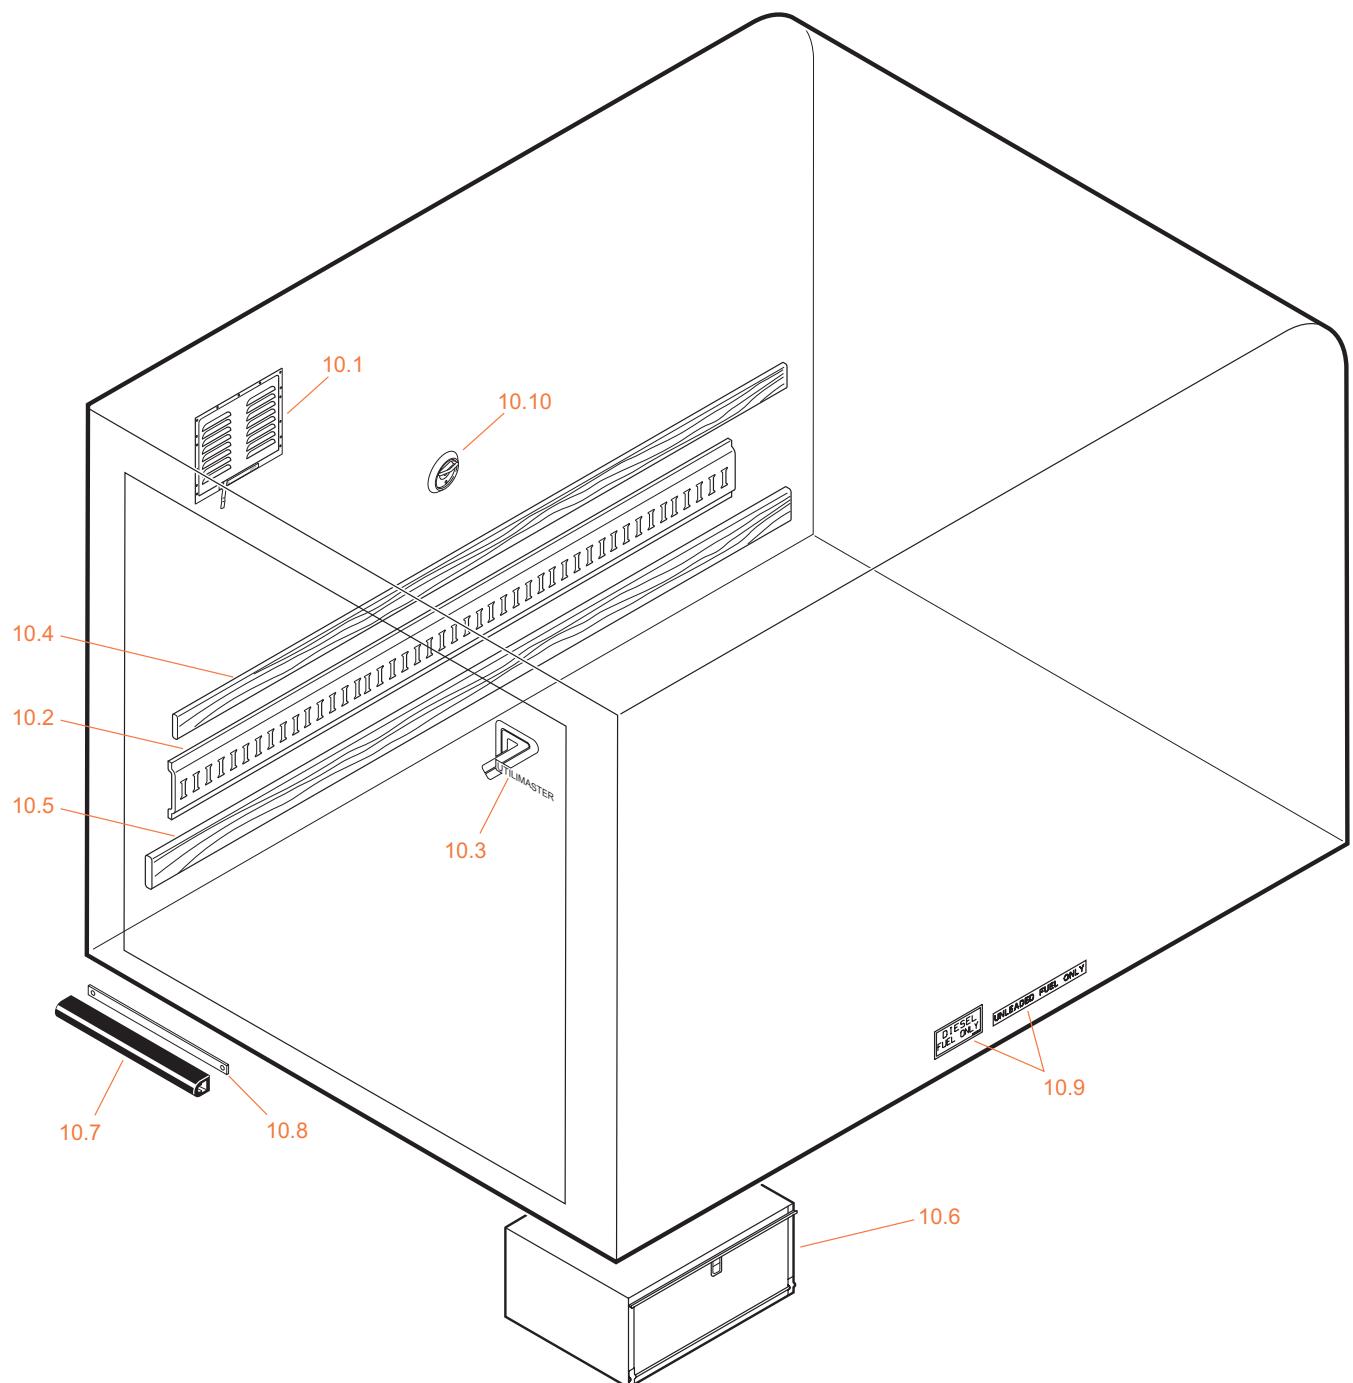

Cargo Options, Interior


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
10.0		Cargo Options	
10.1.1	07200278	VENTILATOR ALUM 10 x 12	
10.1.2	07200275	VENTILATOR ALUM 10 x 12 ONLY	
10.1.3	03102154	DECAL BUTTERFLY VENT OPEN/CLOSED	
10.2.1	08610453-Length	E-TRACK GALV SHT & POST	
10.2.2	08610452	E-TRACK GALVANIZED 10' W/HOLES	
10.3	03000346	DECAL UTILIMASTER LOGO	
10.4	02006028-Length	APITONG SLATS 1 x 3	
10.5	02000244-Length	APITONG SCUFF 1 x 6	
10.6.1	15300358	BOX TOOL STL 12GA x 12H x 18D x 24L	
10.6.2	22815345	BOX TOOL STL 14GA x 18H x 18D x 36L PDL LTC	
10.6.3	22815919	BOX TOOL STL 14GA x 12H x 16D x 32L	
10.6.4	22815920	BOX TOOL STL 14GA x 18H x 16D x 48L	
10.6.5	06923319	BOX TOOL 30 x 18 x 18	
10.6.6	06923321	BOX TOOL 36 x 18 x 18	
10.7.1	01107310	BUMPER RUBBER DOCK 18"	
10.7.2	20510155	BUMPER RUBBER DOCK 30"	
10.7.3	BSNR	BUMPER RUBBER DOCK (SPECIFY LENGTH)	
10.8	BSNR	WASHER RIBBON	
10.9.1	03000607	DECAL UNLEADED FUEL ONLY	
10.9.2	03000824	DECAL DIESEL FUEL ONLY	
10.10.1	08708900	ROPE RING RECESSED	
10.10.2	Parts Guide	TIE DOWN CARGO	
10.10.3	11301772	SCREW 8 x 1 QRD WS ZC (Tie Down Rings)	
10.10.4	11401225	RIVET 3/16 x 7/16-25/32 (Tie Down Rings)	
10.10.5	11400803	RIVET POP 3/16 x .876-1 (Tie Down Rings)	
10.NS	08220185	STRAP E TRACK R/BUCKLE	
10.NS	08706702	STRAP E TRK 16' RATCHET	
10.NS	08210018	STRAP 2" LOGISTIC W/CAM BK 12'	
10.NS	08700138	TIEDOWN FLR RECESSED ZINC	
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .	

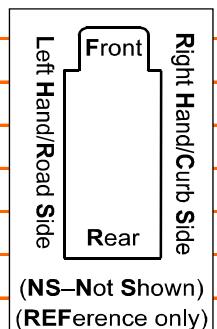

(NS—Not Shown)
(REFerence only)

10—Cargo Options, Exterior

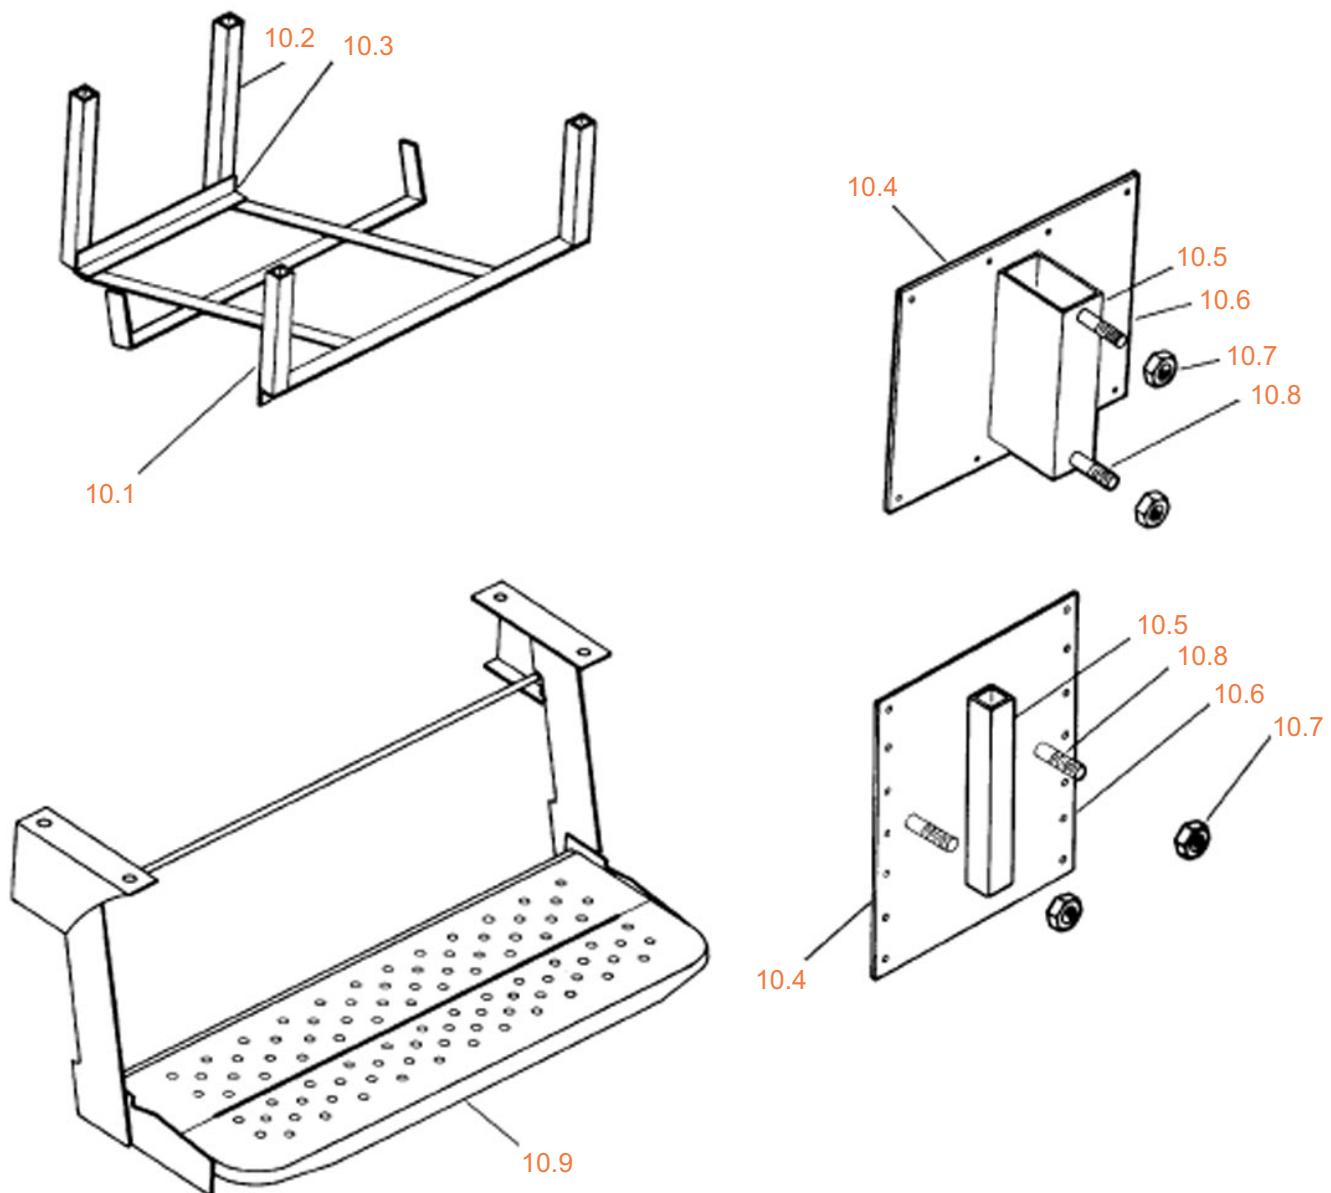

Cargo Options, Exterior


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description
10.0		Cargo Options
10.1.1	64260043	CARRIER WELD SPAR TIRE U/FLR FD
10.1.2	64260049	TIRE CARRIER FRAME MOUNT - Chevy
10.1.3	64260156	TIRE CARRIER FRAME MOUNT - Ford (Flat Floor)
10.1.4	64260146	SPARE TIRE CARRIER F/FLR GM
10.2	01701300-Length	TUBE 11GA x 1.5 x 1.5
10.3	01702055	ANGLE - 1-1/2" x 1-1/2" STEEL
10.4.1	51260120	TIRE CARRIER WALL MOUNT - Ford (Single Wheel Chassis)
10.4.2	51260119	TIRE CARRIER WALL MOUNT - Chevy (Single Wheel Chassis)
10.4.3	22812028	TIRE CARRIER WALL MOUNT - (Dual Wheel Chassis)
10.5.1	01701506	TUBE - 2" x 3" STEEL
10.5.2	01701606-Length	TUBE 12GA x 2 x 4
10.5.3	01701255-Length	TUBE 12GA x 1 x 1
10.6	01700510	PLATE SPARE TIRE 1/4 x 10 x 12
10.7	11007149	NUT 9/16-18 UNF Lug
10.8	11005341	BOLT HEX 9/16-18 x 2
10.9.1	01104001	STEP SINGLE W/ANGLE
10.9.2	01104030	STEP BLACK DOUBLE FOLDING 24"
See also the <i>Utilimaster Quick Reference Parts Guide</i> .		

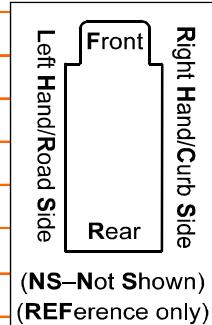

11—Heater, Auxiliary

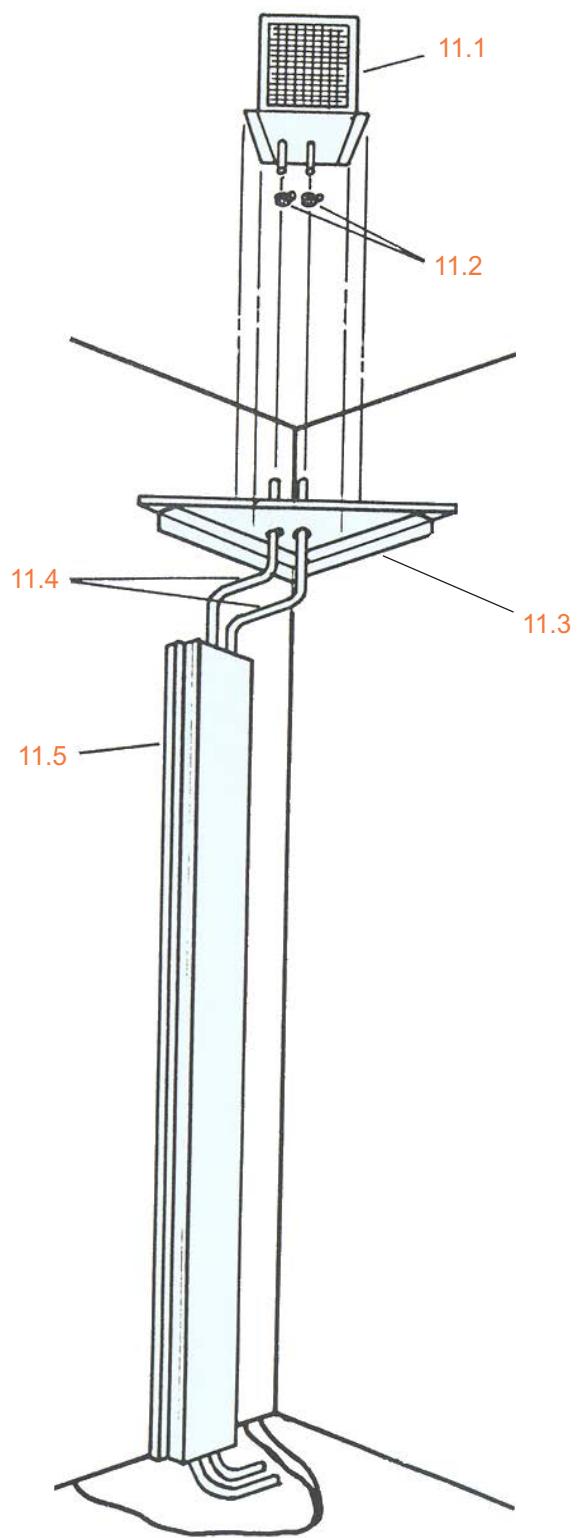

Heater, Auxiliary


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
11.0		PDV Aux Cargo Heater	
11.1	17200838	HEATER	
11.2	08709426	HOSE CLAMP	
11.3	64260350	SHELF AUX. HEATER	
11.4	17301230	HOSE	
11.5.1	64260347	AUX.HEATER HOSE COVER WOOD 2"	
11.5.2	64260348	AUX HEATER HOSE CVR WOOD 3.5" x 72"	
11.5.3	64260351	COVER ALUM	
11.5.4	64260352	COVER ALUM	
11.NS	08706748	CABLE 60" CARGO HEATER	
11.NS	17301605	VALVE SHUT OFF	
11.NS	19504927	TEE FITTING	
11.NS	16015508	SWITCH ROTARY 2SPD	
11.NS	64260136	SWITCH BRACKET	
11.NS	19901170	PUMP BOOSTER GROCO	

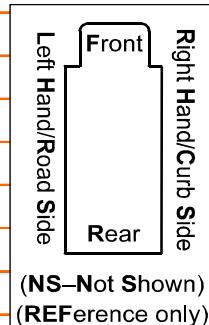

(NS—Not Shown)
(REFerence only)

12—Cabover Option

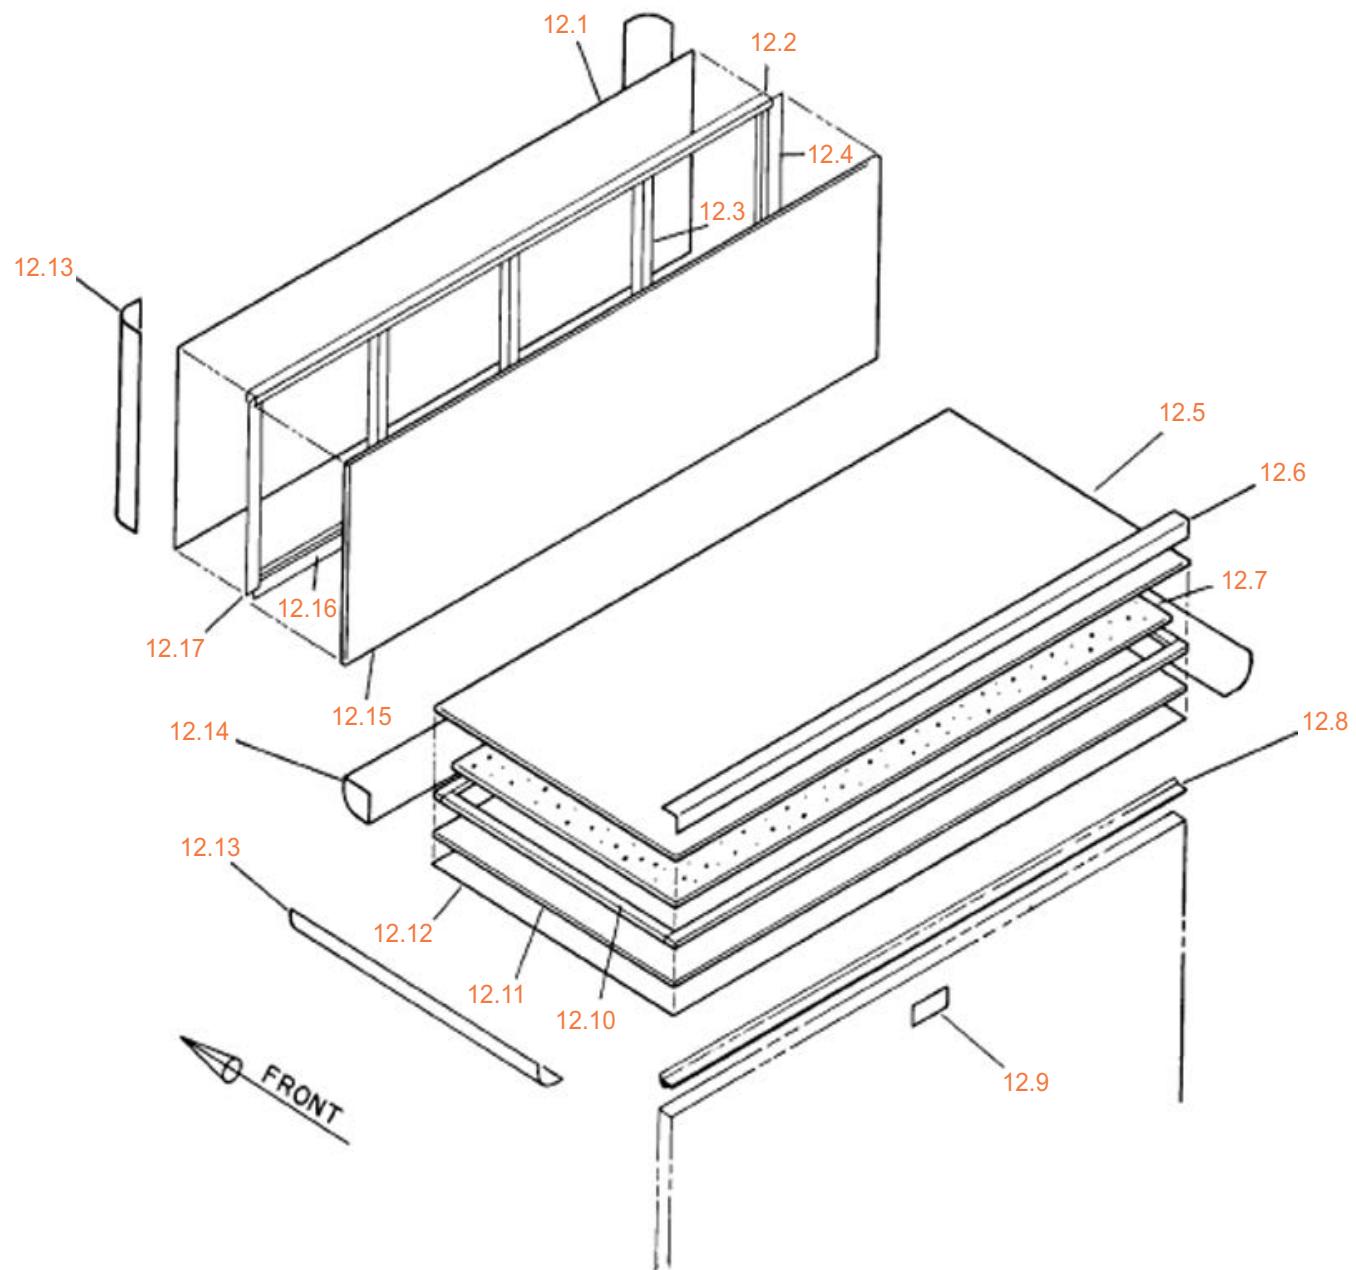

Cabover Option


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

Item	Part Number	Description	
12.0	P0253-B31	C/OVER W/RADIUS STD 48" DECK	
12.1-C	06320169	ALUM .030 x 34 x 90.25 CW	
12.1-F	06320750	ALUM .040 x 34 x 90.25 FW	
12.2	06012991-Length	J CHANNEL 1-1/2 x 2-1/4 ALUM IA 2414	
12.3	06001798-09000	h CHANNEL 1-1/2 x 2-1/4 IA 3949	
12.4	06000400-Length	U CHANNEL 1-3/8 x 1-3/8 IA 992	
12.5.1	52260516	CAB/OVER FLOOR ASY 48" FORD STD FW	
12.5-N	52260051	CAB/OVER FLOOR ASY Narrow Body	
12.6	01700171	CAP FLR.C/O 2.5 x 90" 14G GALV	
12.7	20510208	POLYSTYRENE 7/8 x 45.75 x 88	
12.8	05001605	REVERSE COVE 1-1/2 FW	
12.9	03002148	TAG 300# MAX CABOVER	
12.10.1	02101119	PLYWD FIR T&G 1-1/8 x 48 x 93-7/8	
12.10.2	02802532	PLYWOOD 3/8 x 48 x 90.25	
12.10.3	02802353	LAM PLY/LUAN 7/8 x 1.125 x 90.25	
12.10.4	02802536	LAM PLY/LUAN 7/8 x 1.125 x 45.75	
12.11	02100098	LUAN 5/32 48 x 96 3.6UL	
12.12	06320752	ALUM .030 x 43 x 90.25 FW	
12.13 LH	06914440	CAP HORIZ LH CABOVER CRNR POST	
12.13 RH	06914441	CAP HORIZ RH CABOVER CRNR POST	
12.14-C	01900514	CAP FBRGLS BTM CABOVR COLONIAL	
12.14-F	01900549	CAP FBGLS BTM CABOVER FROST WH	
12.14-N	64250183	BOTTOM CABOVER CAP (Narrow Body)	
12.15	02100499	PLYWD FIR CDPTS 3/8 x 4 x 7	
12.16	06013007-09025	ALUM EXT C/O FRT WALL IA4160	
12.17	BSNR	DUPLEX FRONT WALL	
12.NS	11302901	SCREW 8 x 2-1/2 SQ FH	

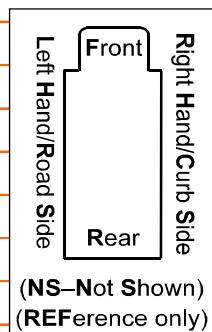

Appendices

01901753—Fiberglass Aerocaps

Appendix 01901753: Fiberglass Aerocaps				
Chassis	Part Number	Height	Floor	Model Year
Utilivan				
FORD	01900524	6'-6"	LOW MOUNT	1991 & BEFORE
FORD	01900524	6'-6"	FLAT	1991 & BEFORE
FORD	01900520	7'-0"	LOW MOUNT	1991 & BEFORE
FORD	01900520	7'-0"	FLAT	1991 & BEFORE
FORD	01900488	7'-0"	FLAT	1992 & AFTER
FORD	01900488	7'-0"	LOW MOUNT	1992 & AFTER
GM G VAN	01900519	7'-0"	LOW MOUNT	ALL
GM G VAN	01900519	7'-0"	FLAT	ALL
GM GP VAN	01900519	7'-0"	LOW MOUNT	ALL
GM GP VAN	01900519	7'-0"	FLAT	ALL
GM (NARROW BODY)	01900205	6'-6"	LOW MOUNT	ALL
GM (NARROW BODY)	01900205	6'-6"	FLAT	ALL
GM (NARROW BODY)	01900205	7'-0"	FLAT	ALL
GM (NARROW BODY)	01900205	7'-0"	LOW MOUNT	ALL
Truck Body				
FORD	01900513	7'-0"	LOW MOUNT	1991 & BEFORE
FORD	01900513	7'-0"	FLAT	1991 & BEFORE
FORD	01900521	7'-6"	LOW MOUNT	1991 & BEFORE
FORD	01900521	7'-6"	FLAT	1991 & BEFORE
GM	01900523	7'-0"	LOW MOUNT	ALL
GM	01900523	7'-0"	FLAT	ALL
Utilimate				
FORD	01900533	81"	LOW MOUNT	1991 & BEFORE
FORD	01900665	73", 81" & 85"	LOW MOUNT	1992 & AFTER
Dynamate				
FORD	01900513	7'-0"	LOW MOUNT	1991 & BEFORE
FORD	01900513	7'-0"	FLAT	1991 & BEFORE
FORD	01900521	7'-6"	LOW MOUNT	1991 & BEFORE
FORD	01900521	7'-6"	FLAT	1991 & BEFORE
GM	01900523	7'-0"	LOW MOUNT	ALL
GM	01900523	7'-0"	FLAT	ALL

59260003—Laminated Roof Metal

Appendix 59260003: Laminated PDV Roof Metal		
59260003	ROOF METAL LAM.145.75"	12'
59260007	ROOF METAL LAM.165.75"	14'
59260008	ROOF METAL LAM. 209.5" C/O	14'
59260009	ROOF METAL LAM.177.75"	15'
59260010	ROOF METAL LAM.221.5" C/O	15'
59260019	ROOF LAMIN 10' RAD FW	110.25
59260020	ROOF LAMIN 10' RAD C/O FW	153.25
59260021	ROOF LAMIN 12' RAD FRT	134.25 FW
59260023	ROOF LAMIN 14' RAD FRT	153.25 FW
59260024	ROOF LAMIN 14' RAD C/O	197.25 FW
59260025	ROOF LAMIN 15' RAD FRT	165.25 FW
59260026	ROOF LAMIN 15' RAD C/O	209.25 FW
59260027	ROOF LAMIN 10' RAD NB	110.25 FW
59260028	ROOF LAMIN 10' RAD C/O NB	153.25 FW
59260059	ROOF METAL LAM	16'
59260081	ROOF METAL ASY 12'SQ FRT NB FW	



A

Address

National Highway Traffic Safety
Administration 12

U.S. Department of Transportation
12

Utilimaster

Customer service 13

Parts department 9

Publications department 3

Warranty department 11

Aerocap 48, 70

Aluminum

Front wall 52

Sidewalls 42

Appendixes 7, 70

B

Body serial number 8

BSNR 7

Bulkhead 52. *See also* Mid-ship wall

Bumpers 18

C

Cabover 68

Cargo floor 22, 24

Cargo options 62, 64

Chart 7. *See also* Appendixes

Customer service 9, 11, 13

D

Door, hardware 13, 34, 36

Door, rear 31, 32, 38

DSNR 7

E

Electrical components 13

Electrical harnesses 58

Email 9, 11, 13

F

Federal Certification Label 8

Floor, cargo 22, 24

Forms 9, 11

Front assembly post 42

Front wall 52

G

Glossary of terms 13

H

Harnesses, electrical 58

Heater, auxiliary 66

I

Item numbers 6

L

Lights 18, 58. *See also* Utilimaster
Quick Reference Parts Guide

M

Mid-ship wall 54, 56

Mud flaps 13

N

Numbers

- Body serial 8
- Item 6
- Part 6
- Phone 9, 11, 12, 13
- Unit serial 8
- VIN 8
- Work order 8

P

Parts

- Guide 13
- Lists 14
- Numbers 6
- Order form 11
- Ordering 9
- Returns 9
- Parts guide 13
- Phone numbers 9, 11, 12, 13
- Post, front assembly 42

Q

Quick Reference Parts Guide 13

R

Rear

- Bumpers 18
- Roll-up door 38
- Structure 26, 28, 30
- Swing doors 32, 34, 36

Revision 3

Roof 48, 50, 70, 71

S

- Safety 12
- Serial number 8
- Service manual 13
- Sidewalls 42

U

- Unit serial number 8
- Utilimaster Body Service Manual 13
- Utilimaster Glossary of Terms 13
- Utilimaster Quick Reference Parts Guide 13

V

VIN 8

W

Walls

- Front 52
- Mid-ship 54, 56
- Rear 26, 28, 30
- Side 42
- Skirt 46
- Warranty claims 11
- Web site 3, 9, 11, 13
- Wiring. See Electrical harnesses
- Wiring schematics 13
- Work order number 8

Z

Z-Post, Sidewalls 42



Part Number: 03102389-PY81EN

©Utilimaster Corporation, 65906 State Road 19, P.O. Box 585, Wakarusa, Indiana, 46573-0585, USA
