



Body Wiring Manual



1997–2002 Aeromaster
on Ford Chassis

Read First: Top Tips on Using This Online Manual

Browse pages with Bookmarks (hyperlinks) or Thumbnails

Bookmarks, at the left of the screen, are hyperlinks to document pages. From any page in this document, you can use bookmarks to jump to any section heading.

To jump to a topic by using its bookmark, point to the bookmark name, and when the arrow becomes a pointing hand, click on the name. If a triangle (or + sign) appears to the left of the bookmark, click the triangle (or + sign) to show or hide subordinate bookmarks.




Thumbnails are visual icons of the actual pages. After selecting the thumbnail view button (Acrobat Reader ver. 3.0) or tab (ver. 4.0/5.0; “Page” tab in 6.0), you can quickly browse for parts sections just by the “look” of the page. Click on the appropriate thumbnail to view that page.



Use the Zoom and Fit tools for magnification of page sections

 Select the Zoom tool. (In ver. 4.0 and later, when the Hand tool is selected, you can temporarily change to the Zoom tool by holding down the Ctrl key and the space bar at the same time.) Click and drag to draw a rectangle around the area you want to magnify.



To return to an overview, you can click on one of the following buttons:

- The Fit Page button scales the *entire* page to display within the main window.
- The Fit Width button scales the page *width* to display within the main window.



Find parts or procedures with the Find tool

Use the Find tool to search for a fragment of a word, a complete word, or multiple words in the active document. To **find** a word (e.g., a part name):



1. Click the Find tool.
2. In the Find What text box, enter the text to be found and click Find. When the program finds the text, the Find dialog box closes and the page containing the text is displayed with the text highlighted.
3. To find the **next occurrence** of the word, press F3, press Ctrl + G, or reopen the Find dialog box and click Find Again.

Revision Control

Revision A

December 2004

The latest updates and other information about parts and service will be available for viewing and downloading at www.utilimaster.com.

Important Notices

©2004, Utilimaster.®

Printed in U.S.A.

Title: *1997–2002 Aeromaster on Ford Chassis—Body Wiring Manual*

Utilimaster Corporation attempts to provide information that is accurate, complete, and useful. All information contained in this manual is based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice. Should you find inadequacies in the text, please send your comments to the following address:

Utilimaster
Attn: Designer of Technical Publications
65906 State Road 19, P.O. Box 585
Wakarusa, Indiana, 46573-0585, U.S.A.

This material is confidential and the property of Utilimaster. It is shared with your company for the sole purpose of helping you with the operation of the described equipment.


Utilimaster makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Utilimaster shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Utilimaster expressly disclaims all responsibility and liability for the installation, use, performance, maintenance, and support of third-party products. Customers are advised to make their independent evaluation of such products.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Utilimaster.

Utilimaster® and Aeromaster® are registered trademarks of Utilimaster Corporation. All other products or name brands mentioned in this document are trademarks of their respective owners.

Browse the award-winning web site www.utilimaster.com for more information about Utilimaster and its products.

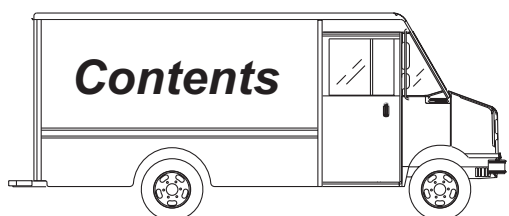

<i>Revision Control</i>	<i>3</i>
<i>Important Notices</i>	<i>3</i>
<i>Introduction</i>	<i>6</i>
<i>Finding Information</i>	<i>6</i>
<i>More Information</i>	<i>7</i>
<i>Download Files</i>	<i>7</i>
<i>Utilimaster Quick Reference Parts Guide</i>	<i>7</i>
<i>Utilimaster Detailed Parts, Service, and Wiring Manuals</i>	<i>7</i>
<i>Utilimaster Glossary of Terms</i>	<i>7</i>
<i>Contact Utilimaster</i>	<i>7</i>
<i>VIN, Body Serial Number, and Work Order Numbers</i>	<i>8</i>
<i>Safety Considerations—Notes, Cautions, and Warnings</i>	<i>9</i>
<i>Reporting Safety Defects</i>	<i>10</i>
<i>United States Only</i>	<i>10</i>
<i>Canada Only</i>	<i>10</i>
<i>Battery</i>	<i>10</i>
<i>Access</i>	<i>10</i>
<i>Disconnection</i>	<i>11</i>
<i>Removal</i>	<i>11</i>
<i>Installation</i>	<i>11</i>
<i>Wiring Diagrams</i>	<i>12</i>
<i>1—Wire Color Code and Symbol Key</i>	<i>12</i>
<i>2—Circuit Number Identification</i>	<i>13</i>
<i>3—Connectors</i>	<i>14</i>
<i>4—Harness Layout (Connector Locations)</i>	<i>19</i>
<i>5—Power Distribution</i>	<i>20</i>
<i>6—Grounding System</i>	<i>23</i>
<i>7—Switches</i>	<i>24</i>

8—Cab Dome Light	25
9—Cargo Lamps	26
Standard	26
Switch on Dash	27
Three-Way Switch	28
10—Wiper System	29
11—Heater Only System	30
Cable Controls	30
Electronic Controls	31
12—HVAC System	32
Cable Controls	32
Electronic Controls	33
13—Auxiliary Heater	34
14—Panel Lights (HVAC Control Panel)	35
15—Forward Light Wiring	36
Without Daytime Running Lights	36
Daytime Running Lights (Domestic)	37
Daytime Running Lights (Canadian)	38
16—Rear Light Wiring	39
Standard	39
Routed through Interior	40
Split Taillights	41
Split Taillights Routed through Interior	42
17—Supplemental High Mount Stop Lamp (SHMSL)	43
18—Clearance Lights	44
19—Roof Wiring	45
20—Power Vent	46
21—Stereo System	47
22—Accessory Outlet (Cigarette Lighter)	48
23—Dash Fan	49
24—Door Ajar System	50
25—Heated Mirrors	51
26—Spotlight or Strobe Light	52
Index	53

Introduction

This manual (P/N 03102245-WY97EN) illustrates electrical wiring diagrams for **Aeromaster® walk-in bodies on the Ford “strip” chassis (Model Years 1997 to 2002)**. For the Ford E-250 or E-350 chassis, the majority of information is interchangeable by design, and the two chassis are both referred to as the Utilimaster Model Number 36. For other vehicles, see the Technical Manuals page on the Utilimaster web site (www.utilimaster.com).

This manual covers only those components manufactured by or installed by Utilimaster® Corporation. Items such as chassis and drive train components or certain interior options are covered by separate manufacturer-supplied information. Not all options are included in this manual and some part numbers have changed from previous model years.

If your vehicle is equipped with a VACS system, supplementary information is in *Vehicle Access Controls System for Utilimaster Walk-In Vans Operation and Service Manual* (P/N 03102103). To order that manual, call 800-237-7806 (574-862-3219), fax 574-862-7637, or email CustSvc@Utilimaster.com.

All information, specifications, and illustrations contained in this manual are based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice.



NOTE: *These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.*

Finding Information

The Contents lists *sections* (and their respective *pages*) containing wiring diagrams and other information. The Index lists *pages* on which the indexed topics can be found.

Sheet numbers indicated by last two digits in the drawing number (lower right-hand corner of the drawing when viewed at the normal viewing angle) refer to the engineering drawing page numbers but are *not* in numerical order. These numbers are *not* meant to match the manual section or page numbers.

NOTE: *If you are using the Adobe Acrobat version of this document printing out pages for detailed study is recommended because of the 90° rotation of the diagrams. Printing individual pages or a range of pages from the Acrobat Reader is easily accomplished by selecting File, Print, and then the desired print range.*

More Information

Download Files

Many support documents, including those described here, are downloadable (as Adobe® Acrobat® PDF files) from our award-winning web site at www.utilimaster.com. Click on the **Technical Manuals** button, to access the download page. To view the files you must have the Adobe Acrobat Reader version 4.0 or higher installed on your computer. Acrobat readers are available free for all leading computer operating systems on the Adobe web site (www.adobe.com).

Utilimaster Quick Reference Parts Guide

Easily find commonly replaced parts for most Utilimaster vehicles in the *Utilimaster Quick Reference Parts Guide*. This illustrated document includes part numbers for door hardware, electrical components, mirrors, vents, mud flaps, roll-up door parts, and many other parts. It also includes sealants and repair kits.

Utilimaster Detailed Parts, Service, and Wiring Manuals

Find parts, routine maintenance procedures, troubleshooting, proper adjustment methods, vehicle repair, aftermarket upgrades, and much more in the Aeromaster parts, service, and wiring manuals.

Utilimaster Glossary of Terms




If you are not familiar with some of the terminology used in this manual, you can find many Utilimaster and industry associated terms and definitions in the *Utilimaster Glossary of Terms—Body Information Guide*.

Contact Utilimaster

Browse our site for more information about Utilimaster and its products or contact Utilimaster Customer Service by using one of the following methods:

- Call 800-237-7806 (or 574-862-3219).
- Fax to 574-862-7637.
- Email to CustSvc@Utilimaster.com.
- Mail to the following address:

Utilimaster
Attn: Customer Service Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

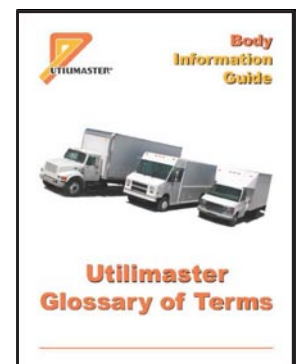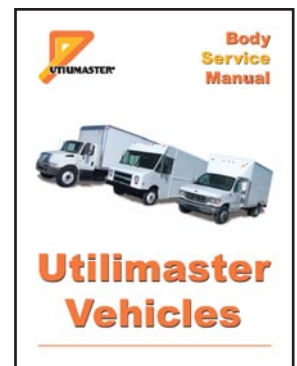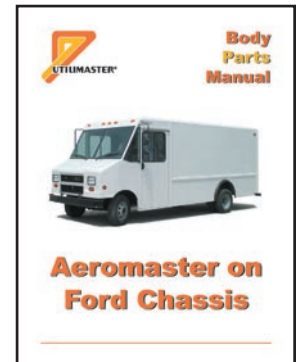

VIN, Body Serial Number, and Work Order Numbers

MANUFACTURED BY:		GVWR 5216 KG (11500 LB)		THIS VEHICLE CONFORMS TO ALL APPLICABLE FEDERAL MOTOR SAFETY STANDARDS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN.	
65906 STATE ROAD 19 P.O. BOX 585 WAKARUSA, INDIANA 46573-0585		UTILIMASTER CORPORATION			
DATE OF MANUFACTURE: APRIL 2000		INTERM (		N/A KG N/A N/A	
INCOMPLETE VEHICLE MANUFACTURED BY:		(		N/A LB)	
DATE INC. VEH. MFD.: FEBRUARY 2000		REAR		3538 KG LT225/75R16E 16X6K	
		(		7800 LB)	
				COLD INFLATION PRESSURE	
				448 KPA	
				(65 PSI)	
				N/A KPA	
				(N/A PSI)	
				448 KPA	
				(65 PSI)	
				VEHICLE ID. NO.:	
				XXXXXXXXXXXXXXXXXXXX	
				VEHICLE TYPE: TRUCK	
				UNIT SERIAL NO.:	
				XXXXXXXXXXXXXXXXXXXX	
				WXXXXXXX	

LA-5
Federal Certification Label


The 15-digit **Utilimaster Body (or Unit) Serial Number** is recorded on the **Federal Certification Label**. This label is a plastic decal (about 11" long and 2" high) that contains a variety of manufacturing information (including the VIN). This label is found between the quarter window and door. (See Illustrations LA-5 and LA-15.)

The 17-digit chassis **Vehicle Identification Number (VIN)** is the legal identifier for this vehicle and is the number recorded in the license plate registration. The VIN appears on a small metal plate on the dash on the driver's side. You can read the VIN if you look through the quarter-panel window. (See Illustration LA-10.) The number is also recorded on the Federal Certification Label. (See Illustration LA-5.)

A 7-digit (including a leading W) **Work Order Number** appears below the Unit Serial Number on the Federal Certification Label. (See Illustration LA-5.)



LA-10
Vehicle Identification Number

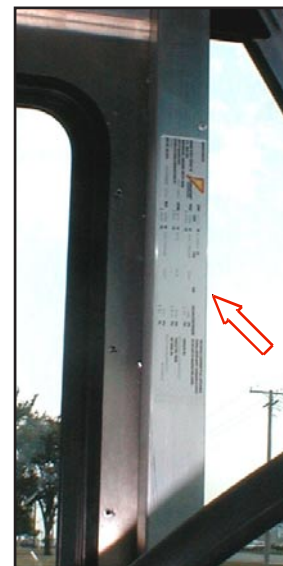

LA-15
Federal Certification Label and VIN Plate on Door Post

Safety Considerations—Notes, Cautions, and Warnings



WARNING: Connecting unauthorized devices to the vehicle's wiring can potentially cause vehicle malfunction, damage, fire, personal injury, and/or voiding of the warranty. Contact Utilimaster before connecting any devices to the vehicle's wiring other than plugging into a supplied accessory outlet (cigarette lighter).

As you read through the procedures, you will come across NOTES, CAUTIONS, and WARNINGS. Each one is there for a specific purpose.

- **NOTES** give you additional information that will help you to complete the procedure.
- **CAUTIONS** warn you against making an error that could damage the vehicle.
- **WARNINGS** remind you to be careful when there is a risk of personal injury.



Below are some basic WARNINGS that you should heed when you work on the vehicle's body. They are not all inclusive, however, and common sense must be used when servicing vehicles.

- Always wear safety glasses and wear other proper protective equipment (gloves, steel-toed shoes, face shields, knee pads, hearing protection) as appropriate to the process.
- Use safety stands and/or wheel blocks whenever you are underneath the vehicle.
- Put the transmission in Park and set the parking brake before working on the vehicle.
- Be sure that the ignition switch is Off unless otherwise required by the procedure.
- Operate engines only in well-ventilated areas.
- Keep yourself and your clothing away from the radiator fan, belts, and any moving parts when the engine is running.
- Keep hands and other objects clear of the radiator fan blades. The electric fan can start at any time even though the ignition is Off. Disconnect the fan when working under the hood.
- Avoid contact with hot metal parts, such as the radiator or exhaust system.
- Do NOT smoke while working on the vehicle.
- Always remove rings, watches, hanging jewelry, and loose clothing before working on a vehicle. Tie long hair securely behind your head.
- Become familiar with all warning labels.
- Always maintain firm footing and control of tools.
- Use only tools that are in good condition, and use them only in the appropriate manner.
- Get help when needed to avoid injuries caused by overexertion.
- Always be aware of the location of other people and potential trip hazards (e.g., air lines, electrical cords, tools).
- Utilimaster recommends that a licensed automotive air-conditioning specialist work on the vehicle's air-conditioning (HVAC) system.
- Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose, and throat. To remove R-134a from the A/C system use service equipment certified to meet the requirements of SAE J2210 (R-134a recycling equipment). If accidental system discharge occurs, ventilate work area **before** resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.

Reporting Safety Defects

United States Only

If you believe that your vehicle has a defect that could cause a crash, injury, or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA), in addition to notifying Utilimaster.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Utilimaster.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at **800-424-9393** (or **202-366-0123** in the Washington, D.C., area) or write to:

NHTSA

U.S. Department of Transportation

400 Seventh Street

Washington, DC 20590

You can also obtain other information about motor vehicle safety from the Hotline.

Canada Only

If you believe that your Canadian-registered vehicle has a defect that could cause a crash, injury, or death, you should immediately inform Transport Canada, in addition to notifying Utilimaster.

To contact Transport Canada, call **800-333-0510** (or **613-993-9851** in the Ottawa region) or write to:

Transport Canada

Motor Vehicle Defect Investigation

PO Box 8880

Ottawa, Ontario, K1G 3J2

Battery



WARNING: To avoid accidental shock or damage to the vehicle, disconnect the battery before servicing an electrical component. Check your chassis-supplied operation or service information for specific recommendations.



WARNING: Always remove the (Black) Negative cable first and connect it last.

Access

NOTE: The batteries on most Ford Aeromasters are located under the hood. (See Illustration BA-5.) Otherwise see the Chassis Service Manual.

NOTE: Some hoods have a safety locking strut. (See Illustration BA-5.) Do NOT close the hood without first pressing the orange button on the passenger side gas strut to disengage the safety locking mechanism if equipped. Failure to do so could result in damage to the hood.




CAUTION: Do NOT close the hood without first pressing the orange button on the passenger side gas strut to disengage the safety locking mechanism if equipped. Failure to do so could result in damage to the hood.

NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.

Disconnection

1. Make sure the ignition switch is Off.
2. You **may** need to plug a memory saver (with 9-volt battery) into the accessory outlet on the dash. (See Illustration BA–20.) **Check your chassis-supplied operation or service information for specific recommendations.**
3. Disconnect the **Negative (Black)** battery cable(s) **first**. (See Illustration BA–25.)
4. Tuck the battery cable away from the terminal to prevent accidental contact.
5. When servicing the vehicle is finished, reconnect the cable.

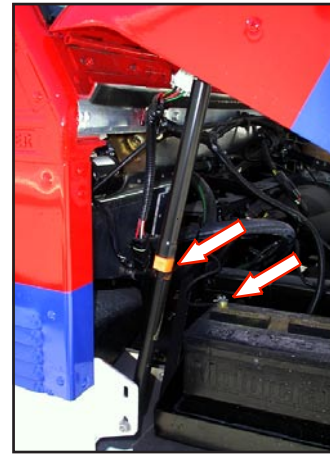

*Illustration BA–5
Battery Under the Hood and Optional Locking Strut*


Removal

1. Disconnect battery. (See the Disconnection Section.)
2. Remove the Positive battery cable(s).
3. Remove the battery hold-downs.
4. Note the location of the posts and remove the battery from the vehicle.


Installation

1. Install the battery in the battery tray—in **the same orientation**.
2. Secure the battery hold-downs.
3. Connect the battery cables, Negative last.

NOTE: Remember to fasten the hood or access panel.

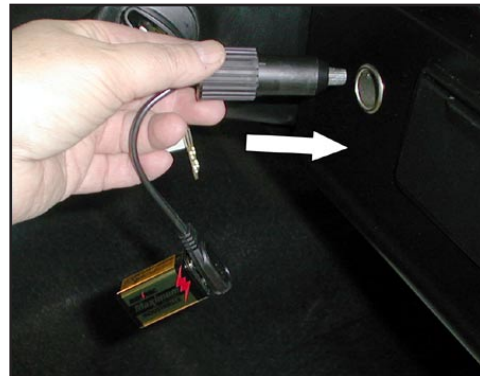


*Illustration BA–10
Plugging in a Memory Saver*

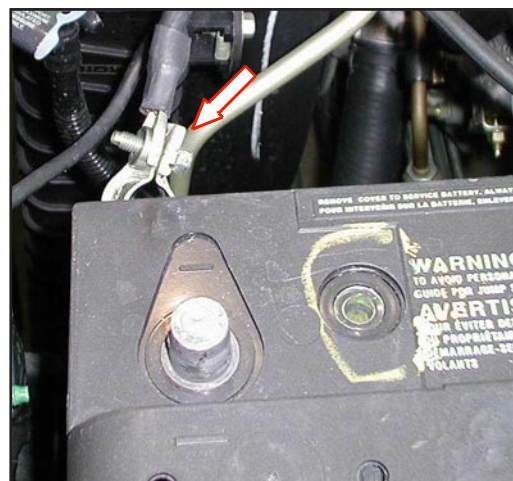

*Illustration BA–15
Negative (Black) Cable Disconnected and Tucked Away*

Wiring Diagrams

1—Wire Color Code and Symbol Key

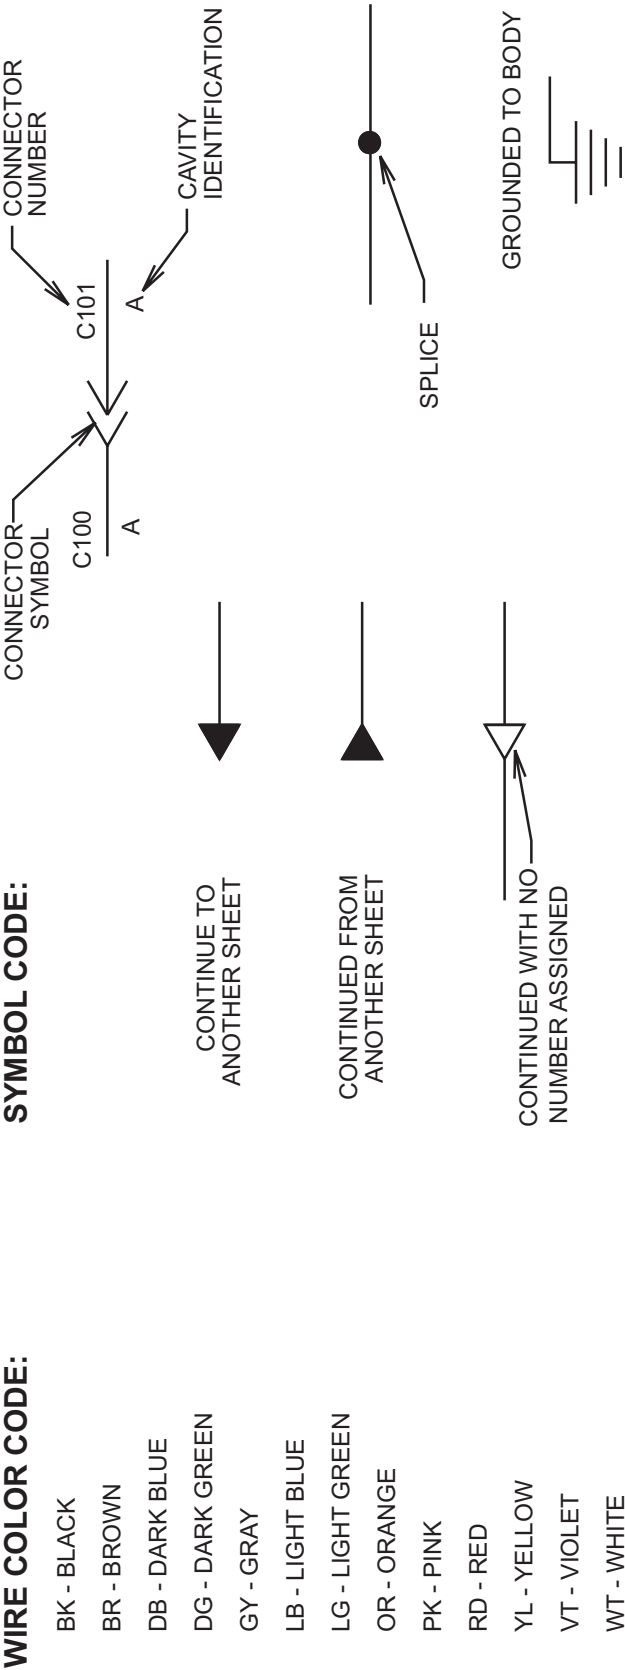

WIRE GAUGE CHART:

18 - 18 GA
16 - 16 GA
14 - 14 GA
12 - 12 GA

CIRCUIT AND CONNECTOR CODE:

500 BK 14

WIRE GAUGE SIZE
WIRE COLOR
CIRCUIT NUMBER

CONNECTOR NUMBER
C100
DESCRIPTION
COWL CONNECTOR
12020991
PART NUMBER

NOTES:

- 1) All connectors are shown in the **load (wire lead insertion)** position.
- 2) Special customer options may not be covered by these diagrams.
- 3) Wire colors on some optional equipment may vary from this document.

2—Circuit Number Identification


CIRC NO.	COLOR	DESCRIPTION
110	PINK W/ BLACK STRIPE	IGNITION POWER
120	ORANGE	WIPER POWER
150	RED	BATTERY POWER
200	DARK BLUE	DOMELIGHT
220	YELLOW	CARGO LIGHT
222	YELLOW W/ BLACK STRIPE	CARGO LIGHT 3-WAY
224	YELLOW W/ WHITE STRIPE	CARGO LIGHT 3-WAY
230	BROWN	RUNNING/TAILLIGHTS
232	DARK GREEN	RIGHT TURN/STOP
233	DARK GREEN	FRONT RIGHT TURN
234	RED	STOP ONLY LIGHTS
235	YELLOW	FRONT LEFT TURN
236	LIGHT GREEN	BACK UP LIGHTS
237	GRAY	UNIVERSAL TURN/STOP
238	YELLOW	LEFT TURN/STOP
240	LIGHT GRN W/ BK STRIPE	HEADLAMP LOW BEAM
241	LIGHT GRN W/ WT STRIPE	RT HEADLAMP LOW BEAM
242	RED W/ BLACK STRIPE	HEADLAMP HIGH BEAM
243	RED W/ WHITE STRIPE	RT HEADLAMP HIGH BEAM
280	LIGHT BLUE W/ RED STRIPE	ILLUMINATION
380	LIGHT BLUE	SECURITY CIRCUIT 1
381	VIOLET	SECURITY CIRCUIT 2
500	BLACK	GROUND
510	BLACK W/ WHITE STRIPE	WIPER MOTOR GROUND
530	BLACK	HVAC GROUND
540	BLACK	FORWARD LAMP GROUND
700	DARK BLUE W/ WT STRIPE	HVAC POWER
710	DARK GREEN	A/C SIGNAL
731	DARK BLUE	HVAC WATER VALVE
820	DARK GREEN	WIPER MOTOR LOW
830	RED	WIPER MOTOR HIGH
840	GRAY	WIPER MOTOR PARK
890	VIOLET	WIPER PUMP

Circuit ID - Diagram 58231268A Sheet 7


NOTE: *These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.*

3—Connectors


Standard

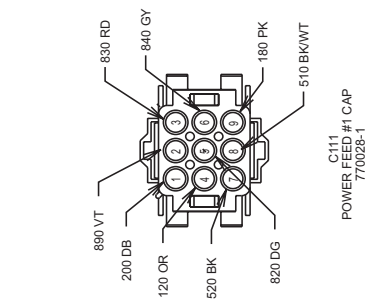


C111
POWER FEED #1 CAP
770028-1

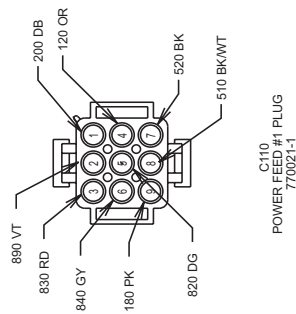


C110
POWER FEED #1 PLUG
770021-1

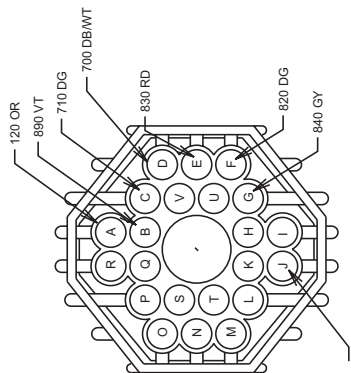


C101
COWL CONNECTOR
12020005

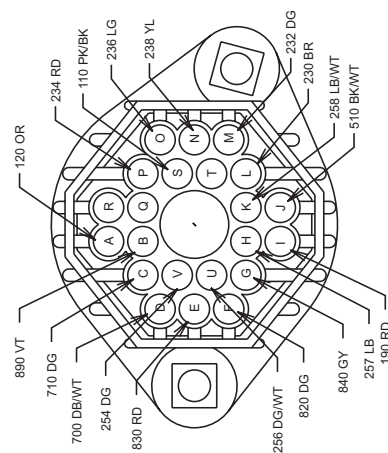


C100
GOWL CONNECTOR
12020891

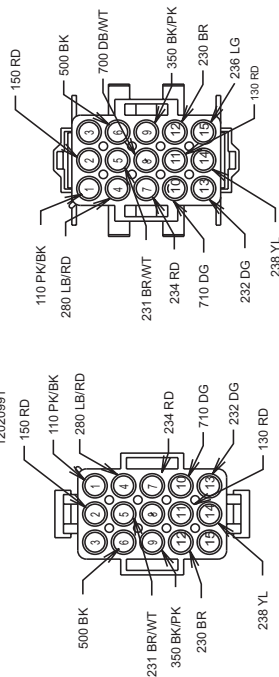


C112
POWER FEED #2 (PLUG)
770023-1

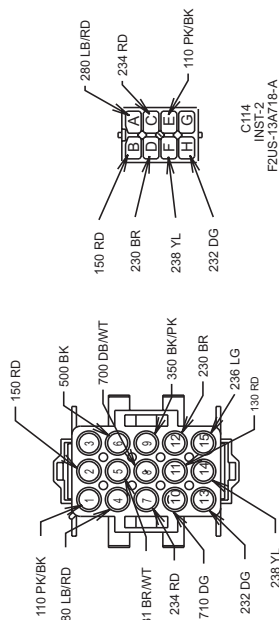


C113
POWER FEED #2 (CAP)
770030-1

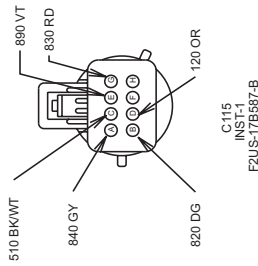


C115
INST-1
F2US-17B587-8

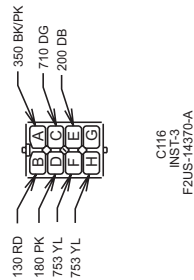


C116
INST-3
F2US-14370-A

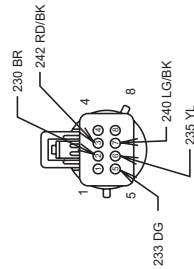


C200B
FORWARD LAMP FEED
EBEB-14A624-AYA
UNITS BUILT AFTER 04/28/98

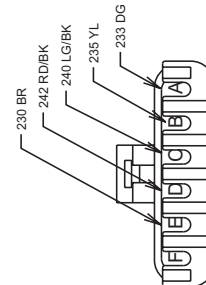


C200
FORWARD LAMP FEED
12015799
UNITS BUILT AFTER 03/31/97

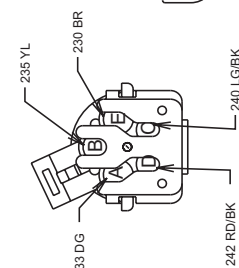

C200
FORWARD LAMP FEED
12034342
UNITS BUILT BEFORE 03/31/97

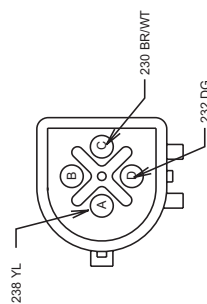

C118
FORD TAILLIGHT CONNECTOR
F2US-14A411-D
(BROWN CONNECTOR)

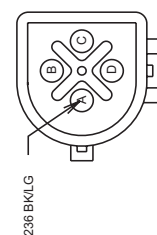


C117
FORD TAILLIGHT JUMPER
F2US-14A411-B
(ORANGE CONNECTOR)

WIRING DIAGRAM FORD
SHEET 2 OF 58231009b02



3—Connectors

Standard (continued)

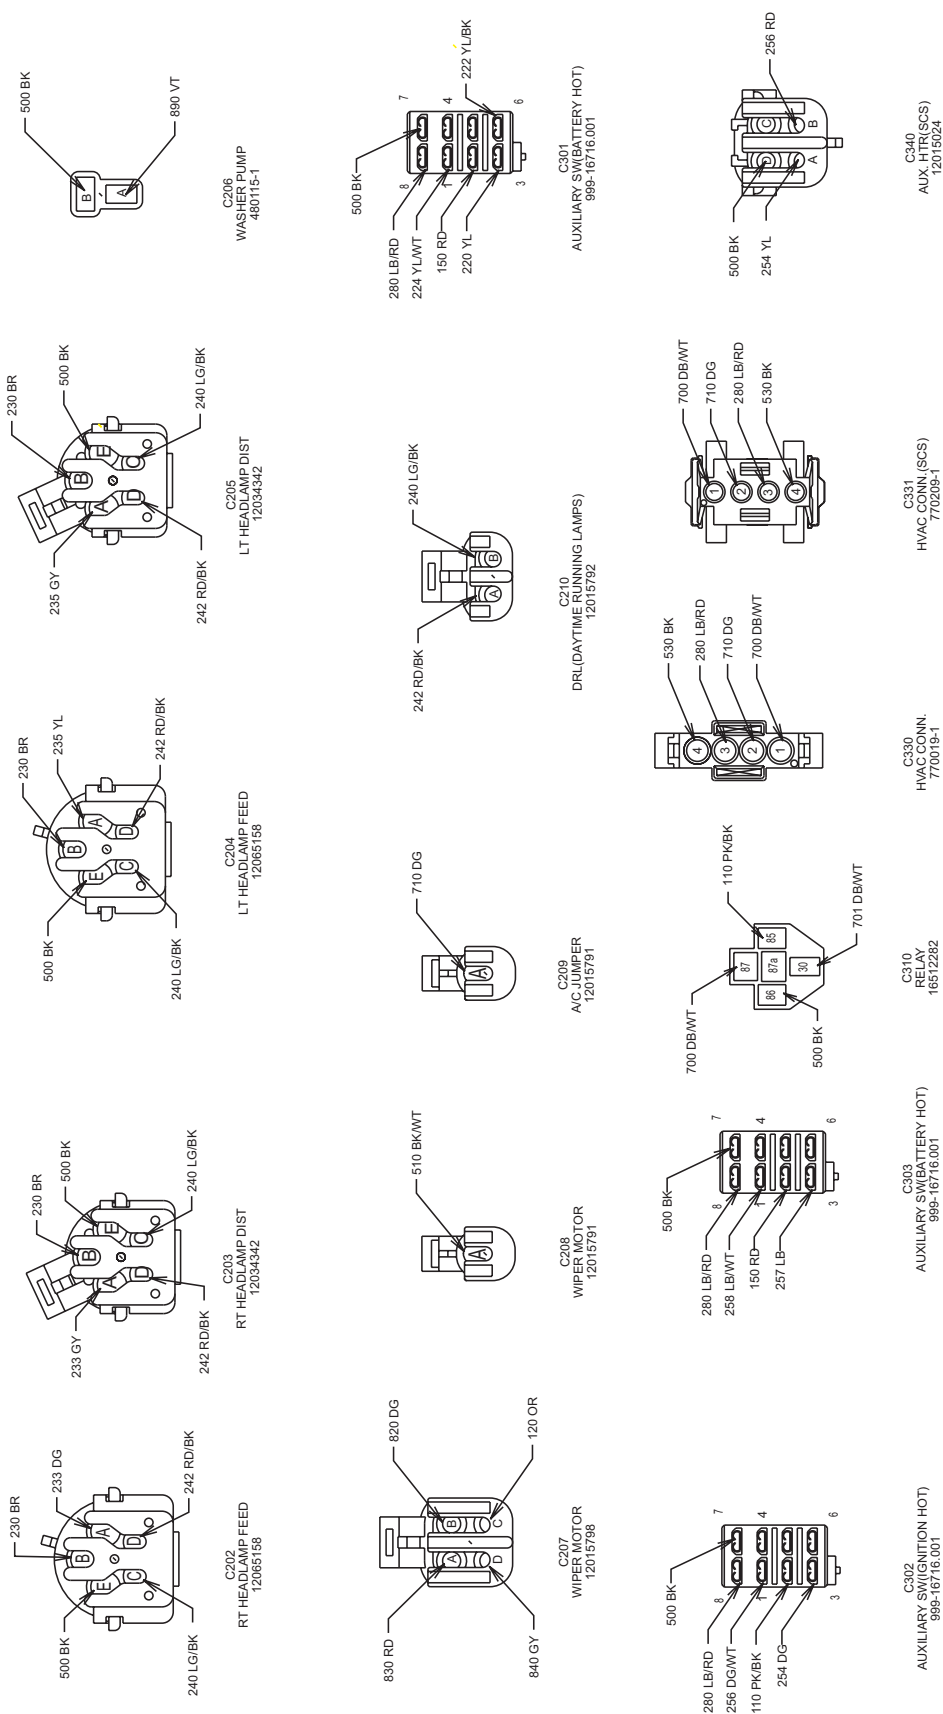


Connectors - Diagram 58231009b03

3—ConnectorsStandard (continued)

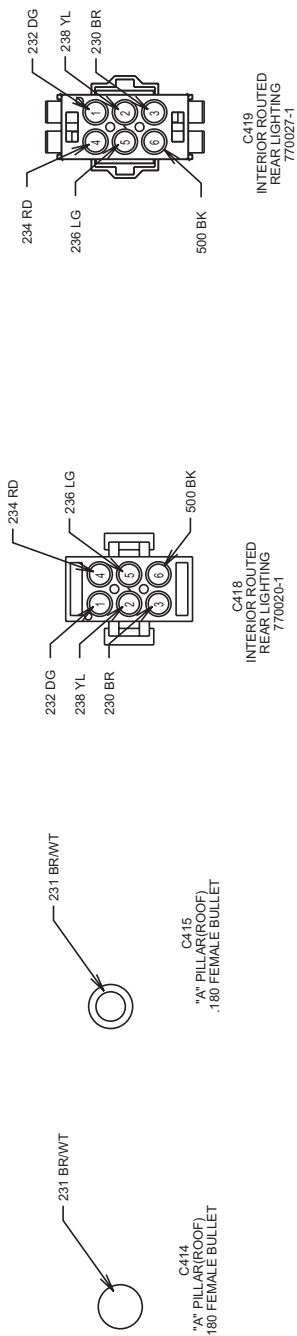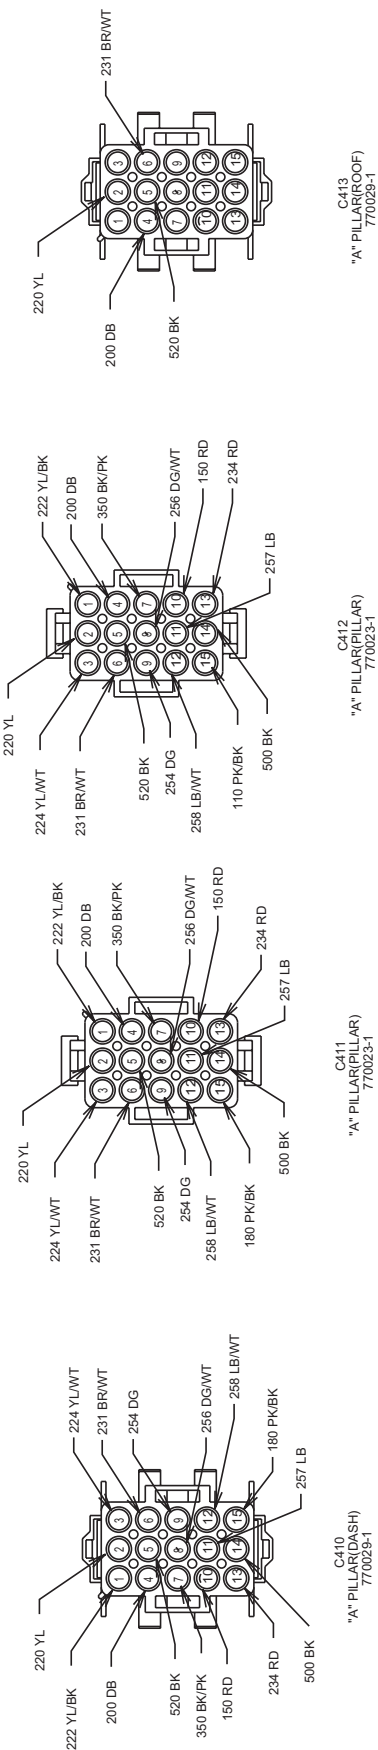


3—Connectors

 
Standard (continued)



C620
LICENCE PLATE LAMP
12010996

 


C621
LICENCE PLATE LAMP
12010996

 


C622
LICENCE PLATE LAMP
12010996




C610
REAR LAMP DIST.
12034342

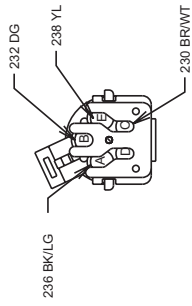


C611
REAR LAMP FEED
12065158

 


C623
LICENCE PLATE LAMP
12010996

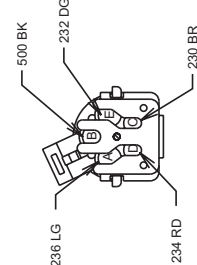


C631
RT REAR LAMP FEED
12034342

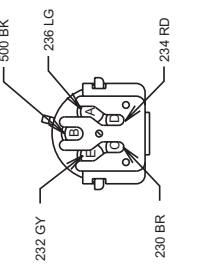


C632
RT REAR LAMP DIST
12065158

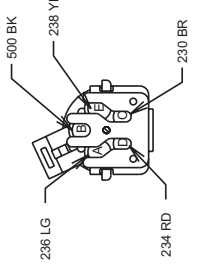


C633
LT REAR LAMP FEED
12034342

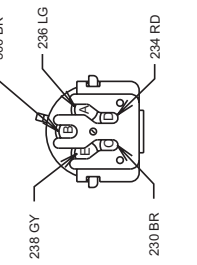


C634
LT REAR LAMP DIST
12065158

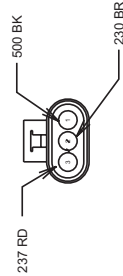


C635
RT STOP
282087-1

 

C635
RT BACK-UP LAMP
282087-1

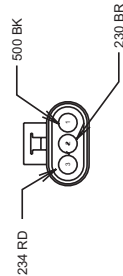


C637
LT STOP
282087-1

 


C639
LT BACK-UP LAMP
282087-1

3—Connectors


Standard (continued)

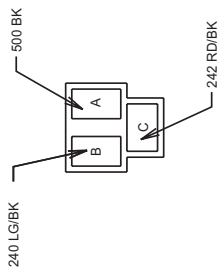


C710
RT RECT. INCAD. HDLP
12077384

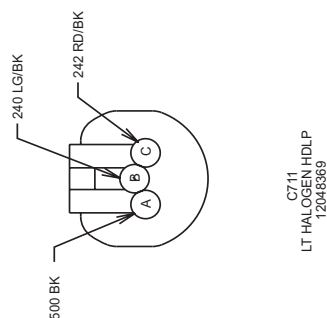


C711
LT HALOGEN HDLP
12048369

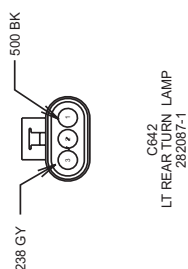


C642
LT REAR TURN LAMP
282087-1

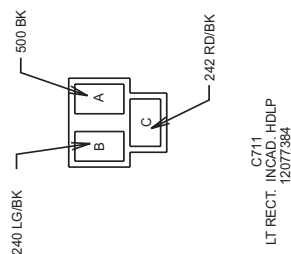


C711
LT RECT. INCAD. HDLP
12077384

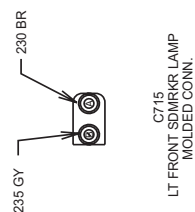


C715
LT FRONT SDRKR LAMP
MOLDED CONN.

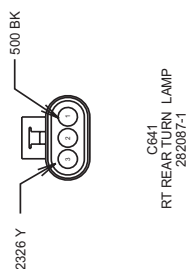


C641
RT REAR TURN LAMP
282087-1

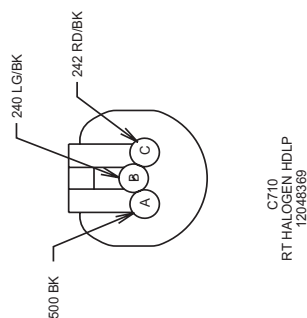


C710
RT HALOGEN HDLP
12048369

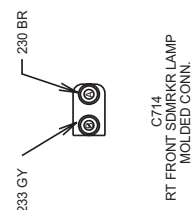

C714
RT FRONT SDRKR LAMP
MOLDED CONN.

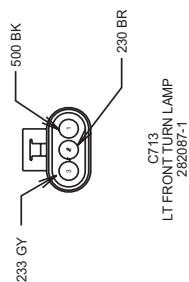


C713
LT FRONT TURN LAMP
282087-1

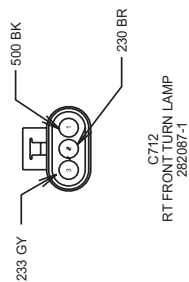

C712
RT FRONT TURN LAMP
282087-1


WIRING DIAGRAM FORD
SHEET 6 of 58231009x06

4—Harness Layout (Connector Locations)

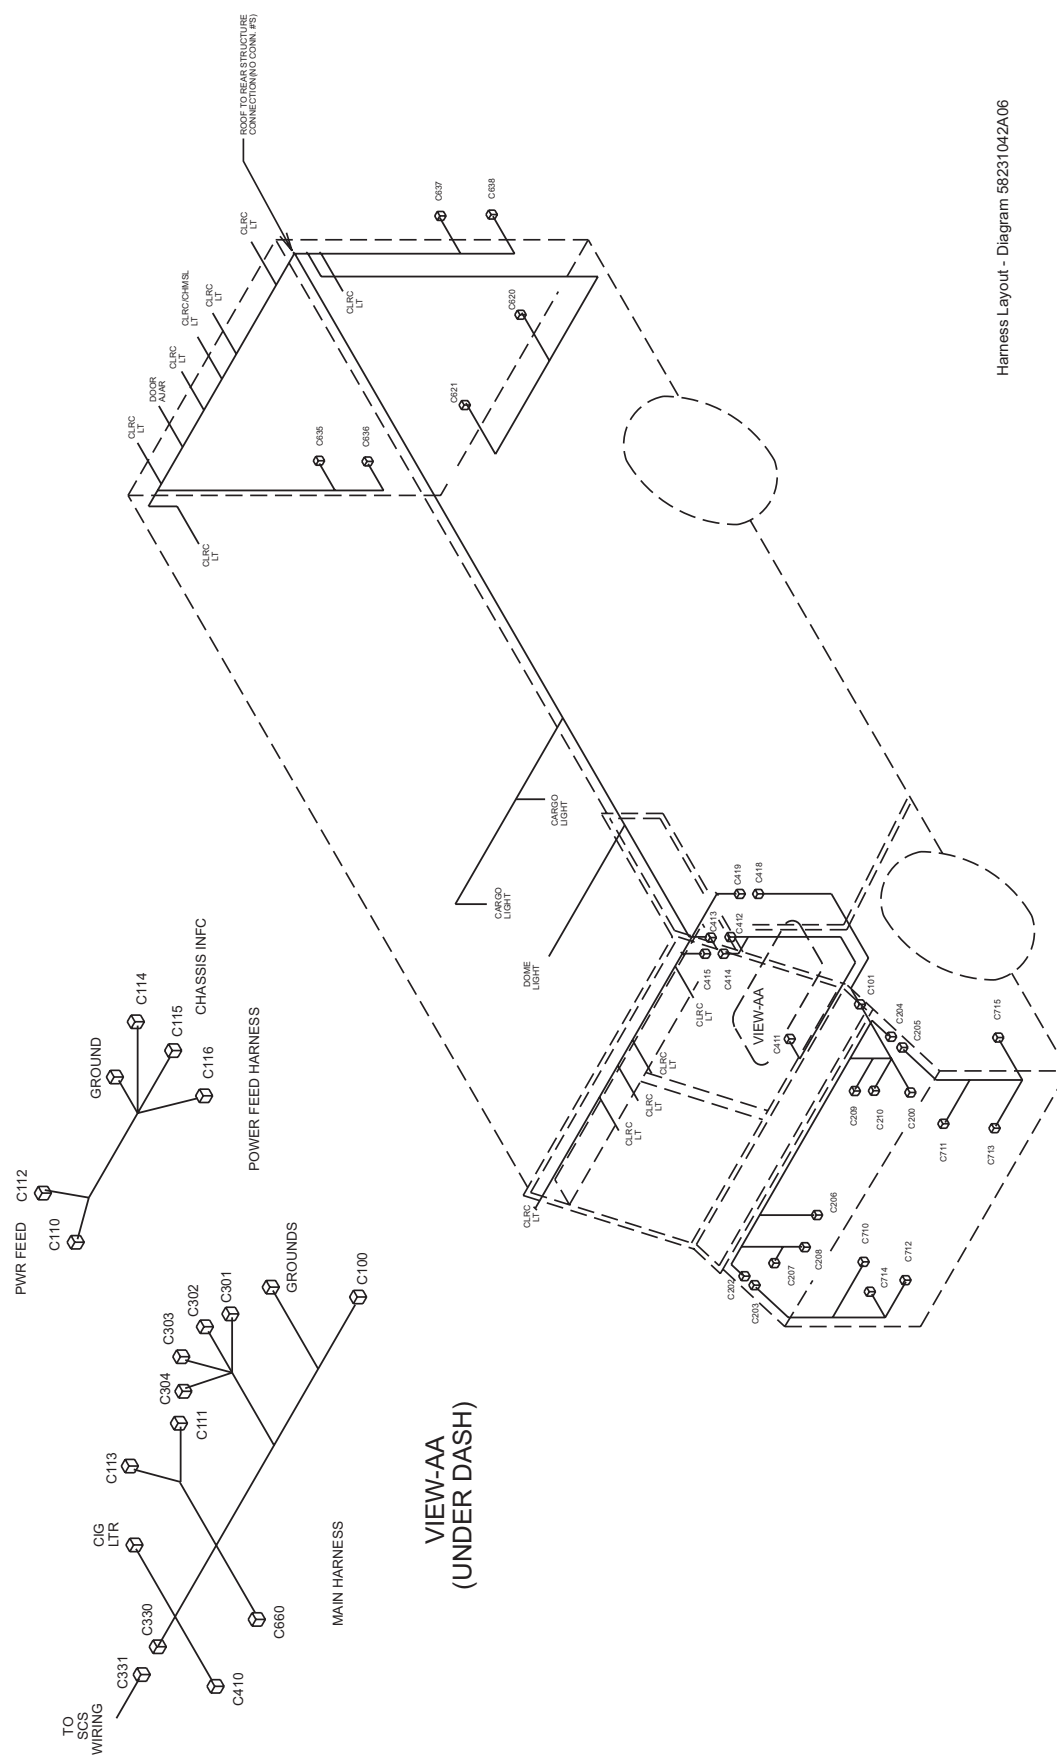


Harness Layout - Diagram 58231042A06

5—Power Distribution

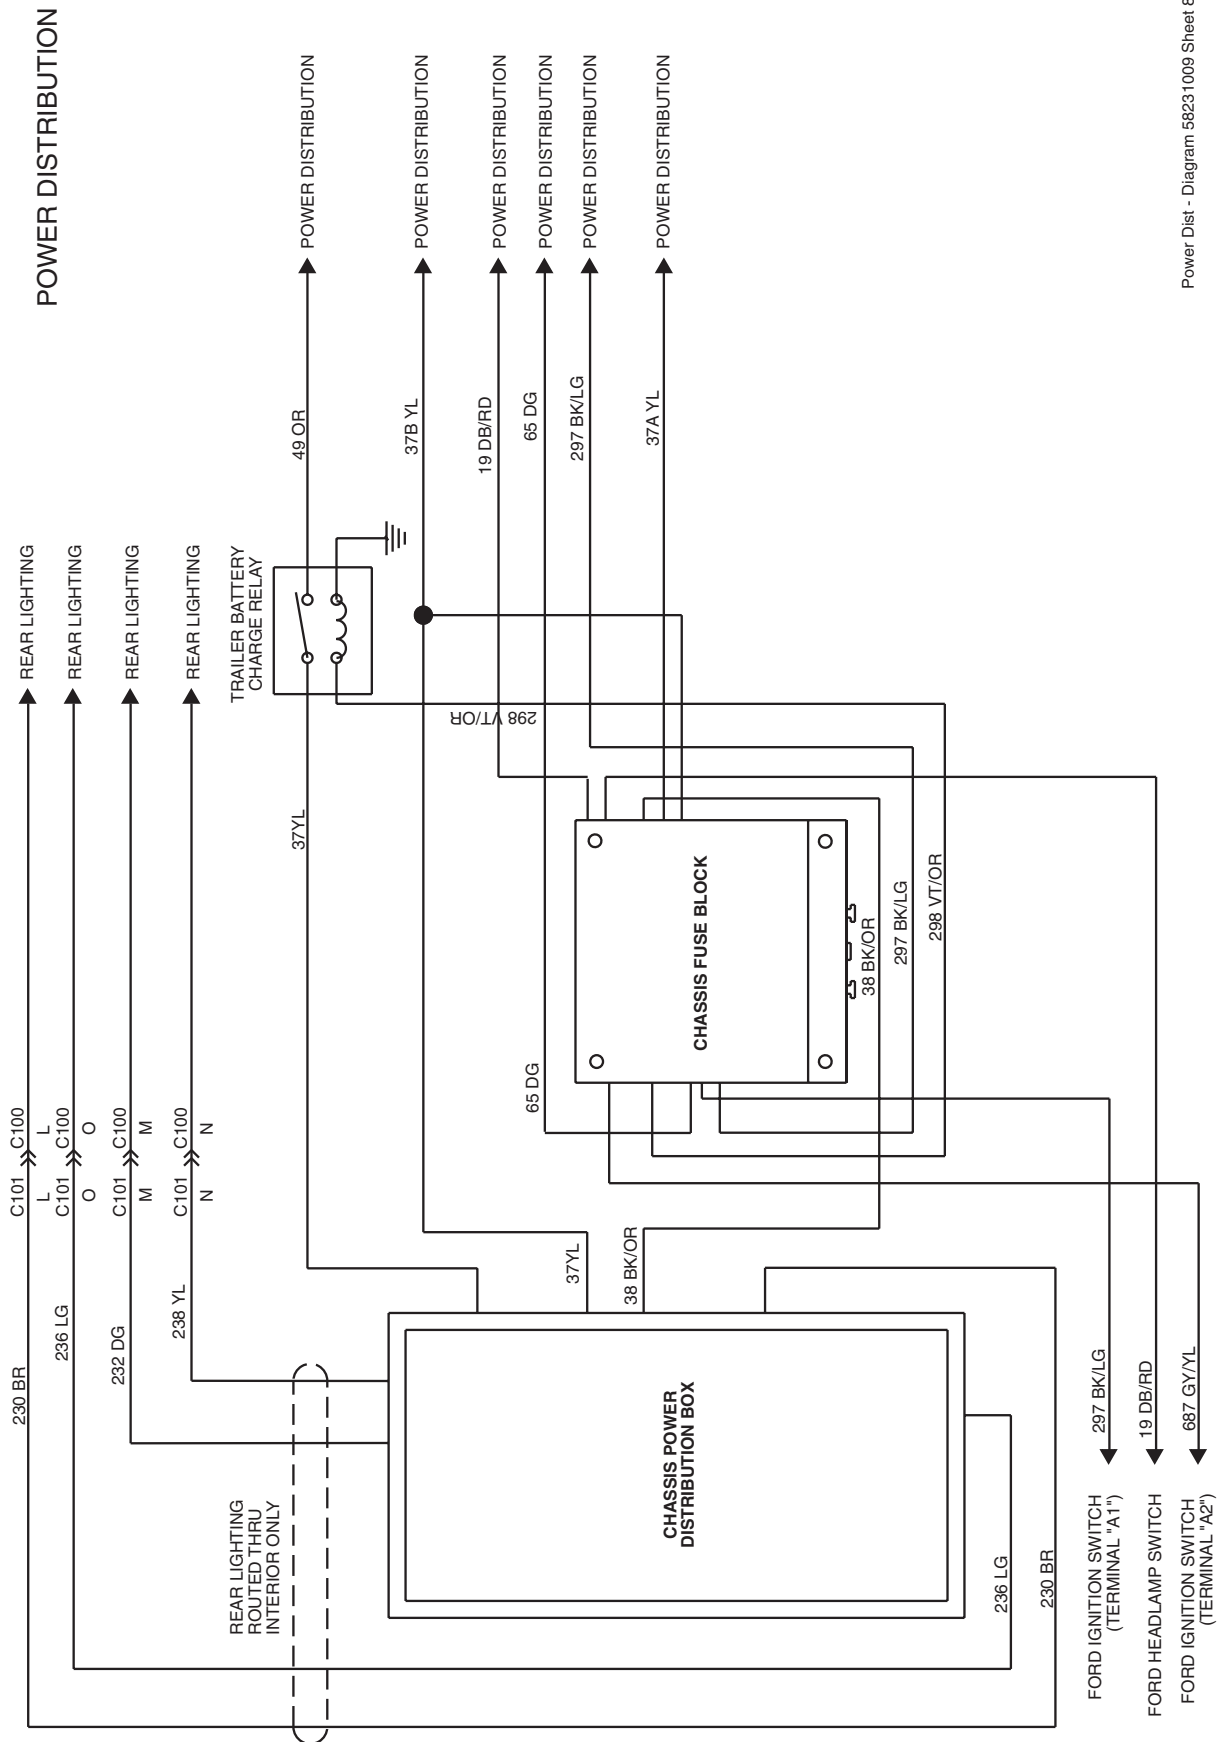

5—Power Distribution (continued)

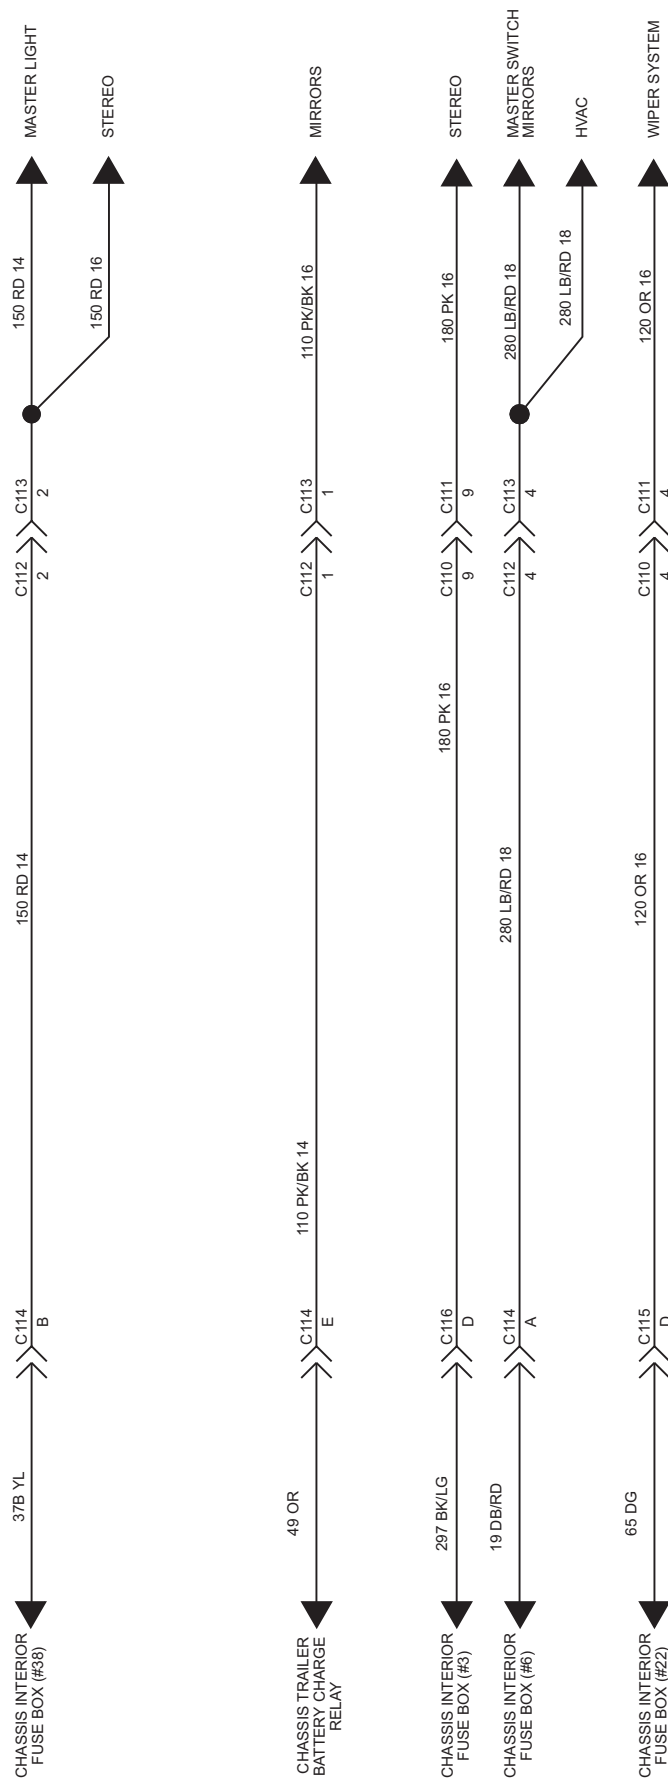


Pwr Dist Pg 2 - Diagram 58231009a09

(continued)


Wiring diagram for the 700 DB/WT 12 HVAC system. The diagram shows two main power paths. The top path starts from 'HOT AT RUN' (13-15A), goes through a 15A fuse, then a 30A fuse, and a 700 DB/WT 12 HVAC unit. The bottom path starts from 'EEC PIN 41' (BK/YL), goes through a 700 DB/WT 12 HVAC unit, then a 700 DB/WT 12 HVAC unit, and finally a 700 DB/WT 12 HVAC unit. The diagram includes labels for components like 'FORD BATTERY', 'BLOWER RELAY', 'SPICE LOCATED ON RIGHT SIDE OF ENGINE COMPARTMENT', and 'HVAC'. Wire colors and gauges are specified throughout the diagram.

6—Grounding System

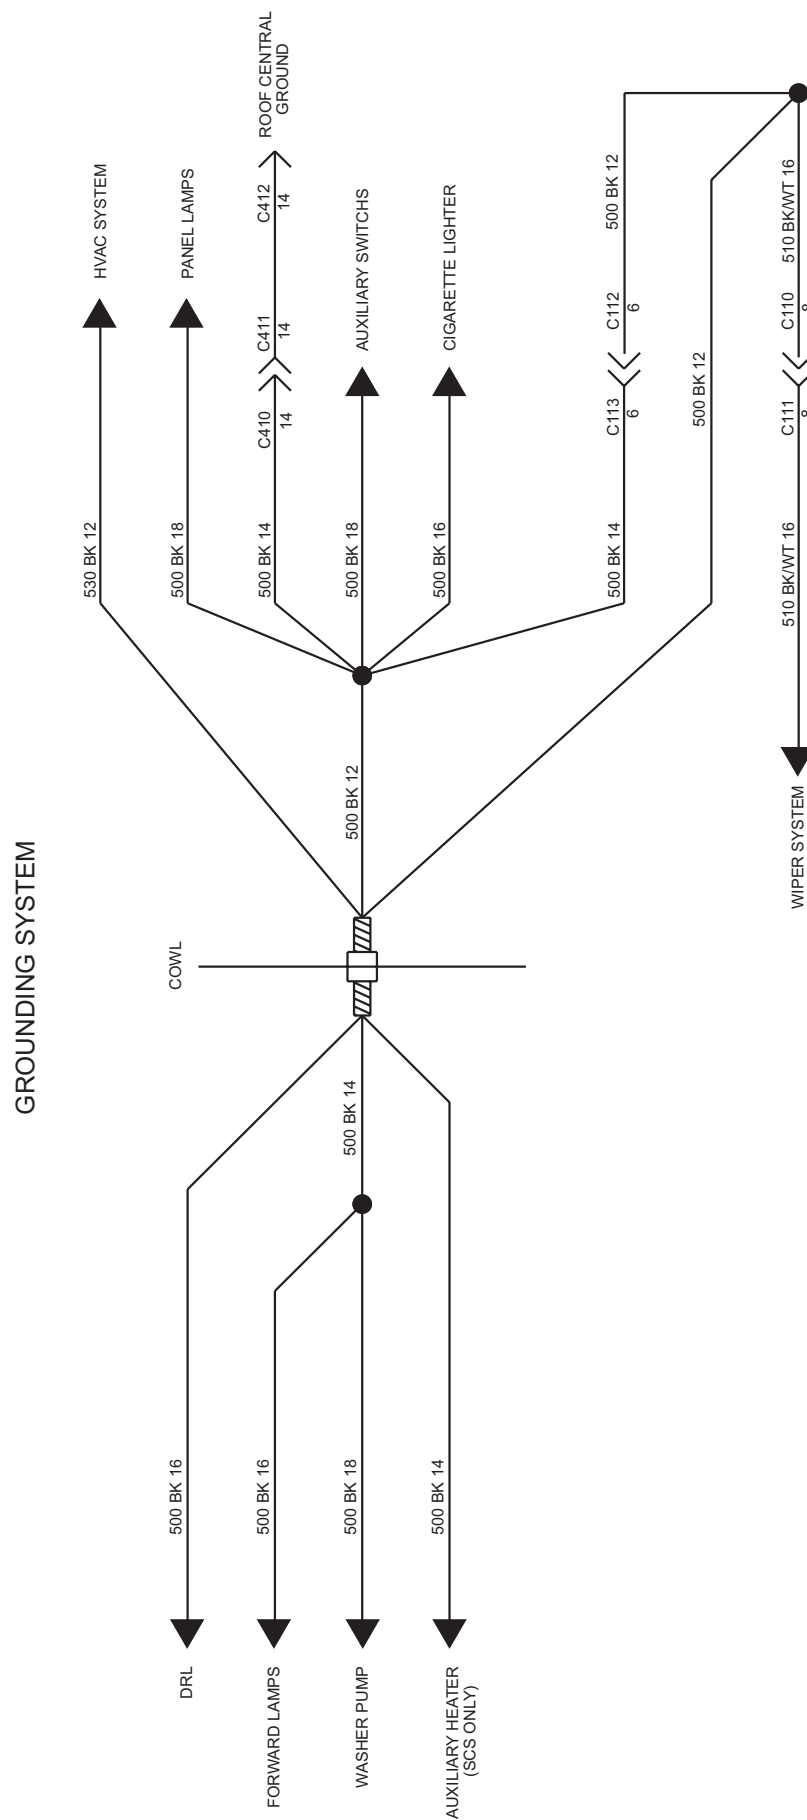


7—Switches

SWITCHES

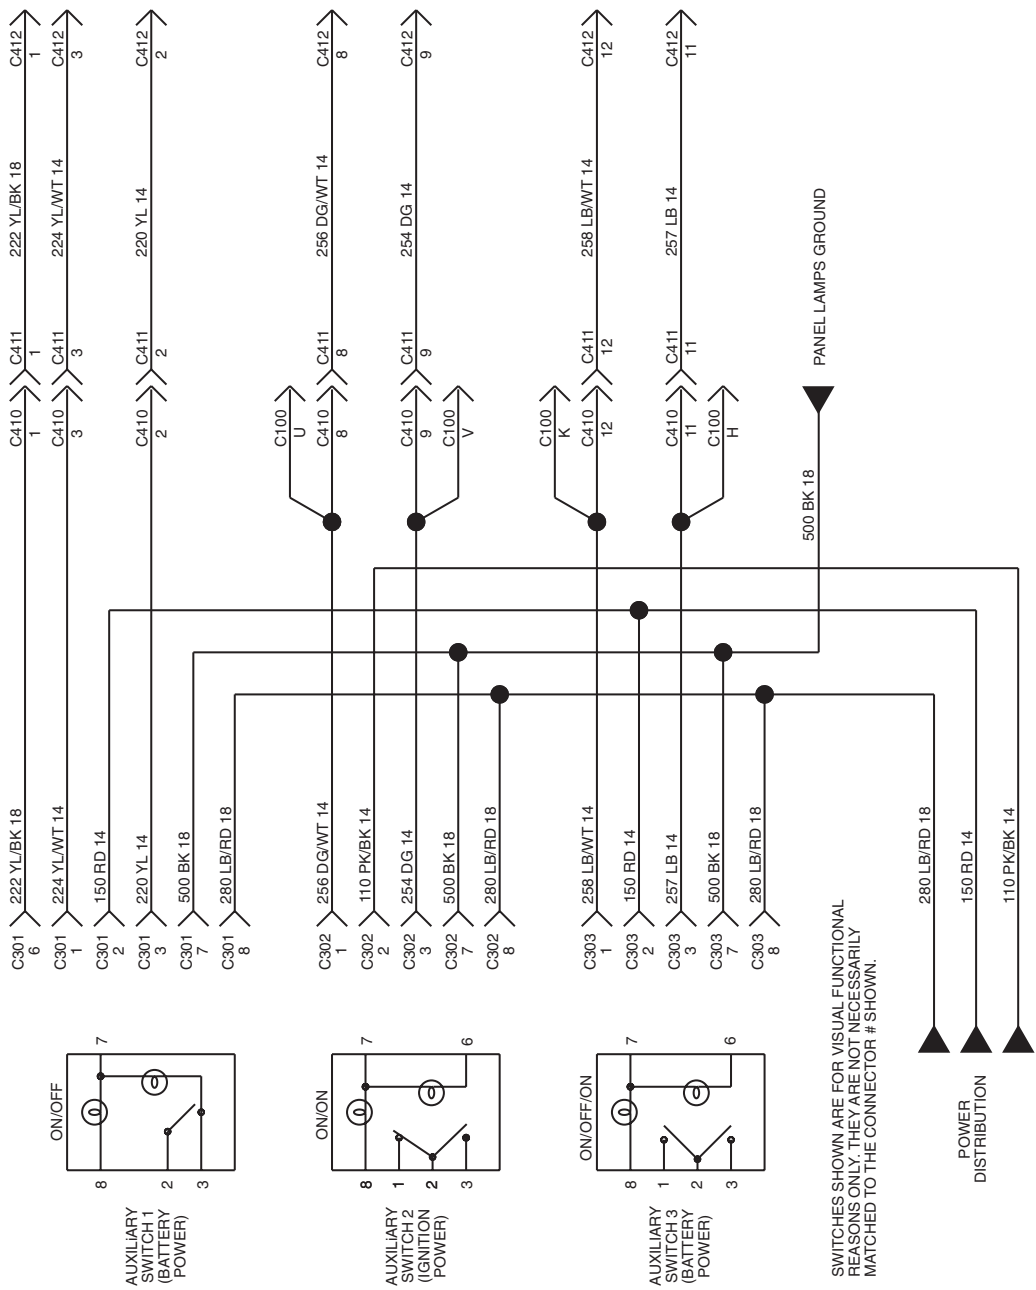

8—Cab Dome Light

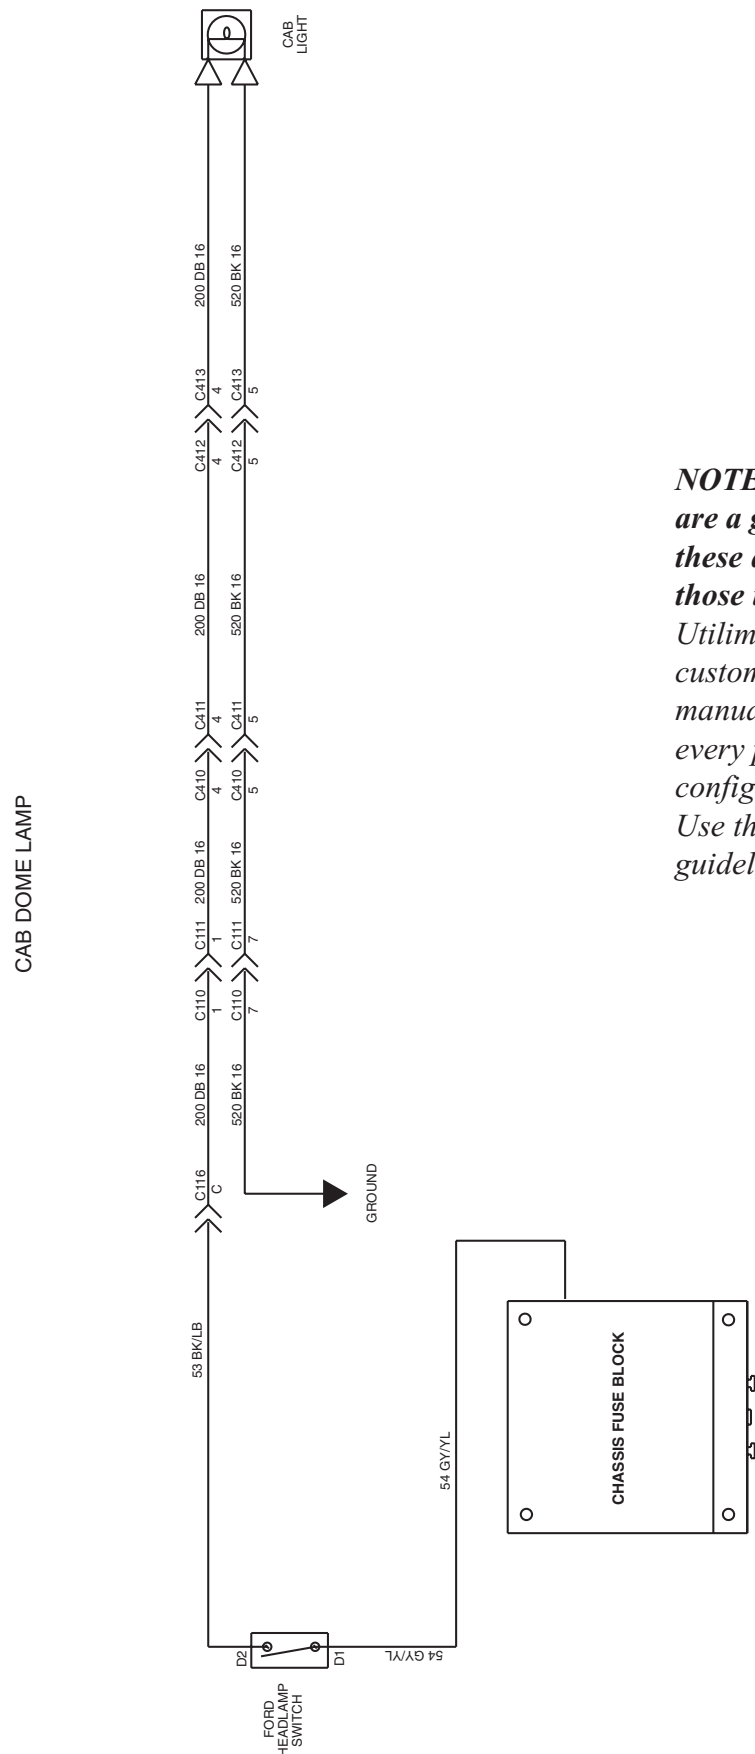

Cab Dome Light - Diagram 58231009a32

NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.

26


Aeromaster on Ford Chassis—Body Wiring Manual



9—Cargo Lamps

Switch on Dash


CARGO LAMPS SWITCHED ON DASH

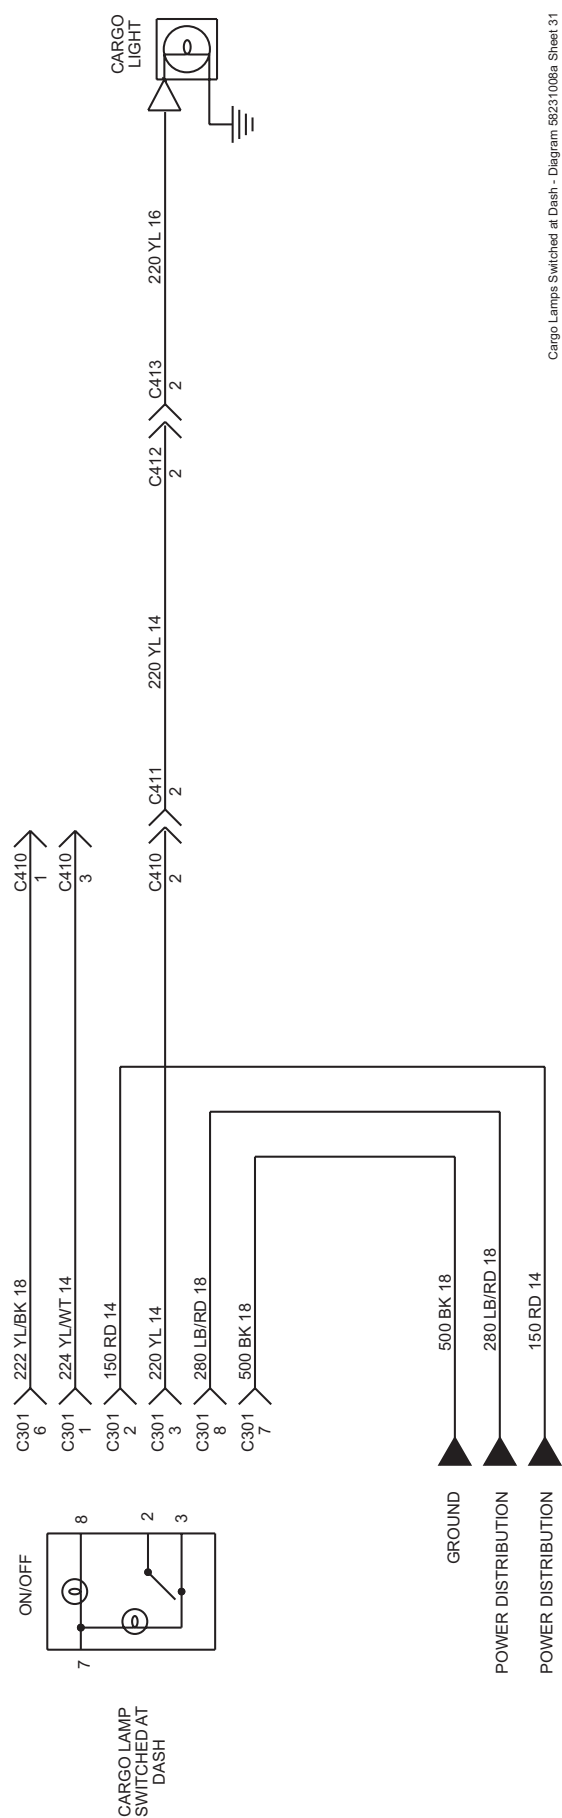

Cargo Lamps Switched at Dash - Diagram S9231008a Sheet 31


9—Cargo Lamps

Three-Way Switch

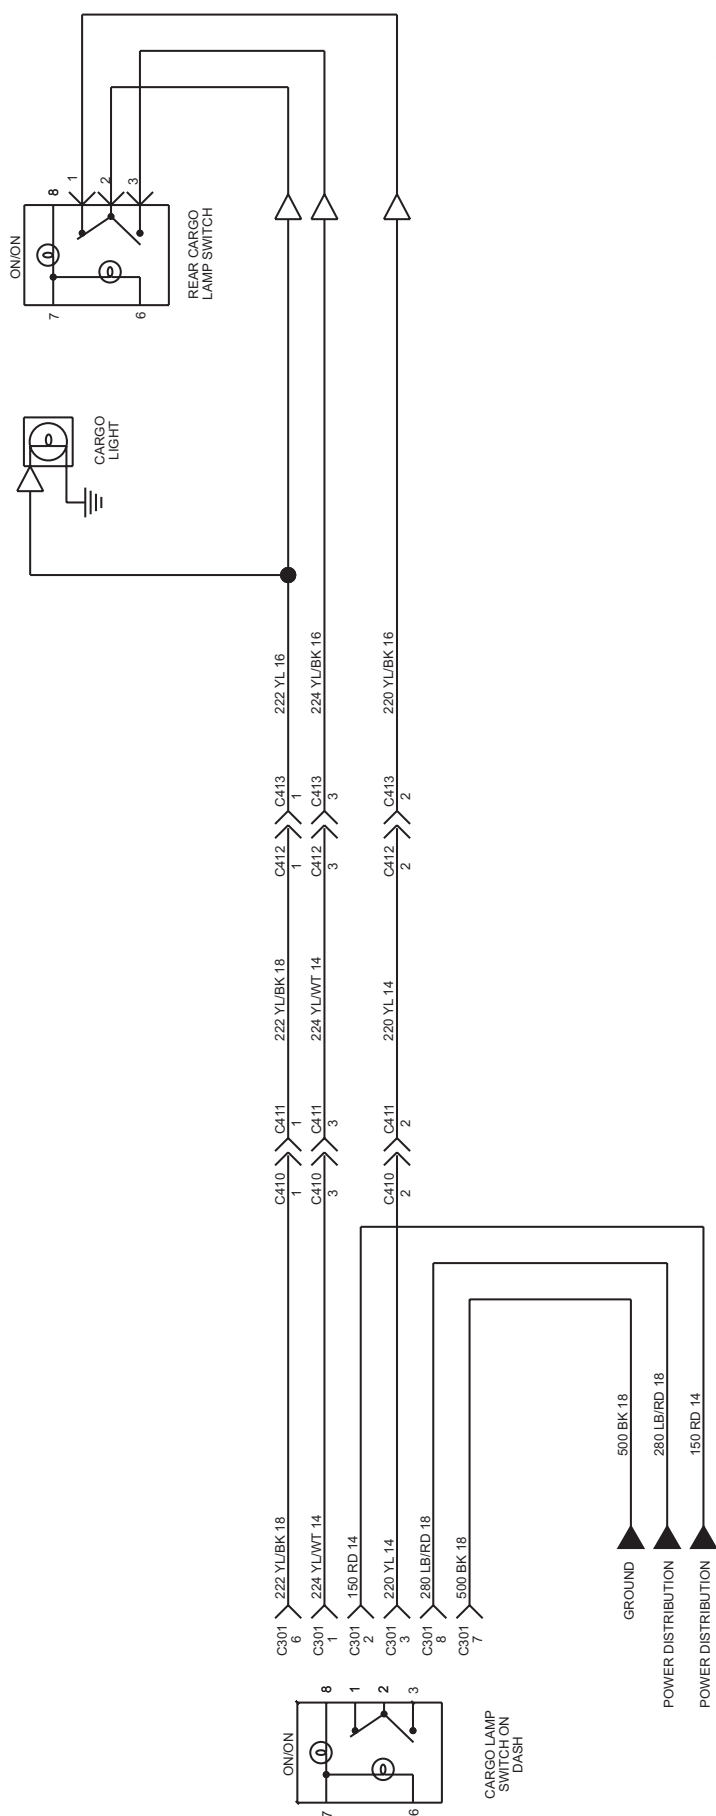


10—Wiper System

Standard and Intermittent

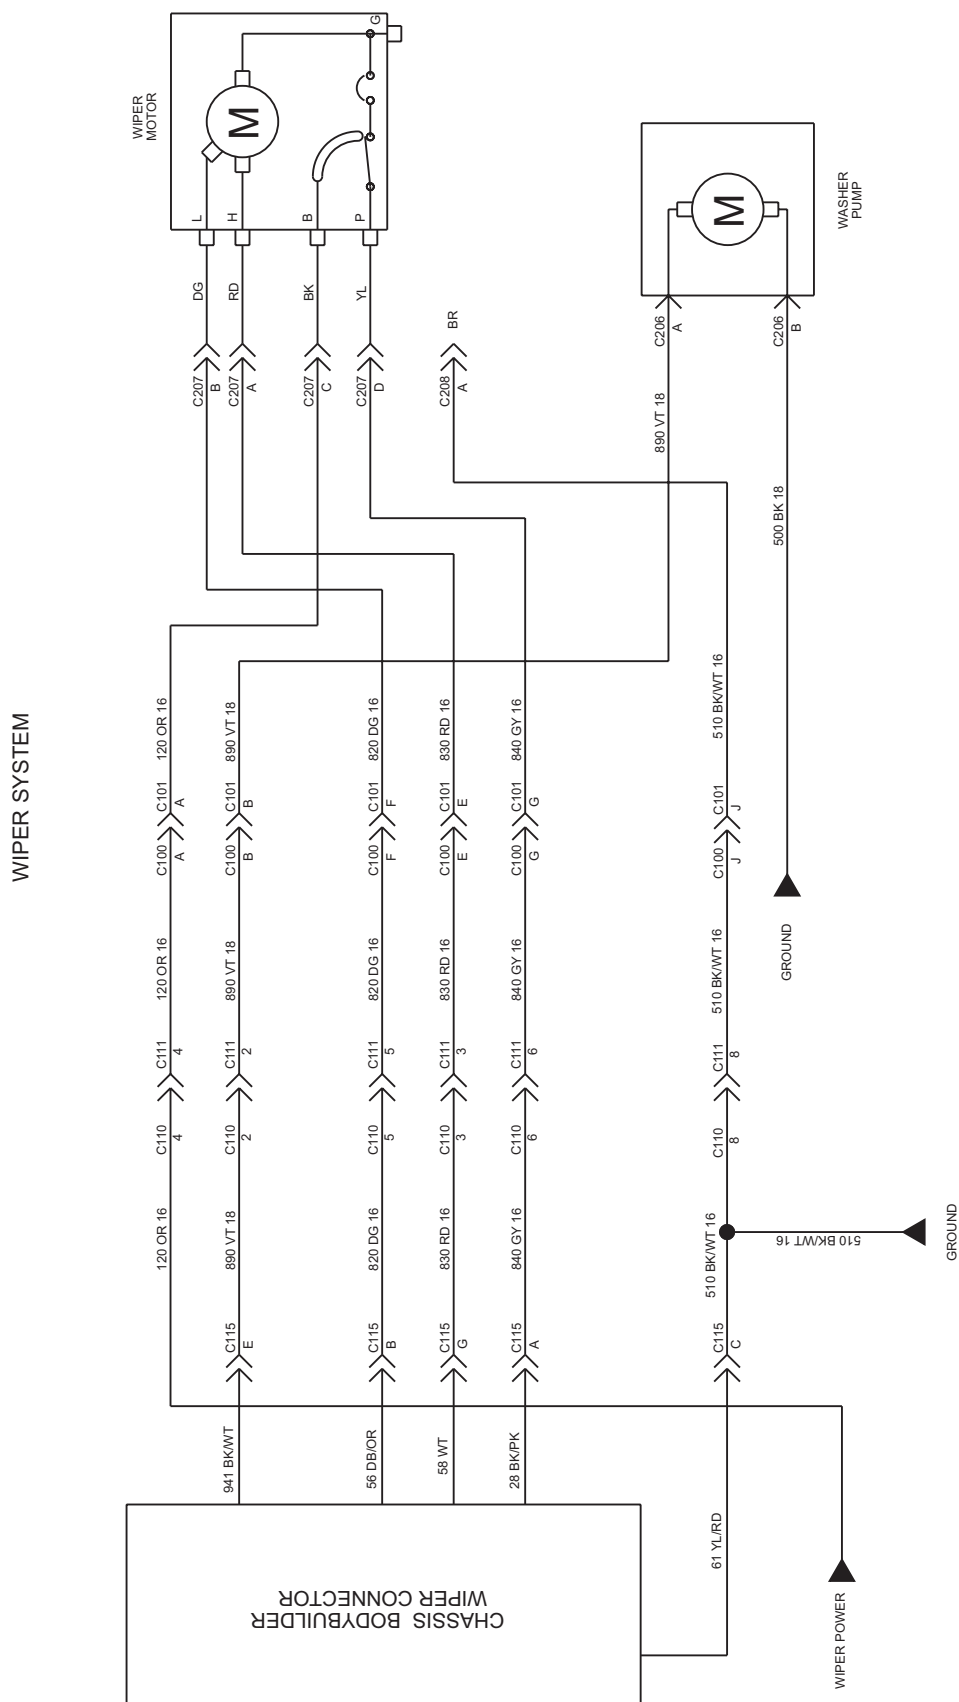


Wipers - Diagram 58231009bx Sheet 14

Cable Controls

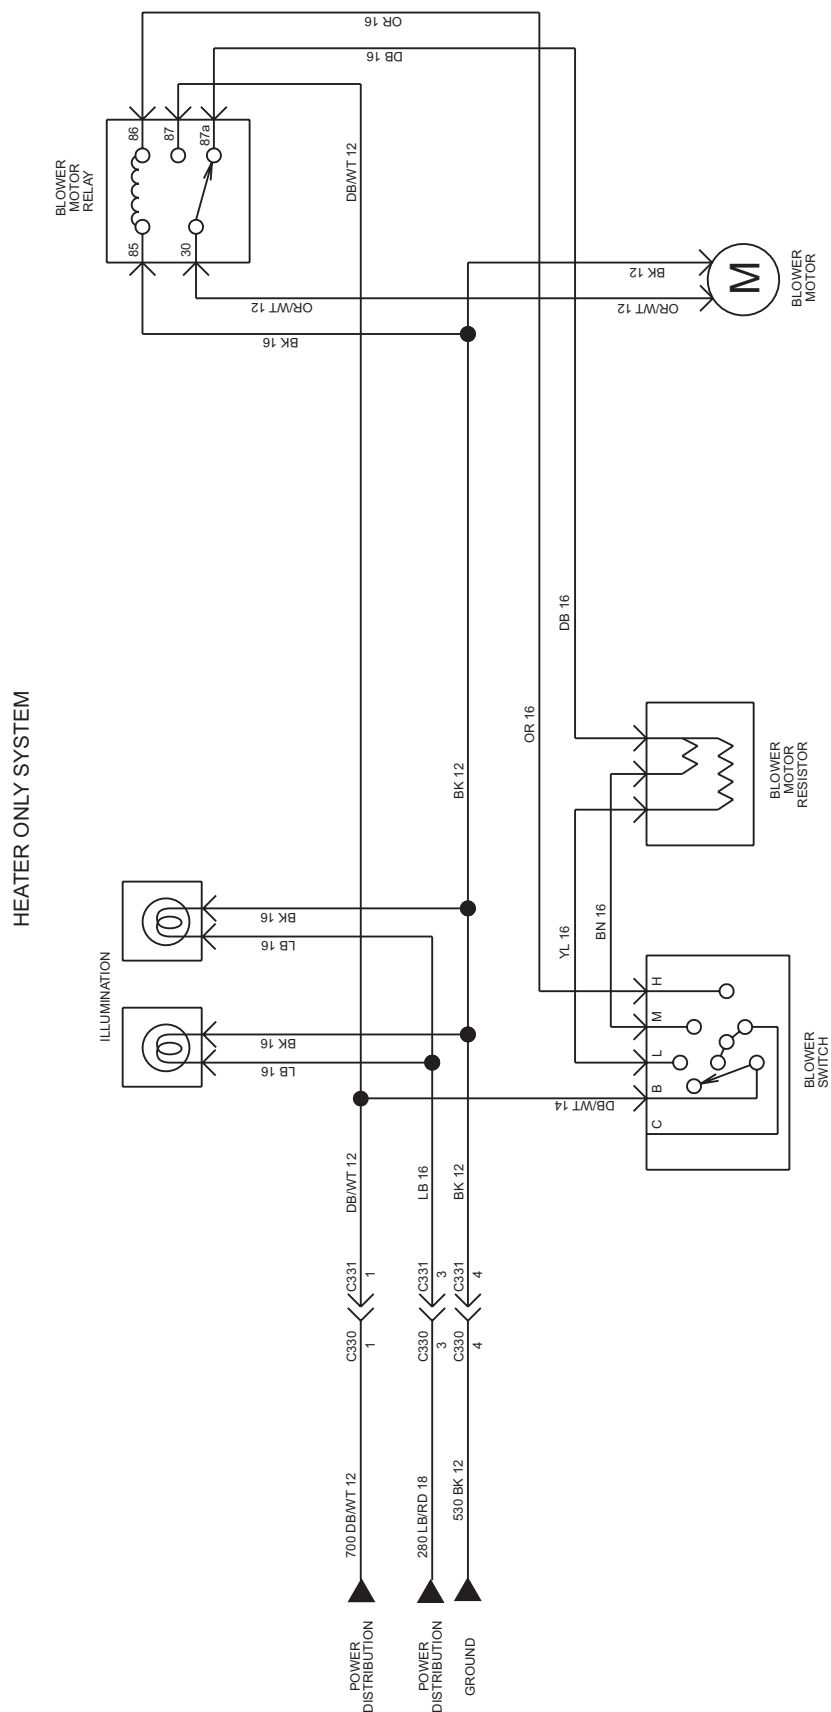


Heat Only Sys - Diagram 58231008a Sheet 13

Electronic Controls

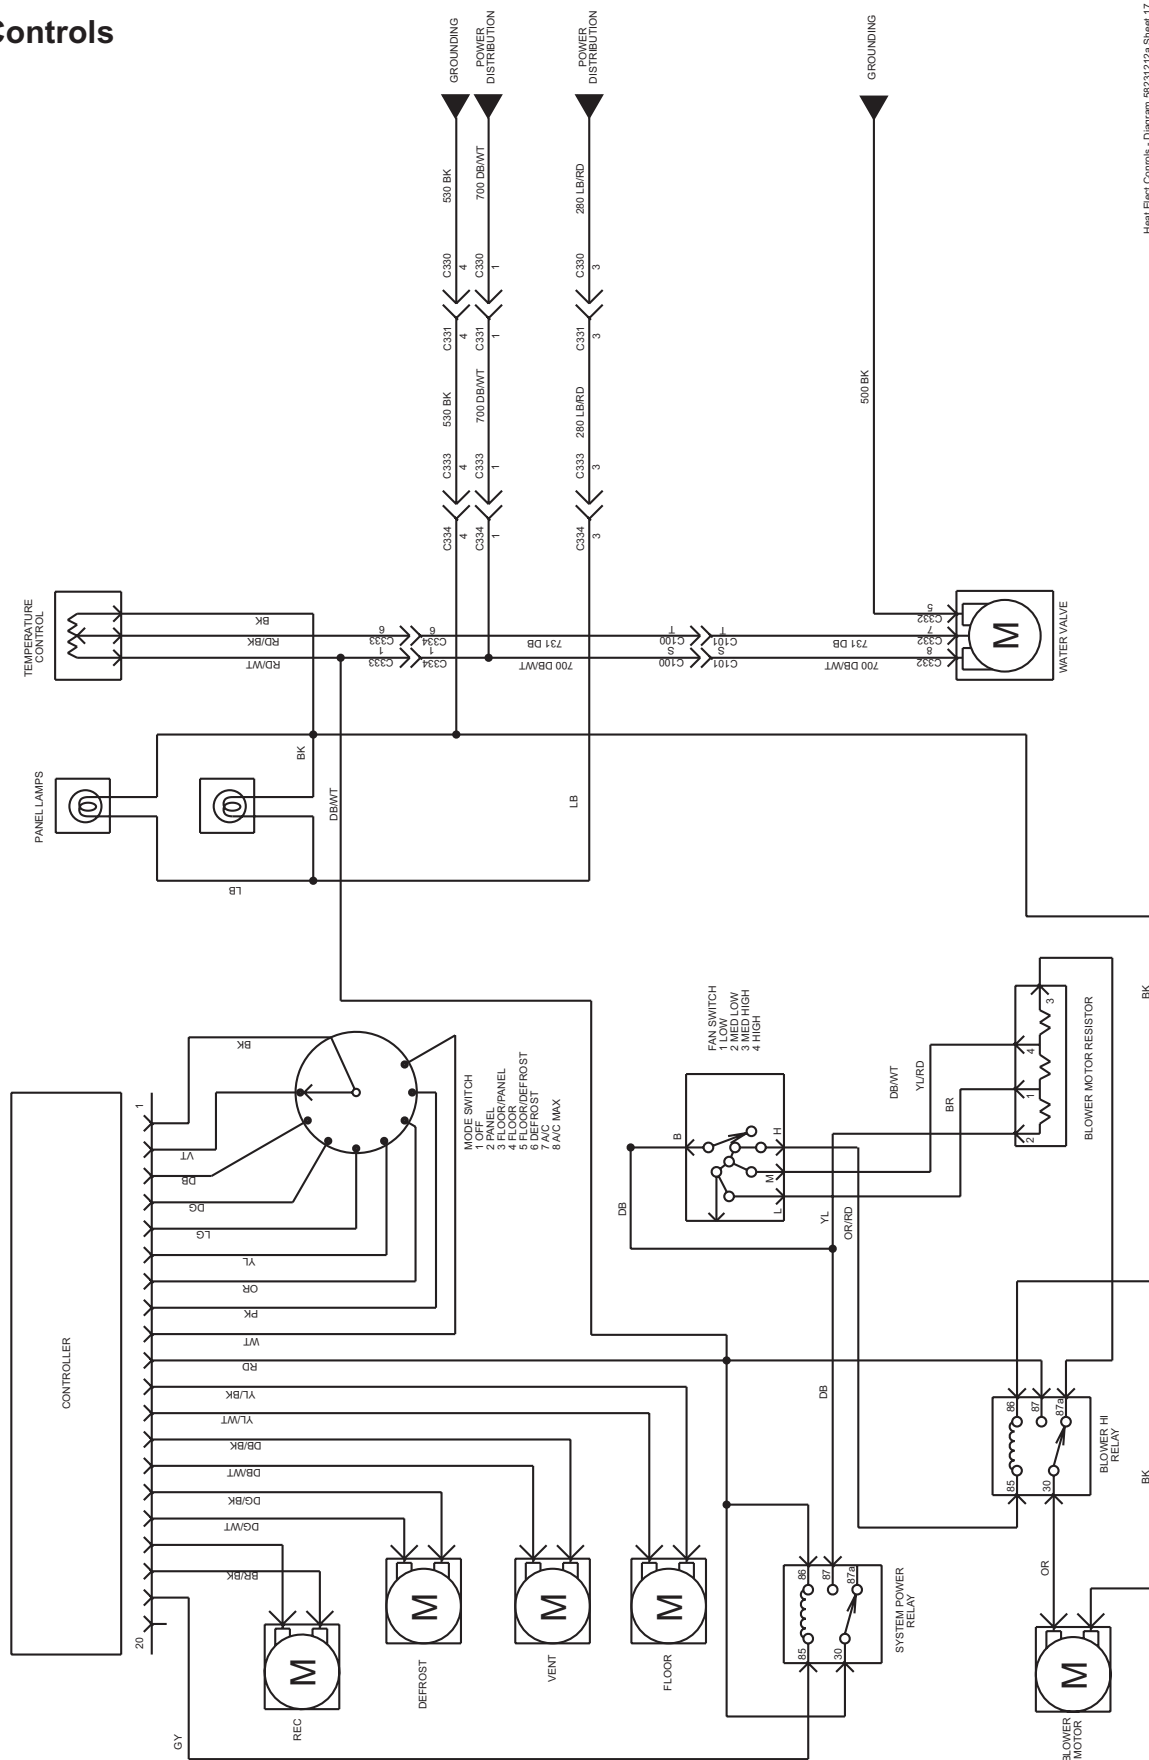


12—HVAC System Cable Controls

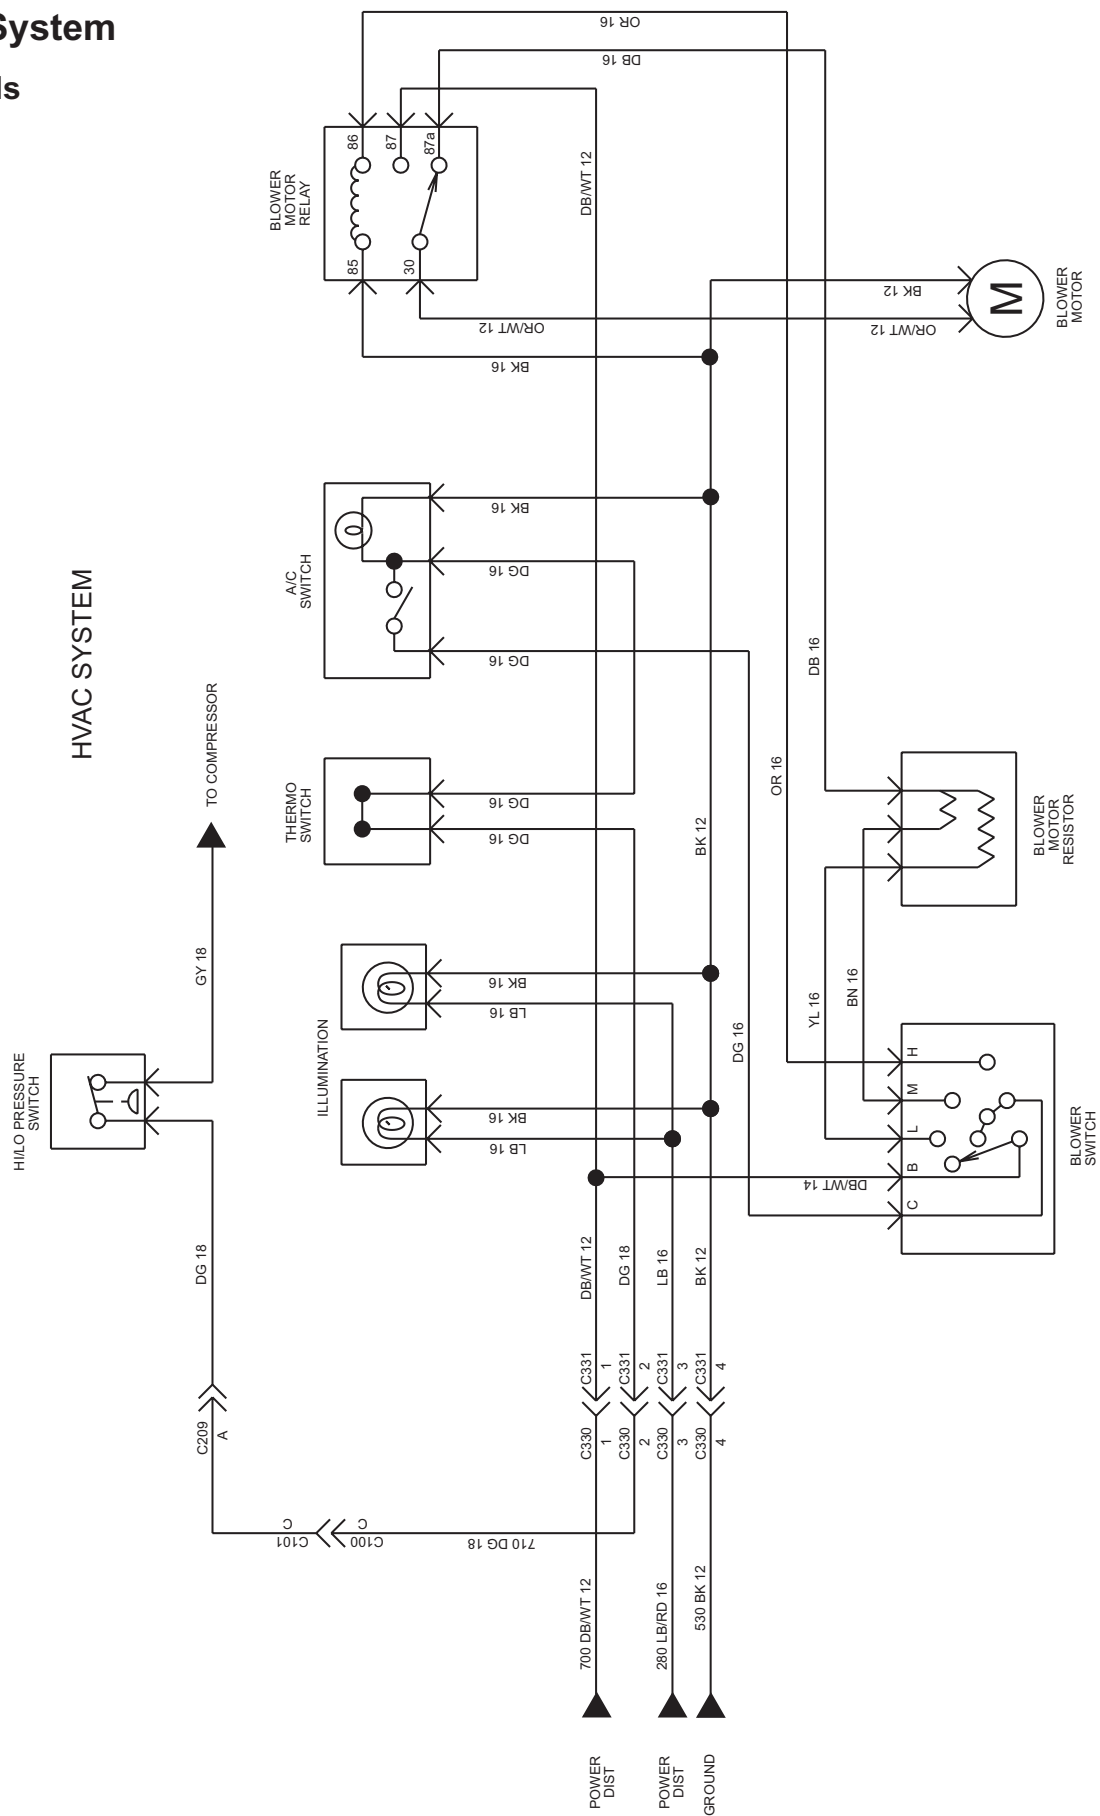

12—HVAC System


Electronic Controls

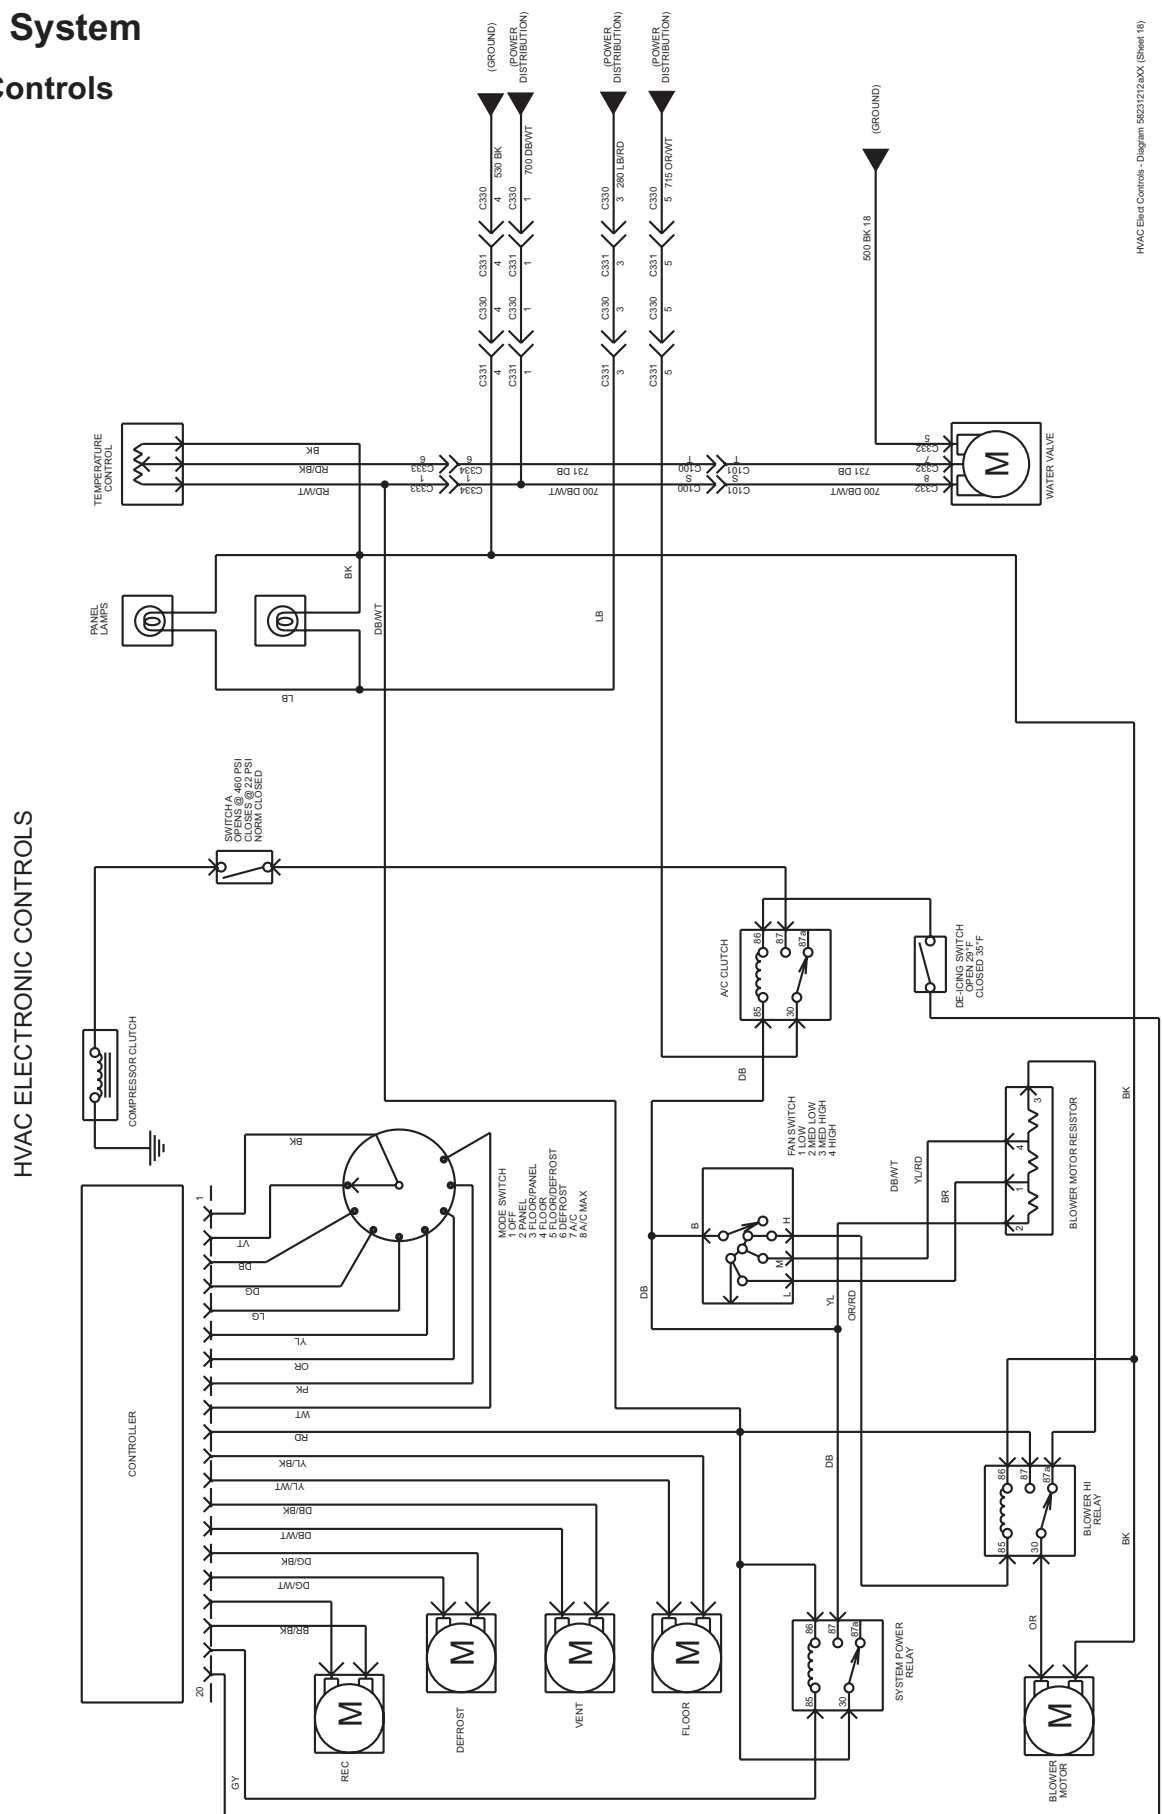

13—Auxiliary Heater


NOTE: *These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.*

AUXILIARY HEATER

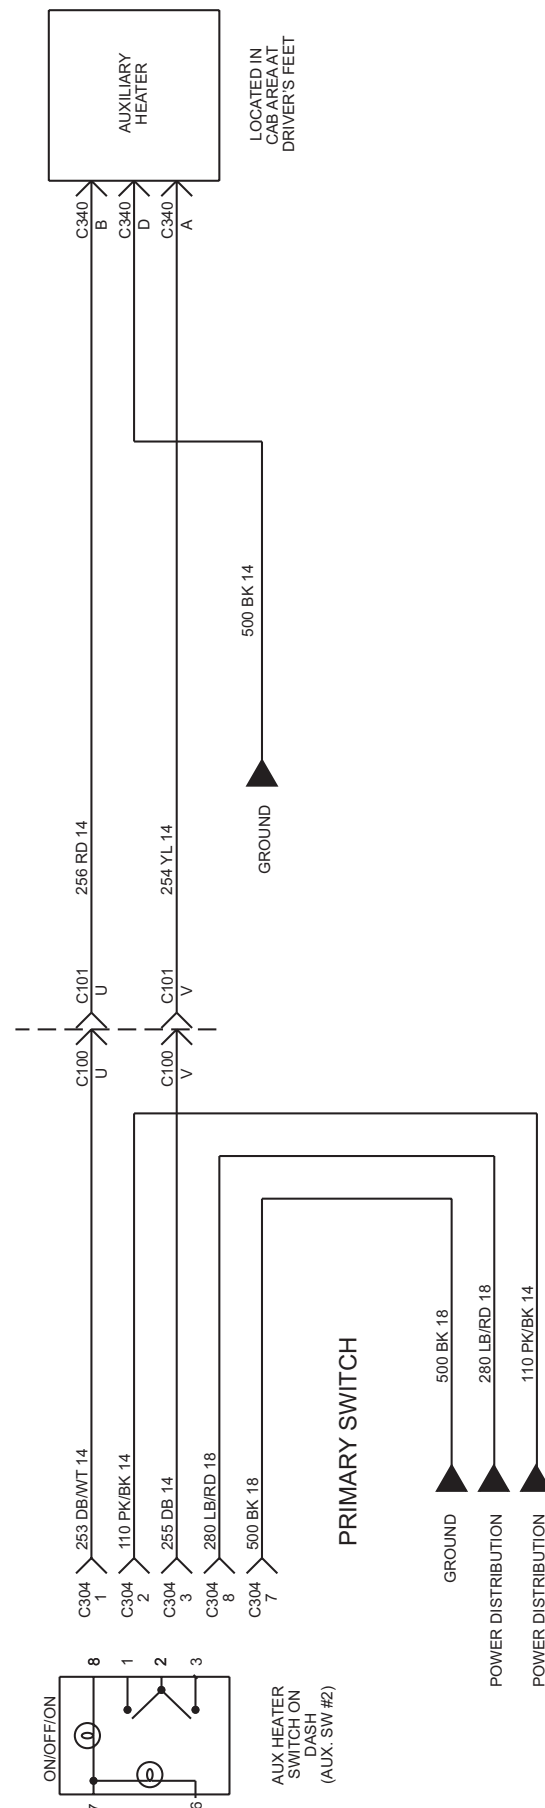

Aux Heater - Diagram 58231008a Sheet 37


14—Panel Lights (HVAC Control Panel)

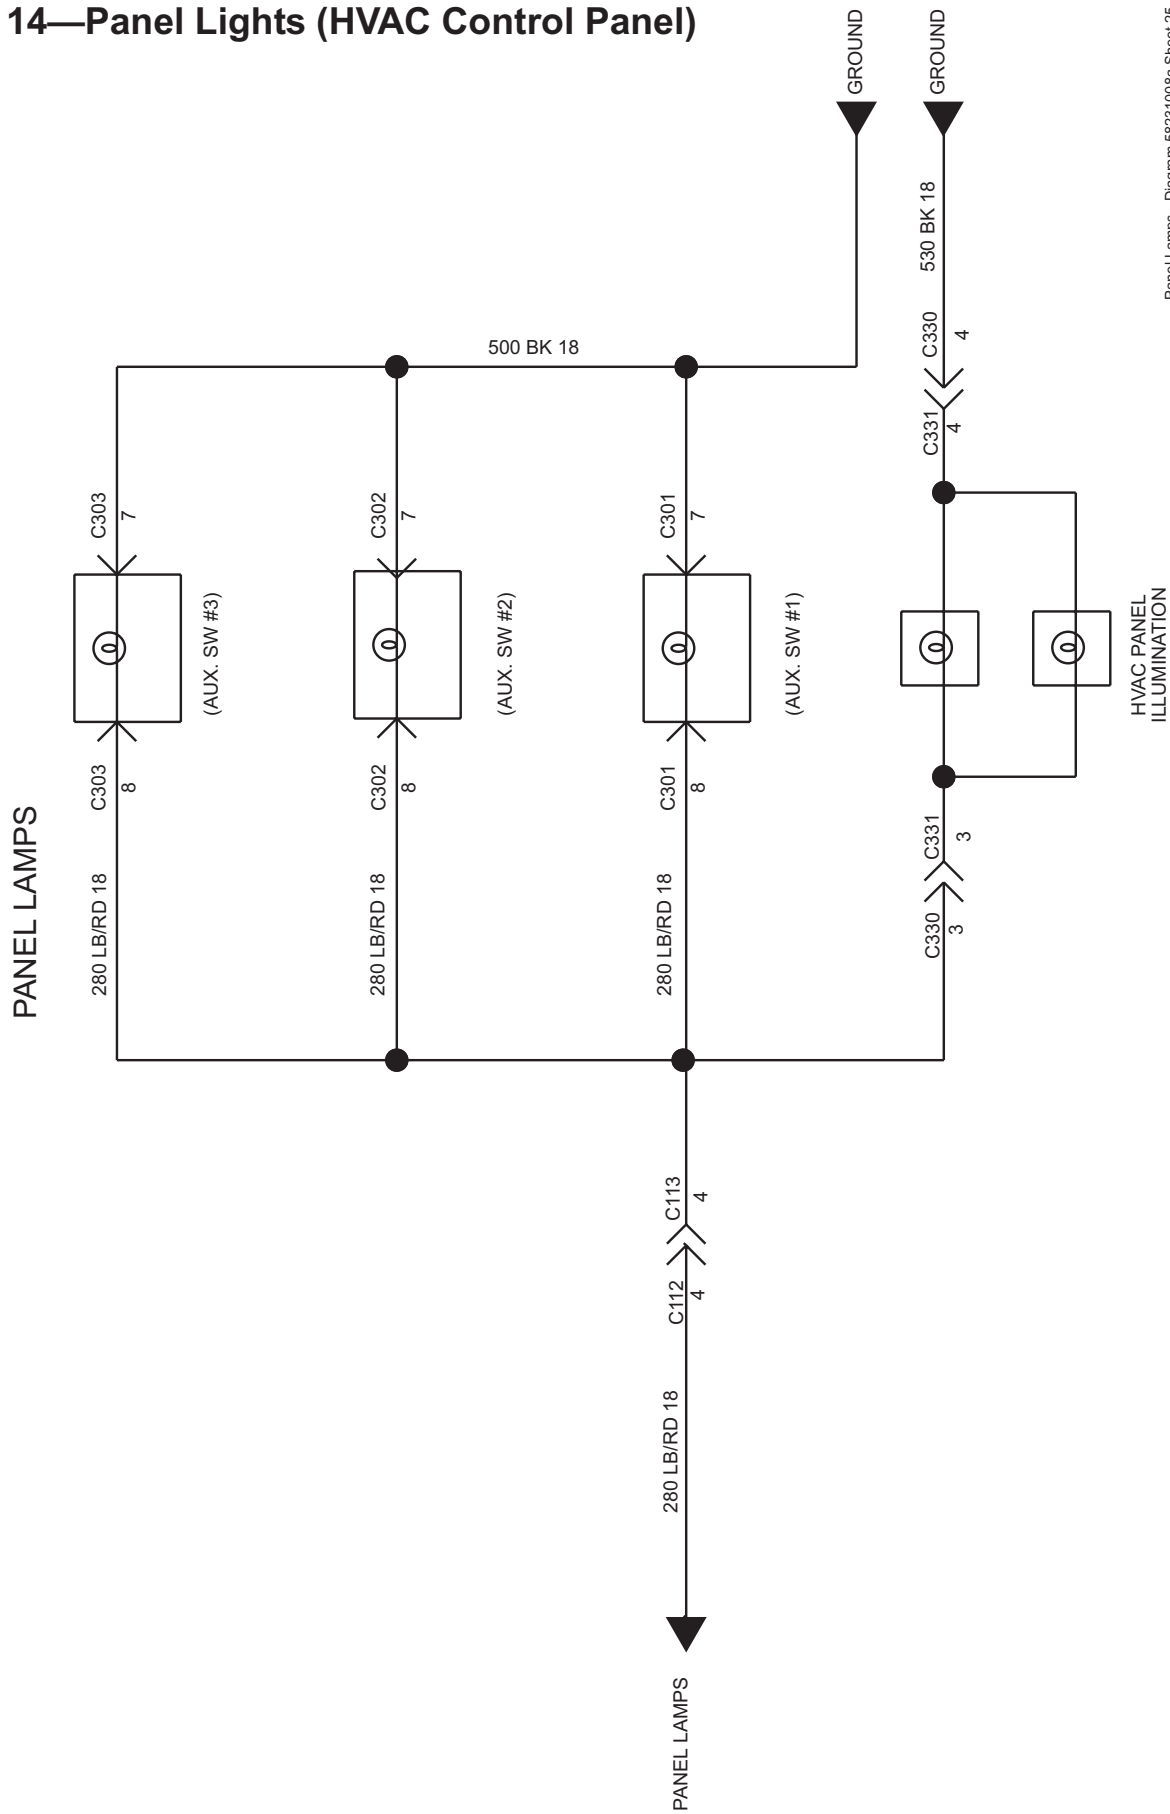

Panel Lamps - Diagram 58231008a Sheet 25

15—Forward Light Wiring


Without Daytime Running Lights

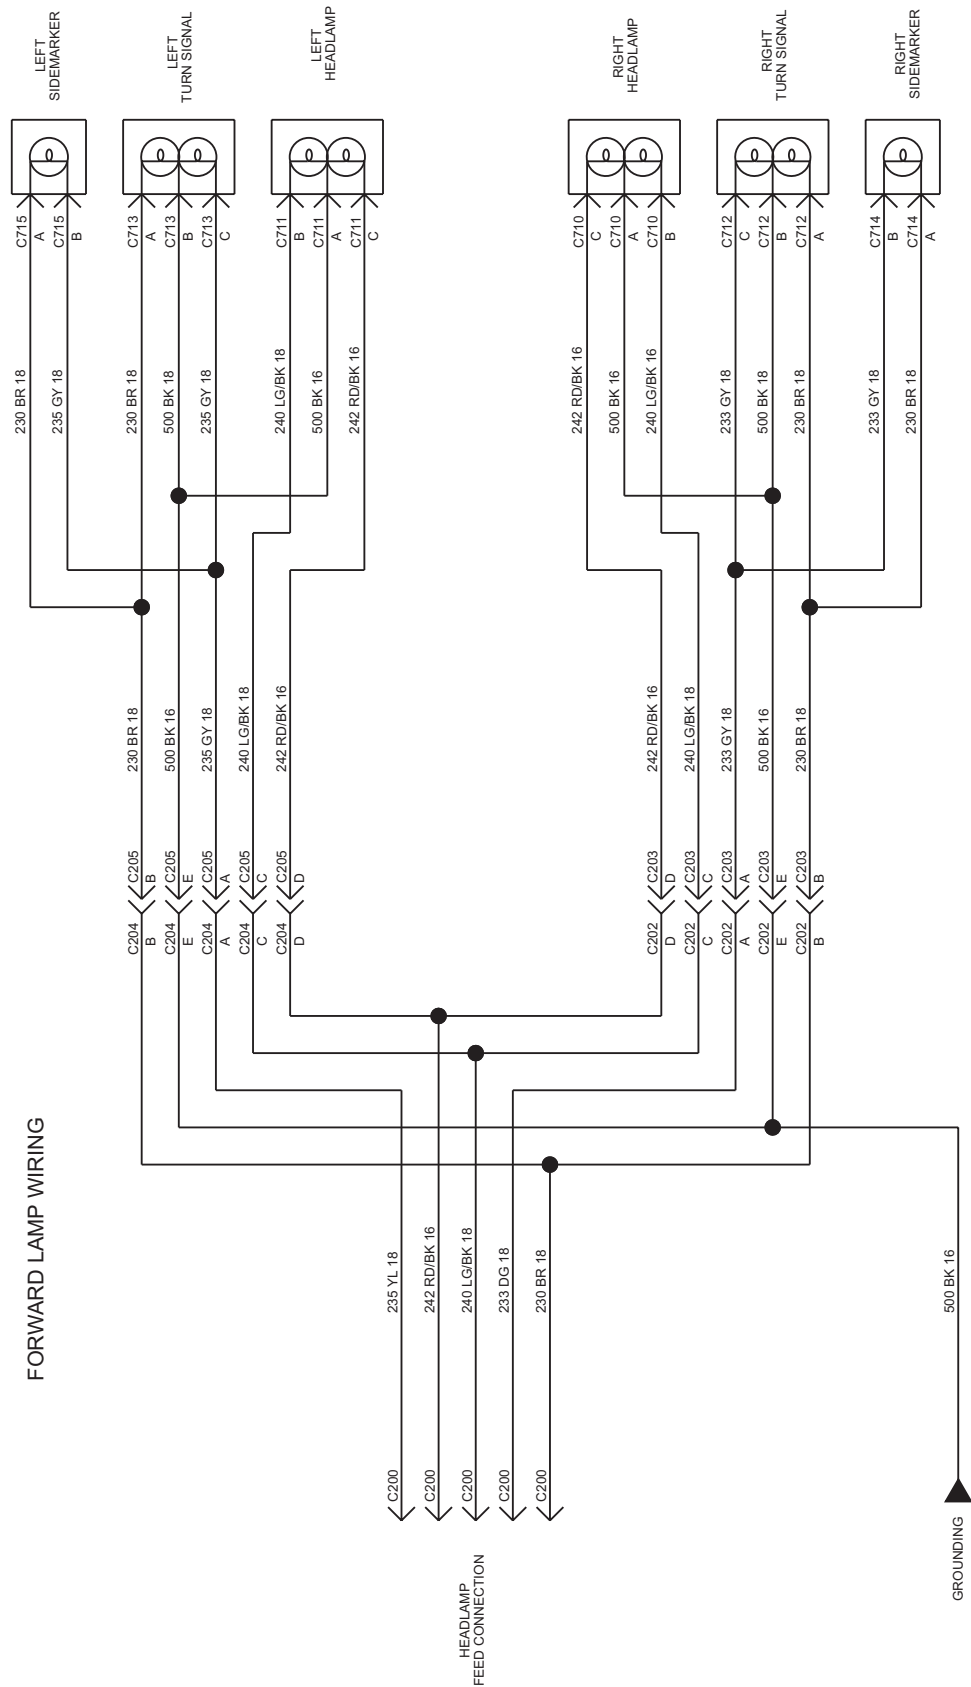

Forward Lamp Wiring Dom W/O DRL and Can W/DRL - Diagram 58231008a.16


15—Forward Light Wiring

Daytime Running Lights (Domestic)

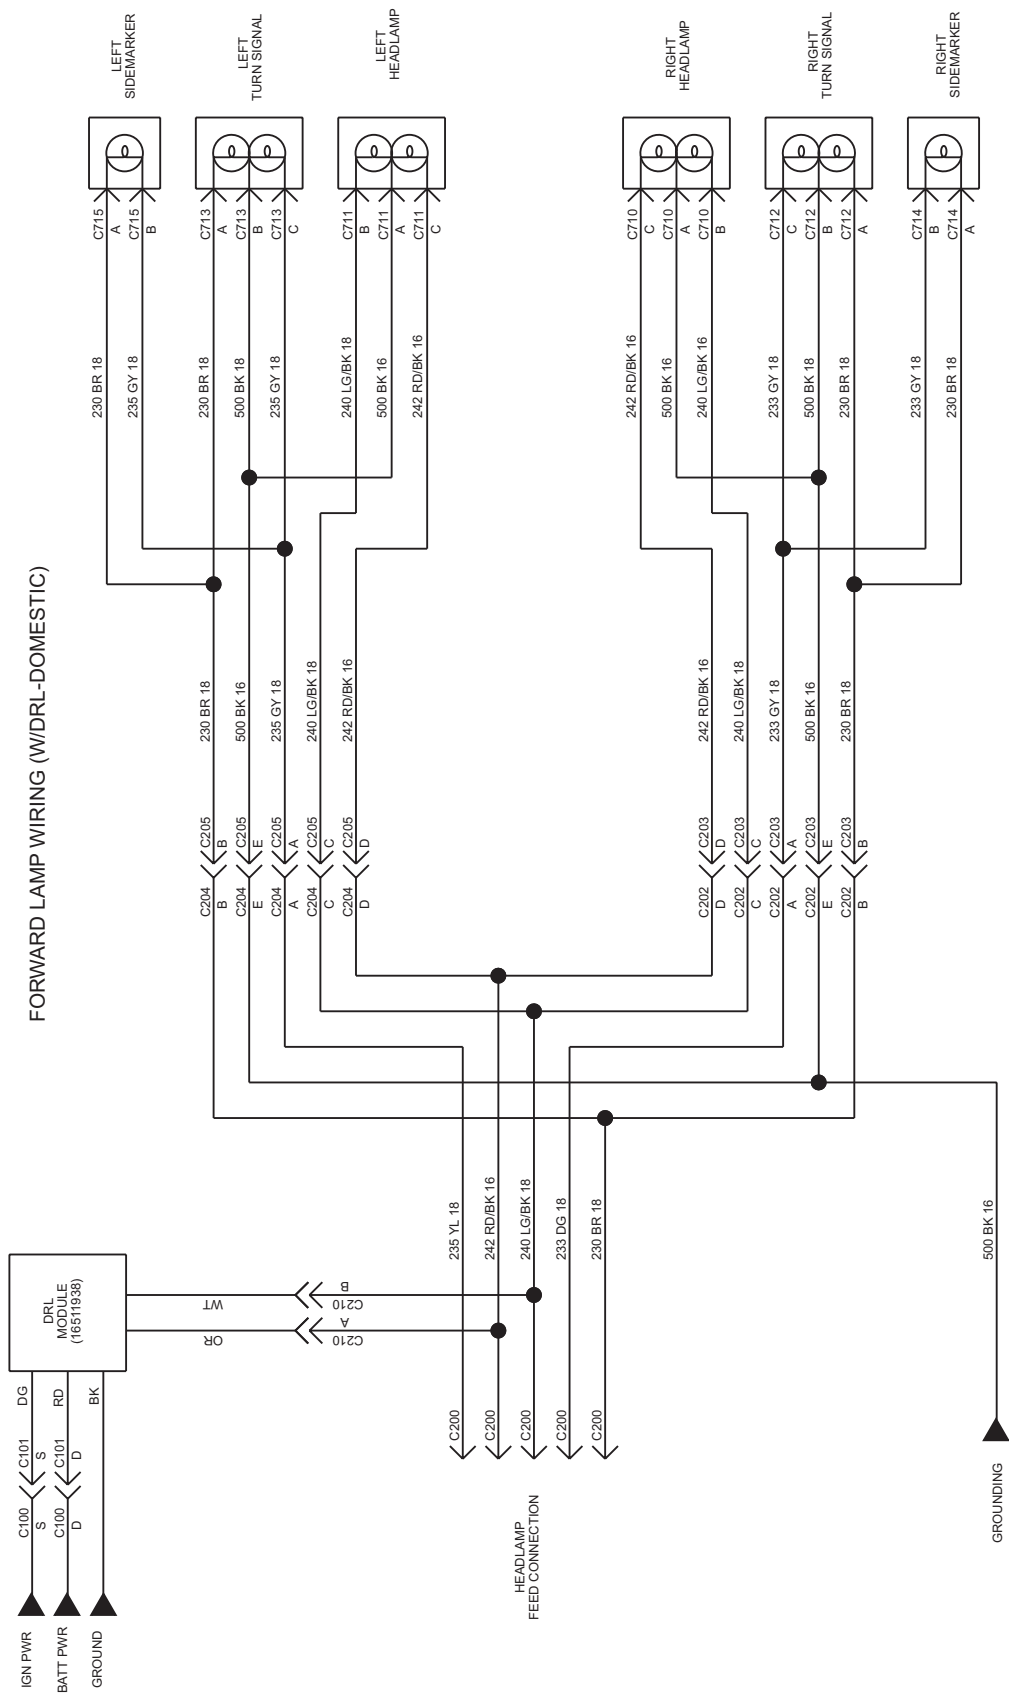

Forward Light Wiring (DRL Domestic) - Diagram 58231008a Sheet 18


Daytime Running Lights (Canadian)

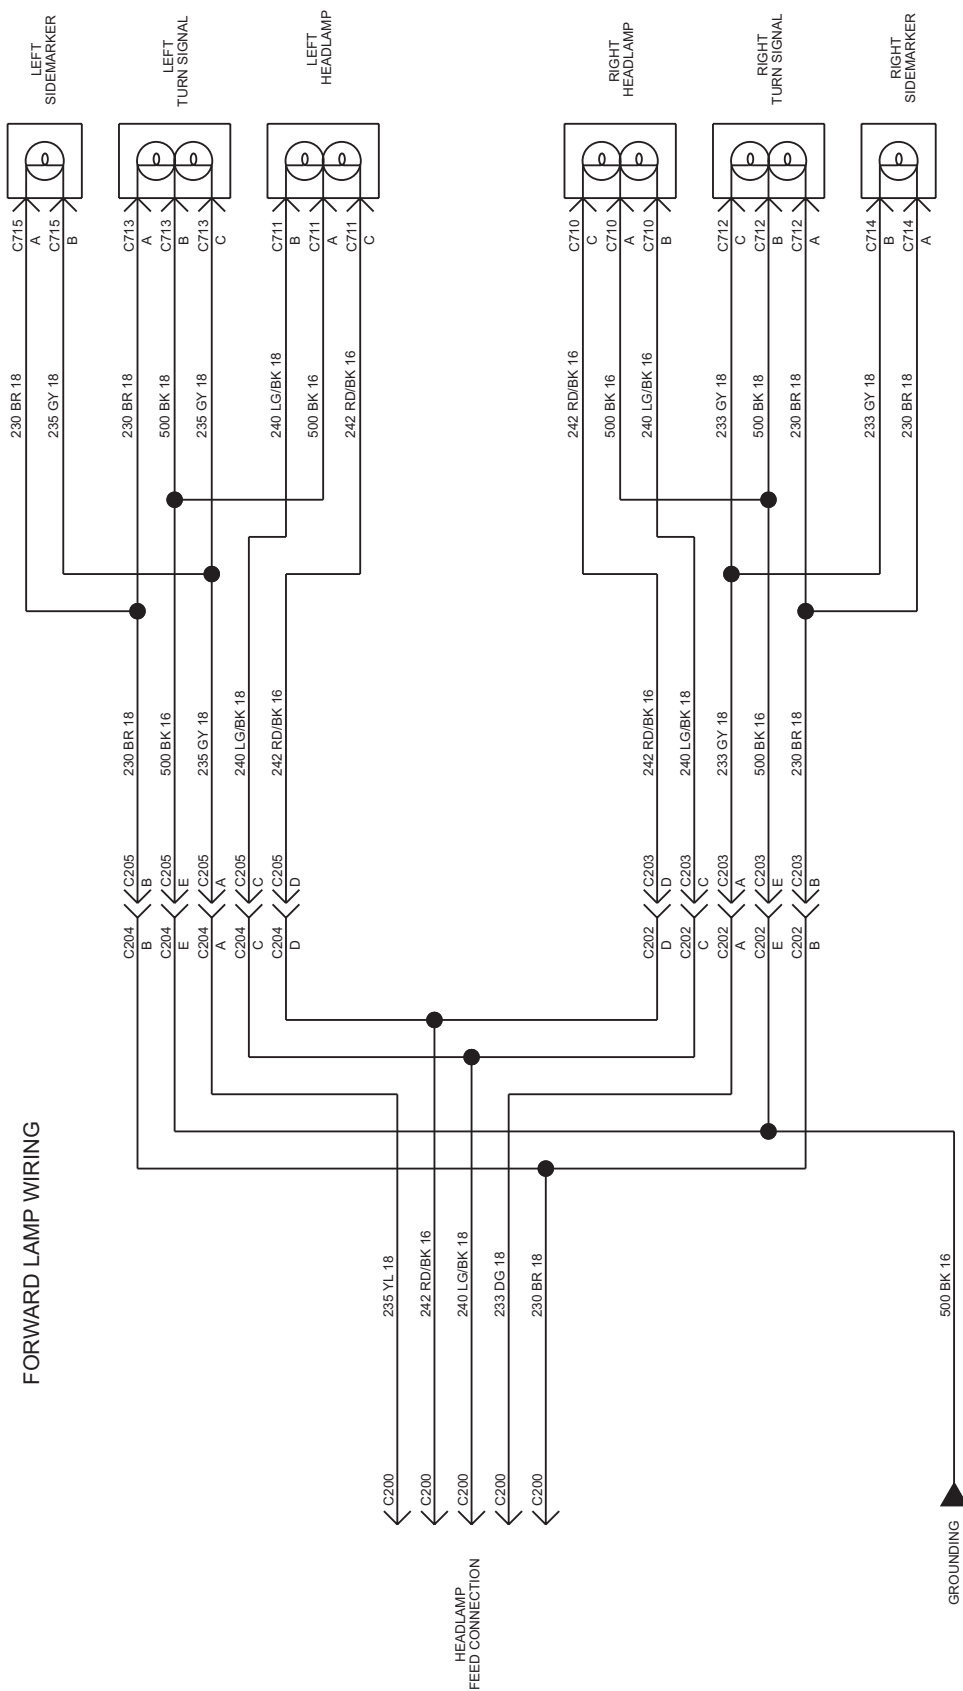

Forward Lamp Wiring Dom W/O DRL and Can W/DRL - Diagram 58231008a16


16—Rear Light Wiring

Standard

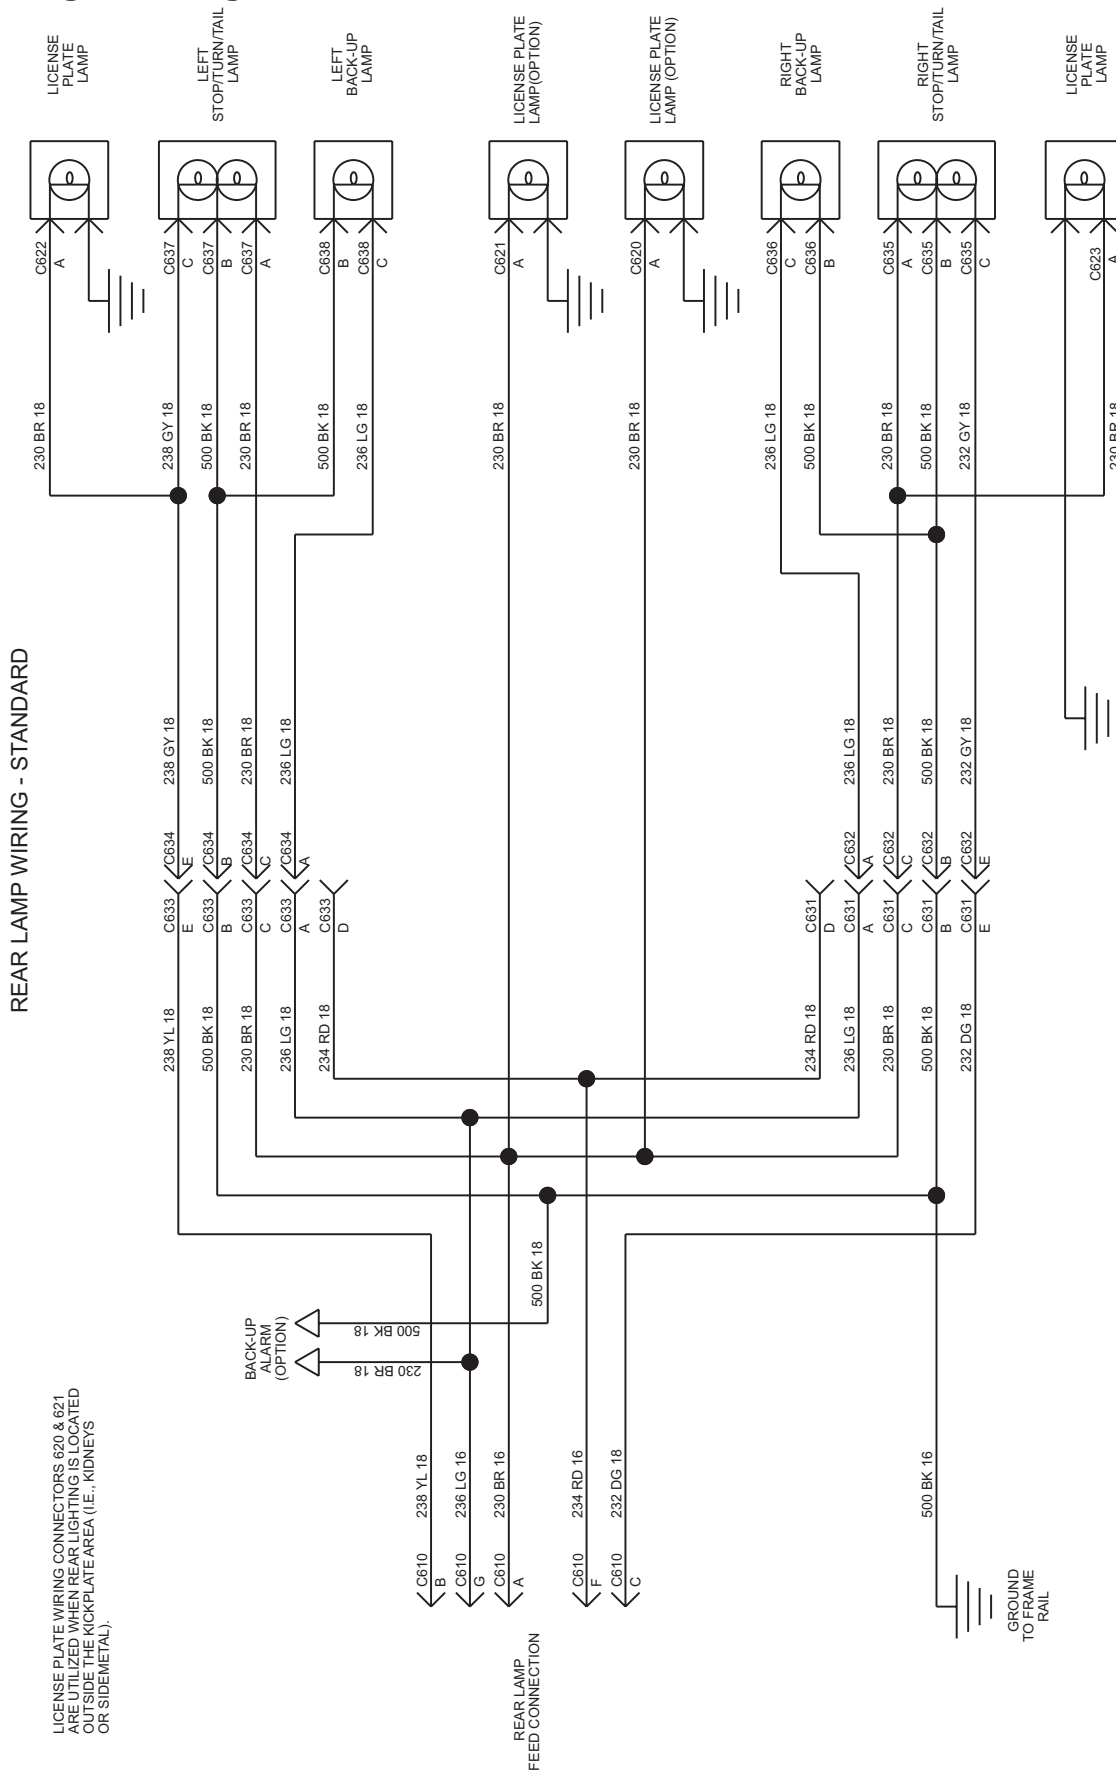

16—Rear Light Wiring


Routed through Interior

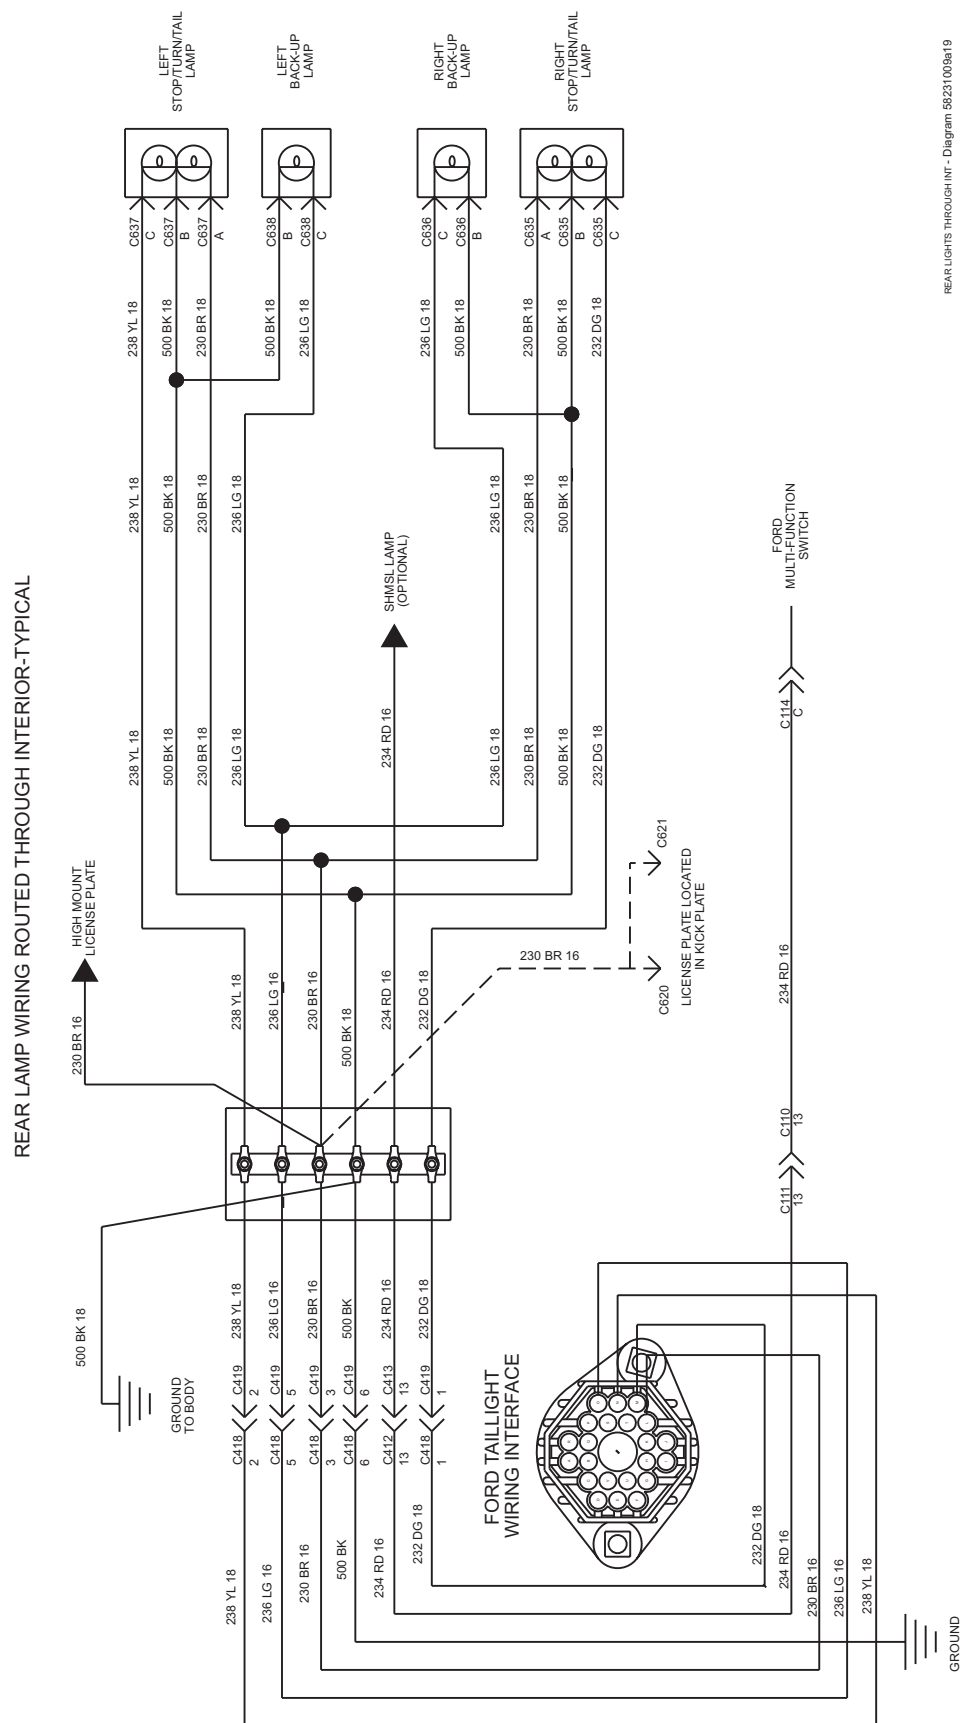

REAR LIGHTS THROUGH INT - Diagram 59231.009a19

16—Rear Light Wiring


Split Taillights

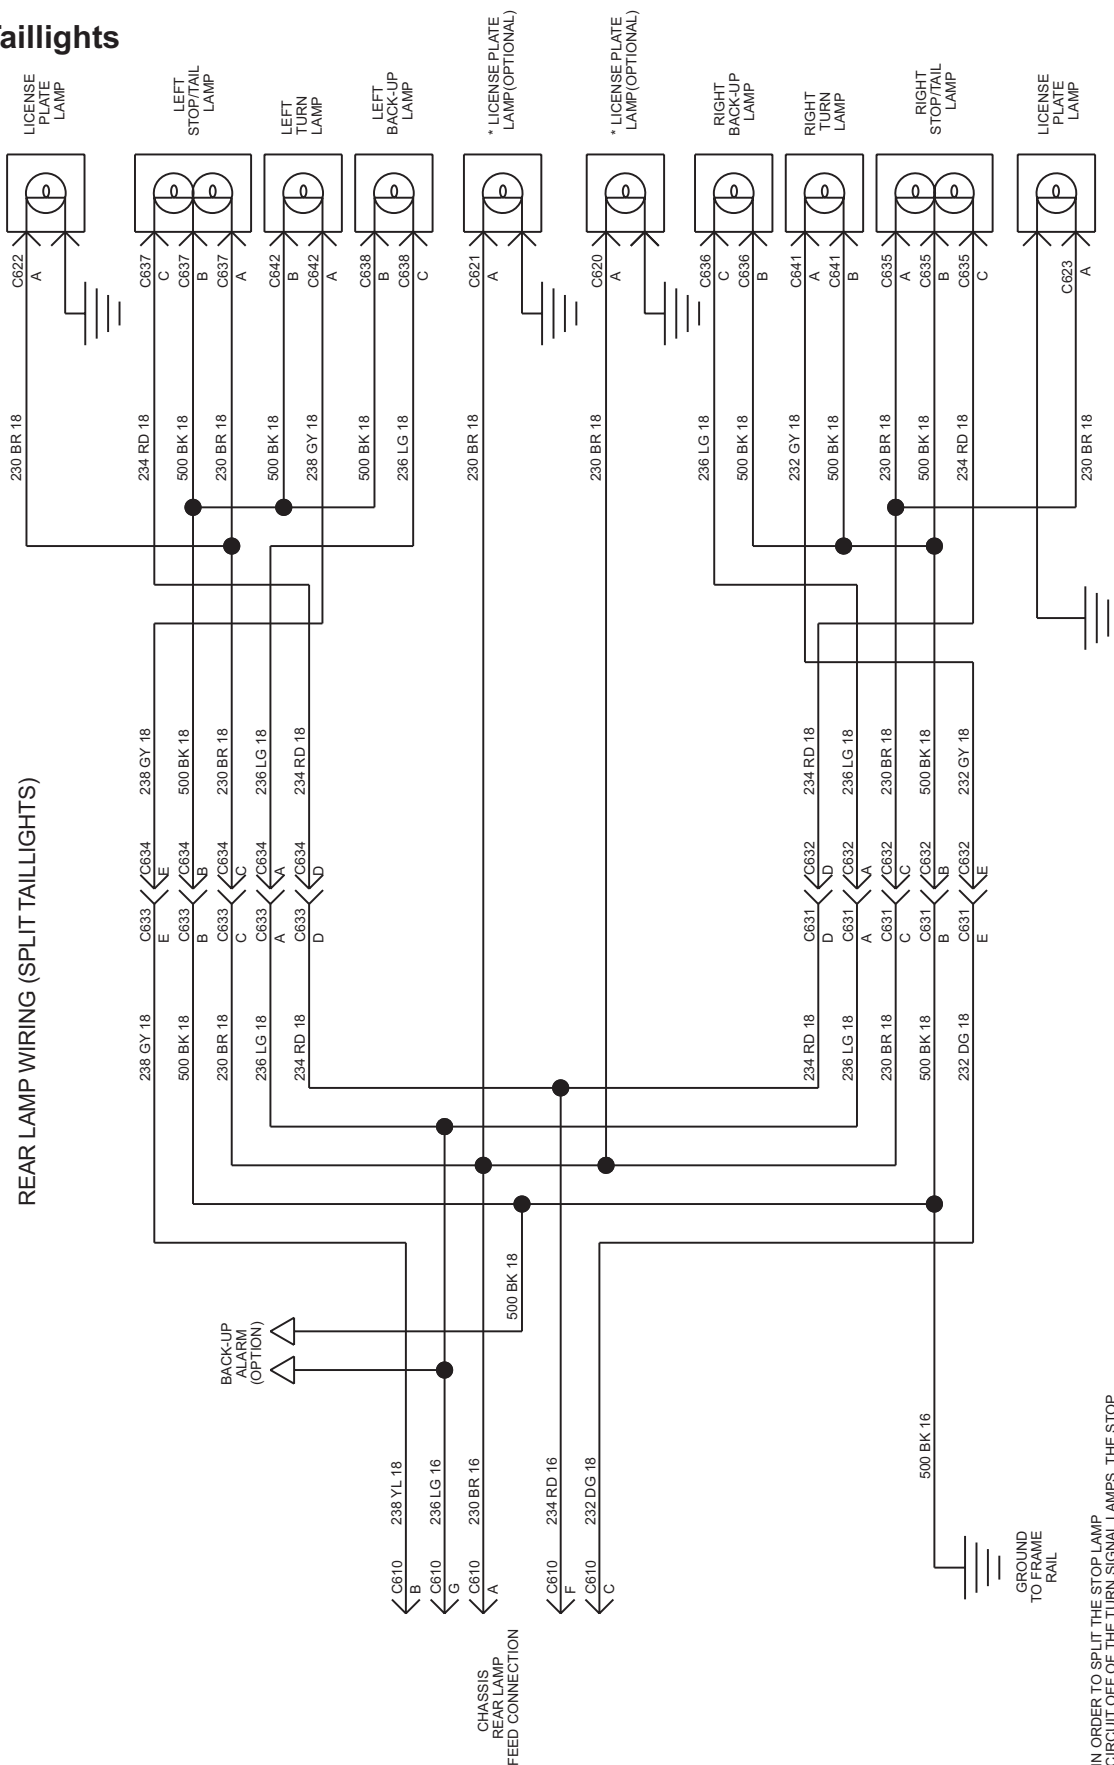

Rear Lamp Wiring (Split Lights) - Diagram 9623 1008a Sheet 21

16—Rear Light Wiring


Split Taillights Routed through Interior

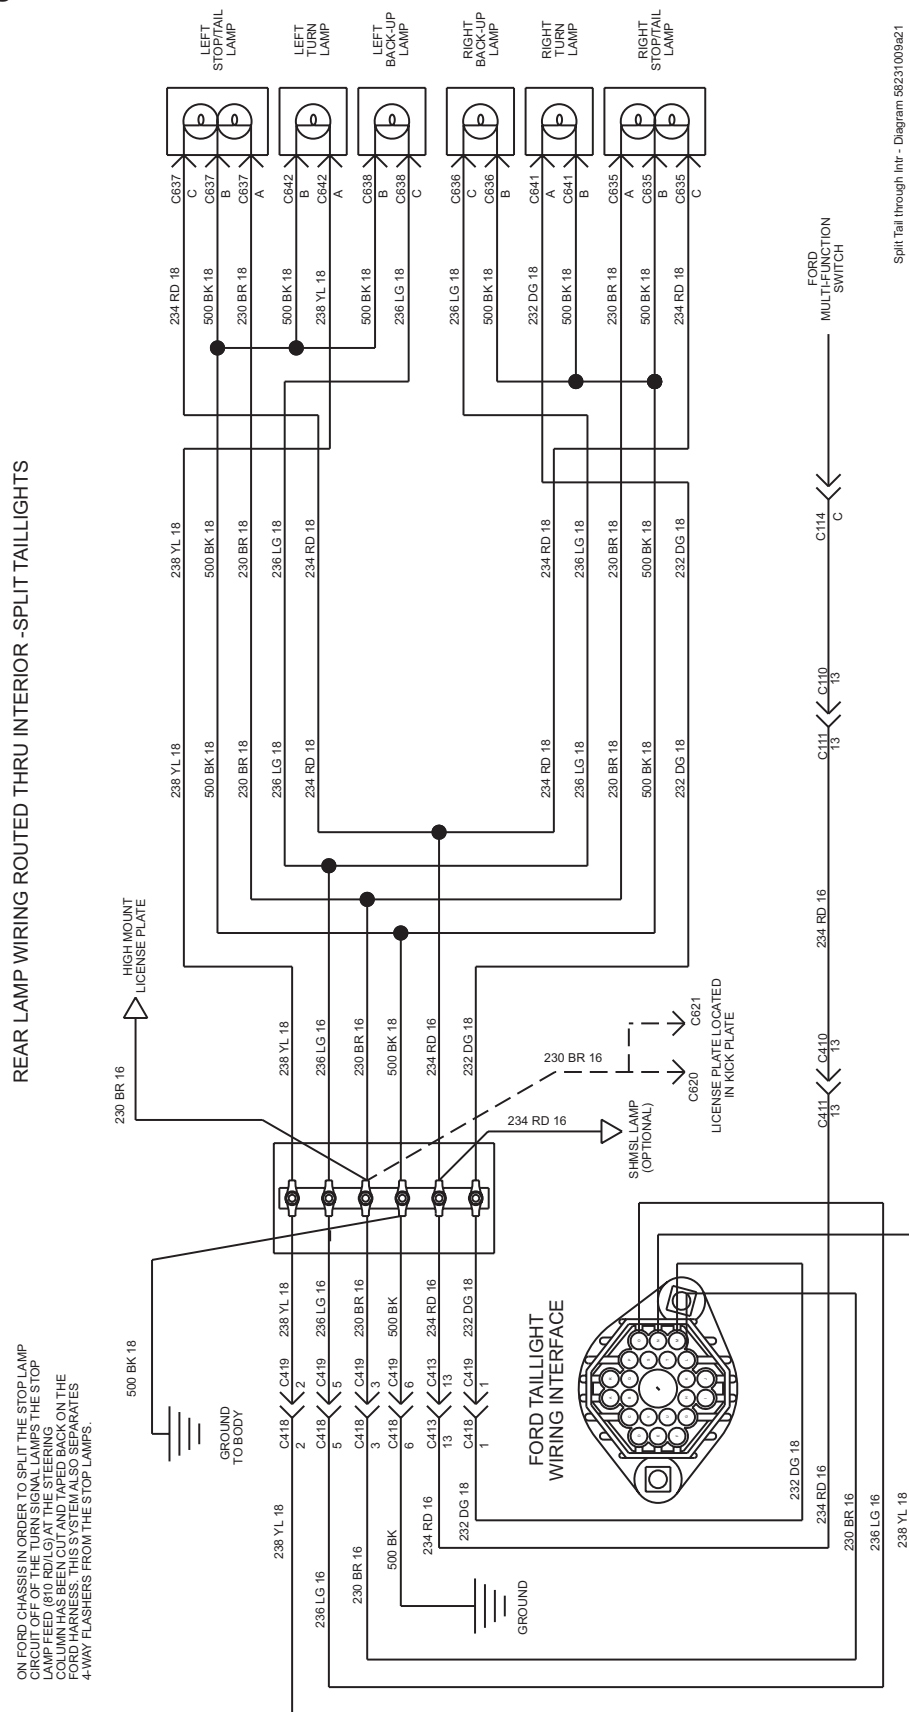

Split Tail through Intr - Diagram 56231009a21

17—Supplemental High Mount Stop Lamp (SHMSL)

SUPPLEMENTAL HIGH MOUNT STOP LIGHT (SHMSL)

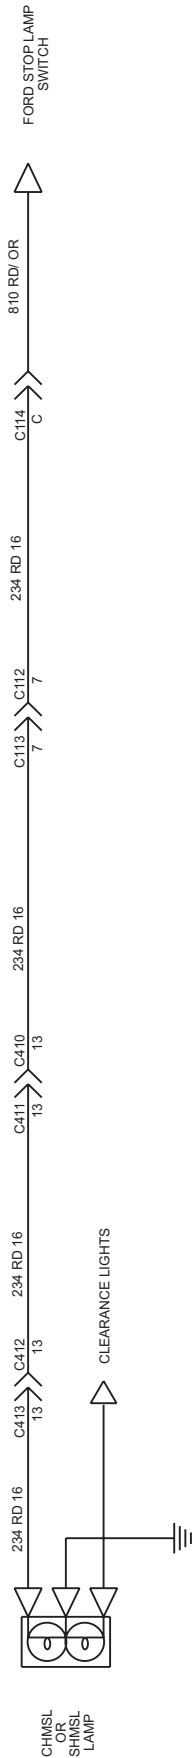


Supt. Hi Mnt Stop - Diagram 58231009b28


18—Clearance Lights

NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.


CLEARANCE LIGHTS

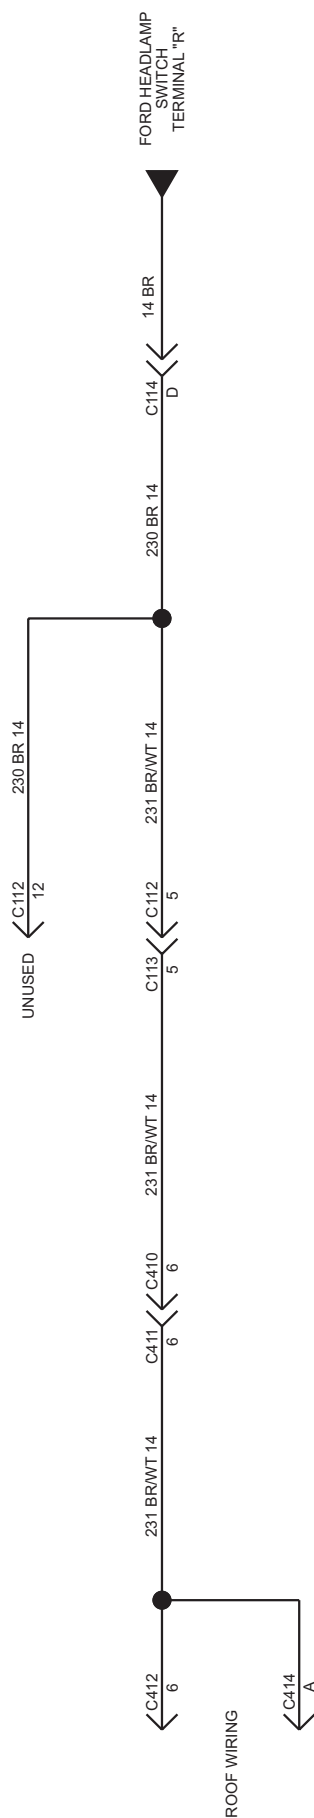

Clearance Lights - Diagram 58231009a23

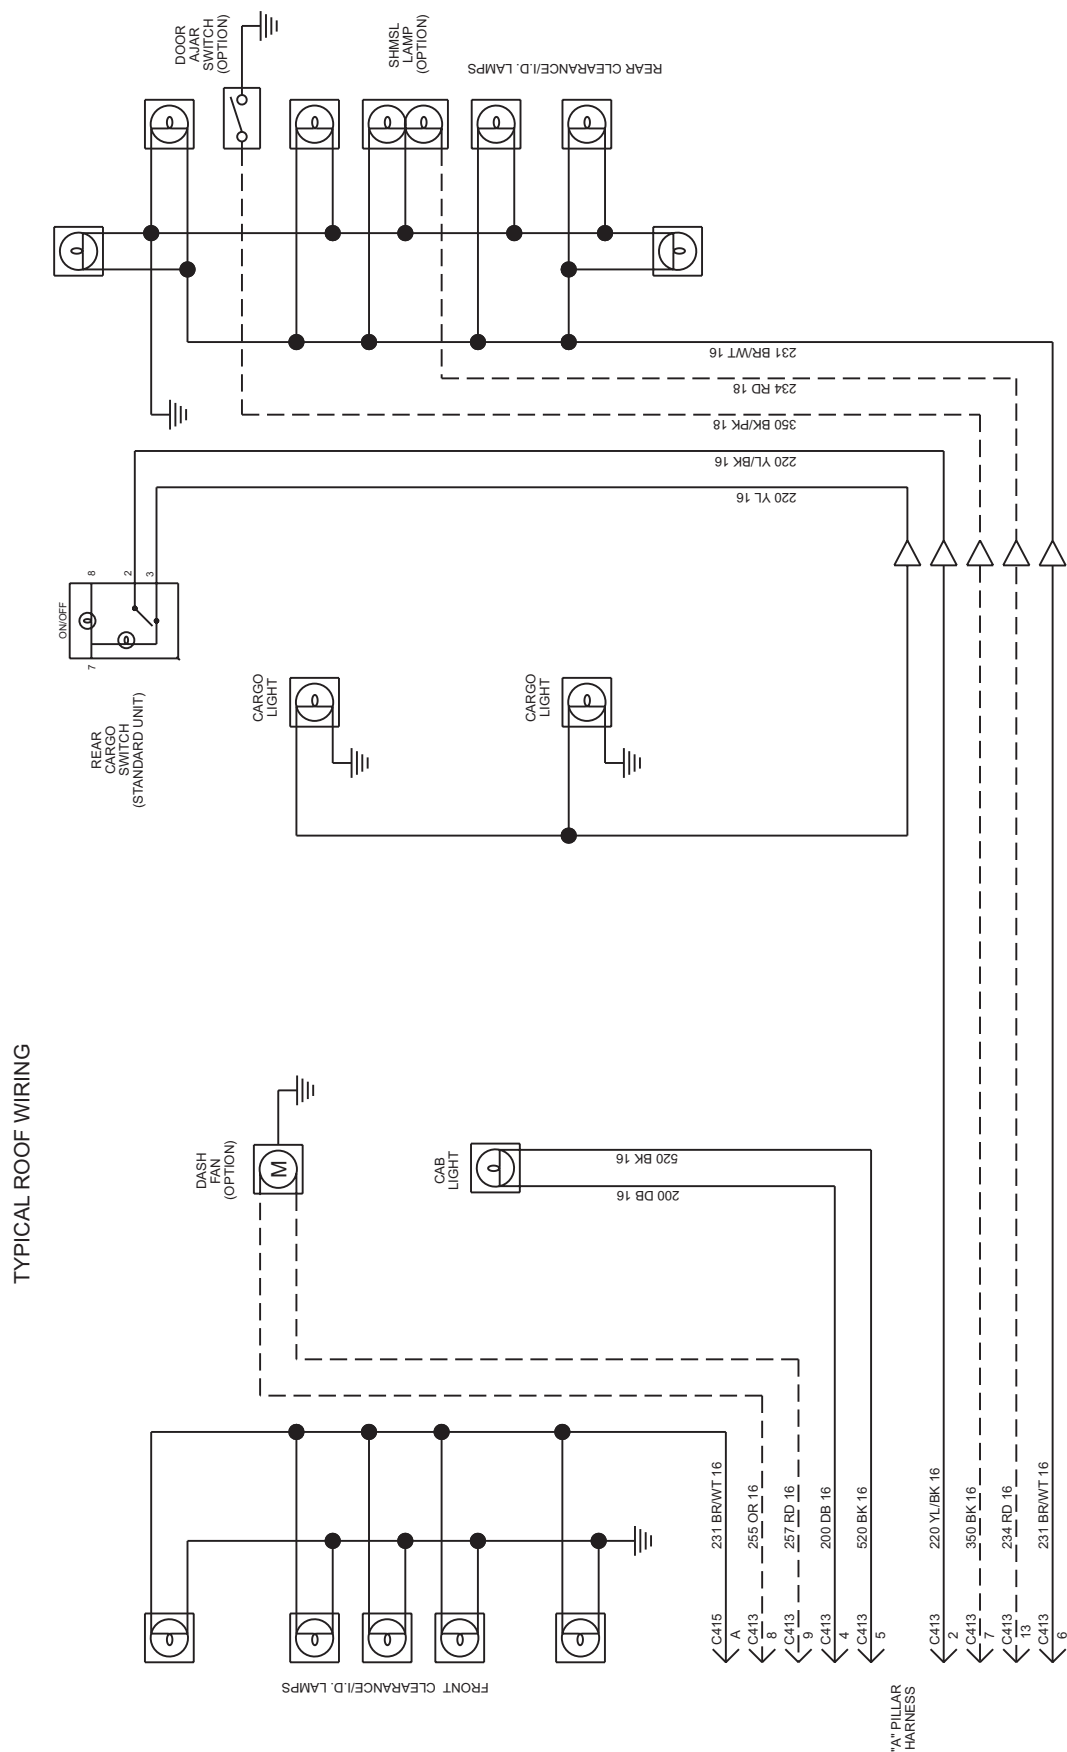


20—Power Vent

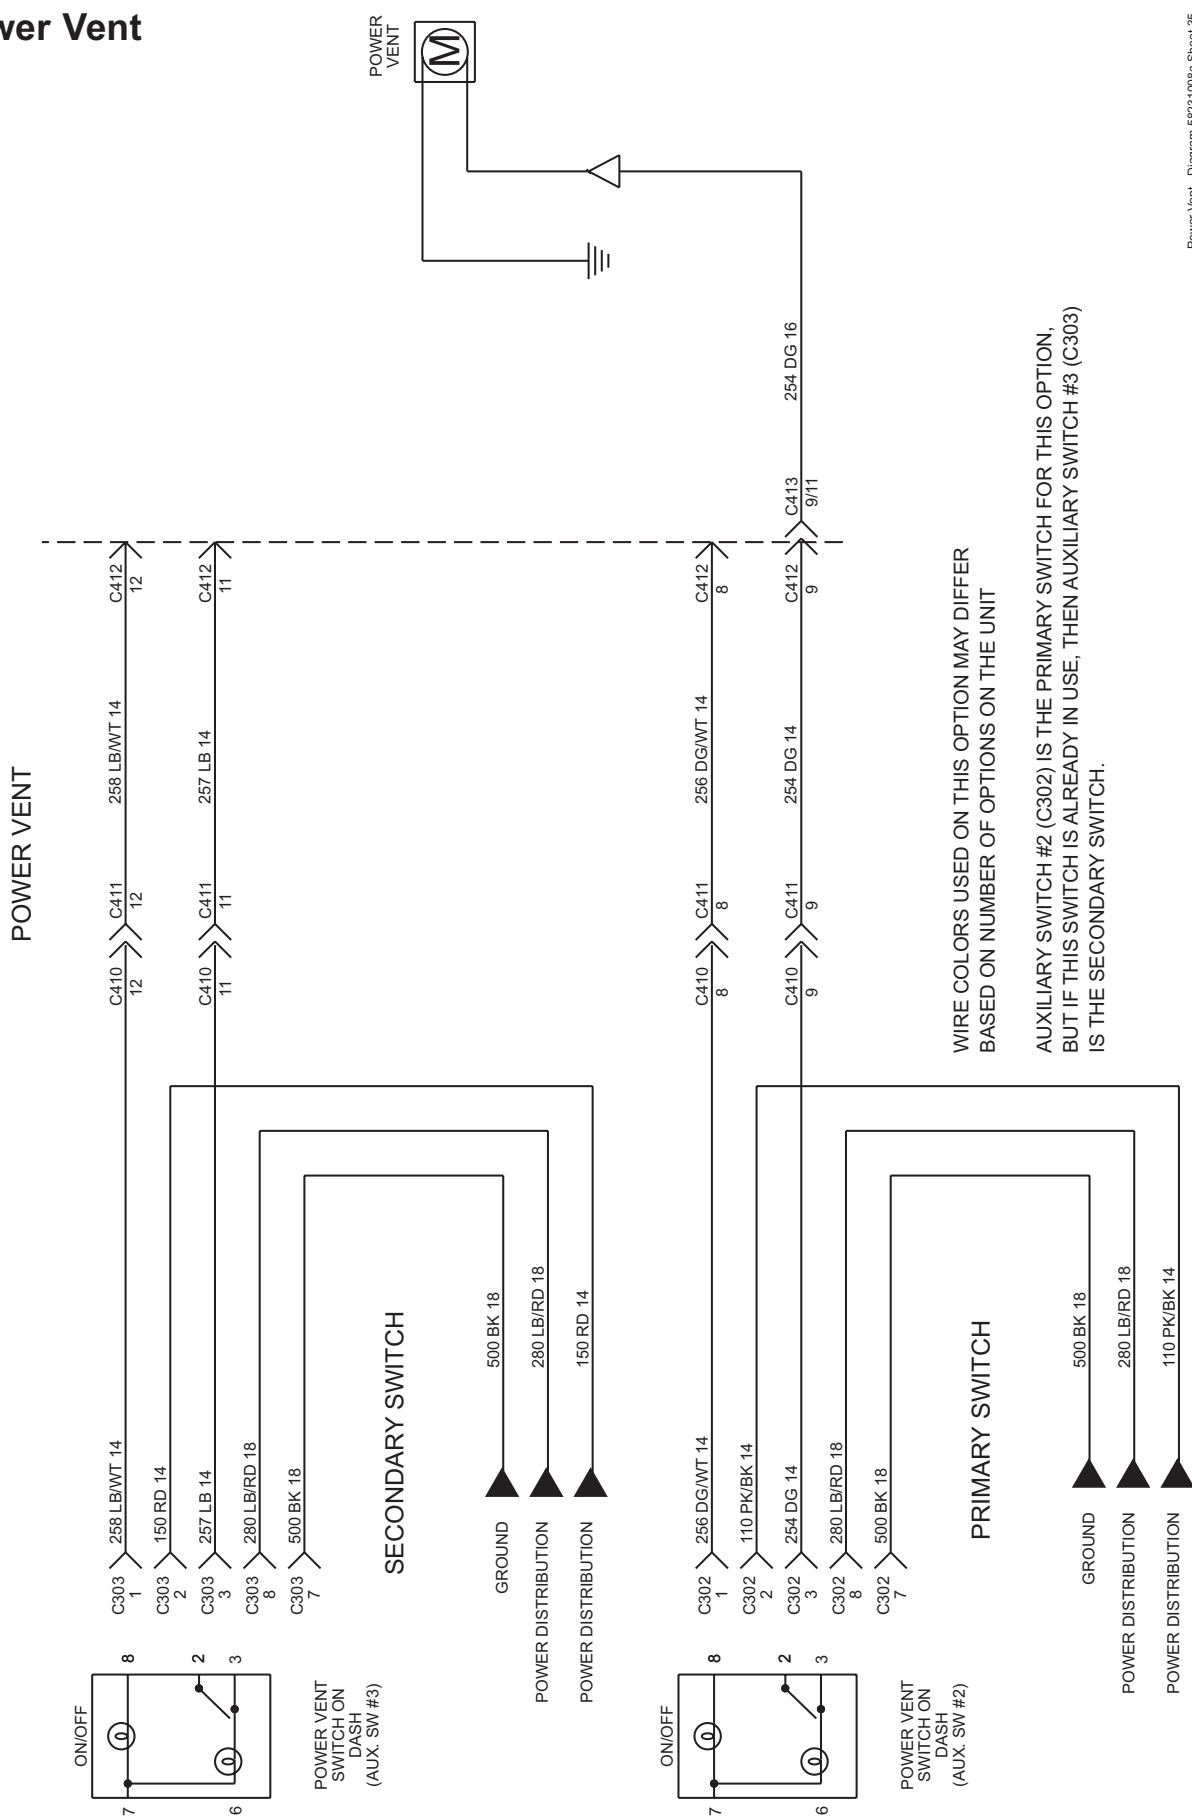

21—Stereo System

STEREO SYSTEM

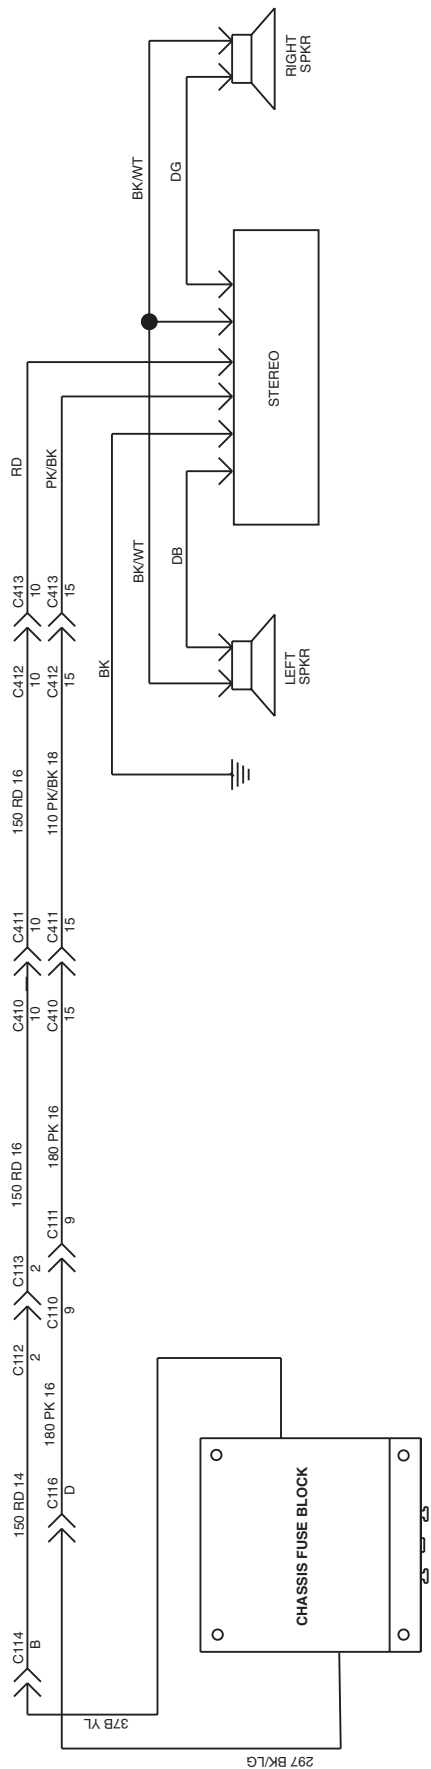

Stereo Sys - Diagram 56231009uc26


22—Accessory Outlet (Cigarette Lighter)



WARNING: Connecting unauthorized devices to the vehicle's wiring can potentially cause vehicle malfunction, damage, fire, personal injury, and/or voiding of the warranty. Contact Utilimaster before connecting any devices to the vehicle's wiring other than plugging into a supplied accessory outlet (cigarette lighter).


NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.

ACCESSORY OUTLET

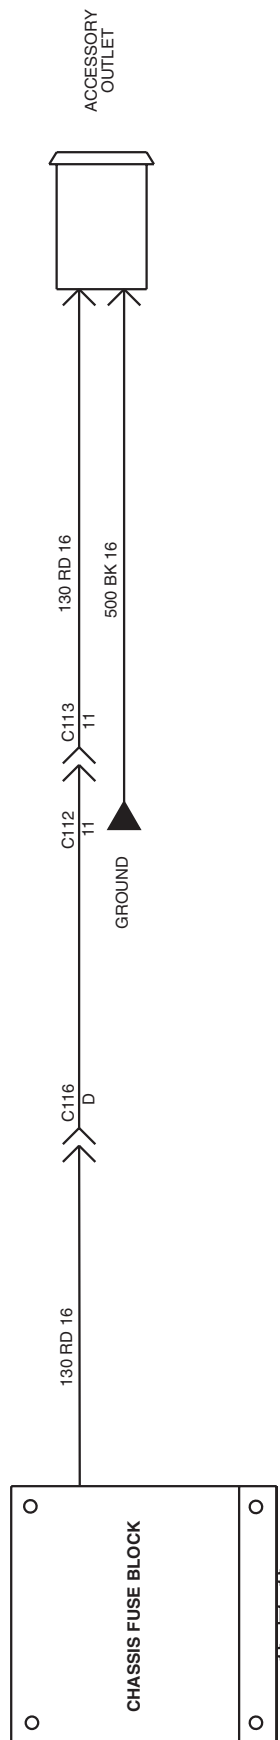

Accessory Outlet - Diagram 58231009ax28


23—Dash Fan

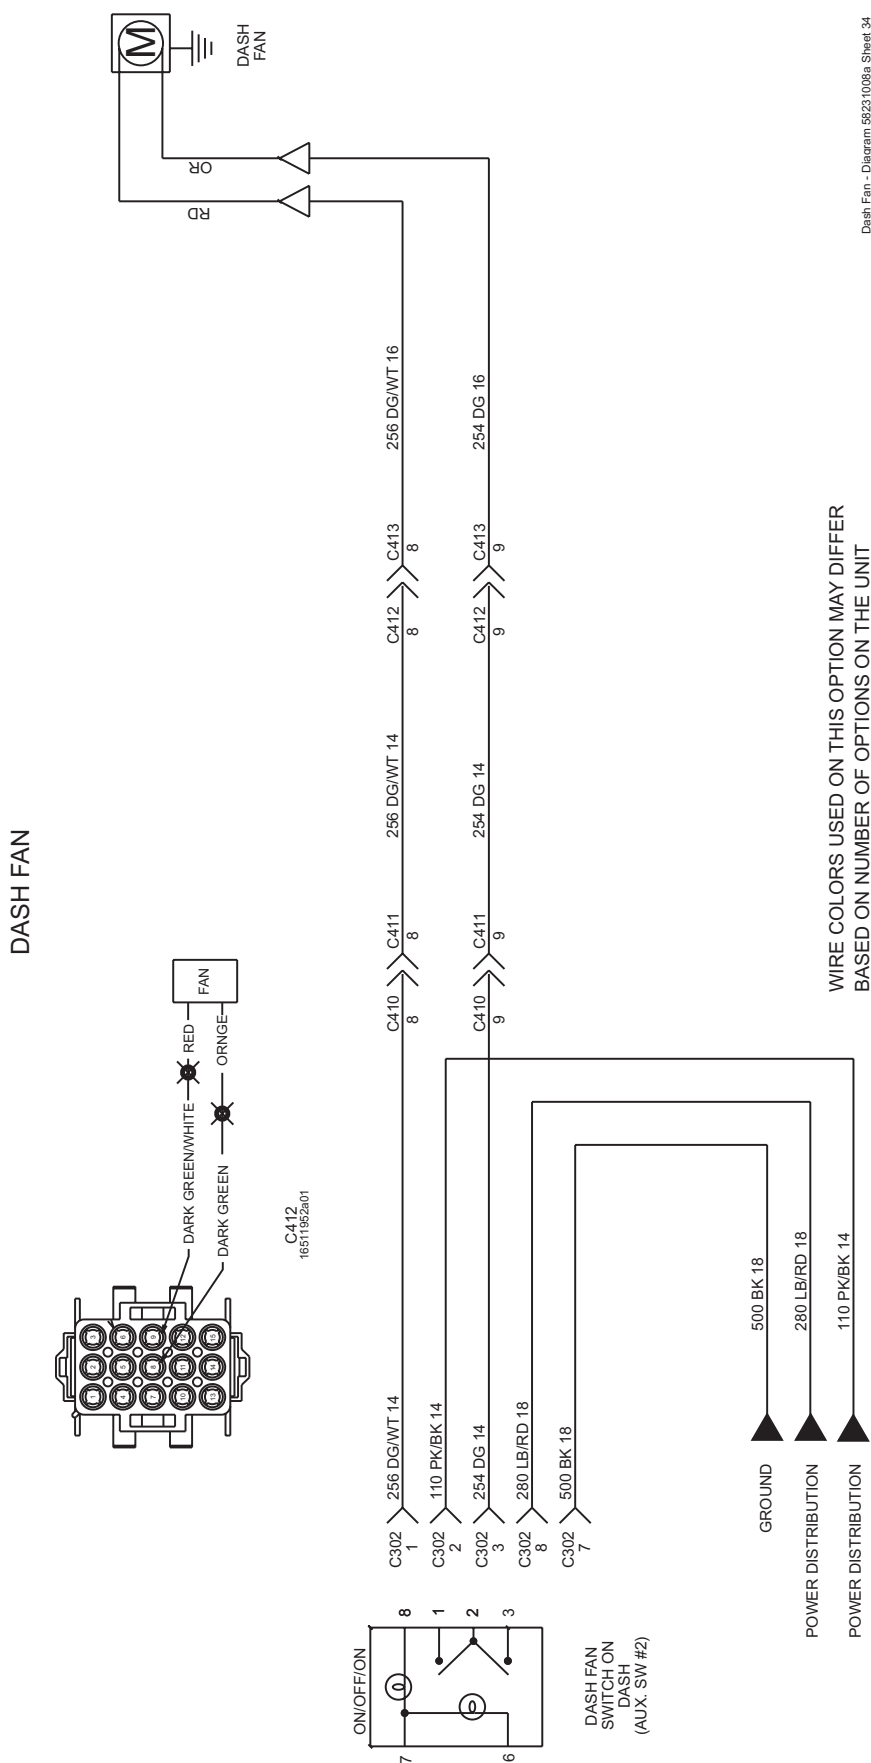

24—Door Ajar System


NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.

DOOR AJAR

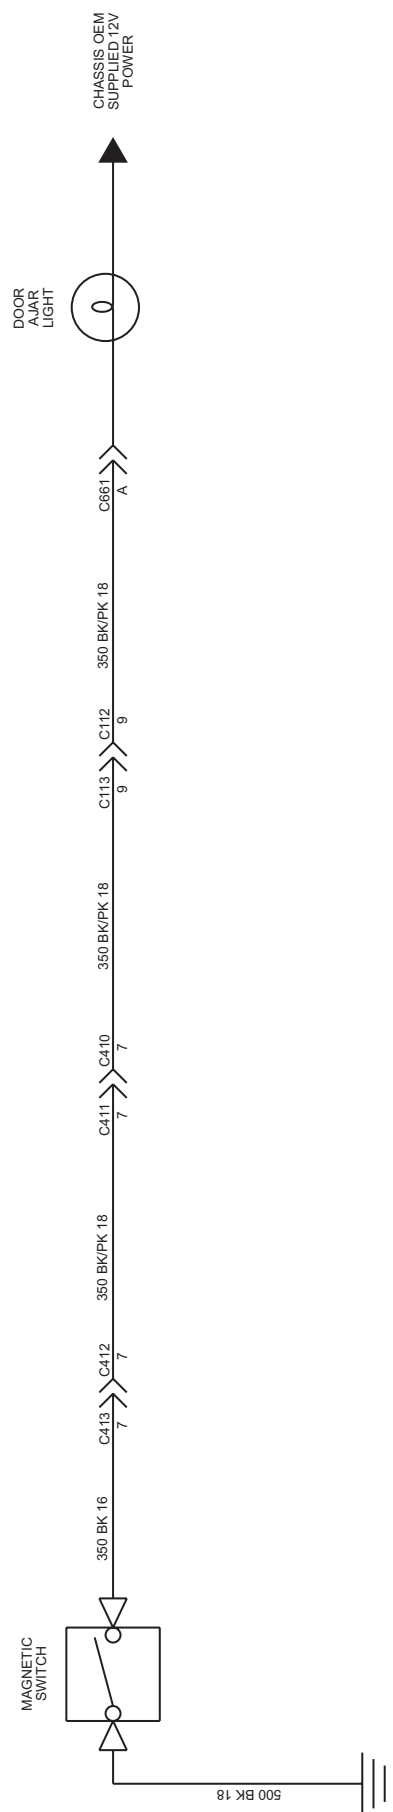



Door Ajar - Diagram 58231006a Sheet 27

25—Heated Mirrors

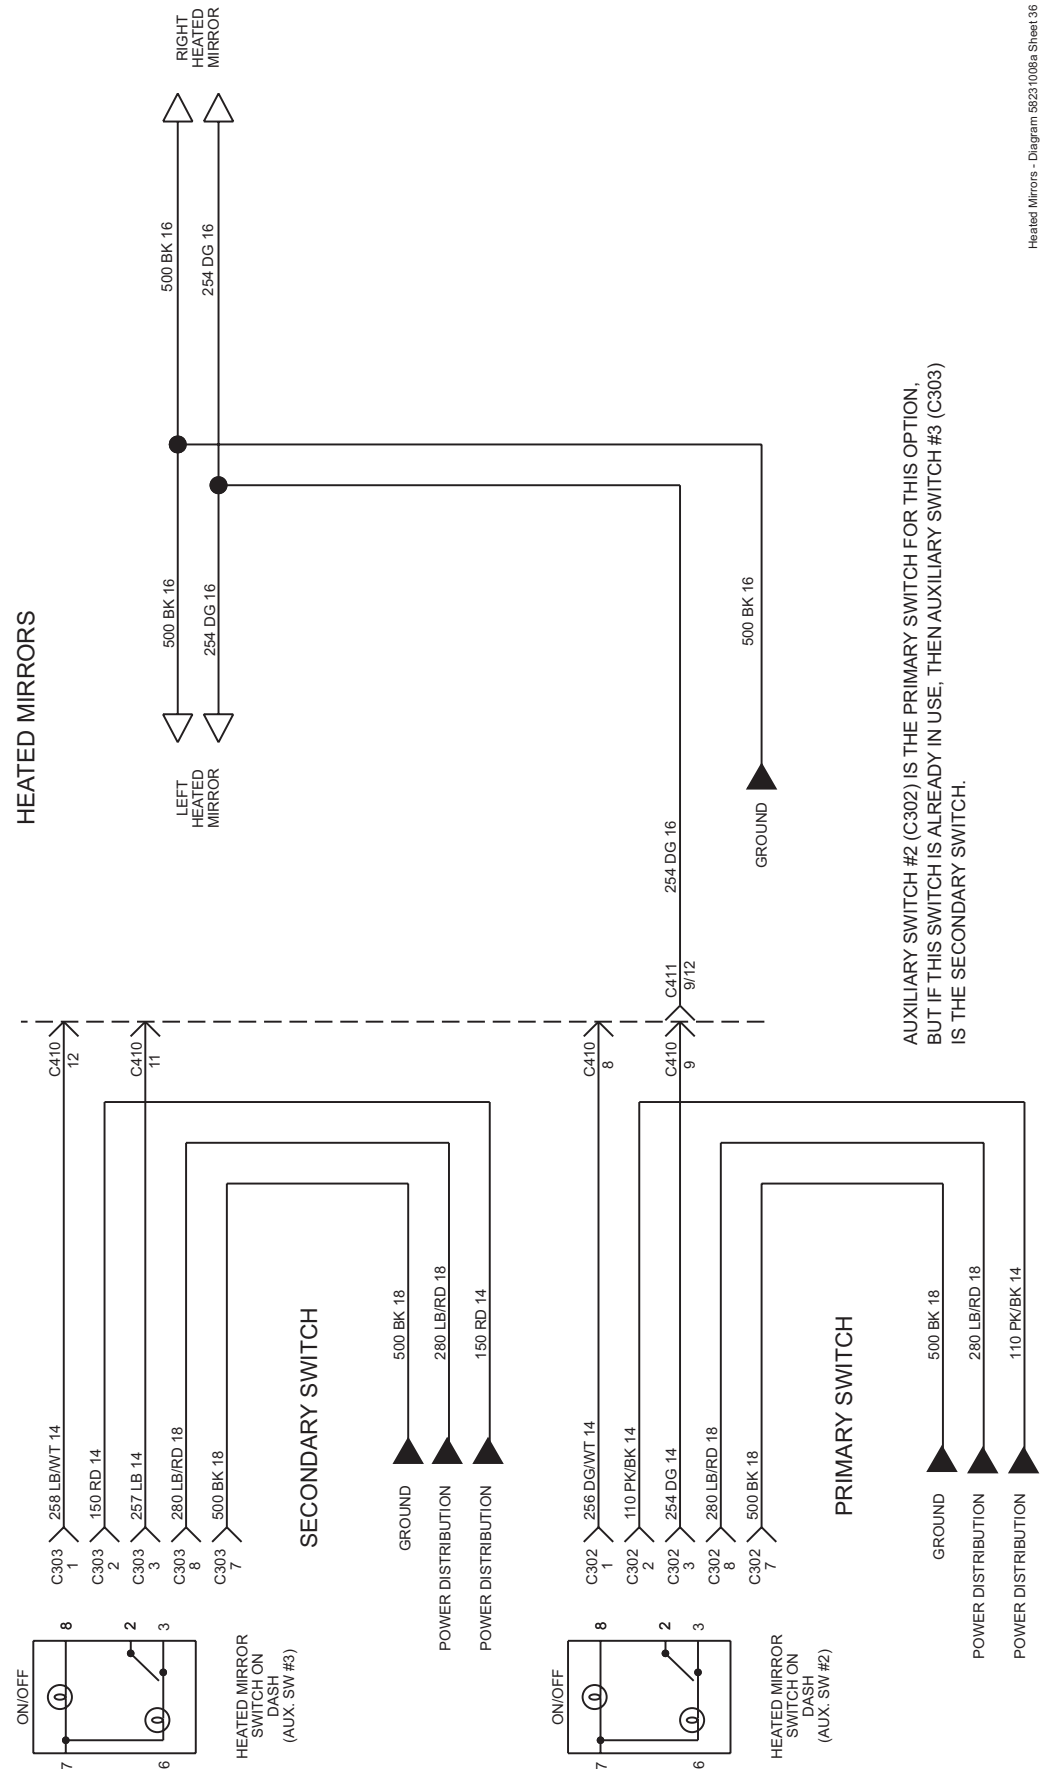

26—Spotlight or Strobe Light

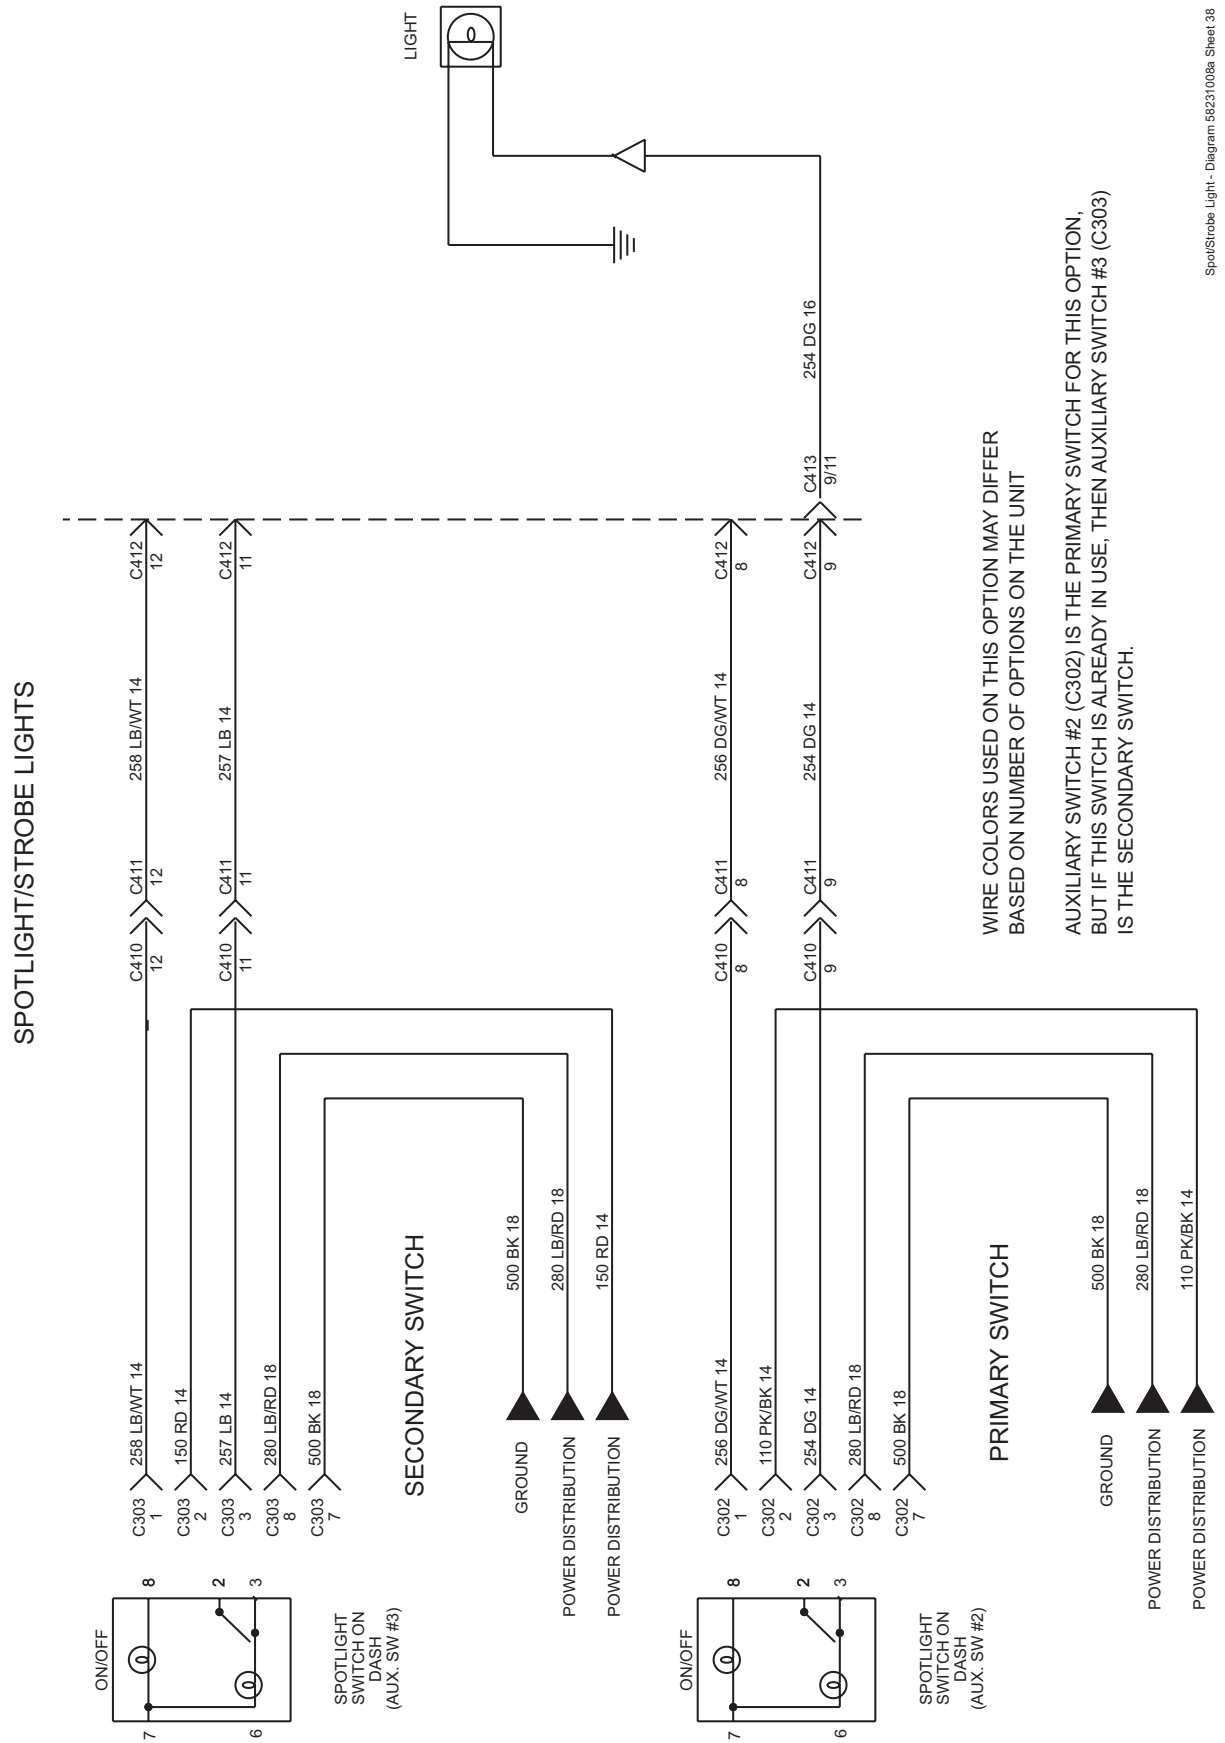

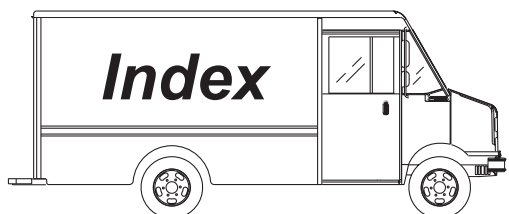

A

A/C. *See* HVAC

Accessory outlet 48

Address

National Highway Traffic Safety Administration 10

Transport Canada 10

U.S. Department of Transportation 10

Utilimaster

Customer Service 7

Publications department 3

Air conditioning. *See* HVAC

Alarm, back-up 39, 41

Auxiliary heater. *See* Heater

B

Back-up. *See* Alarm and Light

Battery

Access 10

Disconnection 11

Body serial number 8

C

Cautions 9

CHMSL (Center High Mount Stop Light). *See*
Light: Supplemental High Mount Stop
Light (SHMSL)

Cigarette lighter. *See* Accessory outlet

Circuit number identification 13

Color code 12

Color codes 13

Connectors 14, 15, 16, 17, 18, 19

D

Door ajar system 50

DRL (Daytime running lights) 37, 38

E

Electrical parts 7

Email 7

F

Fan, dash 45, 49

Federal Certification Label 8

Finding information 6

Ford chassis 6

G

Glossary of terms 7

Grounding system 23

H

Harness layout 19

Heated mirrors 51

Heater. *See also* HVAC

Auxiliary 34

System (no A/C) 30, 31

HVAC 32, 33. *See also* Heater

L

Light

Back-up 39, 40, 41, 42

Cab 45

Cargo 25, 27, 28, 45

Center High Mount Stop Light

(CHMSL). *See* Light: Supplemental
High Mount Stop Light (SHMSL)

Clearance 44, 45

Daytime running (DRL) 37, 38

Forward 38

Front 36, 37

Head light 36, 37, 38

HVAC Panel 35

License plate 39, 40, 41, 42

Master three-way switch

25, 26, 27, 28

Rear 39, 40, 41, 42

Roof 45

Side marker 36, 37, 38

Spot 52

Stop 39, 40, 41, 42

Strobe 52

Supplemental High Mount Stop Light
(SHMSL) 45

Tail 39, 40, 41, 42

Turn signal 36, 37, 38, 39, 40, 41

M

Mirrors, heated 51

N

Notes 9

Numbers

- Body serial number 8
- Engineering drawing 6
- Index 6
- Phone 7, 10
- Section 6
- Sheet 6
- VIN 8
- Work order 8

O

Outlet. See Accessory outlet

P

Parts guide and manuals 7

Phone numbers

- NHTSA 10
- Transport Canada 10
- Utilimaster Customer Service 7

Power distribution 20

R

Revision control 3

S

Safety

- Considerations 9
- Defects, reporting 10

Sections 6

Serial number 8

Spotlight 52

Stereo system 47

Strobe light 52

Switches

- A/C 32, 33
- Auxiliary 24
- Auxiliary heater 34
- Blower 30, 31, 32, 33
- Cargo 25, 27, 28
- Dash 49
- Heated mirror 51
- Hi/Lo (A/C) 32, 33
- Power vent 46
- Spotlight 52
- Strobe 52
- Thermo (A/C) 32, 33

U

Utilimaster body parts manuals 7

Utilimaster body serial number 8

Utilimaster Customer Service 7

Utilimaster Glossary of Terms 7

Utilimaster Quick Reference Parts
Guide 7

V

VACS 6

Vent, powered 46

VIN 8

W

Warnings 9

Web site 3, 6, 7

Wiper system 29

Work order number 8



Part Number: 03102245-WY97EN

©Utilimaster Corporation, 65906 State Road 19, P.O. Box 585, Wakarusa, Indiana, 46573–0585, USA
