



Fire Extinguisher

Kit 23003502SK

Contents

<i>Introduction</i>	2
<i>Kit Parts List</i>	2
<i>Notes, Cautions, and Warnings</i>	3
<i>Installation Instructions</i>	4
<i>Revision Control</i>	6
<i>Important Notices</i>	6

Customer Service

574-848-2073

Monday–Friday 8 a.m. to 5 p.m. Eastern Standard Time Zone

Email: Parts@Utilimaster.com

NOTE: The information in this document is generic. Images and procedures may differ from those for vehicles you are servicing. Because Utilimaster manufactures customized vehicle solutions, this document cannot list and illustrate every possible option for every vehicle. The most common body options are described here. Use this information as a guideline.

Introduction

This document provides instructions for mounting a fire extinguisher kit behind the driver's seat on a RAM ProMaster™ cargo van.

This manual contains drawings and photos to aid in servicing the vehicle. It may include maintenance information on some items provided but not manufactured by Utilimaster Corporation. Items such as drivetrain components and certain interior furnishings may be covered by separate manufacturer-supplied information. Information provided here is intended to assist Utilimaster customers and is in no way meant to replace or supersede instructions provided by other suppliers for their products.



Fire extinguisher kit

Kit Parts List

23003502SK Fire Extinguisher		
QTY	PART NUMBER	DESCRIPTION
1	03104592-N003EN	FIRE EXTINGUISHER INSTALL INSTRUCTIONS
1	06938480	MOUNT FIRE EXTINGUISHER
2	11300177	SCREW STP PH TX 1/4-20 X .75 ZN
2	11602338	SCREW SHTM #10 X 2.00 PNH PHL ZN
1	21311567	FIRE EXT DISPOSABLE 2.5# ABC
1	21311568	BRACKET MTL DISPOSABLE FIRE EXT
1	23003502	FIRE EXTINGUISHER PROMASTER INSTALL (DRAWING)

Notes, Cautions, and Warnings

Reading through the procedures, you will see NOTES, CAUTIONS, and WARNINGS. Each is there for a specific purpose.

NOTES give additional information that will help you complete the procedure.

CAUTIONS warn against making an error that could damage the vehicle.

WARNINGS remind you to be careful when there is risk of personal injury.



When you see this symbol, read this statement first! This alert highlights information that may reduce the risk of personal injury or vehicle damage.

Below are some basic WARNINGS that you should heed when you work on the vehicle's body. They are not all-inclusive and common sense must be used when servicing vehicles.


- Always read and understand all instructions before starting.
- Always wear safety glasses and other appropriate protective equipment (gloves, steel-toed shoes, face shields, knee pads, hearing protection).
- Put the transmission in Park, and set the parking brake before working on the vehicle.
- Be sure that the ignition switch is Off unless otherwise required by the procedure.
- Keep your hair, clothing, and body away from all moving parts such as engine pulleys and power tools.
- Always remove rings, watches, hanging jewelry, and loose clothing before working in tight areas.
- Read and understand all warning labels.
- Always use proper ladders or scaffolding to perform required jobs.
- Always make sure tools are in proper working condition and have guards and safety devices in place.
- Use only the recommended tools for a specific job.
- If at any time you lack confidence in performing a specific repair procedure or in operating the tools safely to perform the repair, STOP! Call your local dealer or a Utilimaster representative.

Installation Instructions



CAUTION: Discard ALL used fasteners and replace with new. If using a fastener that does NOT have preapplied thread lock, apply a medium-grade liquid thread lock.

1. Read and understand all instructions before starting work.
2. Validate the packing slip with the list of parts in the instructions.

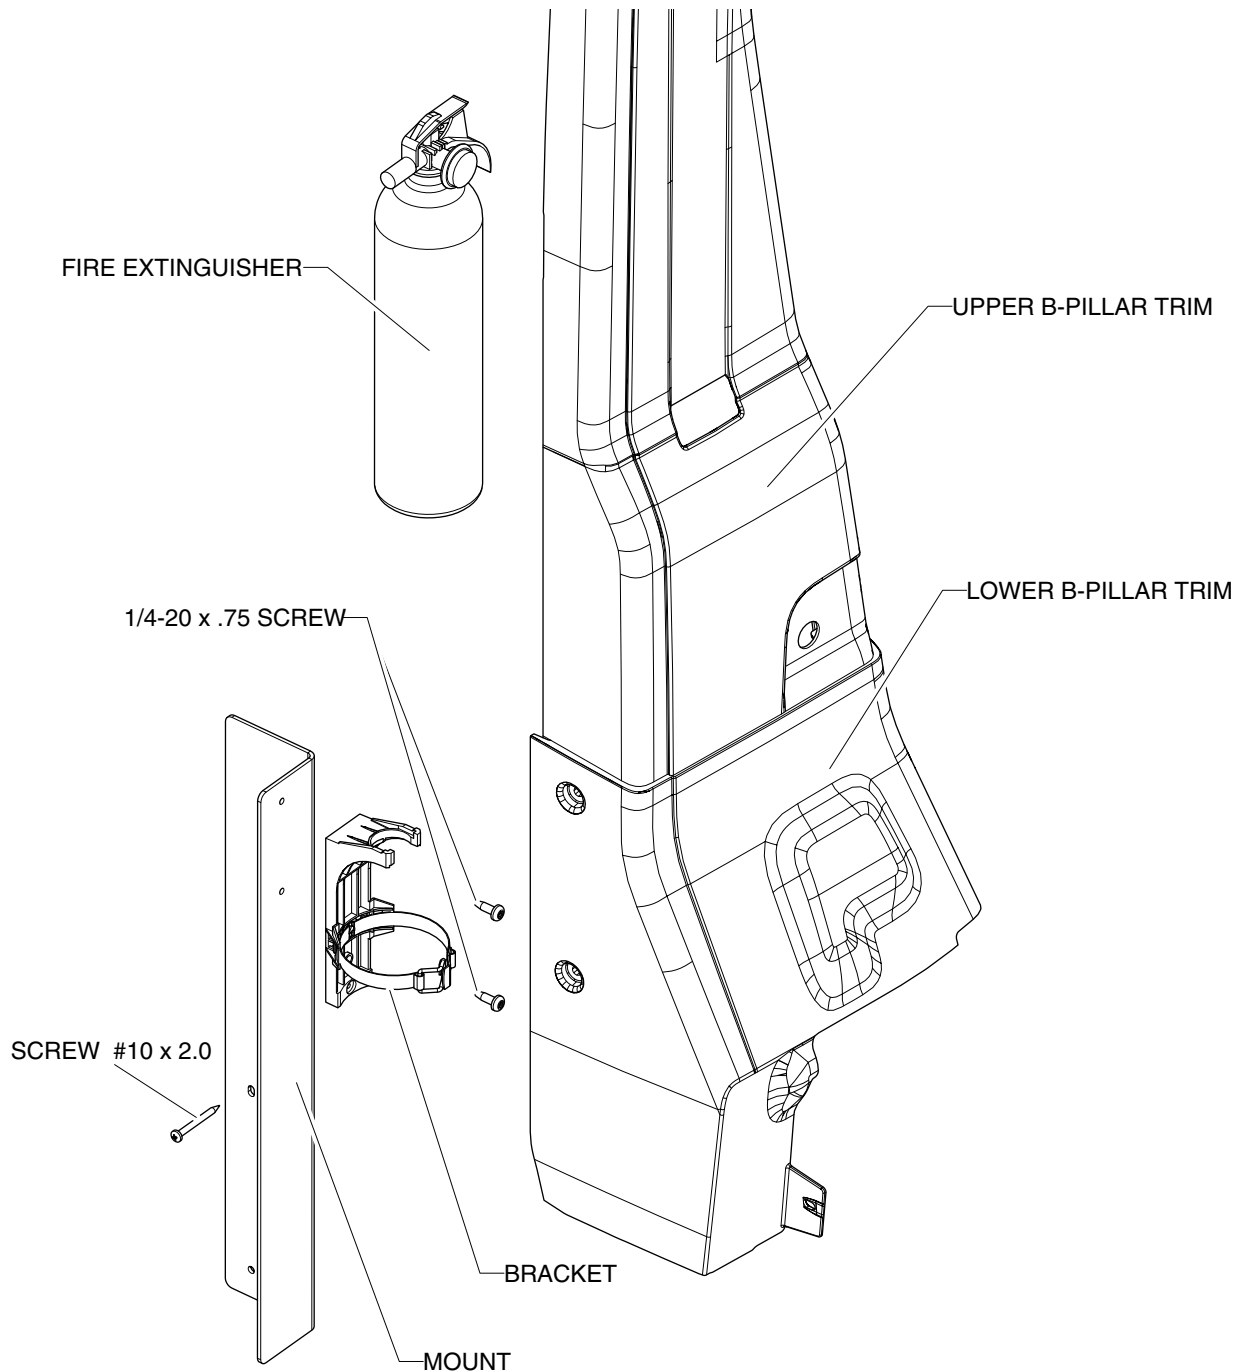

Overview of fire extinguisher on LH B-pillar

3. Use (2) 1/4-20 x .75 screws to secure the fire extinguisher bracket to the mount.
4. Remove (2) existing fasteners from the LH lower B-pillar trim and discard.



Lower B-pillar trim fasteners

5. Align fire extinguisher bracket with B-pillar trim fastener holes and secure with (2) #10 x 2.00 screws.
6. Secure fire extinguisher in bracket.



Fire extinguisher bracket fasteners



Fire extinguisher in bracket

Revision Control

Document Part Number: 03104592-N003EN

Revision: A

March 2014

Important Notices

© 2014, Utilimaster Corp.®

Title: *ProMaster—Fire Extinguisher*

Utilimaster Corporation attempts to provide information that is accurate, complete, and useful. All information contained in this manual is based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice.

This material is confidential and the property of Utilimaster. It is shared with your company for the sole purpose of helping you with the operation of the described equipment.

Utilimaster makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Utilimaster shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Utilimaster expressly disclaims all responsibility and liability for the installation, use, performance, maintenance, and support of third-party products. Customers are advised to make their independent evaluation of such products.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Utilimaster.

Utilimaster® is a registered trademark of Utilimaster Corporation. All other products or name brands mentioned in this document are trademarks of their respective owners.

Browse our web site www.utilimaster.com for more information about Utilimaster and its products.