



Ford Transit™

Cab Flooring Overlay

Gasoline Engine

Kit Number 23003592SK

Contents

<i>Introduction.....</i>	<i>2</i>
<i>Notes, Cautions, and Warnings.....</i>	<i>3</i>
<i>Recommended Tools.....</i>	<i>3</i>
<i>Kit Part List.....</i>	<i>4</i>
<i>Installation Instructions.....</i>	<i>5</i>
<i>Revision Control.....</i>	<i>7</i>
<i>Important Notices.....</i>	<i>7</i>

Customer Service

574-848-2073

Monday–Friday 8 a.m. to 5 p.m. Eastern Standard Time Zone

Email: Parts@Utilimaster.com

NOTE: The information in this document is generic. Images and procedures may differ from those for vehicles you are servicing. Because Utilimaster manufactures customized vehicle solutions, this document cannot list and illustrate every possible option for every vehicle. The most common body options are described here. Use this information as a guideline.

Document Part Number: 03104504-N005EN

– Revision A –

Introduction

This document provides instructions for the installation of a passenger side cab flooring overlay into the Ford Transit™ cargo van (gasoline engine only). **For the cab flooring overlay, the van MUST be ordered without the passenger seat from the factory.**

This manual contains drawings and photos to aid in servicing the vehicle. It may include maintenance information on some items installed but not manufactured by Utilimaster Corporation. Items such as drivetrain components and certain interior furnishings may be covered by separate manufacturer-supplied information. Information provided here is intended to assist Utilimaster customers and is in no way meant to replace or supersede instructions provided by other suppliers for their products.



Cab flooring overlay kit

Notes, Cautions, and Warnings

Reading through the procedures, you will see NOTES, CAUTIONS, and WARNINGS. Each is there for a specific purpose.

NOTES give additional information that will help you complete the procedure.

CAUTIONS warn against making an error that could damage the vehicle.

WARNINGS remind you to be careful when there is risk of personal injury.



When you see this symbol, read this statement first! This alert highlights information that may reduce the risk of personal injury or vehicle damage.

Below are some basic WARNINGS that you should heed when you work on the vehicle's body. They are not all-inclusive and common sense must be used when servicing vehicles.

- Always read and understand all instructions before starting.
- Always wear safety glasses and other appropriate protective equipment (gloves, steel-toed shoes, face shields, knee pads, hearing protection).
- Put the transmission in Park, and set the parking brake before working on the vehicle.
- Be sure that the ignition switch is Off unless otherwise required by the procedure.
- Keep your hair, clothing, and body away from all moving parts such as engine pulleys and power tools.
- Always remove rings, watches, hanging jewelry, and loose clothing before working in tight areas.
- Read and understand all warning labels.
- Always use proper ladders or scaffolding to perform required jobs.
- Always make sure tools are in proper working condition and have guards and safety devices in place.
- Use only the recommended tools for a specific job.
- If at any time you lack confidence in performing a specific repair procedure or in operating the tools safely to perform the repair, STOP! Call your Utilimaster representative.

Recommended Tools




WARNING: Always wear safety glasses and other proper protective equipment (gloves, steel-toed shoes, face shields, knee pads, hearing protection) as appropriate to the process.

Below are some tools that you will need for this process. There may be other commonly used hand tools required but not specifically mentioned.

- Torx bit set and driver
- Standard and metric combination and ratchet wrench sets including swivel adapter and extensions


Kit Part List

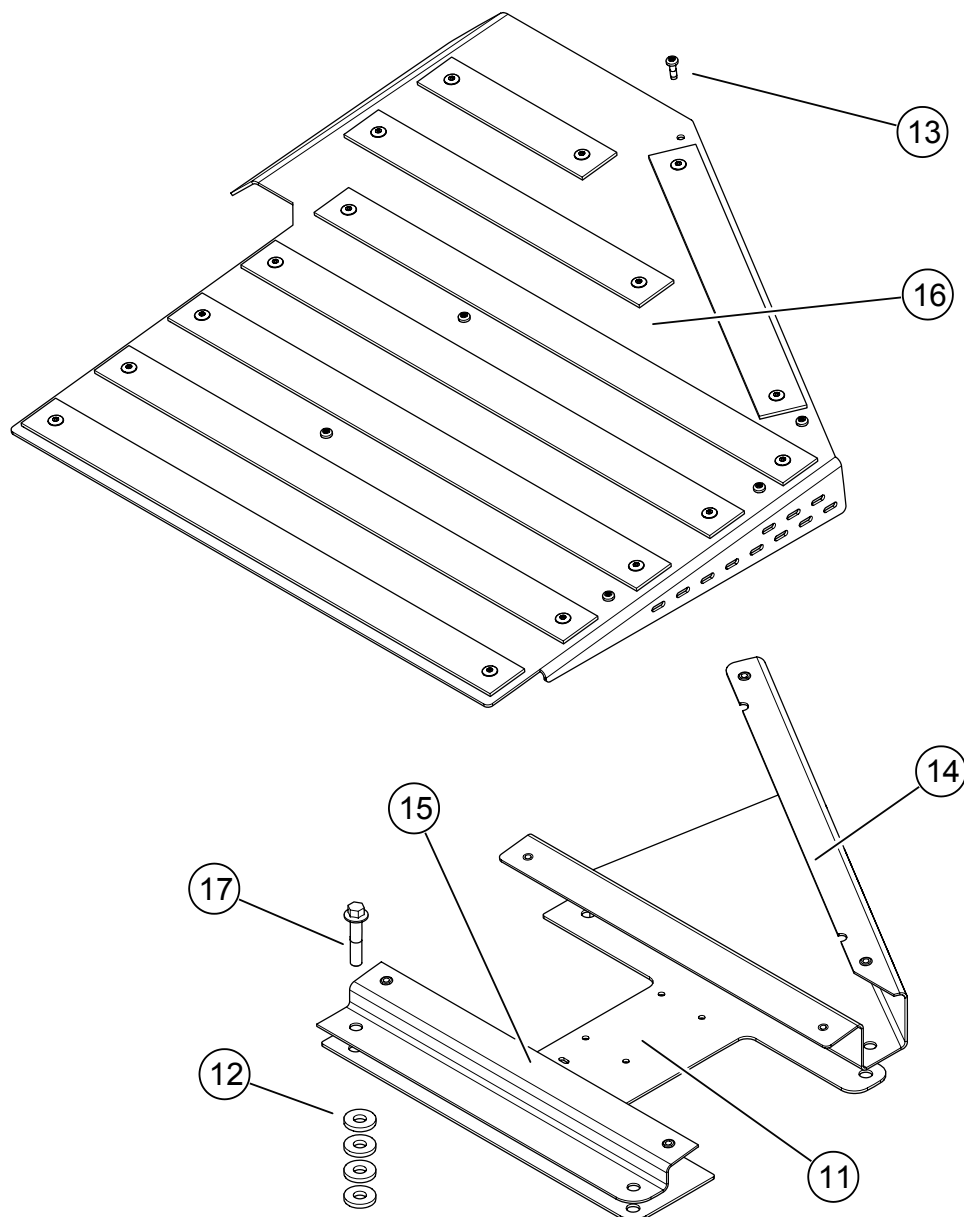


23003592SK		Transit-FLOORING - CAB PASSENGER OVERLAY	
BOM ID	Part Number	Description	Qty
0	23003592SK	23003592b CAB FLOOR OVERLAY TRNST	1
11	06939706	MOUNT DOSING MODULE TRNST	1
12	11000084	WASHER (SPACER) .531 ID x 1.31 OD	16
13	11300235	SCREW 1/4 - 20 x 13/16	6
14	23003621	SUBASM RISER FRONT CAB FLOOR OVERLAY TRNST	1
15	23003622	SUBASM RISER REAR CAB FLOOR OVERLAY TRNST	1
16	23003593	SUBASM CAB FLOOR OVERLAY TRNST	1
17	UT29-BB1-016	BOLT M12-1.75 x 60 FLG	4
NS_1	03104504-N005EN	CAB FLOORING OVERLAY INSTALL INSTRUCT	1

Installation Instructions

1. Read and understand all instructions before starting work.
2. Validate the packing slip with the list of parts in the instructions.
3. Place (4) flat washers in each fastener opening in the cab floor. The outboard curved edges of the plate fit inside the stepwell trim.

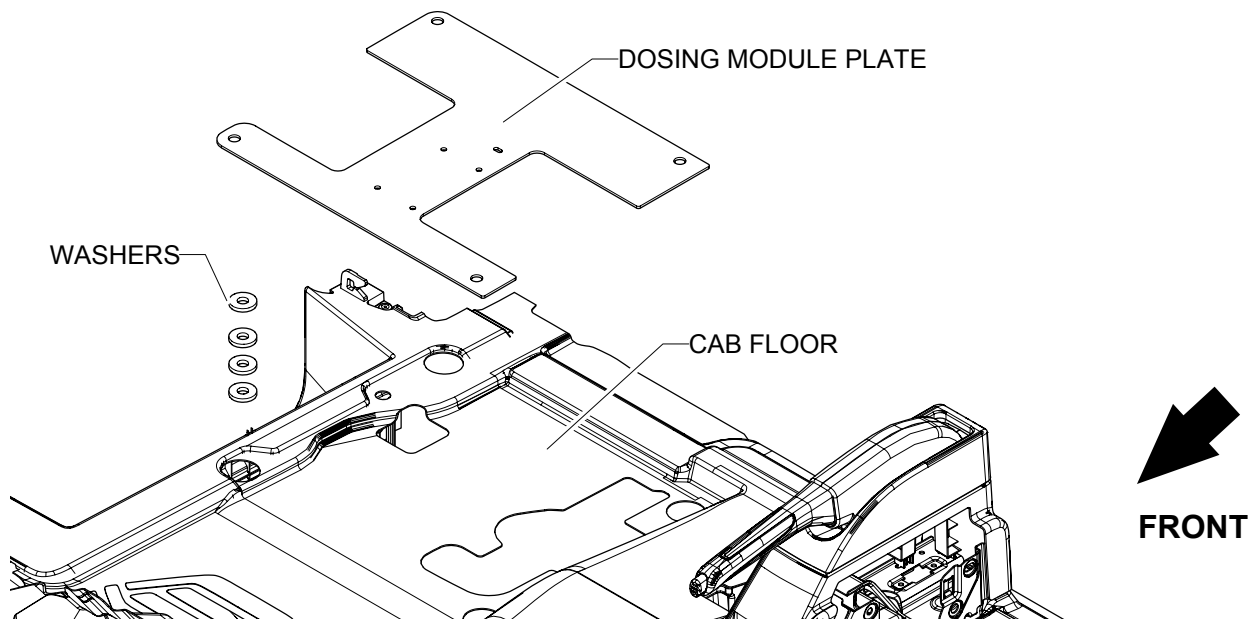


*Dosing module plate on passenger side cab floor
(Driver's seat not shown for clarity)*

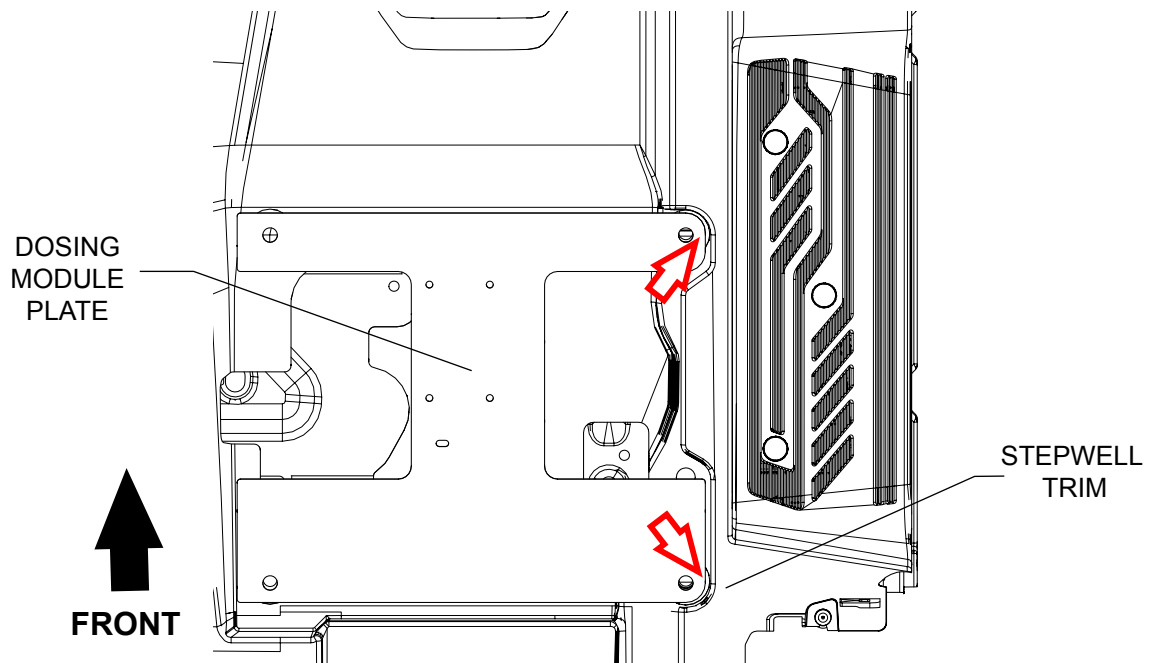


Dosing module plate aligned in stepwell trim

4. Use (4) M12 bolts to secure the front and rear risers, the dosing module plate and washers to the cab floor.
5. Use (6) 1/4-20 screws to secure the cab overlay to the floor risers.

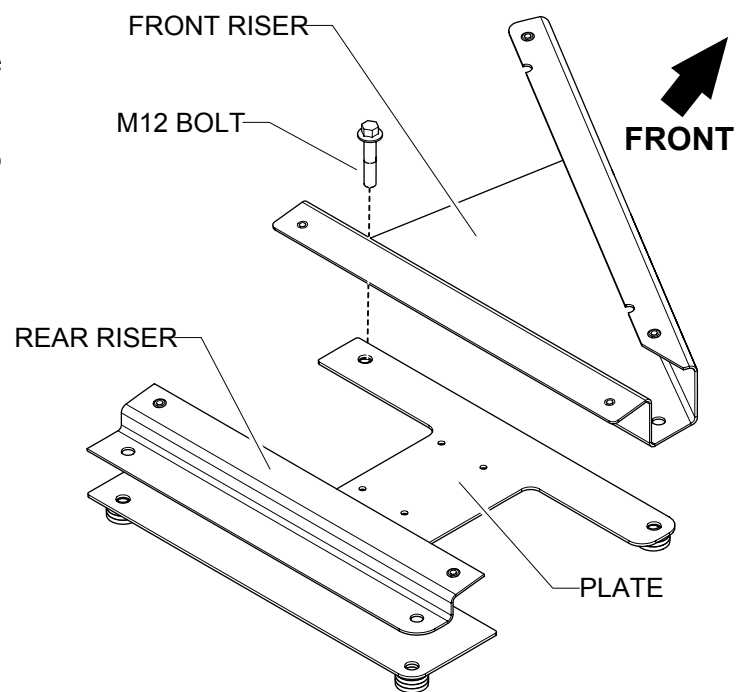

Front and rear riser fasteners

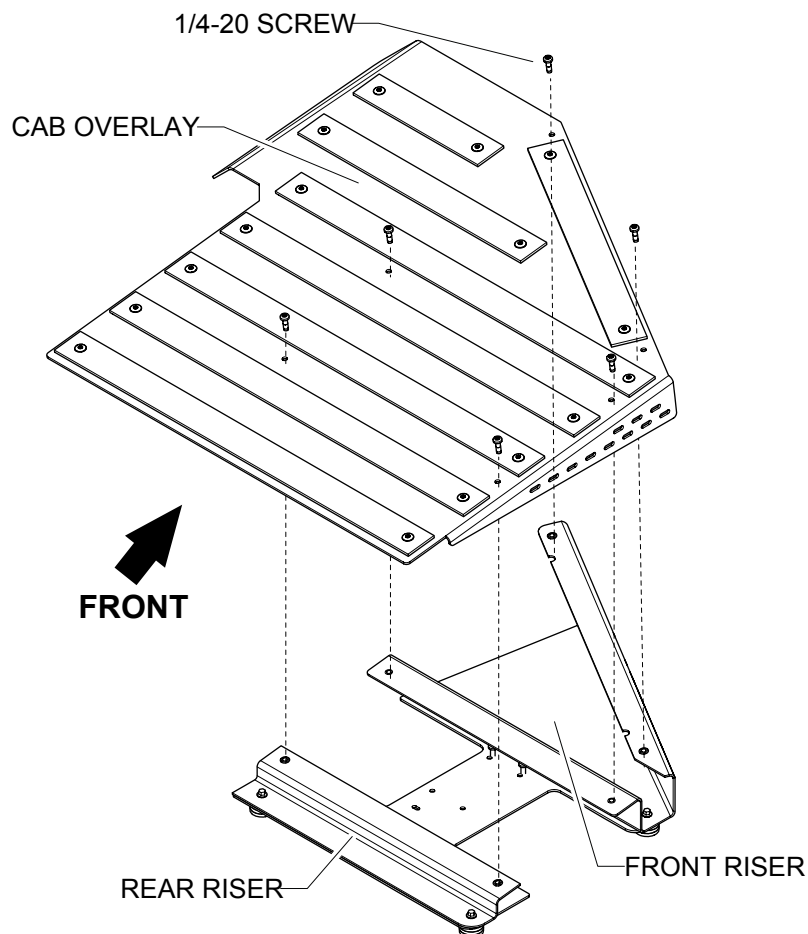

Cab flooring overlay fasteners

Revision Control

Document Part Number: 03104504-N005EN

Revision: A

July 2014

Important Notices

© 2014, Utilimaster Corp.®

Title: *Transit—Cab Flooring Overlay*

Utilimaster Corporation attempts to provide information that is accurate, complete, and useful. All information contained in this manual is based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice.

This material is confidential and the property of Utilimaster. It is shared with your company for the sole purpose of helping you with the operation of the described equipment.

Utilimaster makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Utilimaster shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Utilimaster expressly disclaims all responsibility and liability for the installation, use, performance, maintenance, and support of third-party products. Customers are advised to make their independent evaluation of such products.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Utilimaster.

Utilimaster® is a registered trademark of Utilimaster Corporation. All other products or name brands mentioned in this document are trademarks of their respective owners.

Browse our web site www.utilimaster.com for more information about Utilimaster and its products.