



Body Parts Manual



Aeromaster on Ford Chassis

Read First: Top Tips on Using This Online Manual

Browse pages with Bookmarks (hyperlinks) or Thumbnails

Bookmarks, at the left of the screen, are hyperlinks to document pages. From any page in this document, you can use bookmarks to jump to any section heading.

To jump to a topic by using its bookmark, point to the bookmark name, and when the arrow becomes a pointing hand, click on the name. If a triangle (or + sign) appears to the left of the bookmark, click the triangle (or + sign) to show or hide subordinate bookmarks.




Thumbnails are visual icons of the actual pages. After selecting the thumbnail view button (Acrobat Reader ver. 3.0) or tab (ver. 4.0), you can quickly browse for parts sections just by the “look” of the page. Click on the appropriate thumbnail to view that page.



Use the Zoom and Fit tools for magnification of page sections

Select the Zoom tool. **(In ver. 4.0, when the Hand tool is selected, you can temporarily change to the Zoom tool by holding down the Ctrl key and the space bar at the same time.)** Click and drag to draw a rectangle around the area you want to magnify.

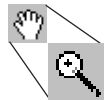

To return to an overview, you can click on one of the following buttons:

- The Fit Page button scales the *entire* page to display within the main window.
- The Fit Width button scales the page *width* to display within the main window.



Use the Text tool for copying selected text into other applications

You can select text in a PDF document, copy it to the Clipboard, and paste it into another application. **By pasting parts descriptions and numbers into your email, you can order parts much faster than through phoning or faxing.** To select text and copy it to the Clipboard:

1. Click the Text Selection tool.
2. Click and drag over the text you want to select. When you release the mouse button, the selected text stays highlighted.
3. Hold down the Ctrl key and press C on the keyboard to copy the selected text to the Clipboard.



Find parts or procedures with the Find tool

Use the Find tool to search for a fragment of a word, a complete word, or multiple words in the active document. To **find** a word (e.g., a part name):

1. Click the Find tool.
2. In the Find What text box, enter the text to be found and click Find. When the program finds the text, the Find dialog box closes and the page containing the text is displayed with the text highlighted.
3. To find the **next occurrence** of the word, press F3, press Ctrl + G, or reopen the Find dialog box and click Find Again.



Revision Control

Revision

Rev. A

Print Date

December 2002

Important Notices

©2002, Utilimaster.®

Printed in U.S.A.

Title: *Aeromaster on Ford Chassis—Body Parts Manual*

Utilimaster Corporation attempts to provide information that is accurate, complete, and useful. All information contained in this manual is based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice. Should you find inadequacies in the text, please send your comments to the following address:

Utilimaster
Attn: Designer of Technical Publications
65906 State Road 19, P.O. Box 585
Wakarusa, Indiana, 46573-0585, U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

This material is confidential and the property of Utilimaster. It is shared with your company for the sole purpose of helping you with the operation of the described equipment.


Utilimaster makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Utilimaster shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Utilimaster expressly disclaims all responsibility and liability for the installation, use, performance, maintenance, and support of third-party products. Customers are advised to make their independent evaluation of such products.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Utilimaster.

Utilimaster® and Aeromaster® are a registered trademarks of Utilimaster Corporation.

Browse the award-winning web site www.utilimaster.com for more information about Utilimaster and its products.

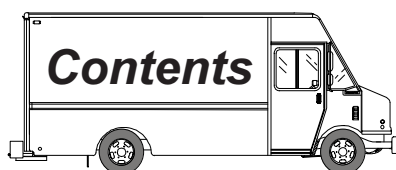

<i>Revision Control</i>	3
<i>Important Notices</i>	3
<i>Introduction</i>	7
<i>Decoding Part Numbers</i>	7
<i>Finding Part Numbers</i>	7
<i>Item Numbers</i>	7
<i>Part Numbers with a Suffix</i>	8
<i>Part Descriptions</i>	8
<i>Model Numbers</i>	9
<i>VIN Number</i>	9
<i>Body Serial Number</i>	9
<i>Ordering Parts</i>	10
<i>How to Order</i>	10
<i>Returns</i>	10
<i>Customizable Parts Order Form</i>	10
<i>Faxable Parts Order Form</i>	11
<i>Filing Warranty Claims</i>	12
<i>Reporting Safety Defects (U.S. Only)</i>	13
<i>Diagrams and Parts Lists</i>	14
1—Chassis	14
1—Chassis, Rear Bumper Options	18
2—Front Cab Floor	20
3—Cargo Floor	24
4—Cowling	28
5—Front Structure	30
6—Hood, RIM	38
6—Hood, Fiberglass	44
6—Hood, Aluminum	48

7—Wiper System	50
8—Dash	54
9—Heat (Only) System	58
9—Heating and Air Conditioning System	62
10—Cab Floor Matting, Ribbed	68
10—Cab Floor Matting, Heavy Duty	70
11—Seating, Standard	72
11—Seating, Jump	76
12—Door, Side with Sliding Window	78
12—Door, Side with Roll-up Window	82
12—Door, Side Sedan	86
12—Doorless Panel with Roll-up Window	88
12—Doorless Panel with Electric Window	92
13—Cab Decals and Options	96
14—Bulkhead, Aluminum	98
14—Bulkhead, Blandex	104
14—Bulkhead, Surge Bars	106
15—Sidewalls	108
16—Rear Structure, Narrow Swing Doors	112
16—Rear Structure, Full Swing Doors	118
16—Rear Structure, Narrow Roll-up Door	122
16—Rear Structure, Full Roll-up Door	126
16—Rear Structure, Full Roll-up Door with Wide Post Option	128
17—Door, Rear Roll-up	132
17—Doors, Rear Swing	136
18—Cargo Shelving Option, Fold-up	140
18—Cargo Shelving Option, Laundry Racks	144
19—Roof	146
20—Positive Pressure System	150
21—Electrical Harnesses	152
21—Electrical Harnesses, Options	154

<i>Appendixes</i>	156
06914922— <i>Bulkhead Panels</i>	156
51231196— <i>Fitzpatrick Bumpers</i>	158
51231199— <i>Chassis Risers</i>	158
51231252— <i>Fitzpatrick Bumpers</i>	159
54000000— <i>Quarter Panels</i>	160
54231878— <i>Jump Seats</i>	161
55230967— <i>Rear Swing Door Metal</i>	162
55230969— <i>Rear Swing Door Metal</i>	163
55231017— <i>Kickplates</i>	165
<i>More Information</i>	166
<i>Utilimaster Quick Reference Parts Guide</i>	166
<i>Utilimaster Glossary of Terms</i>	166
<i>Utilimaster Body Service Manual</i>	166
<i>Download Files</i>	166
<i>Contact Utilimaster</i>	166
<i>Index</i>	167

Introduction

This manual lists parts for walk-in (Aeromaster®) van bodies built on Ford chassis covering Model Years 1996 and later. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible part in every vehicle. Nevertheless, the most common body options are described here, and Customer Service can help with other options not shown.



It contains exploded-view drawings and parts lists to aid in ordering replacement parts. This manual covers only those assemblies manufactured by or installed by Utilimaster® Corporation. Items such as chassis and drive train components or certain interior furnishings are covered by separate manufacturer-supplied information.

All information, specifications, and illustrations contained in this manual are based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice.

Decoding Part Numbers

Finding Part Numbers

This manual contains exploded-view drawings and parts lists for standard factory parts. The drawings illustrate the various parts and their general locations. The parts list accompanying a drawing describes each part and gives the corresponding Utilimaster part number. Some parts may appear on multiple drawings and lists.


To find a particular part number:

1. Use the Contents or Index pages to find the appropriate section of the manual.
2. Look at the diagram to find the drawing of the part required and note its item number.
3. Look at the parts list and cross-reference the item number to its corresponding description. If the description resembles the required part, note the corresponding Utilimaster part number. If the description does not seem correct, double-check the diagram.

Item Numbers

Drawings have item numbers identifying each part in the drawing:

- Item numbers lead with the section number (e.g., all **12.X** numbers are Side Door parts).
- The item numbers are listed numerically in the parts lists (e.g., **12.1**, **12.2**, **12.3**) followed by the Utilimaster part number and part descriptions.
- The corresponding side of the vehicle (if applicable) is identified by a **RH** (**Right Hand**) or **LH** (**Left Hand**) suffix. (See the directional icon here and on the parts list pages.)
- A numerical suffix (e.g., **12.1.1**) indicates a part variation, a component of the preceding part, or fasteners for the preceding part.

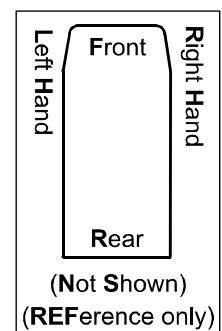

- Other item number suffixes might indicate vehicle height, width, chassis model number (see Model Numbers section), engine configuration, or other information that specifies that part (e.g., 5.19-**93** or 9.0 **H**).
- Parts that are not shown have the **X.NS** suffix.
- Assembly numbers (**X.Ref**) are listed only for Utilimaster parts representatives to cross-reference.

Part Numbers with a Suffix

A **part number with a suffix** might require you to include more information:

- The **Width** suffix (e.g., 12345678-**W**) is asking for the **body width** (78.5", 86.5", or 93.5").
- The **Height** suffix is asking for the **body height** (73", 81", or 85").
- The **Length** suffix needs the **length of the part** being replaced (the part will need to be measured).
- An **Appendix** suffix requires cross-referencing the number with an appendix in the back of this manual. (See the Table of Contents.)
- A part number with a **CHART** suffix depends on various body options to accurately replace the part, Customer Service will consult your vehicle body options from your supplied Body Serial Number.

In some cases specific part numbers are replaced by a code.

- **Parts Guide** refers to the *Utilimaster Quick Reference Parts Guide*. (See the More Information section in the back of this manual.)
- **BSNR** means the **Body Serial Number is Required**. (See the Utilimaster Body Serial Number section.)
- **DSNR** means the Roll-up **Door Serial Number is Required**. This number is stamped on a metal plate on the interior side of the door.

Our Customer Service Department will gladly help if you need assistance.

Part Descriptions

Two asterisks (**) in front of the part description indicates that this part number is not currently used in Utilimaster production. These parts may take longer to deliver or may be replaced (superseded) by a different part number.

Model Numbers

Although Utilimaster builds Aeromaster bodies on three different Ford “strip” chassis, they are all referred to as the Model 36. Whether your truck is based on the E250 V-6, E350 V-8, or the E450 V-10, the majority of parts are interchangeable by design. This model number might show up in the parts description or as an item number suffix.

Our Customer Service Department will gladly help if you need assistance.

VIN Number

The chassis **Vehicle Identification Number (VIN)** is the legal identifier for this vehicle and is the number recorded in the license plate registration. The VIN appears on a small metal plate in the front corner of the dash on the driver’s side, and you can read the VIN by looking through the windshield. The VIN is also recorded on the Federal Certification Label.




VIN Tag

Body Serial Number

The **Utilimaster Body (or Unit) Serial Number** is recorded on the Federal Certification Label. This label is a plastic decal (about 11" long and 2" high) that contains a variety of manufacturing information (including the VIN). This label is near the top of the door frame between the driver’s side window and the quarter-panel window.

You will need the VIN or the Body/Unit Serial Number to order parts and make warranty claims.

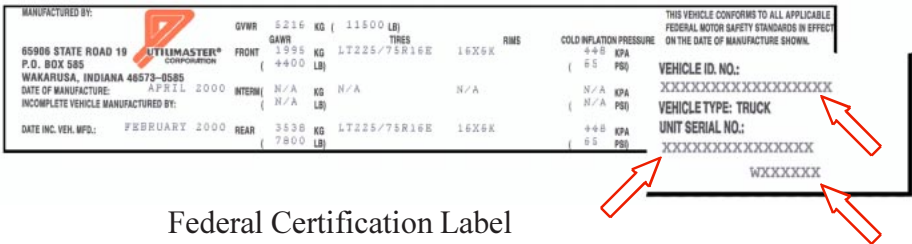

Federal Certification Label

Ordering Parts

How to Order

To order parts for this vehicle, gather the following information:

- **Model and year of vehicle** (200x-*Customer name*).
- **Chassis VIN or Utilimaster Body Number** (see page 9).
- **Complete shipping address.**
- **Preferred method of shipping.**
- **Complete description of all the parts necessary** (see parts lists).
- **Method of payment.**

NOTE: Customer Service prefers payment by Visa, MasterCard, Discover, or American Express credit cards. Purchase Orders from customers with established open accounts are also accepted.



Then contact Utilimaster Customer Service by using one of the following methods:

- **Email** your order to CustSvc@Utilimaster.com. (See Customizable Parts Order Form below.)
- **Fax** your order to **574-862-7637**.
- **Call 800-237-7806** (574-862-3219) and ask for the Parts Department.
- **Mail or express service** your order to the following address:

Utilimaster Corp.
Attn: Parts Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

Returns

To return parts for credit, call the Customer Service Department for prior authorization. All returns must be shipped prepaid freight. A restocking fee will be charged to all returns. Special-order parts are not returnable.

Customizable Parts Order Form

The **Parts Order Form** on the next page can be photocopied from this manual. Then one of the copies can be filled in with the relevant information and then faxed or mailed to Utilimaster Customer Service.

You can also download a customizable form template file from the Utilimaster web site www.utilimaster.com. That template is similar to the form on the next page, but it has a header that you can customize with your name and address. Then, to order parts, you only have to enter the specific information about the vehicle—saving retyping the same address information repeatedly. After completing the form information, the file can be emailed as an attachment. That form can also be used for mailing or faxing.

Service Center Name _____

Address _____

Contact Person _____

City, State, Zip _____

Email _____

Phone _____

Fax _____

To Utilimaster Parts Department

65528 State Road 19, P.O. Box 585

Wakarusa, IN 46573-0585, U.S.A.

FAX 574-862-7637

Date _____

Preferred Shipping _____

(i.e., type of carrier and service priority)

Re Parts Order _____
or Request for Quote Only _____

Credit Card # _____

(or PO# for customers with open accounts)

Special Instructions _____

(e.g., different shipping address)

Signature _____


Service center representative's signature

Vehicle Model		Utilimaster Body S/N or Chassis VIN		Application
				Maintenance __ Accident __ or Warranty __
Order Item #	Utilimaster Part Number	Part Description	Quantity	Comments (optional)
1.				
2.				
3.				
4.				
5.				
6.				
7.				
8.				
9.				
10.				
11.				
12.				
13.				
14.				
15.				
16.				

Filing Warranty Claims

If a problem on the Utilimaster body is caused by a defect in materials or workmanship, it will be covered by our Limited Warranty. Chassis, engine, tires, and battery failures are covered by the individual manufacturers.

Claims must meet the requirements listed below. Failure to meet these requirements may result in a denied or delayed claim.

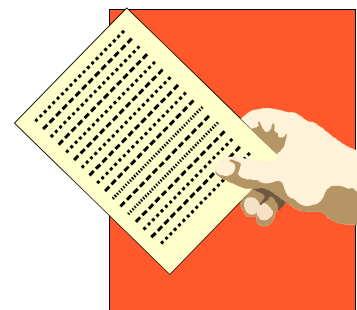

Complete a repair order with the following information:

- **Owner's and/or service facility's name.**
- **Service center representative's signature.**
- **Chassis VIN or Utilimaster Body Serial Number** (see page 9).
- **Date vehicle was repaired.**
- **Mileage at time of failure.**
- **Itemized description of the problem.**
 - Complaint**
 - Cause of failure** (if known)
 - Correction** (describe in detail)
- **Service center labor rate and total time of repair.**
- **Total claim amount, including cost of parts, labor, miscellaneous charges, and sales tax** (if applicable).
- **Your claim or repair order number.**

NOTE: The claim or repair order number is the number used to match Utilimaster payment with the work done. It will be noted on your payment.
- **Utilimaster authorization number** (for repairs costing over \$150 U.S.).

The claim can be mailed, faxed, emailed, or performed on-line on our web site (assuming all required information is included).

- Warranty claims should be **mailed** to:

Utilimaster
Attn: Warranty Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

- Alternately, you can **fax** your claim (if no photographs are involved) with the above information to **574-862-7637**. (The resolution of the received copies must be acceptable, or you will be asked to mail your hard copies.)
- Or you can **email** your claim with the above information to **Warranty@Utilimaster.com**. (You can download a customizable **Warranty Claim Form template** from the Utilimaster web site **www.utilimaster.com**. The template has a header that you can customize with your name and address. Then, to file a claim, you only have to enter the specific information about the vehicle—saving retyping the same address information repeatedly. After completing the form information, the file can be emailed as an attachment. This form can also be used for mailing or faxing.)

Other claim requirements:

- Any repairs **over \$150 U.S. or for structural warranty require prior authorization** from Utilimaster, and that number must appear on the repair order.
- Any claim that is not **legible and complete** will be returned for completion.
- **All paint claims** require pictures, estimates, and prior authorization.
- **Shipping damage claims** also require pictures, estimates, and prior authorization. The damage must also be noted on the Delivery Acceptance form. This form requires the signature of the carrier driver.
- **Sublet work** must have the sublet repair order attached to the service facility's repair order that is being submitted.
- Claims must be **submitted within 30 days** after the repair is completed.

If the return of a failed part is requested, contact a Utilimaster warranty representative for a return goods authorization (RGA). Please reference that number with the returned part and enclose a copy of the repair order. Shipping charges should be entered on the same repair order that is submitted for warranty payment. COD charges for a returned parts will not be accepted, and the part will be returned.

Claims are paid semimonthly. Utilimaster generally does not pay sales tax on claims. If you do not have our tax exemption number on file, please call 800-528-3454 or 574-862-4561 and ask for the accounting department to obtain the number.

Reporting Safety Defects (U.S. Only)

If you believe that your vehicle has a defect that could cause a crash, injury, or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA), in addition to notifying Utilimaster.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Utilimaster.


To contact NHTSA, you may either call the Auto Safety Hotline toll-free at **1-800-424-9393**; in the Washington, D.C., area call **202-366-0123** or write to:

NHTSA
U.S. Department of Transportation
400 Seventh Street
Washington, DC 20590

You can also obtain other information about motor vehicle safety from the Hotline.

Diagrams and Parts Lists

1—Chassis

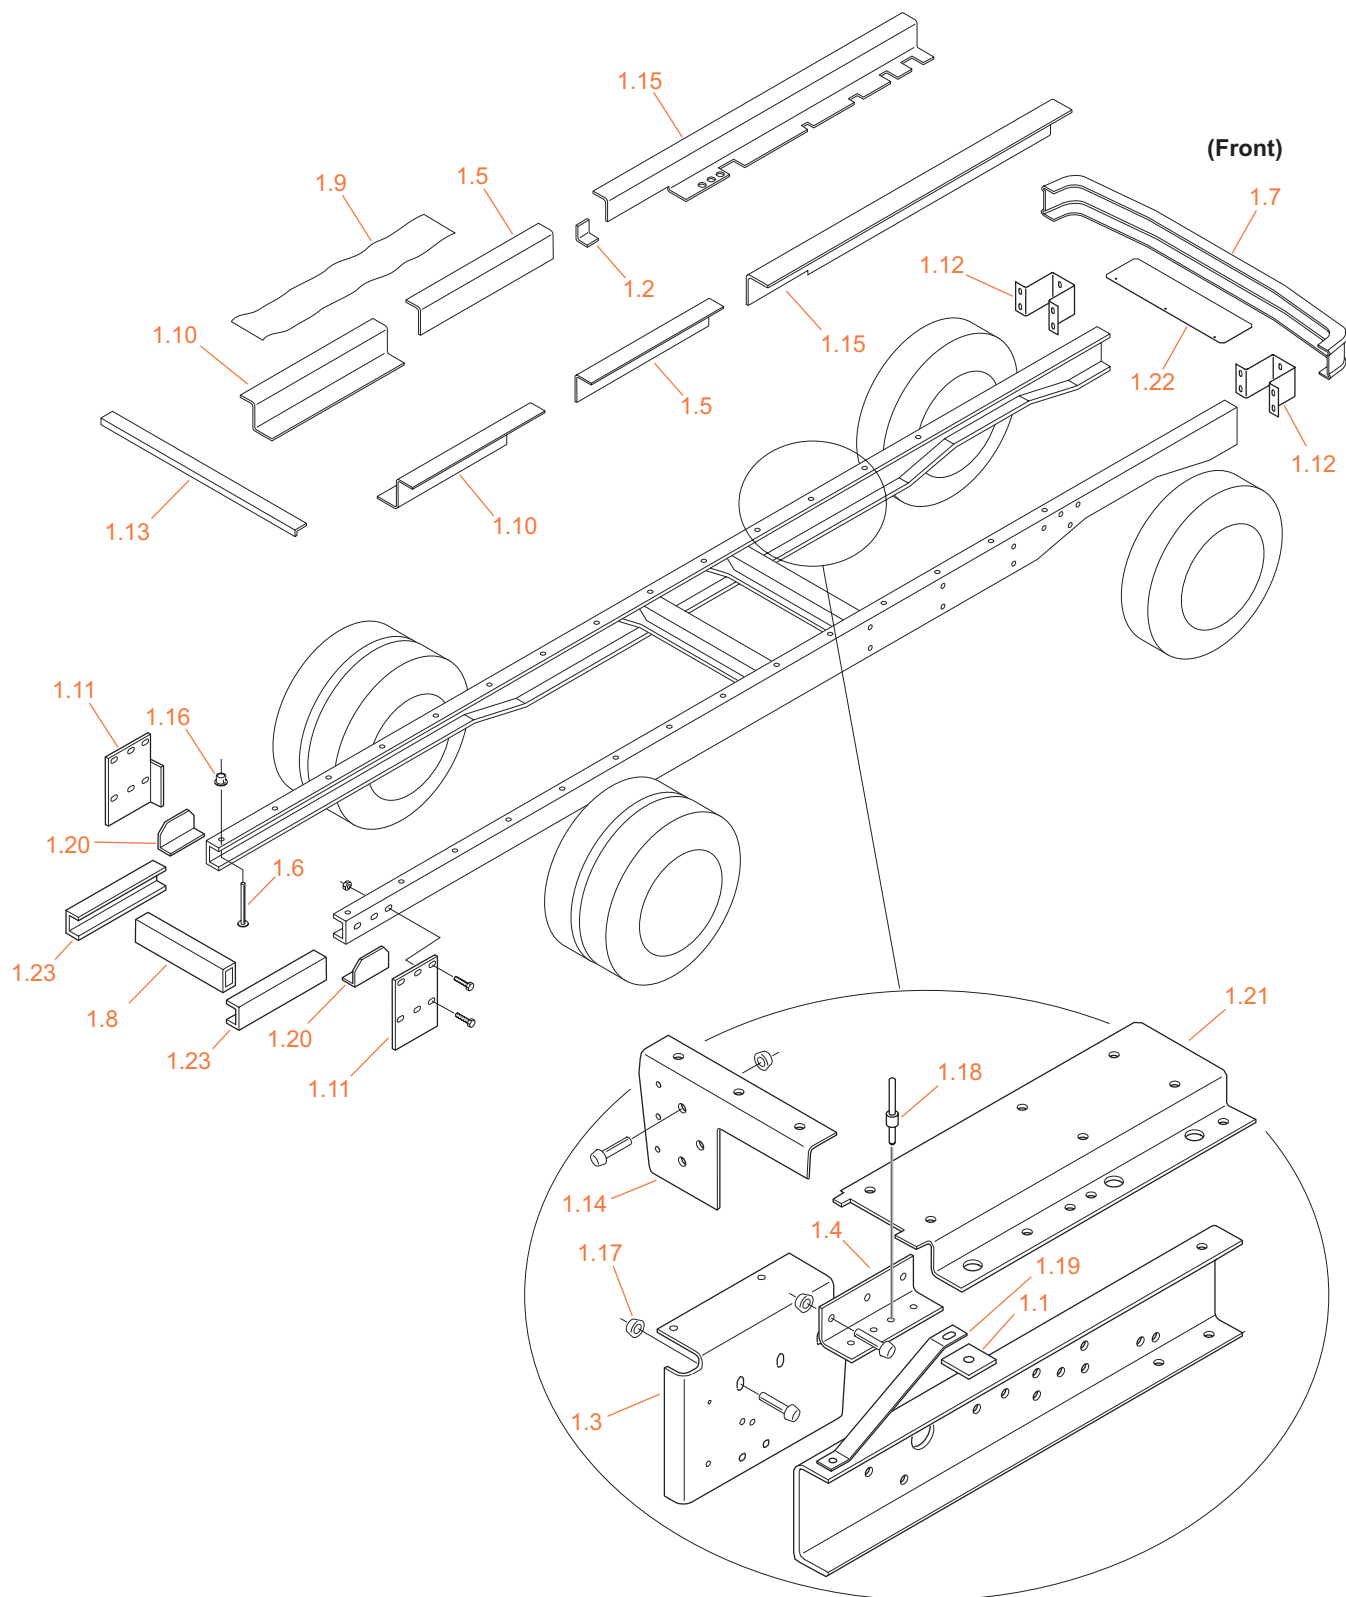


Chassis

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

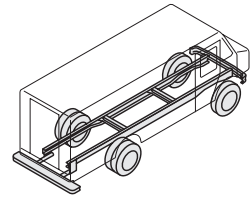


Item	Part Number	Description
1.0		CHASSIS ASSY FORD
1.1	22810584	SHIM SPACER 1/4 x 2 x 2
1.2	22815017	ANGLE FLOOR RISER MOUNTING LH/RH
1.3.1 LH	22815852	BRACKET SEAT MOUNT LH (E-350 and E-450)
1.3.2 LH	22814459	BRKT SEAT MOUNT LH (E-250)
1.3.1 RH	22815853	BRACKET SEAT MOUNT RH (E-350 and E-450)
1.3.2 RH	22814460	BRKT SEAT MOUNT RH (E-250)
1.4	22814463	ANGLE SEAT MOUNT BRKT
1.5	22815016	ANGLE CNTR WW SUPPORT
1.6	11600511	HUCK PIN 1/2" LO-PRO
1.7 S	01102678	FRT BMPR RIM HOOD (STANDARD) SPECIFY WIDTH
1.7 H	01902304	FRT BMPR RIM HOOD (HEAVY DUTY) SPECIFY WIDTH
1.7.1	11600251	BOLT 1/2-13 x 1-1/2 FLNG HD Z G8
1.7.2	11600252	NUT 1/2-13 FLNG HD LOCK ZC G8
1.7.3	11000088	WASHER, BEVELED, .531 DIA
1.8	22250039-04150	TUBE 12GA 2 x 4 x 41.50
1.9	12303705	TAPE VINYL 3" WHITE
1.10	Appendix 51231199	RSR FLR RR SPECIFY LENGTH AND WHEELBASE
1.11 LH	22814063	ANGLE RR STR FRM LH FITZ
1.11 RH	22814064	ANGLE RR STR FRM RH FITZ
1.12	22813649	MOUNT BMPR RIM HOOD FRONT
1.13.0	22101957	ANGLE RR STR SPRT 48" (60" Rear Door)
1.13.1	11600112	FASTENER BLIND (.375) BOM
1.14 LH	22814461	SUPPORT OUTRIGGER LH #36
1.14 RH	22814462	SUPPORT OUTRIGGER RH #36
1.15	Appendix 51231199	RISER FLR FRT SPECIFY LENGTH AND WHEELBASE
1.16	11600514	COLLAR HUCK 1/2" LO-PRO
1.17.1	11600512	HUCK PIN 1/2" .5-.75
1.17.2	11600514	COLLAR HUCK 1/2"
1.18	11600262	FASTENR BLIND (.375) BOM
1.19	22816387	TETHER SEAT MOUNT (Replaces 22101999)
1.20	22817833	ANGLE FRAME REINFORCEMENT
1.21	See Section 2 for the seat mount pan.	

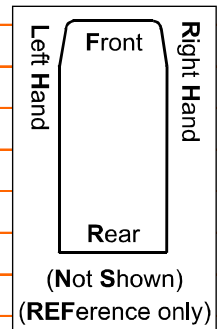

Continued

1—Chassis (continued)

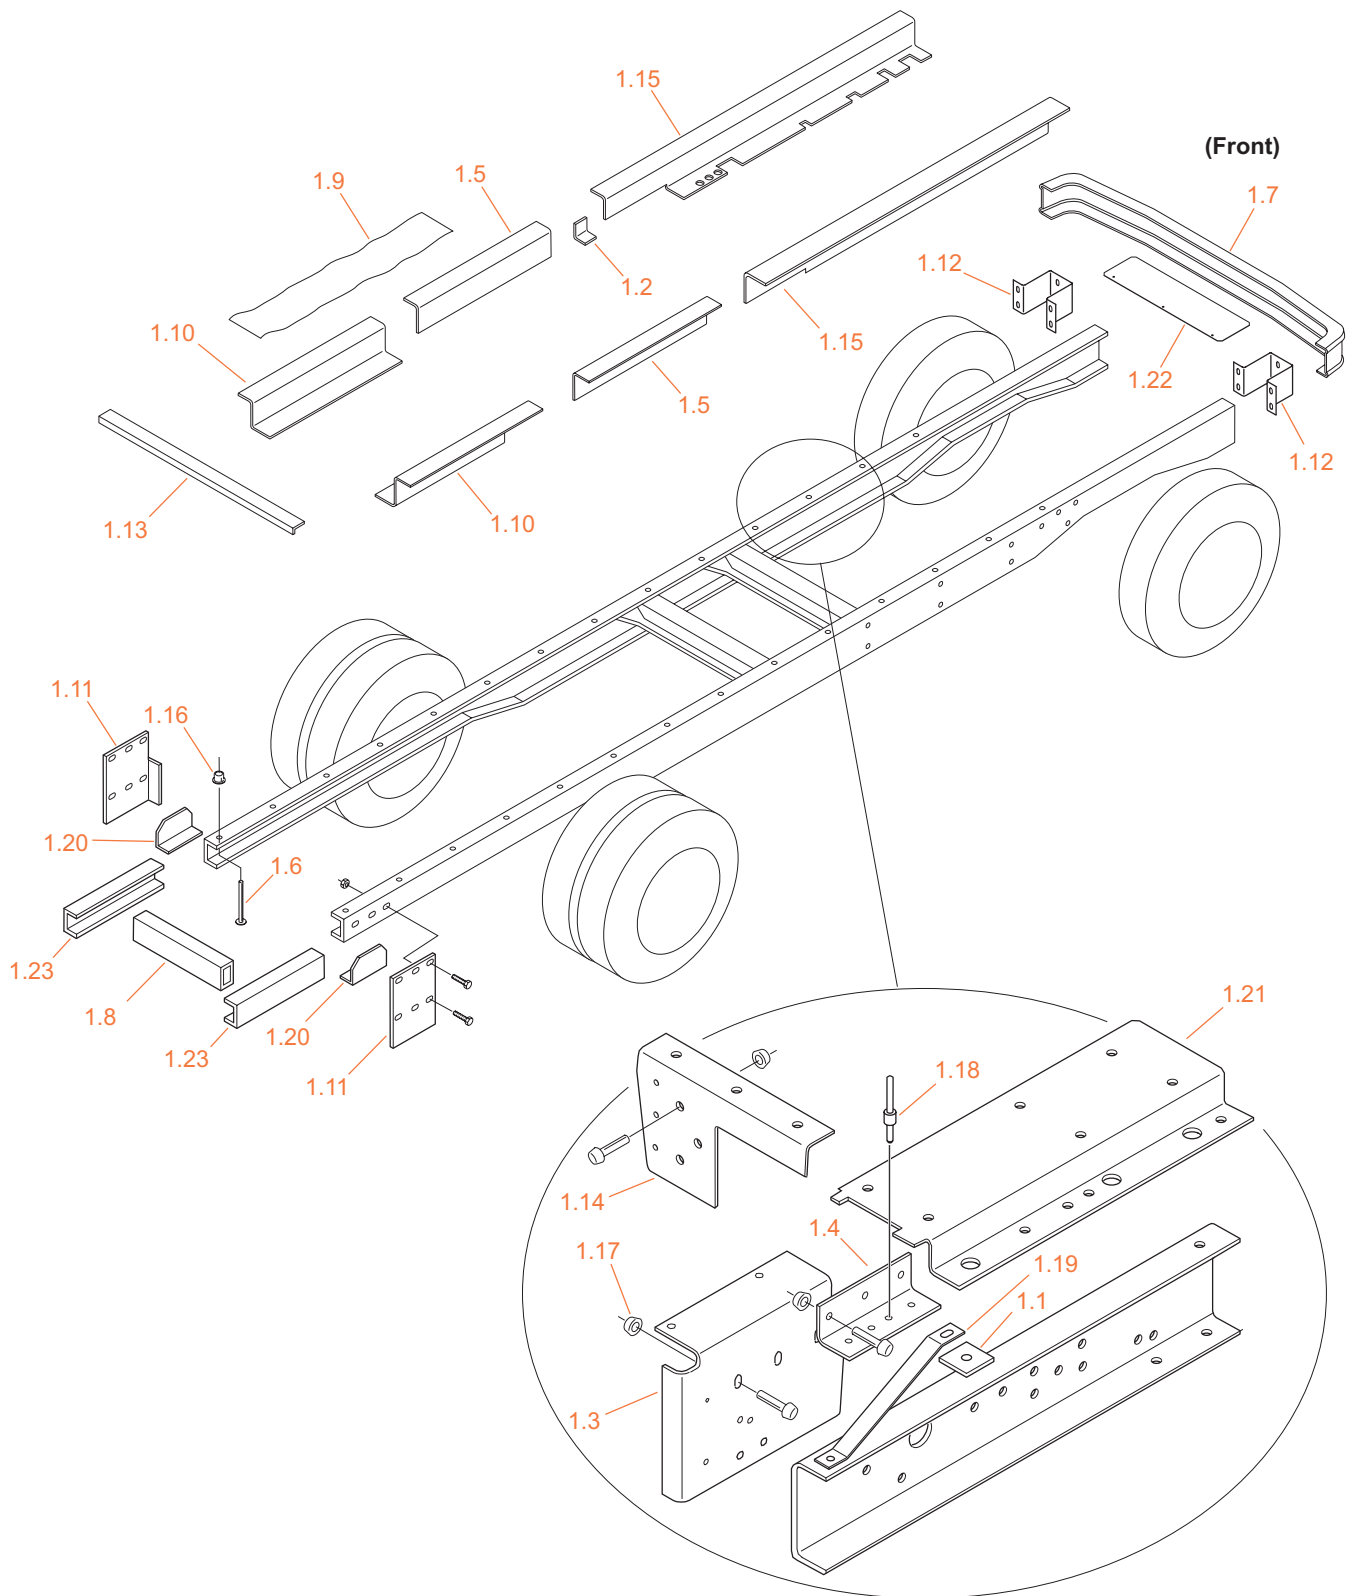


Chassis

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

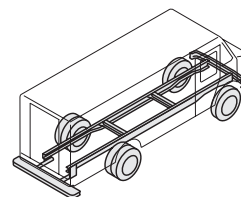

Item	Part Number	Description
1.22.0	22814662	BAFFLE LOWER RADIATOR
1.22.1	11305090	SCREW 1/4-20 x 3/4
1.22.2	11000039	NUT LOCK WXD 1/4-20 2WAY GR5 ZN
1.23	Appendix 51231199	FRAME EXTENSION FORD
1.NS	12605912	ANTIFREEZE PERM GREEN 50/50 MIX
1.NS	22816186	SPACER 12GA FORD SWAY BAR (Ref 51231451)
1.NS	11600237	BOLT, HEX FLG 5/16-18x1 GR8 (Ref 51231451)
1.NS	11600238	NUT, LK WX 5/16-18 2WAY FLG GR5ZN (Ref 51231451)
1.NS	01902163	STABILIZER BAR RR HELWIG (Ref 51231451)
1.NS	11005406	BOLT HEX 1/2-13 x 2
1.NS	11000084	WASHER (SPACER) .531 ID x 1.31 OD
1.NS	11000043	NUT LOCK WXD1/2-13 2WAY GR5 ZN
1.Ref	51231199	CHASSIS PREP LAYOUT DWGS (INCLUDES REAR STABILIZER)
1.Ref	51231419	INSTL FRT BUMPER FGLS
1.Ref	01902140	BMPR ASY DOCK FRT
1.Ref	51231451	INSTL SPACER SWAYBAR FORD
	See also Sections 2 and 4.	

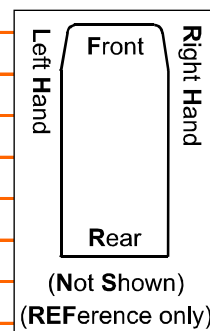

1—Chassis, Rear Bumper Options

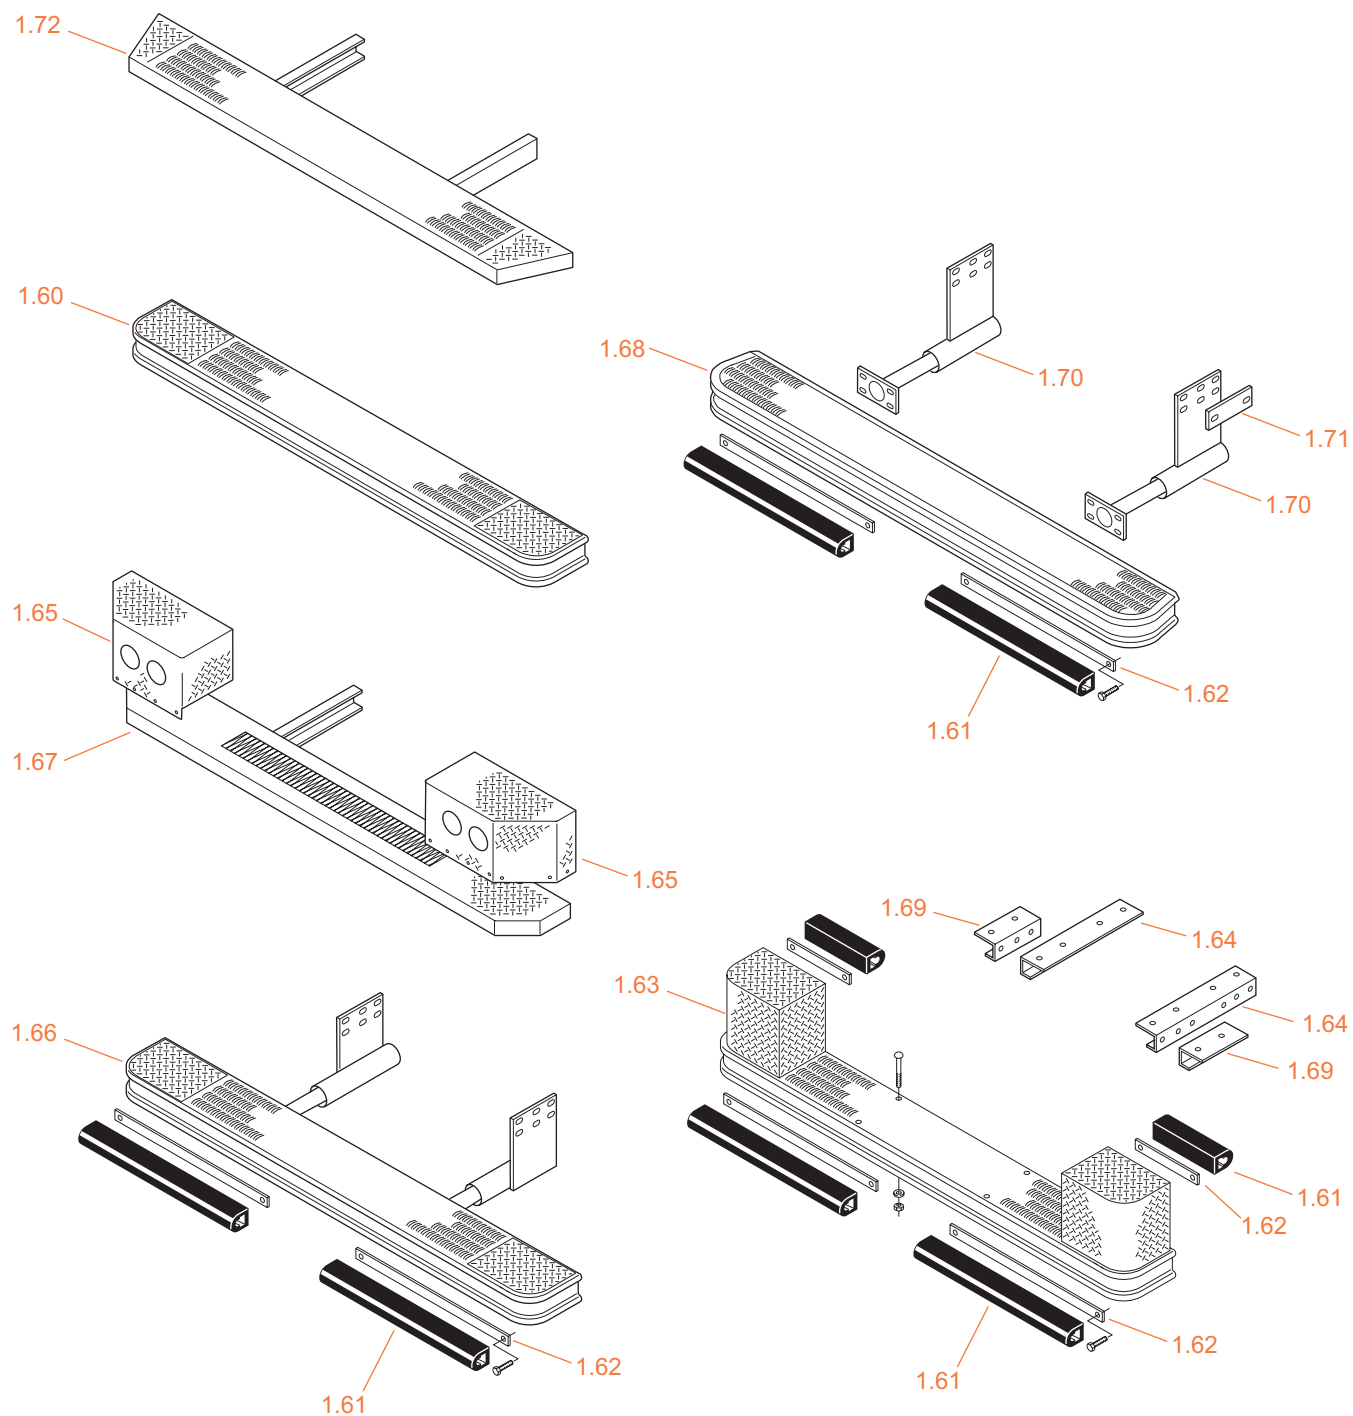


Chassis, Rear Bumper Options

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

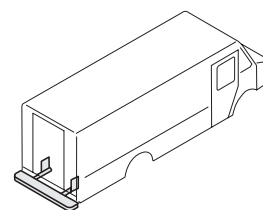

Item	Part Number	Description	
1.60.1	22813479-Width	BUMPER RR G/STRUT 10" (SPECIFY UNIT SIZE)	Left Hand Front Rear Right Hand
1.60.2	22813480-Width	BUMPER RR G/STRUT 12" (SPECIFY UNIT SIZE)	
1.60.3	01902305-Width	ASY 10" RR G/S BMP W/REC (SPECIFY UNIT SIZE)	
1.60.4	01902296-Width	10"G/S BPR REC&KID 2/HLS (SPECIFY UNIT SIZE)	
1.61.1	01902173-Width	BUMPER RUBBER DOCK (SPECIFY UNIT SIZE)	
1.61.2	01902562	BMPR RBR DOCK HOOD GUIDE 4.5"	
1.61.3	01102890	BUMPER RUBBER D 2" x 12"	(Not Shown) (REFERENCE only)
1.61.4	20510155	BUMPER RUBBER DOCK 2" x 30"L	
1.61.5	20510672	BUMPER RUBBER DOCK 2"x30"L 45*BE	
1.61.6	20510708	BUMPER RUBBER DOCK 93"	
1.62-L	06917212-Length	WASHER RIBBON (SPECIFY LENGTH)	
1.62-11	06921319	ALUM .063 x .88 x 11.5	
1.62-29	06921320	ALUM .063 x .88 x 29.5	
1.63.1	22813926-Width	BMPR 12" REAR KID GRIPSTRUT (SPECIFY UNIT SIZE)	
16.3.2	22813928-Width	BMPR 12" GS W/2HL KID (SPECIFY UNIT SIZE)	
1.64.1	22813921	CHNL BMPR 10GA x 1 x 3 x 4 x 24 HLS	
1.64.2	22817112	CHNL BMPR 7GA 1 x 3 x 4 x 24 HOLES	
1.65.1 LH	22813540	KIDNEY WLDMT 8" BUMPER LH	
1.65.1 RH	22813541	KIDNEY WLDMT 8" BUMPER RH	
1.65.2 LH	22813504	KIDNEY WLDMT 8" BUMPER LH W/2LTS	
1.65.2 RH	22813503	KIDNEY WLDMT 8" BUMPER RH W/2LTS	
1.66.1	Appendix 51231252	BUMPER 10" FITZPATRICK CHART (SPECIFY UNIT SIZE)	
1.66.2	51231196-CHART	BUMPER 12" FITZPATRICK CHART (SPECIFY UNIT SIZE)	
1.67.1	51231231-Width	BMPR WLDMT 9" W/GS INS PTD (SPECIFY UNIT SIZE)	
1.67.2	51231225-Width	BUMPER WLDMT 8"STEP PNTD (SPECIFY UNIT SIZE)	
1.67.3	51231233-Width	BMPR WLDMT 12" W/GS INS PTD (SPECIFY UNIT SIZE)	
1.67.4	51231229-Width	BUMPER WLDMT 12" STEP PTD (SPECIFY UNIT SIZE)	
1.68	01903014-Width	BUMPER 10"G/STRUT SHOCK MTG (SPECIFY UNIT SIZE)	
1.69.1	22817113	CHNL BMPR 7GA 1 x 3 x 4 x 14 HOLES	
1.69.2	22817114	CHNL BMPR 7GA 1 x 3 x 4 x 10 HOLES	
1.70	01903015	BRKT BUMPER MNT W/SHOCK ABSORBER	
1.71	22817254	SPACER BUMPER .25 x 4 x 10.5	
1.72	22815597-Width	BUMPER WLDMT BUSTIN GRATING 12" (SPECIFY UNIT SIZE) #36	
1.Ref	51231527	DOCK BUMPER ASSEMBLY REAR CHART	
1.Ref	51231489	INSTALL SHOCK ABSORB BMPR CHT ALL	
1.Ref	55231303	INSTL VISE HOLDER BUMPER MOUNT	
1.Ref	51231537	INSTL REAR BUMPER CHANNEL	
1.Ref	51231420	BMPR ASY RUBBER DOCK	

2—Front Cab Floor

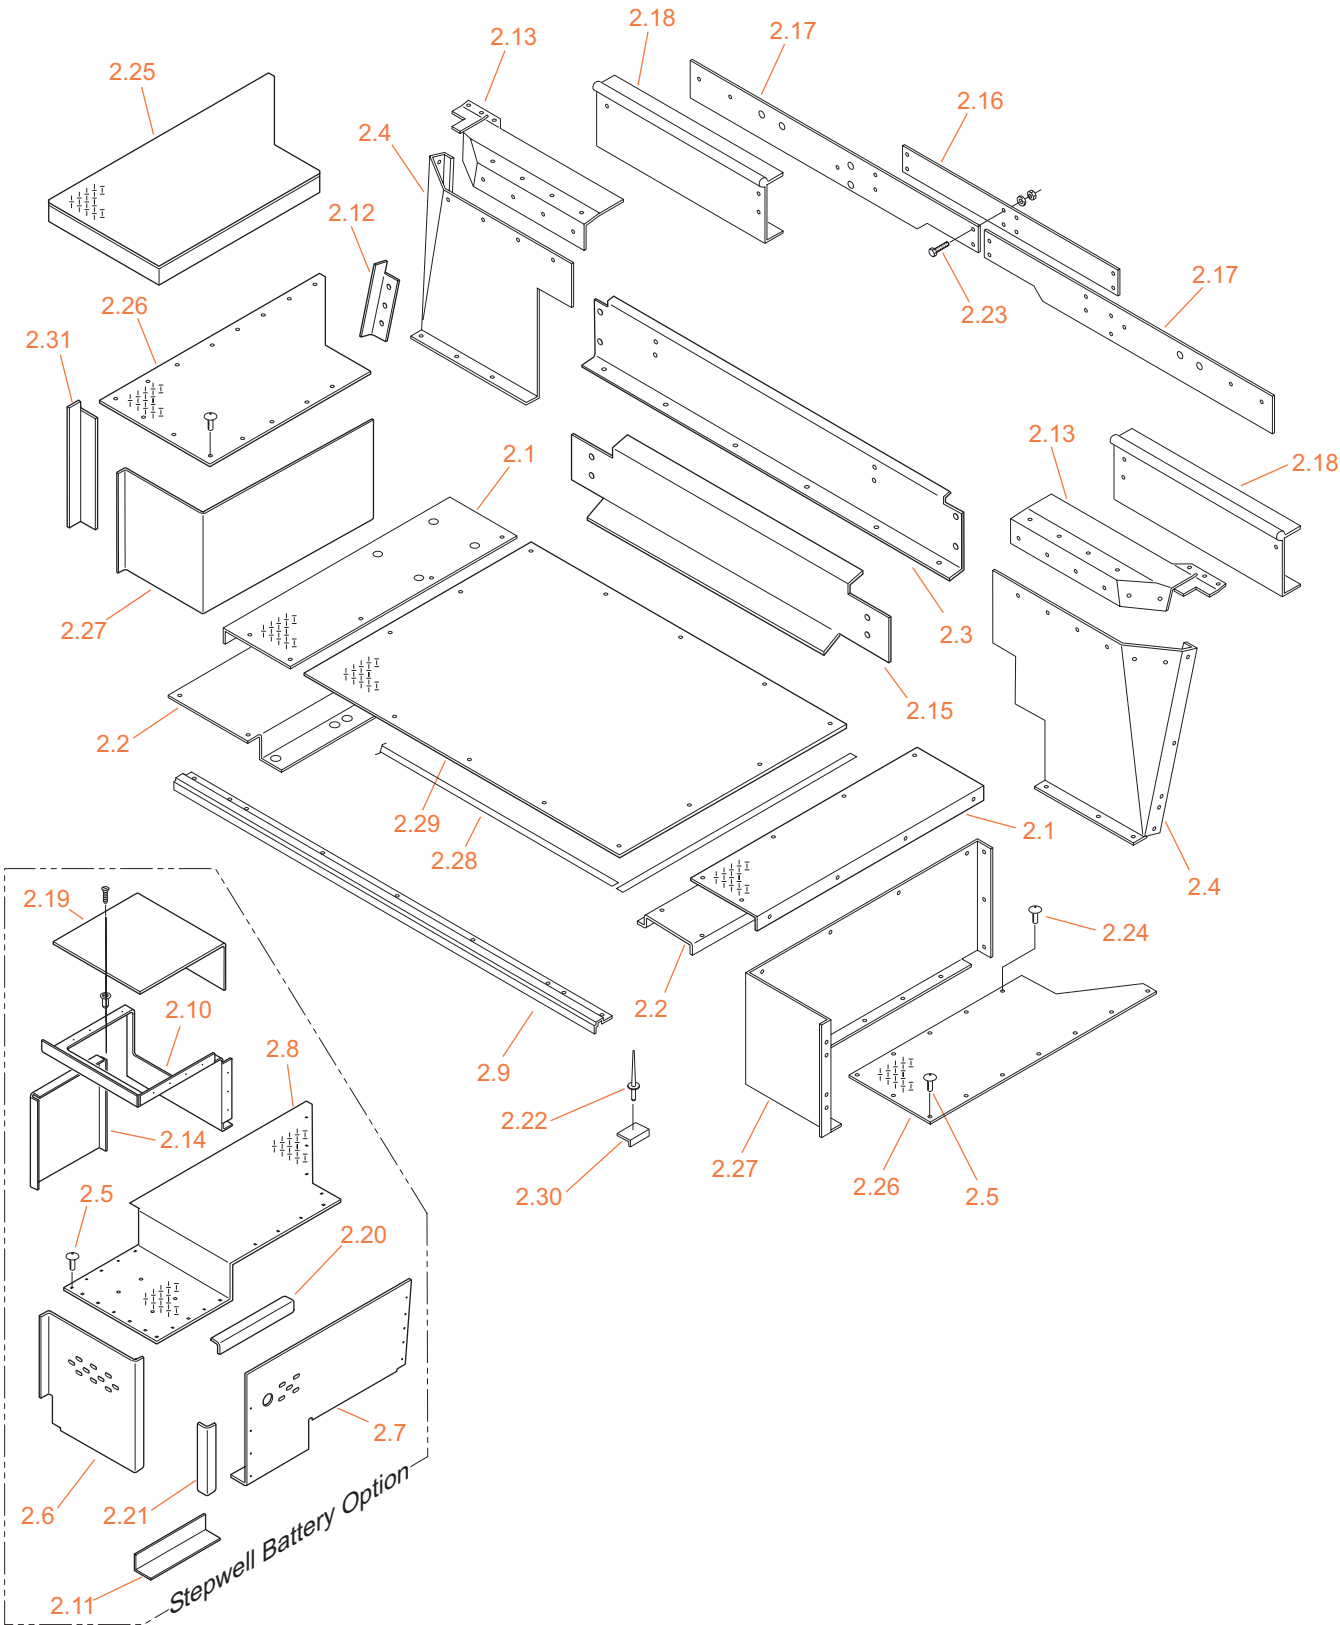


Front Cab Floor

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

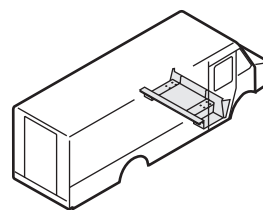


Item	Part Number	Description
2.0		FRONT FLOOR ASSEMBLY FORD
2.1 LH	06601734	FLR CAB LH .100 SMOOTH
2.1 RH	06601736	FLR CAB RH SMOOTH
2.2 LH	22101950	SEATMOUNT PAN LH
2.2 RH	BSNR	SEATMOUNT PAN RH
2.3.1	06921301	FILLER LWR ENGINE COVER #36
2.3.2	06918026	** FILLER LWR ENG COVER #36
2.4 LH	01902314-W	S/WELL FRONT LH SPECIFY WIDTH
2.4 RH	01902313-W	S/WELL FRONT RH SPECIFY WIDTH
2.5	11600108-0310H	RIVET BR HD 3/16 x 5/8
2.6	06918077	REAR LH STEPWELL AUX BATT BOX
2.7	06918078	BACK LH STEPWELL AUX BATT BOX
2.8	01902239-W	SWELL ASSY, LH AUX BATT BOX (Lower)
2.9	06003895-Length	IA 7921 FRT FLR SPRT 46.75 06003895
2.10.0	06918079	TOP FRT LH AUX BATT BOX
2.10.1	01102909	1/4-20 THRD INSERT
2.10.2	11305090	SCREW 1/4-20 x 3/4 PHPN MS SS
2.10.3	12300537	TAPE BLK 1/16 x1" x 54'
2.10.4	11402010	RIVET, FLAT HD 1/2"
2.10.5	11600108-0310H	RIVET BR HD 3/16 x 5/8
2.11	06918080	ANGLE, LH AUX BATT BOX
2.12	01902088	FLANGE SWELL MNTG
2.13 LH	06631378	STEPWELL CAP LH WLDMT
2.13 RH	06631377	STEPWELL CAP RH WLDMT
2.14	06918081	SIDE, LH AUX BATT BOX
2.15	06601632	COVER XMBR .125 X 36.38
2.16	22814230	CROSSMEMBER CENTER
2.17	22814229	CROSSMEMBER SIDE SPECIFY WIDTH
2.18 LH	06014433-W	XMBR LH 06003873 SPECIFY WIDTH
2.18 RH	06014434-W	XMBR RH 06003873 SPECIFY WIDTH
2.19	06918082	COVER, LH AUX BATT BOX
2.20	06918337	ANGLE, TOP AUX BATT BOX
2.21	06918338	ANGLE, FRONT AUX BATT COVER
2.22	11400600	RIVET AVEX 3/16 x 3/8

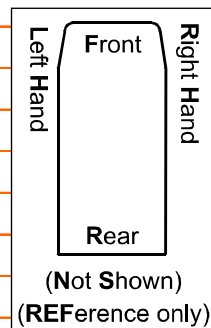

Continued

2—Front Floor (continued)

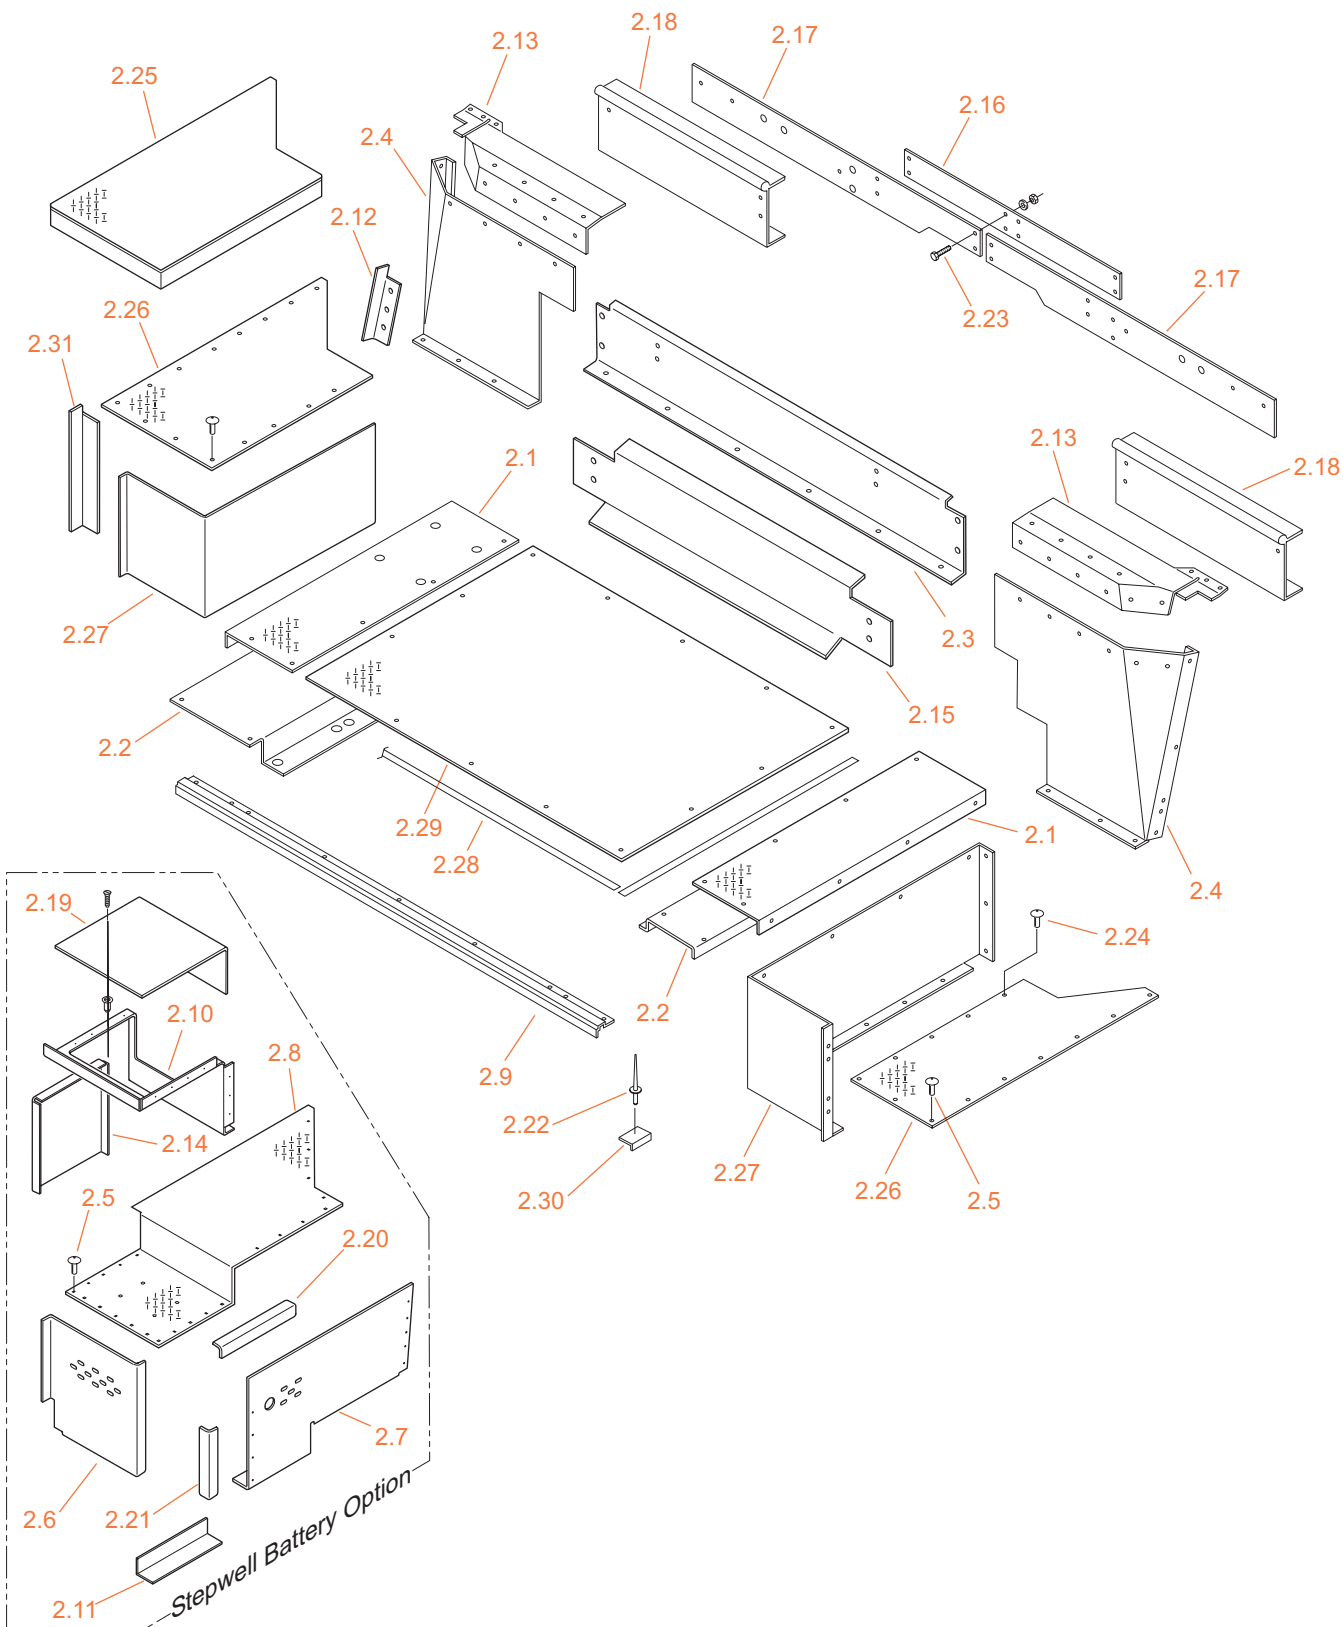


Front Cab Floor

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

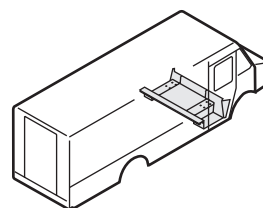

Item	Part Number	Description	Left Hand Right Hand Front Rear (Not Shown) (REFERENCE only)
2.23.1	11000904	NUT CTR LCK ZN WXD 3/8-16 GR5	
2.23.2	11008110	WASHER 3/8 FLAT	
2.23.3	11004505	BOLT HX 3/8-16 x 1	
2.24	11600108-0308H	RIVET BR HD 3/16 x 1/2	
2.25	06916542-Chart	COVER, LH STEPWELL DOORLESS DRIVER (Upper)	
2.26 LH	06900536-W	SWELL BTM ASSY LH	
2.26 RH	06900537-W	SWELL BTM ASSY RH	
2.27 LH	06601728-W	SW CHART BACK & END LH	
2.27 RH	06924179-W	SW BACK & END RH SPECIFY WIDTH	
2.28	12300537	TAPE BLK 1/16 x 1" x 54FT Roll	
2.29.1	06919950	COV ASY XMSN AUTO SMOOTH	
2.29.2	06919952	COV ASY XMSN AUTO TREADPLATE	
2.30	06003903-00200	IA 5028 ANGLE 2.00 06003903	
2.31	06601779	FILLER PLT DD/SDN LH	
2.NS	12400712	SIKAFLEX ALUM 11 FL OZ	
2.NS	12303601	SAFETY WALK 2IN x 60FT ROLL	
2.Ref	01902631-W	S/WL ASY RH TP W/BAT ACCESS	
2.Ref	51231269-W	XMBR ASSY STD XMSN FORD	
2.Ref	52232840	INSTALL S/WELL BKR ANGLE	
See also Sections 1 and 4.			

3—Cargo Floor

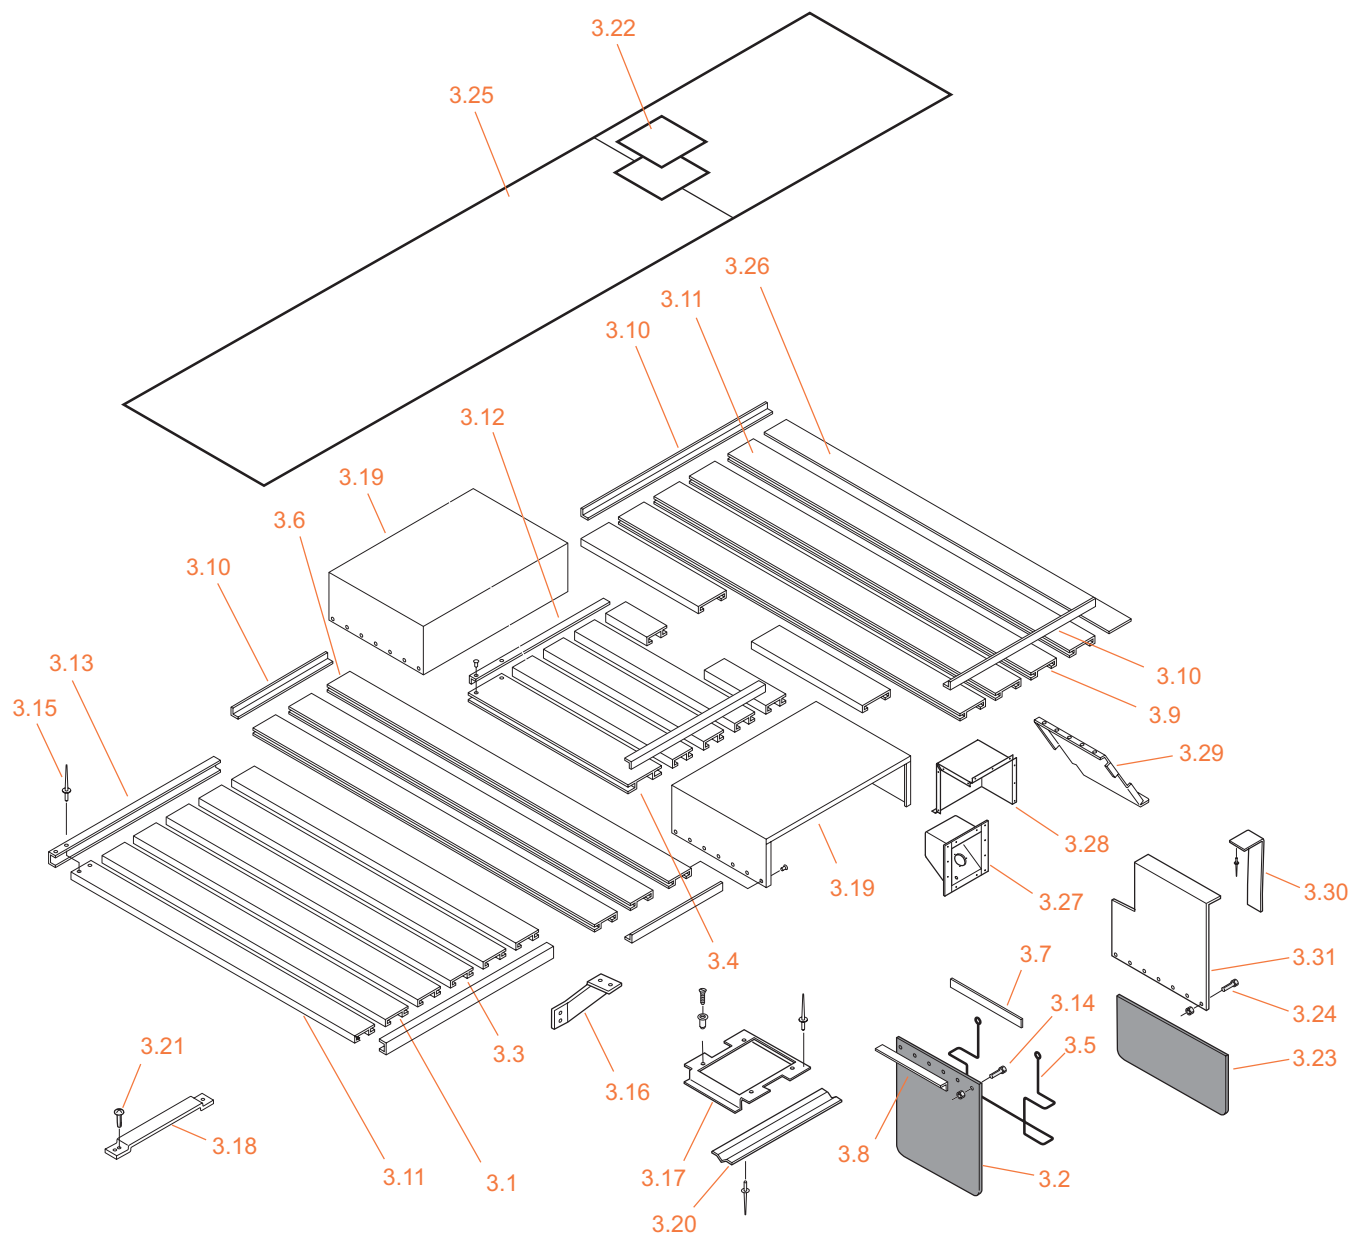


Cargo Floor

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

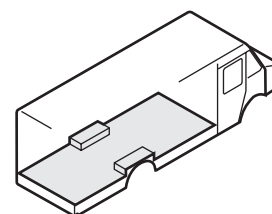


Item	Part Number	Description
3.0	W01020-14E	CARGO FLOOR ASSY
3.1	06003884-00000	IA 7850 6" FLOOR PLANK (SPECIFY LENGTH)
3.2	01505069	M/FLAP 18x27-1/2 PLAIN
3.3	06003886-00000	IA 7852 8" FLOOR PLANK (SPECIFY LENGTH)
3.4	06003888-00000	IA 7854 DM FLOOR PLANK (SPECIFY LENGTH)
3.5	01520043	ANTI SAIL BRACKET
3.6	06003887-00000	IA 7853 WW FLOOR PLANK (SPECIFY LENGTH)
3.7	22000724	PLATE 12GA x 1.5 x 17 HLS
3.8	22100829	BRKT MUD FLAP 12GA x17"HLS
3.9	06916433-00000	IA 7852 FLOOR PLANK F/FILL C/OUT
3.10	06002049-00000	IA 2072 ANGLE (SPECIFY LENGTH)
3.11	06003889-00000	IA 7855 SF FLOOR (SPECIFY LENGTH)
3.12	06002048-00000	IA 3299 ANGLE (SPECIFY LENGTH)
3.13	06000185-00000	DP FLOOR PLANK (SPECIFY LENGTH)
3.14.1	11000040	NUT LCK WXD 5/16-18 2WAY GR5 ZN
3.14.2	11008417	WASHER 5/16 FLAT
3.14.3	11004446	BOLT H5/16-18 x 1-1/4
3.15	11400024	MAGNA-LOCK 1/4" STL
3.16.0	06631049	GUSSET LWR S/WALL FORMED 12" (SEE 52234285)
3.16.1	11400025	MAGNA-LOCK (TO FLOOR)
3.16.2	11600108-0308H	RIVET BR HD 3/16 x 1/2 (TO SIDEWALL)
3.17.0	06916677	FUEL SENDING UNIT ACCESS BRKT
3.17.1	11000150	INSERT THREAD 1/4-20
3.17.2	11305177	SCREW 1/4-20 x 3/4
3.17.3	12300537	TAPE BLK 1/16 x 1" x 54'
3.17.4	11400027	1/4 ALUM MONO-BOLT,FLUSH
3.18.1	22812242	STOP, HAND CART
3.18.2	22816324	STOP HAND CART 1.5 x 19
3.19.1	01902571-08650	WLDMT WHEELWELL 1-PC SPECIFY UNIT SIZE (SRW*)
3.19.2	01902763-00000	WLDMT WHEELWELL 1-PC SPECIFY UNIT SIZE (DRW*)
3.19.3	01901969-W	W/WELL HEAVY DUTY (SPECIFY UNIT SIZE)
3.20.0	22814663	BRACE FUEL FILL ACCESS
3.20.1	11400023	MAGNA-LOCK 1/4" STL
3.21	11300177	SCREW 1/4-20 x 3/4 TX PN
3.22.1	52232799	COVER ASSY TP ACCESS
3.22.2	52233144	COVER WLDMT FUEL SNDG ACS

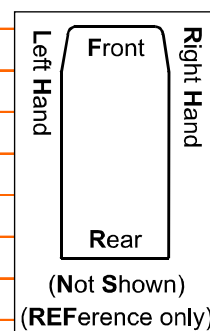

Continued

3—Cargo Floor (continued)

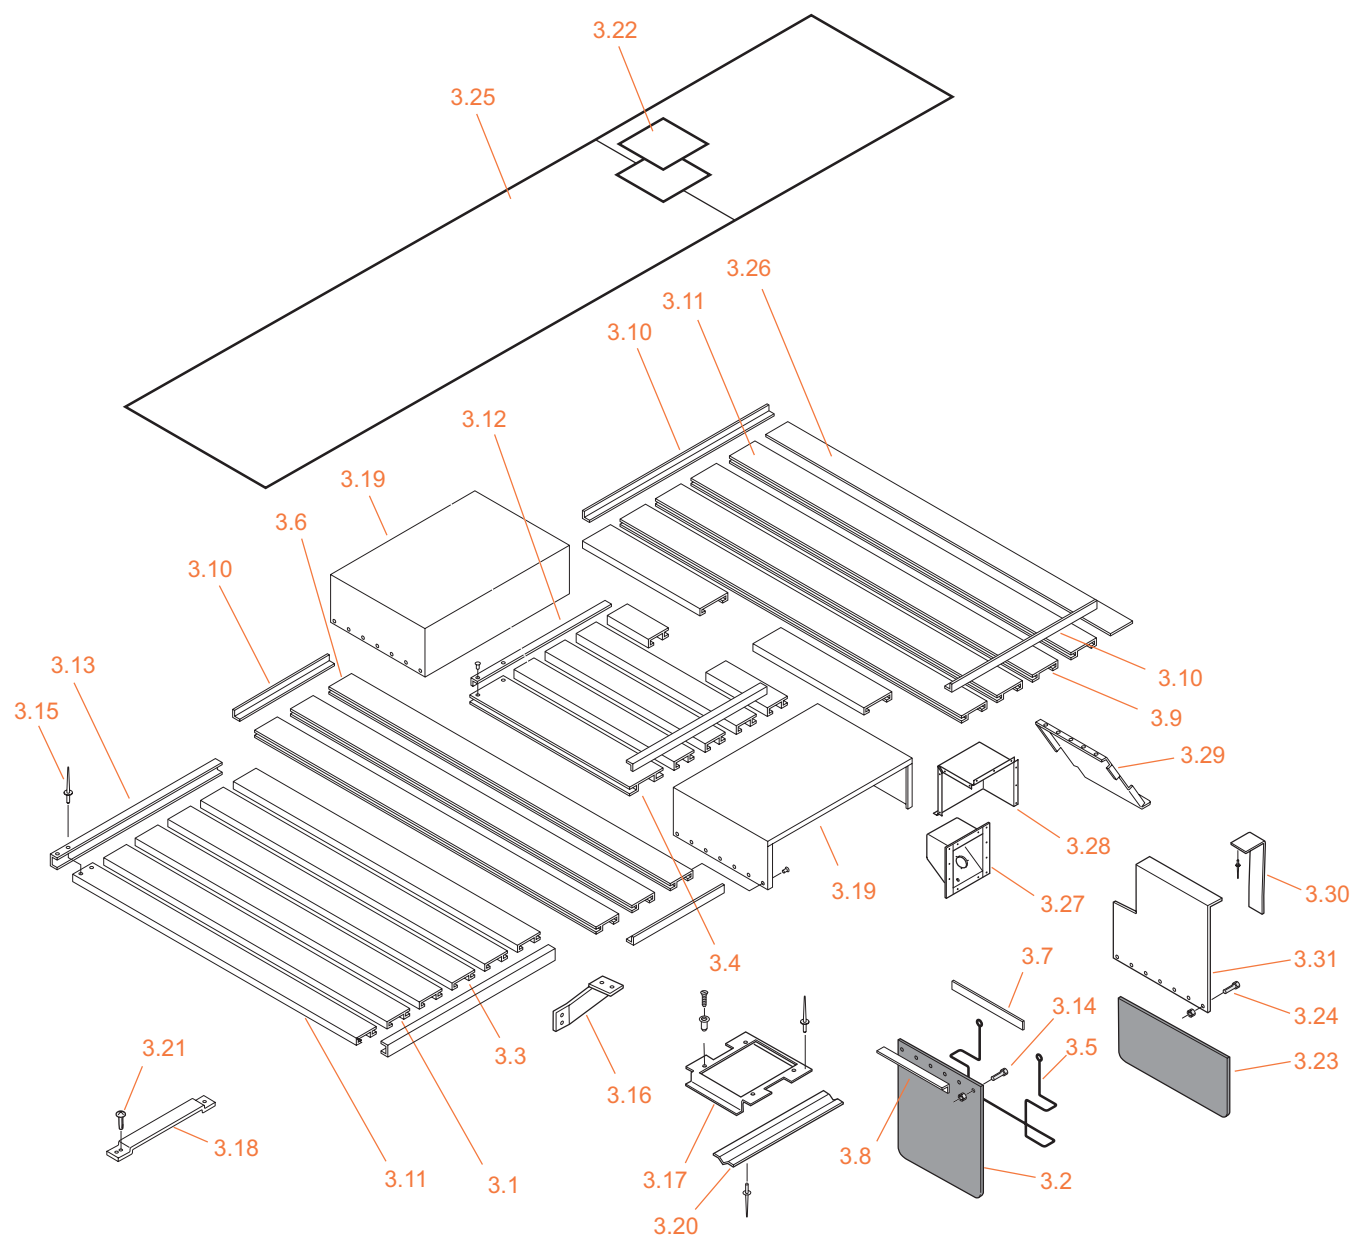


Cargo Floor

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

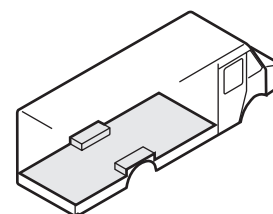

Item	Part Number	Description
3.23	01800117	MUDFLAP 12 x 18 PLAIN POLY STD
3.24.2	11008417	WASHER 5/16 FLAT
3.24.3	11004442	BOLT HEX 5/16-18 x 1
3.25	BSNR*	TREADPLATE OVERLAY
3.26	06502875-00000	FLOOR FILLER
3.27	06918090	DISH WLDMT GAS FUEL FILL
3.28.0	06918094	COVER WLDMT FUEL FILL
3.28.1	11600108-0308H	RIVET BR HD 3/16 x 1/2
3.29 LH	06921342	GUARD SPLASH FUEL FILL LH (SPECIFY UNIT WIDTH)
3.29 RH	06921344-08650	GUARD SPLASH FUEL FILL RH 86.5W
3.29.1	11600108-0308H	RIVET BR HD 3/16 x 1/2
3.30.0	06918478	SUPPORT MUD FLAP BKR (DRW)
3.30.1	11400023	MAGNA-LOCK 1/4" STL
3.31 LH	06919868	BCKR MUD FLAP LH DLR-WHL
3.31 RH	06919869	BCKR MUD FLAP RH DLR-WHL
3.NS	12400712	SIKAFLEX ALUM 11 FL OZ
3.NS	12300537	TAPE BLK 1/16 x 1" x 54'
3.NS	12303707	TAPE VINYL 1" WHITE
3.Ref	53234285	INSTALL S/WALL LWR SKIRT GUSST
3.Ref	06917416	OVERLAY W/FA FRT 138WB
3.Ref	52232738	FLR OVERLAY CHRT 86.5W STD
3.Ref	52232739	FLR OVERLAY CHRT 93.5W STD
3.Ref	52232792	FLOOR INSULATION INSTALL
3.Ref	52233092	FLR ASY CTR RIVET LOCATION
3.Ref	52232800	COVER TP ACCESS INST
3.Ref	52232787	COVER WLDMT FUEL ACCESS
3.Ref	52232836	FUEL FILL CVR INST W/O DOOR
3.Ref	52233066	MUD FLAP INSTALL CHART
3.Ref	64236108	SPLASH GUARD LA YOUT
3.Ref	52232713	COV ASY FUEL SNDG UNIT
	*Single Rear Wheels (SRW) or Dual Rear Wheels (DRW).	

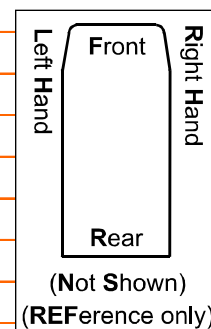

4—Cowling

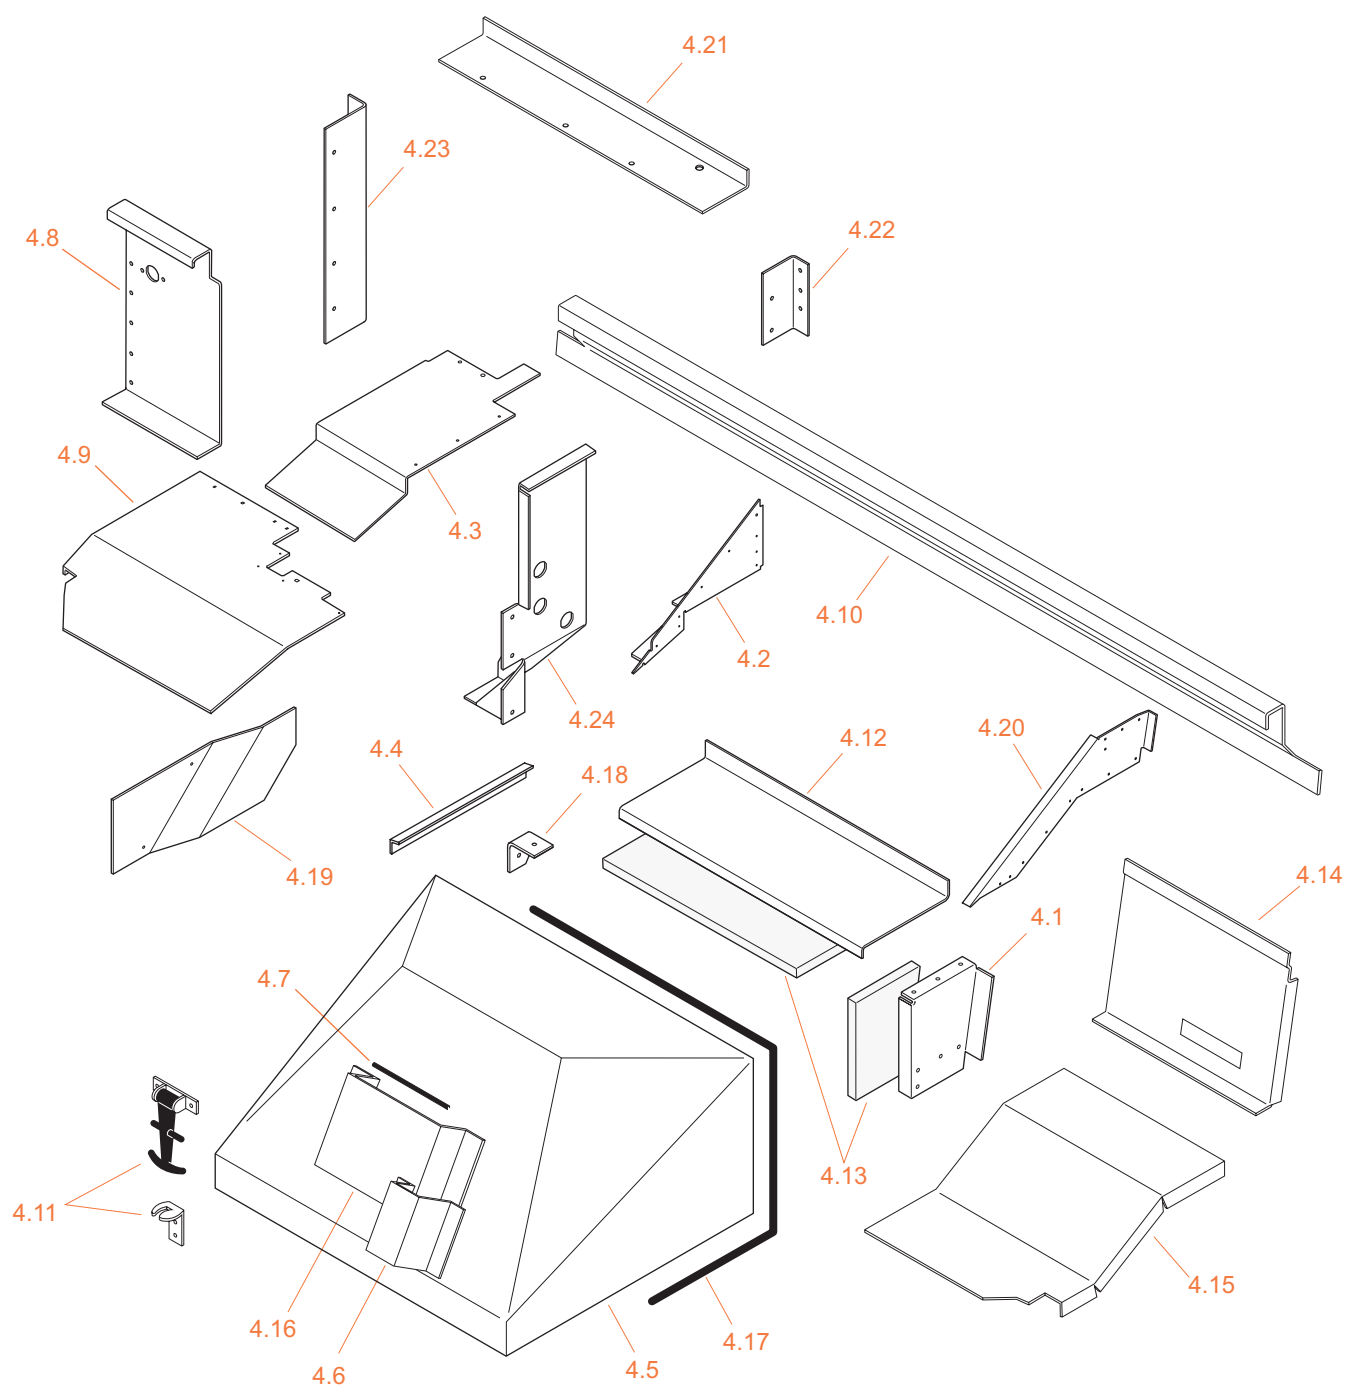


Cowling

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

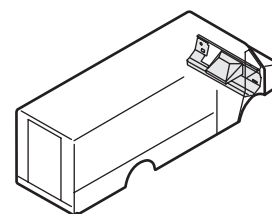

NOTE: Ford cowl parts changed in Model Year 2002.			
Item	Previous No.	Current No.	Description
4.0	64236858	64237245	COWL ASSEMBLY FORD
4.1	06601694	06921426	COVER RH FIXED ENGINE
4.2	06918002	06921300	COVER LH FRT FIXED ENG
4.3	06917281	06921299	RISER FLOOR CTR LH
4.4	06918028		IA 2016 HLS 19.56 06001983
4.5.0	06918022		COVER WLDMT ENGINE
4.5.1	54232203-CHART		COV ASY ENGINE W/CRPT
4.6.0	06913307		MOUNT CAB RADIO
4.6.1	11000150		INSERT THREAD 1/4-20
4.6.2	11305092		SCREW 1/4-20 x 3/4
4.6.3	11400177		RIVET, POP AL .94
4.7	05302302		TRIM LOCK BLK 1/8" W/ALUM INST
4.8	06601675-Width	06922207-Width	COWL METAL TOP LH (SPECIFY WIDTH OF UNIT)
4.9	06917984-Width	06921298-Width	RISER FLR LH (SPECIFY WIDTH OF UNIT)
4.10	06601674	06922208-Width	COWL METAL TOP RH (SPECIFY WIDTH OF UNIT)
4.11	08700570		LATCH ENG COVER
4.12	06601695	06921302	COVER TOP FIXED ENGINE
4.13	20400176		DEADNER 1/2" ENG.SOUND 54" x 266"
4.14 H	BSNR	06924360-Width	METAL COWL RH-Heat Only (SPECIFY WIDTH OF UNIT)
4.14 A	BSNR	06924361-Width	METAL COWL RH-AC (SPECIFY WIDTH OF UNIT)
4.15	06601746-Width	06921304-Width	RISER FLOOR RH (SPECIFY WIDTH OF UNIT)
4.16.0	06912974		HOLDER DOCUMENT .063 x 2 x 12
4.16.1	11400600		RIVET A VEX 3/16 x 3/8
4.17	05402168		SEAL
4.18	06918027		BRA CE CORNER .125 x 1.88 x 2.75
4.19	06920969		FENDER INNER RR LH
4.20	06601793	06921425	COVER ENG MID FIXED RH
4.21	06918029		ANGLE UPR STEERING ISLAND
4.22	22814455		ANGLE FRMD STRG ISLAND/COWL RH
4.23	22814456		ANGLE FRMD STRG ISLAND/COWL LH
4.24	06918003		COVER MID FIXED ENG LH
4.NS	NA	06921427	EDGE SEAL ENGINE COVER #36
4.NS	14000625		CARPET, 1 SQ YRD
4.NS	12400712		SIKAFLEX ALUM 11 FL OZ
	See also Sections 1 and 2.		

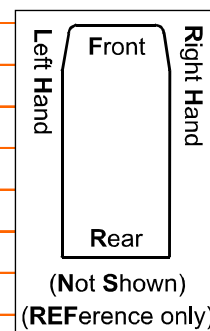

5—Front Structure

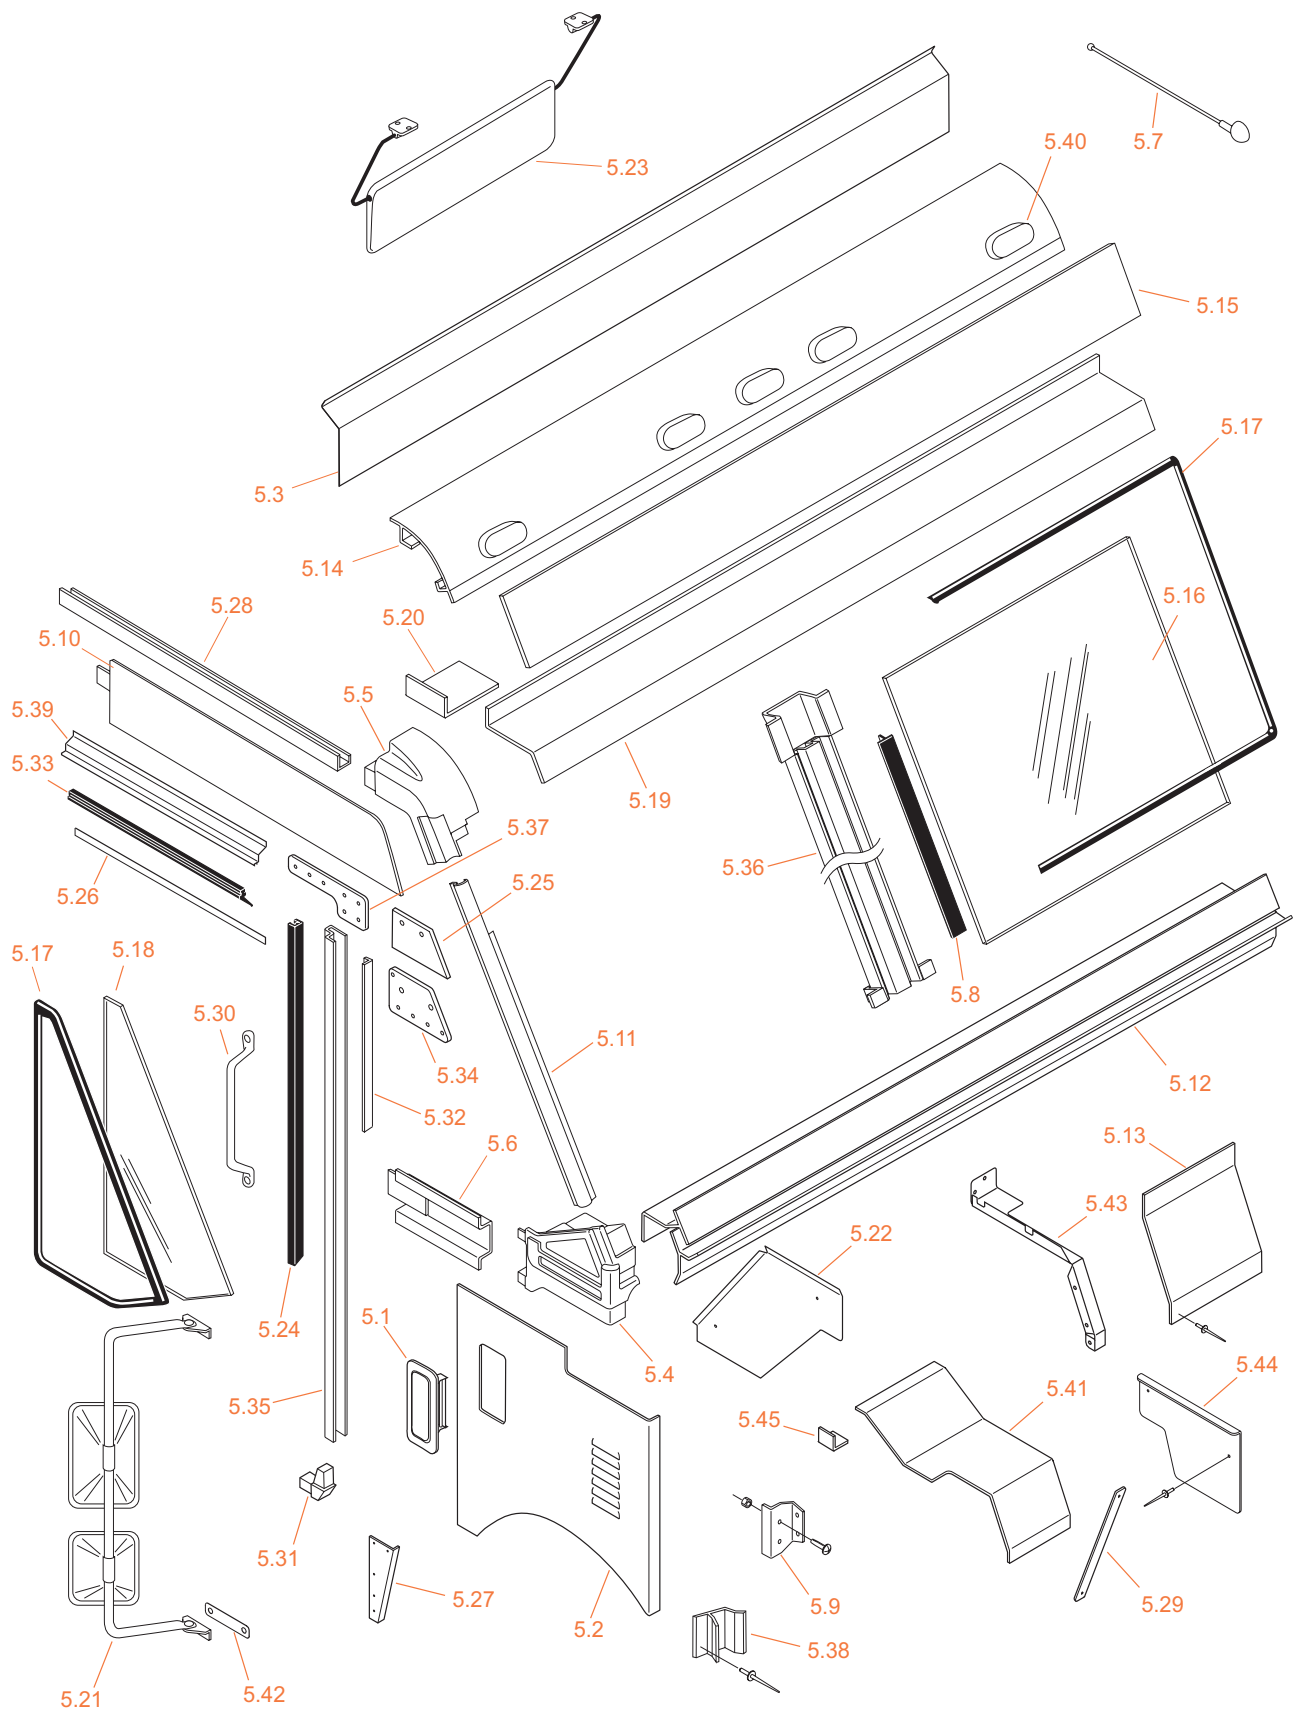


Front Structure

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

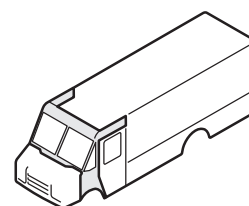

NOTE: The front structure construction changed in Model Year 2000.			
Item	Previous No.	Current No.	Description
5.0			FRONT STRUCTURE ASSY
5.1	07100165		VENTILATOR 2-WAY ALUM
5.2	Appendix 54000000		QUARTER PANEL
5.3-81	06920734-Width	BSNR	COVER O/H STORAGE W X 81H .080
5.3.1	11400028		MAGNA-LOCK 3/16 ALM
5.4.1 LH	06800097	06800121	CASTING COWL LH W/LOGO #30-36
5.4.1RH	06800096	06800122	CASTING COWL RH W/LOGO #30-36
5.4.2 LH	NA	06800121-Blank	CASTING COWL WO/LOGO LH
5.4.2 RH	NA	06800122-Blank	CASTING COWL WO/LOGO RH
5.5 LH	06800092		CASTING FRT ROOF LH
5.5 RH	06800093		CASTING FRT ROOF RH
5.6.1 LH	06917279-CHART	06921078-CHART	STIFFENER ASY QTR PANEL
5.6.1 RH	06917279-CHART	06921134-CHART	STIFFENER ASY QTR PANEL
5.6.2 LH	06921049-CHART	06921210	STIFFENER ASY QTR PANEL LH (Keyless)
5.6.2 RH	06921050-CHART	06921209	STIFFENER ASY QTR PANEL RH (Keyless)
5.7	16512491		ANTENNA FLEXIBLE 16"
5.8	09300504		MOLDING-T WINDSHIELD 1.5"
5.9	06601730		BRKT HD GAS CYL MNT
5.10.1 LH	06601604		HEADER METAL LH 81H #30-36
5.10.1 RH	06601605		HEADER METAL RH 81H #30-36
5.10.2 LH	06918153		HEADER METAL LH 81H W/VENT
5.10.3 LH	06918153		** HEADER MTL LH 81H W/VNT #31,35
5.10.4 LH	06601470		HEADER METAL LH 85H #30-36
5.10.4 RH	06601469		HEADER METAL RH 85H #30-36
5.10.5 LH	06601602		HEADER METAL LH 73H #30-36
5.10.5 RH	06601603		HEADER METAL RH 73H #30-36
5.10.6 LH	06923439		HEADER MTL LH 81H W/VNT #30-36
5.11 LH	06012416-Length	06921113-Length	IAH1965 POST LH WS 06000748
5.11 RH	06012417-Length	06921114-Length	IAH1965 POST RH WS 06000748
5.12.1	06917974-Width	06921138-Width	IA9093 COWL NTC CHART #36 06000750
5.12.2	06000837-Length		COWLING CHANNEL IA9285
5.12-R	54232221-Width	54232708-Width	FRONT COWL DRILL PATTERN CHART #36
5.13.0	06918016		FENDER INR LH FRT
5.13.1	11400025		MAGNA-LOCK 1/4" ALUM
5.14	06000774-Length		IA9177 ROOFCAP 06000774


Continued

5—Front Structure (continued)

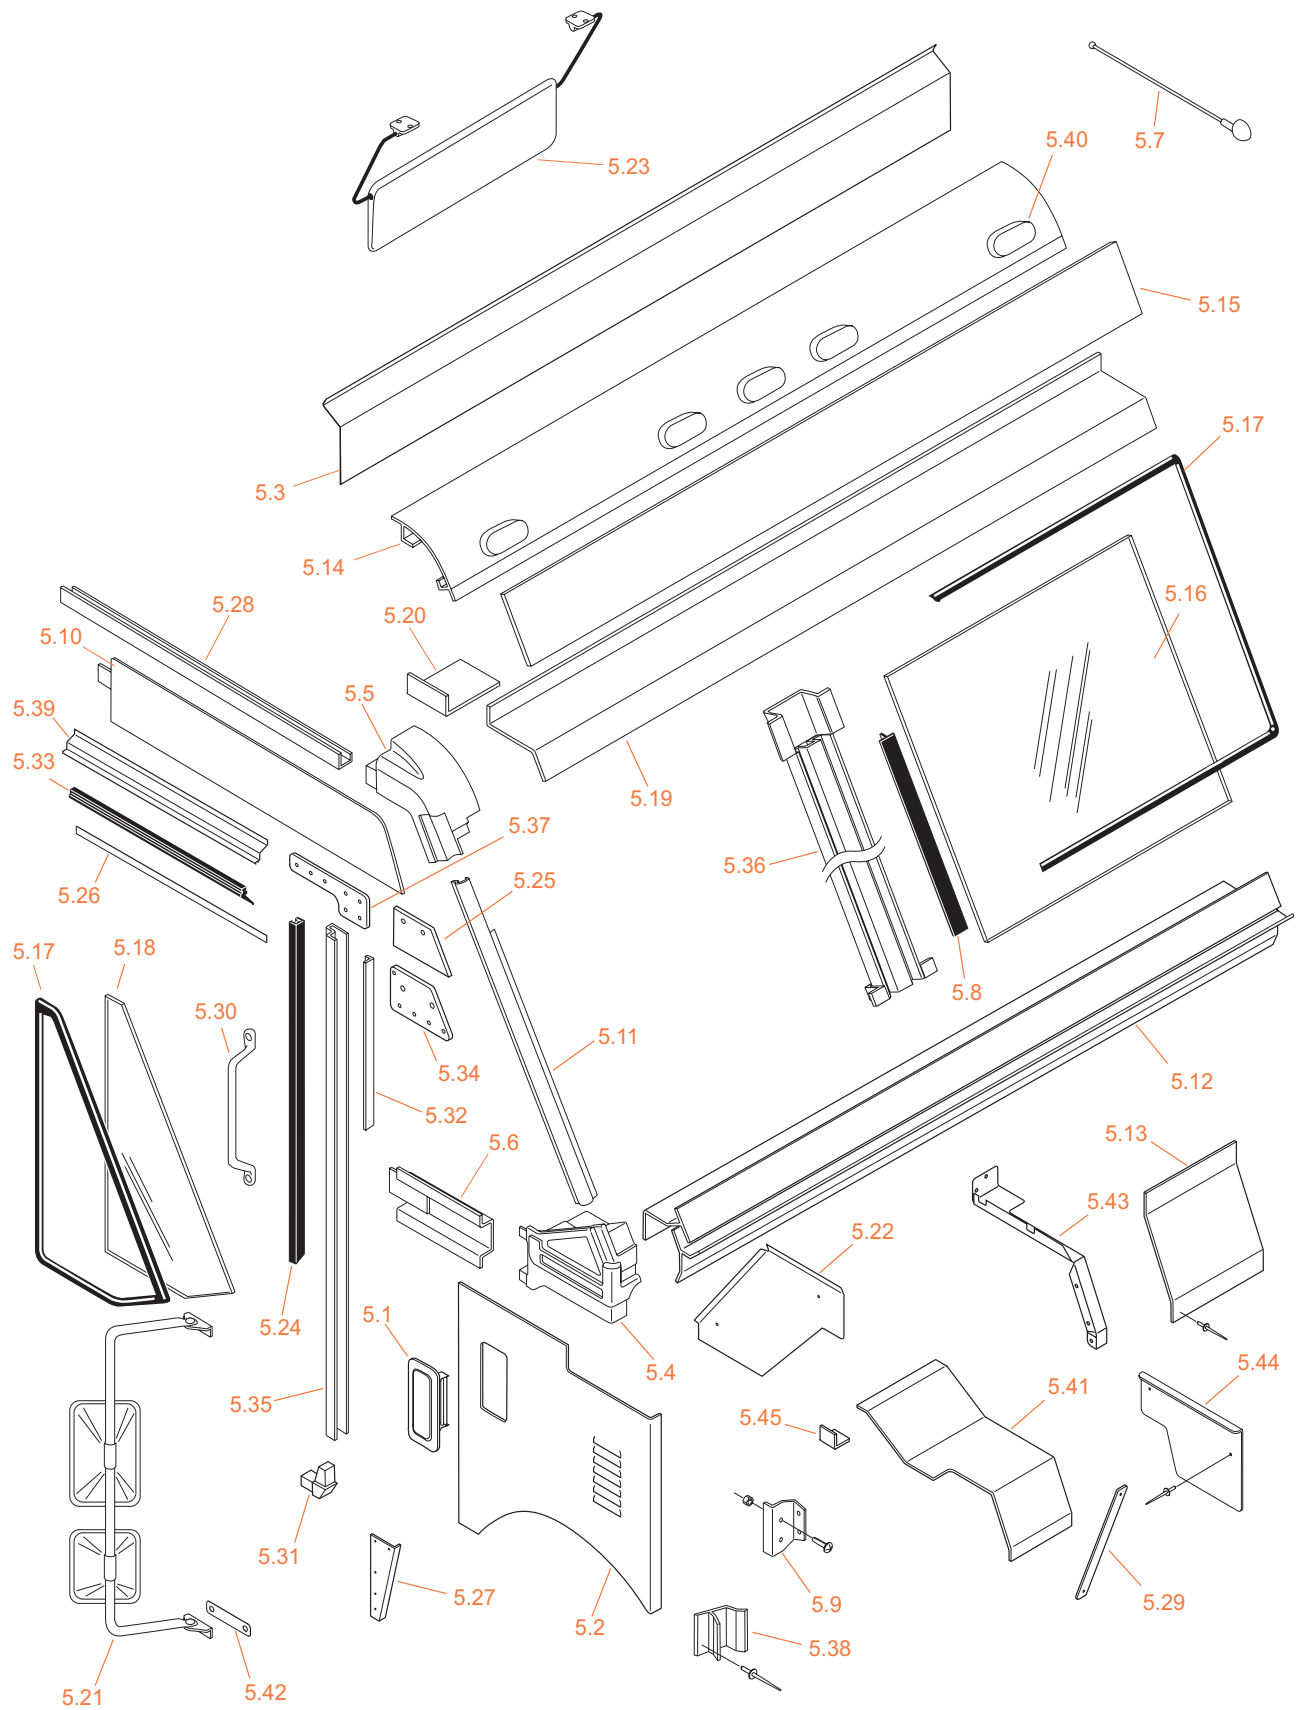


NOTE: The front structure construction changed in Model Year 2000.

Item	Previous No.	Current No.	Description
5.15.1	06502660		HEADER WINDSHIELD 93.5x73
5.15.2	06920084		HDR POS PRESS 86.5Wx81H
5.15.3	06502656		HEADER WINDSHIELD 93.5 x 85
5.15.4	06502658		HEADER WINDSHIELD 78.5 x 73
5.15.5	06502659		HEADER WINDSHIELD 86.5 x 73
5.15.6	06502661		HEADER WINDSHIELD 78.5 x 81
5.15.7	06502662		HEADER WINDSHIELD 86.5 x 81
5.15.8	06502663		HEADER WINDSHIELD 93.5 x 81
5.15.9	06502665		HEADER WINDSHIELD 86.5 x 85
5.15.10	06502953		HEADER WINDSHIELD 93.5 x 81
5.15.11	06502954		HEADER WINDSHIELD 93.5 x 85
5.15.12	06919264		HDR POS PRESS WINDSHIELD #32 #33
5.16.1	09801350		GLASS WSHLD W/TNT 2PC SHD BAND
5.16.2	09801351		GLASS WSHLD N/TINT 1PC 78.5W
5.16.3	09801349-Width		GLASS WSHLD N/TINT 2PC
5.17	05705483		MOLDING WIDE BONDED GLASS 1" L
5.18 LH	09801354		GLASS LH QTR WDW BONDED
5.18 RH	09801360		GLASS RH QTR WDW BONDED
5.19.1	06916523-Width		STIFFENER WINDSHIELD HEADER
5.19.2	06922031-Width		STIFFENER WINDSHIELD HEADER
5.19-93	NA	06921932	STIFFENER WINDSHIELD 93.5W
5.19-86	NA	06921933	STIFFENER WINDSHIELD 86.5W
5.19-78	NA	06921934	STIFFENER WINDSHIELD 78.5W
5.20	06601844		BRKT SHELF TO HEADER
5.21.1 LH	08610411		** MIRROR KIT LH S/STEEL
5.21.1 RH	08610412		** MIRROR KIT RH S/STEEL
5.21.2 LH	08610407		** MIRROR KIT LH WHITE
5.21.2 RH	08610408		** MIRROR KIT RH WHITE
5.21.3 LH	08610409		** MIRROR KIT LH BLACK
5.21.3 RH	08610410		** MIRROR KIT RH BLACK
5.21.4 LH	08610914		MIRROR ASSY LH 6 x 16" RE-TRAC
5.21.4 RH	08610911		MIRROR ASSY RH 6 x 16" RE-TRAC
5.21.5	08610913		MIRROR CONVEX SPT 5.5 x 4"
5.22.0	06918015		FENDER INR RH REAR
5.22.1	11005597		BOLT HXCP 1/4-20 x 1 G5Z
5.22.2	11008209		WASHER 1/4X1-1/2 FENDER ZINC
5.22.3	11008114		WASHER 1/4 FLAT USS
5.22.4	11000039		NUT LOCK WXD1/4-20 2WAY GR5 ZN
5.23.0	13672250		SUNVISOR 8 x 28 / 9" ARM BLK VNL
5.23.1	11300136		SCREW 10-24 x 1
5.23.2	11000067		NUT HEX KEP 10-24 ZINC

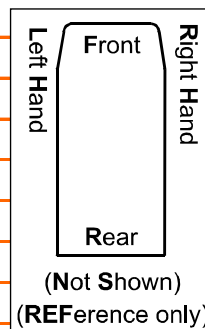

Continued

5—Front Structure (continued)

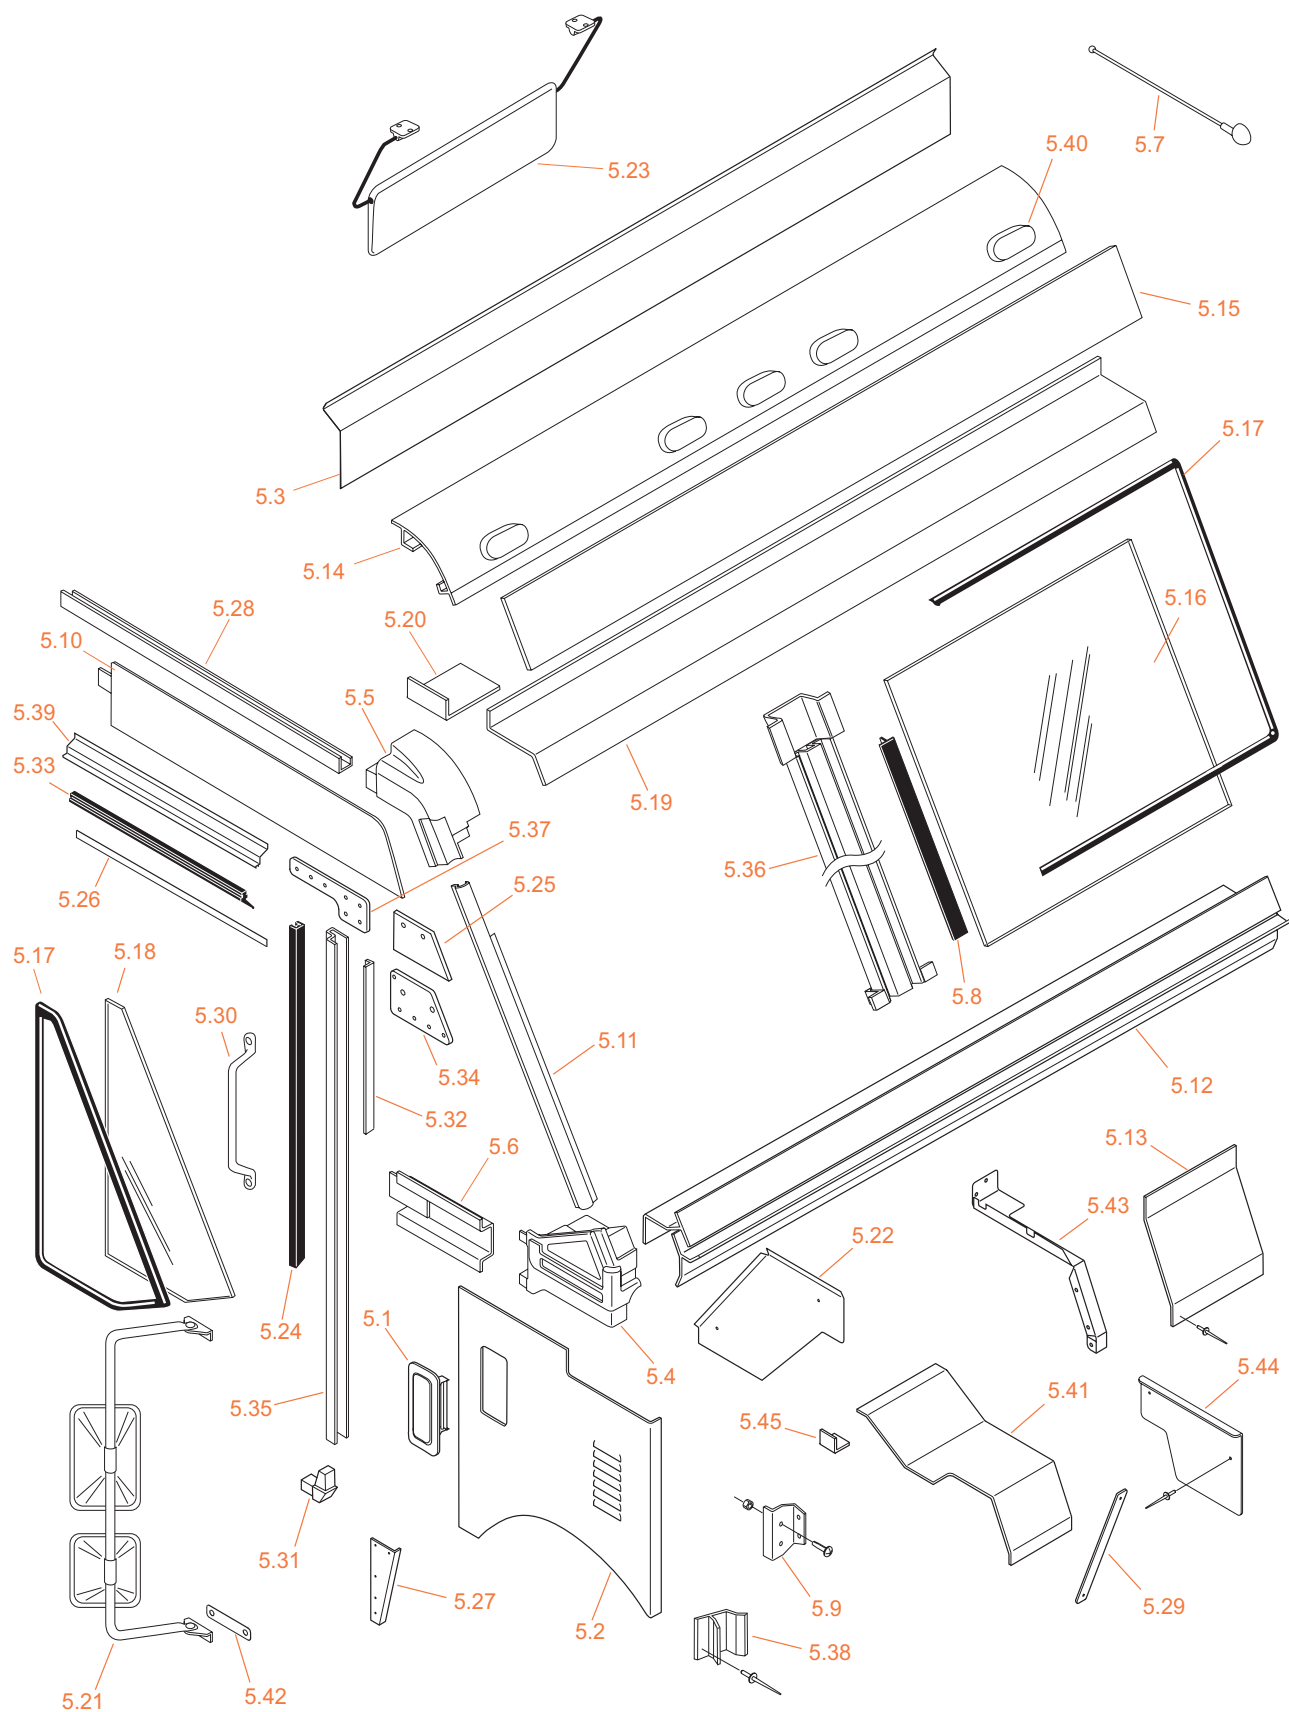


Front Structure

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

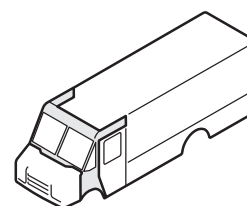


NOTE: The front structure construction changed in Model Year 2000.

Item	Previous No.	Current No.	Description
5.24		05705715	DR SEAL SLIDING DR FRT EDGE
5.25	06917278	06921077	MOUNT UPPER QTR WDO
5.26		06601704	FILLER UPR DR SEAL
5.27 LH		06601672	LEG QTR METAL LH
5.27 RH		06601673	LEG QTR METAL RH
5.28		06012473	AE TRACK 76.50 06000645
5.29		06921423	SUPPORT INR FENDER RH
5.30.1		08704342	HANDLE GRAB OFFSET
5.30.2		08704347	HANDLE ALUM GRAB
5.30.3		08704354	HANDLE GRAB ANODIZED
5.31		06800091	CASTING DR/S/WELL 90*
5.32		06601707	GUARD WIRE A-PILLAR
5.33		05402172	SEAL DOOR 39" 05402151
5.34	22813194	22816539	GUSSET 1/4 POST TO WINDSHIELD
5.35 LH		06915347	QTR POST LH 06000260
5.35 RH		06915346	QTR POST RH 06000260
5.36	06913672	06921962	POST ASY CENTER W/S
5.37		22813195	GUSSET 1/4 PST TO TRACK
5.38		06000747-Length	IA9000 HOOD GUIDE 06000747
5.39		06001990-03900	IA6000 DRSEAL 39.00 06001990
5.40.1		16512589	LITE AMB LED LOPRO W/BOSS
5.40.2		12605903	GASKET PM LED LITE
5.40.3		15200401	LIGHT CLEARANCE AMBER
5.40.4		15200548	LIGHT CLEARANCE AMBER
5.40.5		15200559	LIGHT CLEARANCE YELLOW
5.40.6		15206160	CLEARANCE LITE YELLOW
5.40.7		16100074	CLEARANCE LIGHT AMBER
5.40.8		16512990	LIGHT LED LOPRO AMBER
5.40.9		16512528	LIGHT CLEARANCE AMBER
5.40.10		16512992	GASKET LED CLEAR LT
5.41		06918018	FENDER INR RH TOP (SPECIFY UNIT WIDTH)
5.42		08610525	GASKET MIRROR BRACKET
5.43		06918017	FENDER INR LH (SPECIFY UNIT WIDTH)
5.44.0		06918014	FENDER INR RH FRT
5.44.1		11400025	MAGNA-LOCK 1/4" ALUM
5.45		06013087-00200	IA4976 ANGLE 2.00 06013087

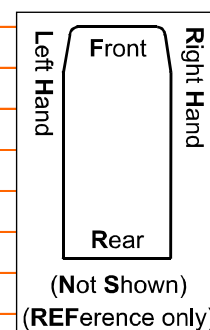

Continued

5—Front Structure (continued)

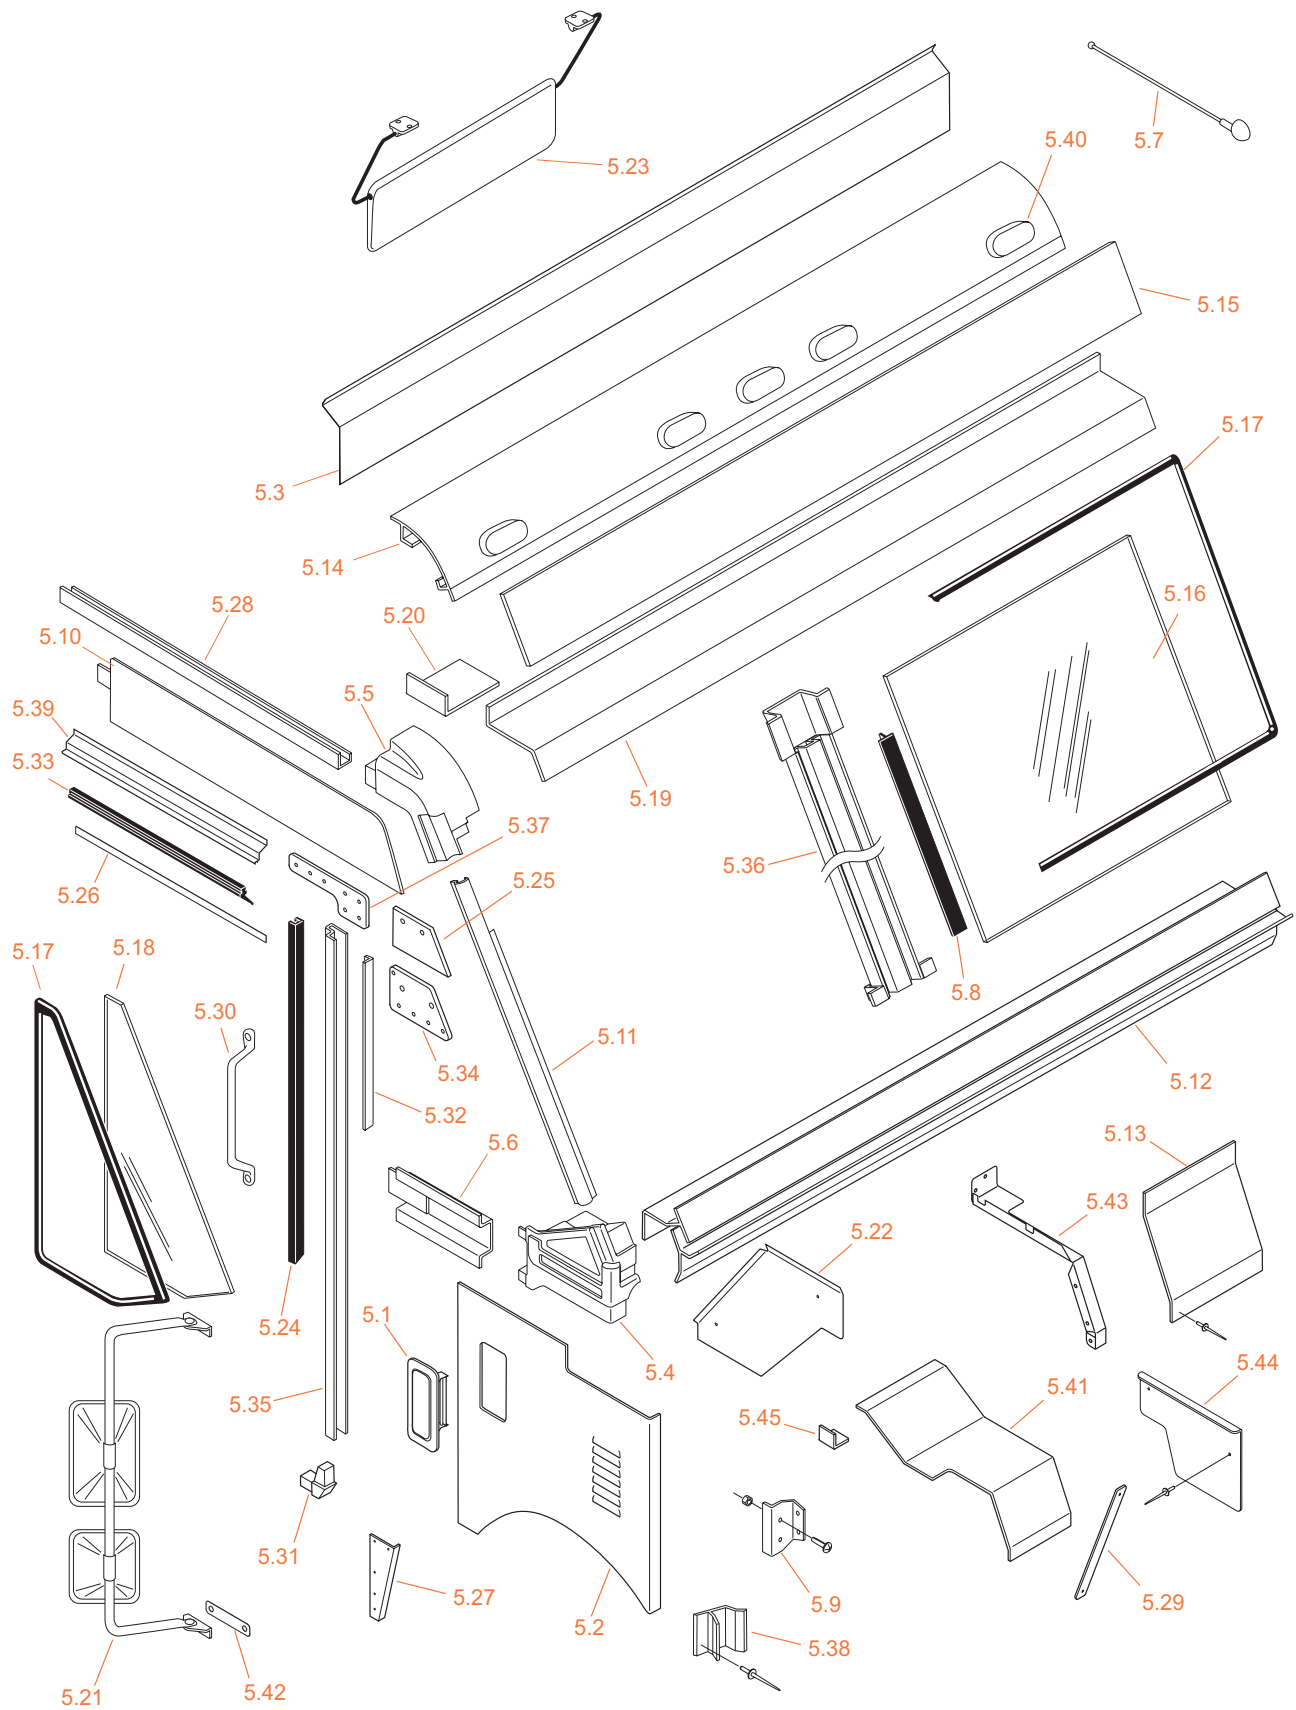


Front Structure

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

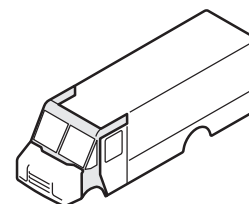

NOTE: The front structure construction changed in Model Year 2000.			
Item	Previous No.	Current No.	Description
5.NS	12605827		SIKA-PRIMER 250ML
5.NS	12605959		SIKA ACTIVATOR
5.NS	12100624		SEALANT LIQUID RUBBER
5.NS	12605925		CLEANER
5.Ref	54232149	NA	Q/PANEL ASSY RH CHART
5.Ref	54232224		FENDER INNER INSTALL
5.Ref	NA	54232698-CHART	PANEL S/ASSY QTR SPECIAL RH CHART
5.Ref	NA	54232628-CHART	Q/PNL S/ASY RH KYLS ENT CHT
5.Ref	NA	54232679-CHART	PANEL ASSY QTR LH CHART #30-36
5.Ref	NA	54232680-CHART	PANEL ASSY QTR RH CHART #30-36
5.Ref	NA	54232711-CHART	PANEL ASSY QTR LH KYLS ENT 35/36
5.Ref	NA	54232712-CHART	PANEL ASSY QTR RH KEYLESS ENT #35/36
5.Ref	54232147-CHART	NA	** Q/PANEL ASSY LH CHART #30-36
5.Ref	54232149-CHART	NA	** Q/PANEL ASSY RH CHART #30-36
5.Ref	64236582		INSTALL 2-PIECE W SHLD GLASS
5.Ref	58230448		INSTL FLEXIBLE RADIO ANTENNA
5.Ref	54232124		QTR GLASS TRIM INSTALL
5.Ref	54232141		FENDER UPPER INNER INSTALL
5.Ref	54232743		INSTALL FRT CLEARANCE LIGHT 16512877
5.Ref	54232768		STRUCTURE ASSY FRT
5.Ref	54232830		FRONT RF CAP LIGHT 16512990 INSTL
5.Ref	58231056		INSTALLATION MIRROR HEATED 08610778
5.Ref	54232604		INSTALL CAP ROOF FRT CLR LITE 16512589
5.Ref	54232127		W/S TRIM MOLD INSTALL
	See also Section 4.		

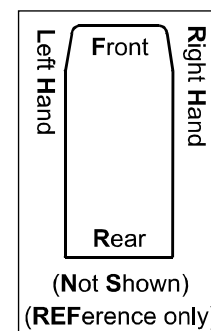

6—Hood, RIM

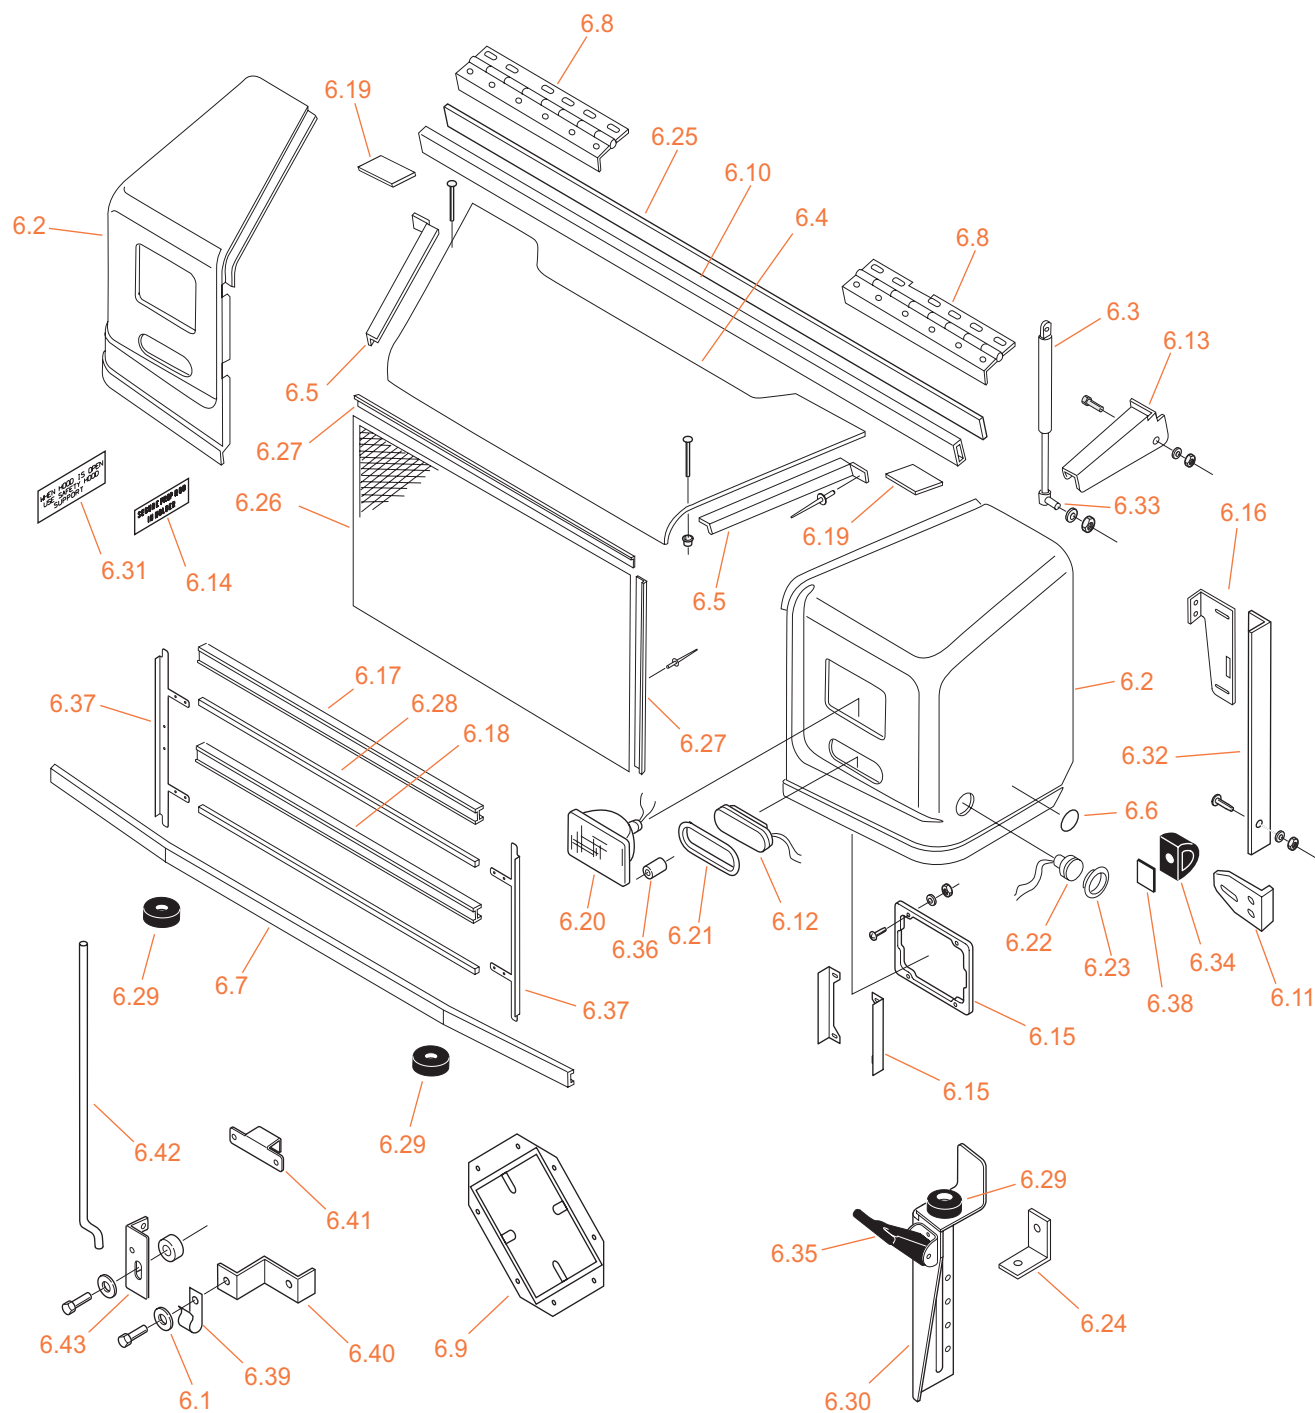


Hood, RIM

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

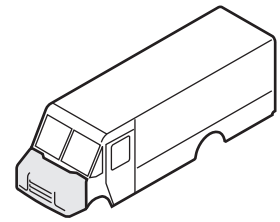


Item	Part Number	Description
6.0		RIM HOOD ASSY
6.1	11002810	W A S H E R 5/16 LOCK ZINC
6.2 LH	20201089	FENDER RIM LH
6.2 RH	20201090	FENDER RIM RH
6.3.1	08610334	SPRING GAS 135# W/O LCK
6.3.2	08610335	SPRING GAS W\LOCK 135#
6.3.3	08610130	SPRING GAS W/LOCK 180#
6.4.1	06917395	HOOD RIM CENTER 78.5W 1PC W/S
6.4.2	06601747-Width	HOOD RIM CENTER 2PC W/S (SPECIFY UNIT WIDTH)
6.4.3	11400051	HUCK TRUSS HEAD
6.4.4	11404001	HUCK MAGNA-GRIP COLLAR
6.4.5	11305092	BOLT (IN PLACE OF 6.4.3 AND 6.4.4)
6.4.6	11000039	NUT (IN PLACE OF 6.4.3 AND 6.4.4)
6.4.7	11008141	W A S H E R (IN PLACE OF 6.4.3 AND 6.4.4)
6.5 LH	06601815	SUPPORT CENTER RIM HOOD LH
6.5 RH	06601816	SUPPORT CENTER RIM HOOD RH
6.6.1	16200033	REFLECTOR AMBER TAPE RND
6.6.2	15201618	REFLECTOR AMBER
6.7	06916417	IA8427 HD SPRT 06000722 (SPECIFY UNIT WIDTH)
6.8.1 LH	08610455	HINGE RIM HD LH 78.5W 1PC W/S
6.8.2 LH	08610395-Width	HINGE RIM HOOD LH (SPECIFY UNIT WIDTH)
6.8 RH	08708530-Width	HINGE RIM HOOD RH (SPECIFY UNIT WIDTH)
6.9.1	03101390	PLACARD FRM HAZMAT STD KT BASE
6.9.2	03101863	PLACARD HAZMAT SOLID
6.9.3	03101872	PLACARD HAZMAT SOLID
6.10	06000303-08950	IAH451 TUBE 06000303
6.11	06919033	MOUNTING ANGLE RIM HOOD
6.12.1	16100076	LIGHT FRONT TURN
6.12.2	16512585	LIGHT OVAL TURN TRKLITE
6.12.3	16400435	PIGTAIL, LIGHT FRONT TURN
6.13 LH	22102017	SPRT UPR GAS SPR LH RIM HD
6.13 RH	22102018	SPRT UPR GAS SPR RH RIM HD
6.14	03101830	DECAL, PROP ROD
6.15.1	22813774	BRKT HOOD RIM INCAN HDLAMP
6.15.2	22102015	BRKT HDLMP MNT RIM HD HALO

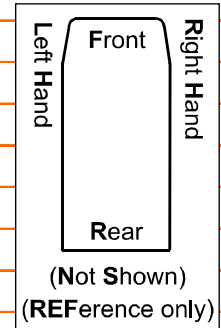

Continued

6—Hood, RIM (continued)

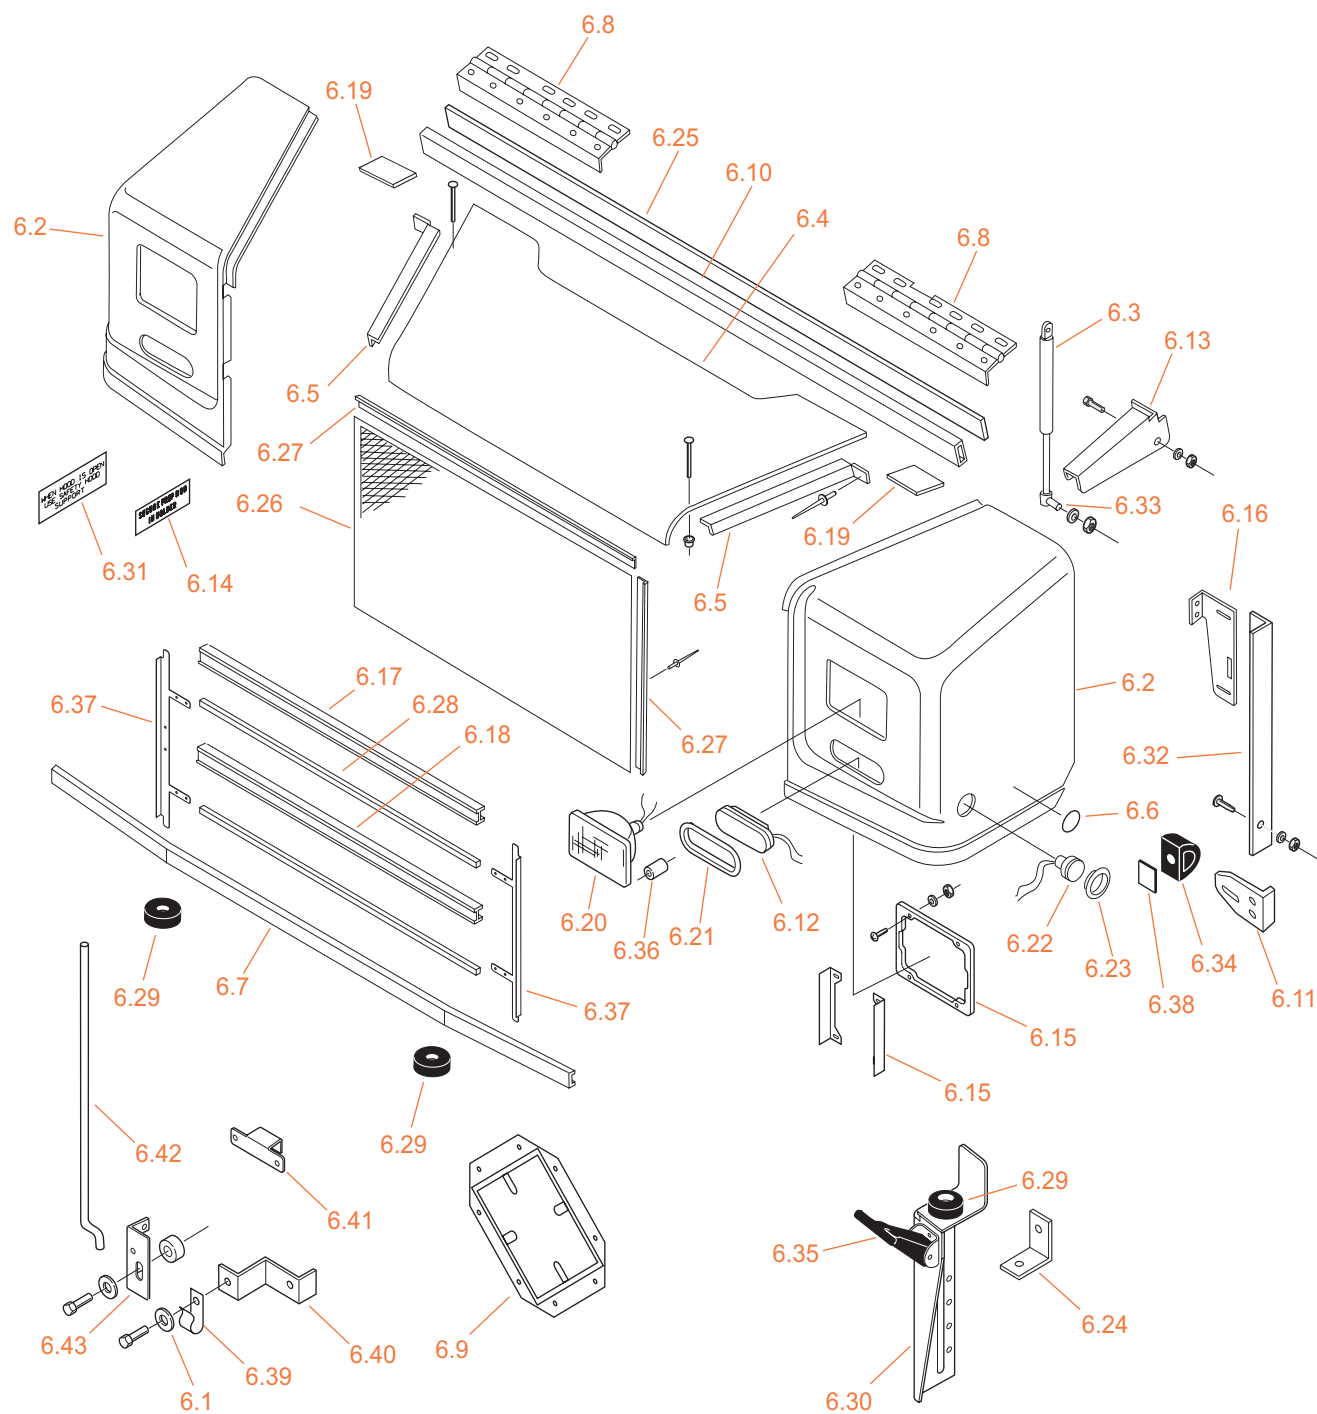


Hood, RIM

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

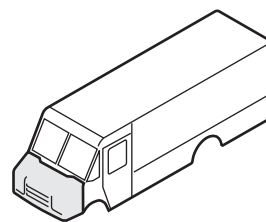


Item	Part Number	Description
6.16 LH	06919034	SUPPORT STRUT RIM HOOD LH
6.16 RH	06919035	SUPPORT STRUT RIM HOOD RH
6.17	06000722-Length	IA8427 HD SPRT (SPECIFY LENGTH)
6.18	06000723-Length	IA8428 HD SPRT (SPECIFY LENGTH)
6.19	06916925	SHIM RIM HOOD HINGE
6.20.1	15206129	HEADLIGHT INCAN
6.20.2	15200593	**HEADLIGHT HALOGEN
6.20.3	16513036	HEADLIGHT HALOGEN
6.20.4	15206029	BEZEL, HEAD LIGHT
6.21	16100073	GROMMET FRONT LAMP
6.22.1	16512170	LIGHT AMBER LED 2.5" ROUND
6.22.2	16100105	LIGHT SIDE MARKER
6.23	16512754	GROMMET SIDE MARKER (CLOSED)
6.24	22814266	MOUNT RIM HOOD BMPR STOP
6.25	12300812	TAPE FOAM 3/16 x 1" x 50'
6.26	08610450-Length	MESH, RIM HOOD 3 x 3 x 18 (SPECIFY SIZE)
6.27	06002023-Length	TRIM, IA 727 ANGLE (SPECIFY LENGTH)
6.28	06000113-Length	IAH454 TUBE 06000113 (SPECIFY SIZE)
6.29.1	05705473	RUBBER BMPR 1.5 DIA x .625
6.29.2	05705659	BUMPER RUBBER 1.5DIA x .625
6.29.3	23002147SK	KIT RIM BUMPER STOPS 2.5 OD (05705702 Bumper Only)
6.30.1 LH	22813997	** MNT HOOD BMPR & LATCH LH
6.30.1 RH	22813998	** MNT HOOD BMPR & LATCH RH
6.30.2 LH	22816443	MNT HOOD BMPR & LATCH LH
6.30.2 RH	22816444	MNT HOOD BMPR & LATCH RH
6.30.3 LH	22816592	MOUNT HOOD BUMPER LATCH LH
6.30.3 RH	22816593	MOUNT HOOD BUMPER LATCH RH
6.31.1	03000828	DECAL WHEN HOOD IS OPEN USE
6.31.2	03101307	DECAL GAS SPRING/HOOD PROP REL
6.31.3	03101838	DECAL HOOD PROP ROD CATCH 3" x 5"
6.32 LH	06919383-Length	IA637 HD RM BRC LH 06002050 (SPECIFY LENGTH)
6.32 RH	06919384-Length	IA637 HD RM BRC RH 06002050 (SPECIFY LENGTH)
6.33	08610361	STUD BALL 10MM
6.34	01100442	BUMPER-LIFT UP NOSE 1-3/4"
6.35	08700570	LATCH ENG COVER

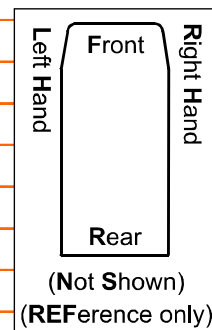

Continued

6—Hood, RIM (continued)

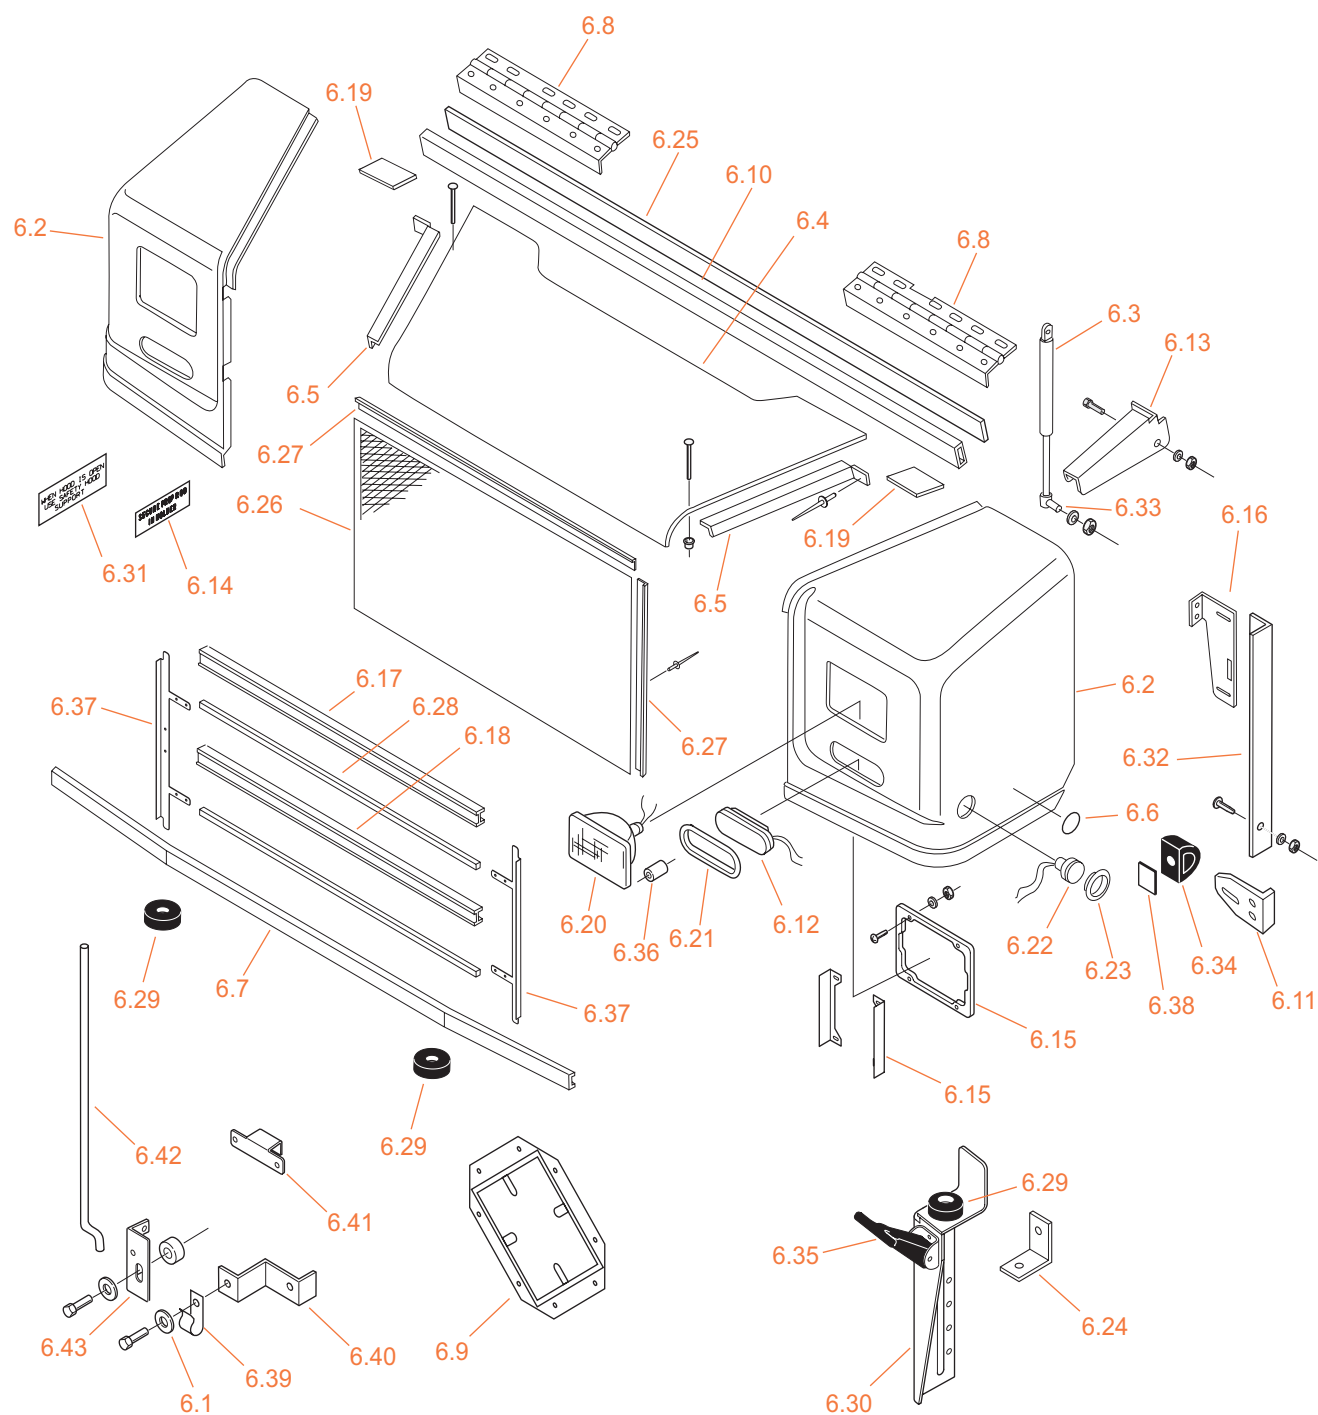


Hood, RIM

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

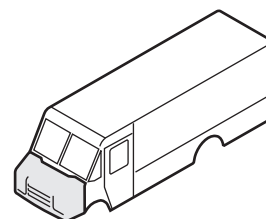

Item	Part Number	Description	Left Hand Right Hand Front Rear (Not Shown) (REFERENCE only)
6.36	17900474	PLENUM SPACER 1" HALO	
6.37	06922059	SUPPORT GRILL BARS	
6.38	06921490	ALUM .125 x .88 x 1.5	
6.39	08610687	CLIP HOOD ROD 5.5MM	
6.40	22814609	BRACKET PROP ROD CATCH	
6.41	22813778	CATCH HOOD PROP	
6.42	22813919	HOOD PROP RIM HOOD	
6.43.0	22813777	BRKT HOOD PROP ROD	
6.43.1	22814032	SPACER TUBE HOOD PROP .5"	
6.NS	23002060	HOOD, SHELL ONLY (Specify Width)	
6.NS	16512701	GUARD HEAD LIGHT (CAGE)	
6.Ref	54232625	INSTL GRAB HANDLE ON RIM HOOD	
6.Ref	54232775	GRILL BAR INSTALL	
6.Ref	54232547	RIM HOOD ASY W/2PC WSHLD CHART	
6.Ref	54232774	RIM HOOD ASSY W/2PC W/S CHART	
6.Ref	54232733	HOOD ASSY RIM HALG W/DPSTK ACS CHT	
6.Ref	54232546	RIM HOOD ASY 78.5W W/1PC WSHLD	
6.Ref	54232158	MESH, RIM HOOD (Specify Width)	
6.Ref	54232545	INSTALL FNDR BRACE CHT RIM HD	
6.Ref	51231290	STOP HOOD BMPR INSTAL	
6.Ref	64236281-CHART	HOOD PROP INSTALL RIM	
6.Ref	20510272	FENDER RIM LH RECT INCAN HDLT	
6.Ref	20510271	FENDER RIM RH RECT INCAN HDLT	

6—Hood, Fiberglass

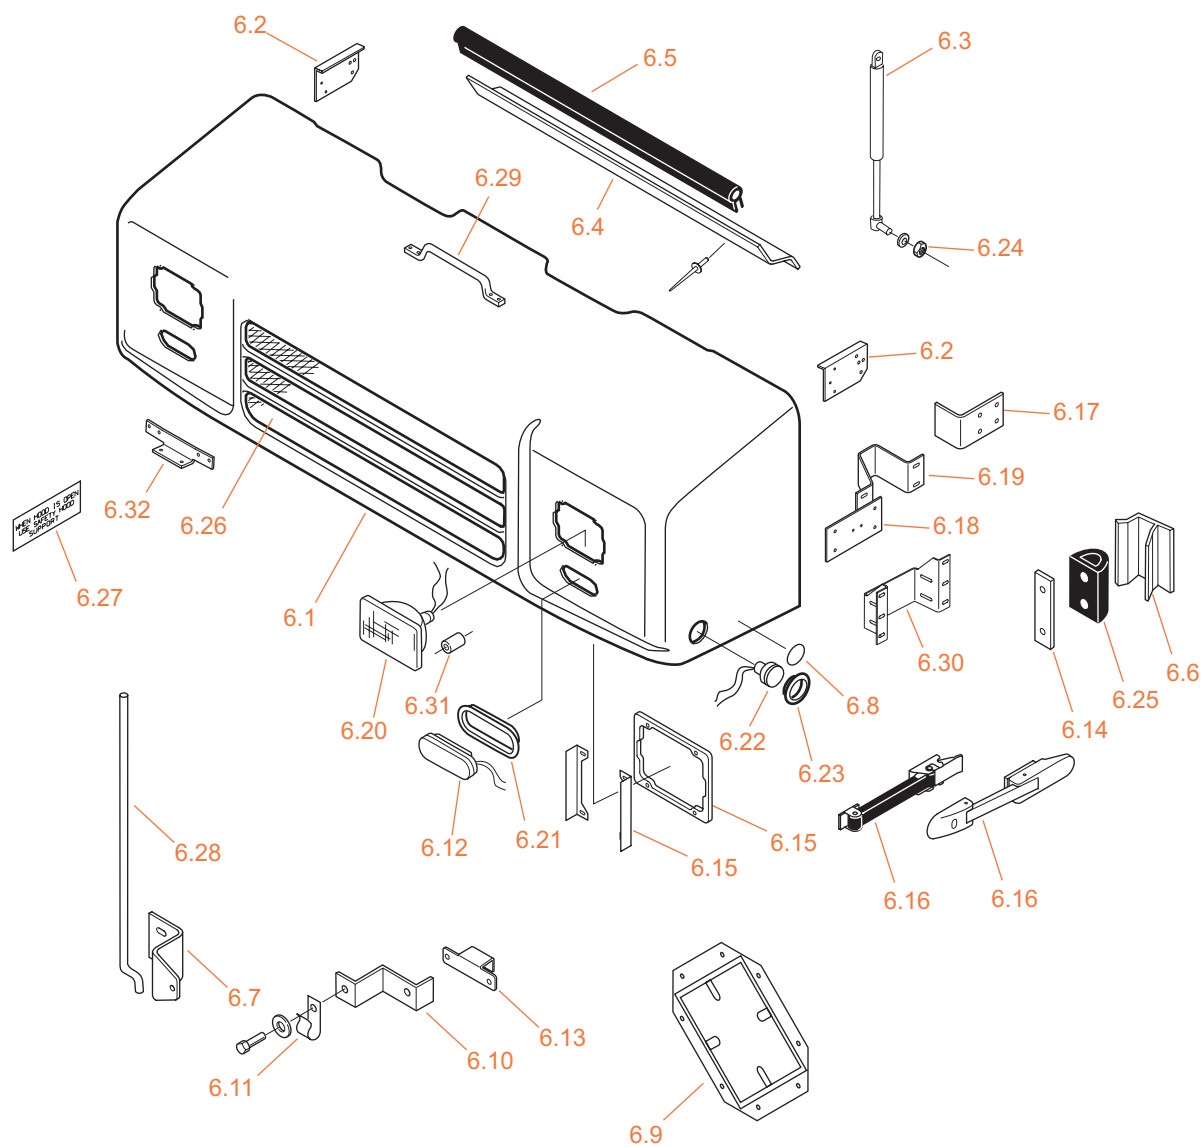


Hood, Fiberglass

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

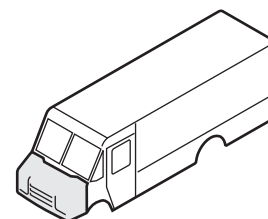


Item	Part Number	Description
6.0		HOOD FIBERGLASS 36
6.1.1*	BSNR	HOOD FGL RCT HAL 36
6.1.2*	BSNR	HOOD FGL RECT IND 36
6.2 LH	22814961	SPRT UPR GAS SPR LH RTM HOOD
6.2 RH	22814960	SPRT UPR GAS SPR RH RTM HOOD
6.2.1	06919665	**BRKT HOOD GUIDE MOUNT RTM
6.3.1	08610334	SPRING GAS 135# W/O LCK
6.3.2	08610335	SPRING GAS W\LOCK
6.4	06918875	FILLER COWL F/G RTM HOOD
6.5	05402186	SEAL HOOD FIBERGLASS
6.6	06000747-Length	IA 9000 HOOD GUIDE 06000747
6.7	BSNR	BRACKET HOOD PROP ROD
6.8	16200033	REFLECTOR AMBER TAPE ROUND
6.9	See RIM Hood	HAZMAT PLACKARD
6.10	22814609	BRACKET PROP ROD CATCH
6.11	08610687	CLIP HOOD ROD 5.5MM
6.12	See RIM Hood	LIGHT FRONT TURN
6.13	22813778	CATCH HOOD PROP
6.14.1	06919446	BACKER DOCK BUMPER RTM HOOD
6.14.2	06919116	BACKER DOCK BUMPER RTM HOOD
6.15.1	See RIM Hood	BRKT HOOD RIM INCAN HDLAMP
6.15.2	06915596	PLATE H/LIGHT MTG F/G HOOD
6.16.1	08704958	LATCH FLEX DRAW
6.16.2	08610842	LATCH HOOD
6.16.3	08700313	HOLD DOWN HOOD
6.17	06919444	BRACKET HD GUIDE MOUNT FGLS
6.18	06924048	BRKT HD GUIDE OUTER F/G RTM
6.19 LH	06919095	BRKT HOOD GUIDE INNER LH RTM
6.19 RH	06919105	BRKT HOOD GUIDE INNER RH RTM
6.20	See RIM Hood	HEADLIGHT ASSY
6.21	16100073	GROMMET FRONT LAMP
6.22	See RIM Hood	LIGHT SIDE MARKER
6.23	16512754	GROMMET 2.5" RND W/BCK
*Detail 6.1 includes hood hinges and other components affixed to fiberglass hood.		

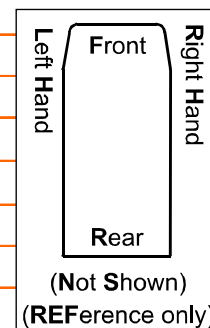

Continued

6—Hood, Fiberglass (continued)

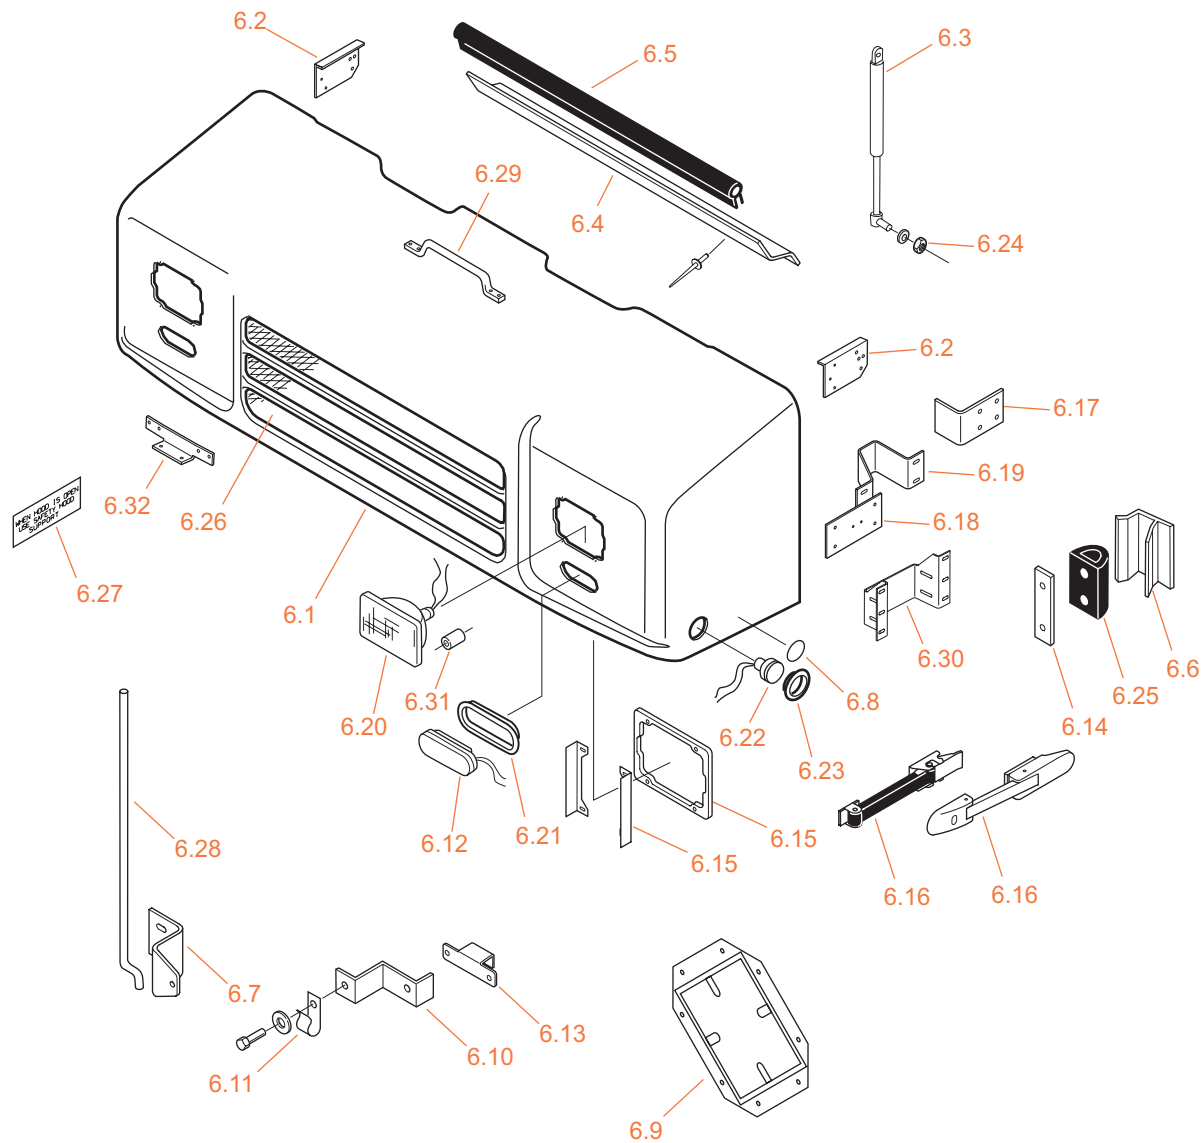


Hood, Fiberglass

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

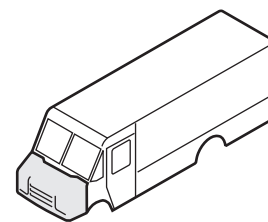

Item	Part Number	Description	Left Hand Right Hand Front Rear (Not Shown) (REFERENCE only)
6.24	08610361	STUD BALL 10MM	
6.25.1	01902625	BMPR RBR DOCK HOOD GUIDE 3.5"	
6.25.2	01100442	BUMPER-LIFT UP NOSE 1-3/4"	
6.26	08610450	MESH.032 BLK EPOX (SPECIFY SIZE)	
6.27	03000828	DECAL WHEN HOOD IS OPEN USE	
6.28	22813919	HOOD PROP HOOD	
6.29.1	08704342	HANDLE GRAB OFFSET	
6.29.1	08704347	HANDLE ALUM GRAB	
6.29.2	54232654	BACKER A SY RTM HOOD HANDLE	
6.30	06924049	BRKT HD GUIDE INNER F/G RTM	
6.31	17900474	PLENUM SPACER 1" HALO	
6.32	22817153	PATCH PLATE F/G HOOD LOWER TUBE	
6.Ref	54232511	HOOD S/ASY RTM INC CHART #36	
6.Ref	54232512	HOOD S/ASY FGLS HALO CHART #36	
6.Ref	54232653	INSTALL GRAB HANDLE HOOD	
6.Ref	54232523	INSTL COWL FILLER F/GLS RTM HD ALL	

6—Hood, Aluminum

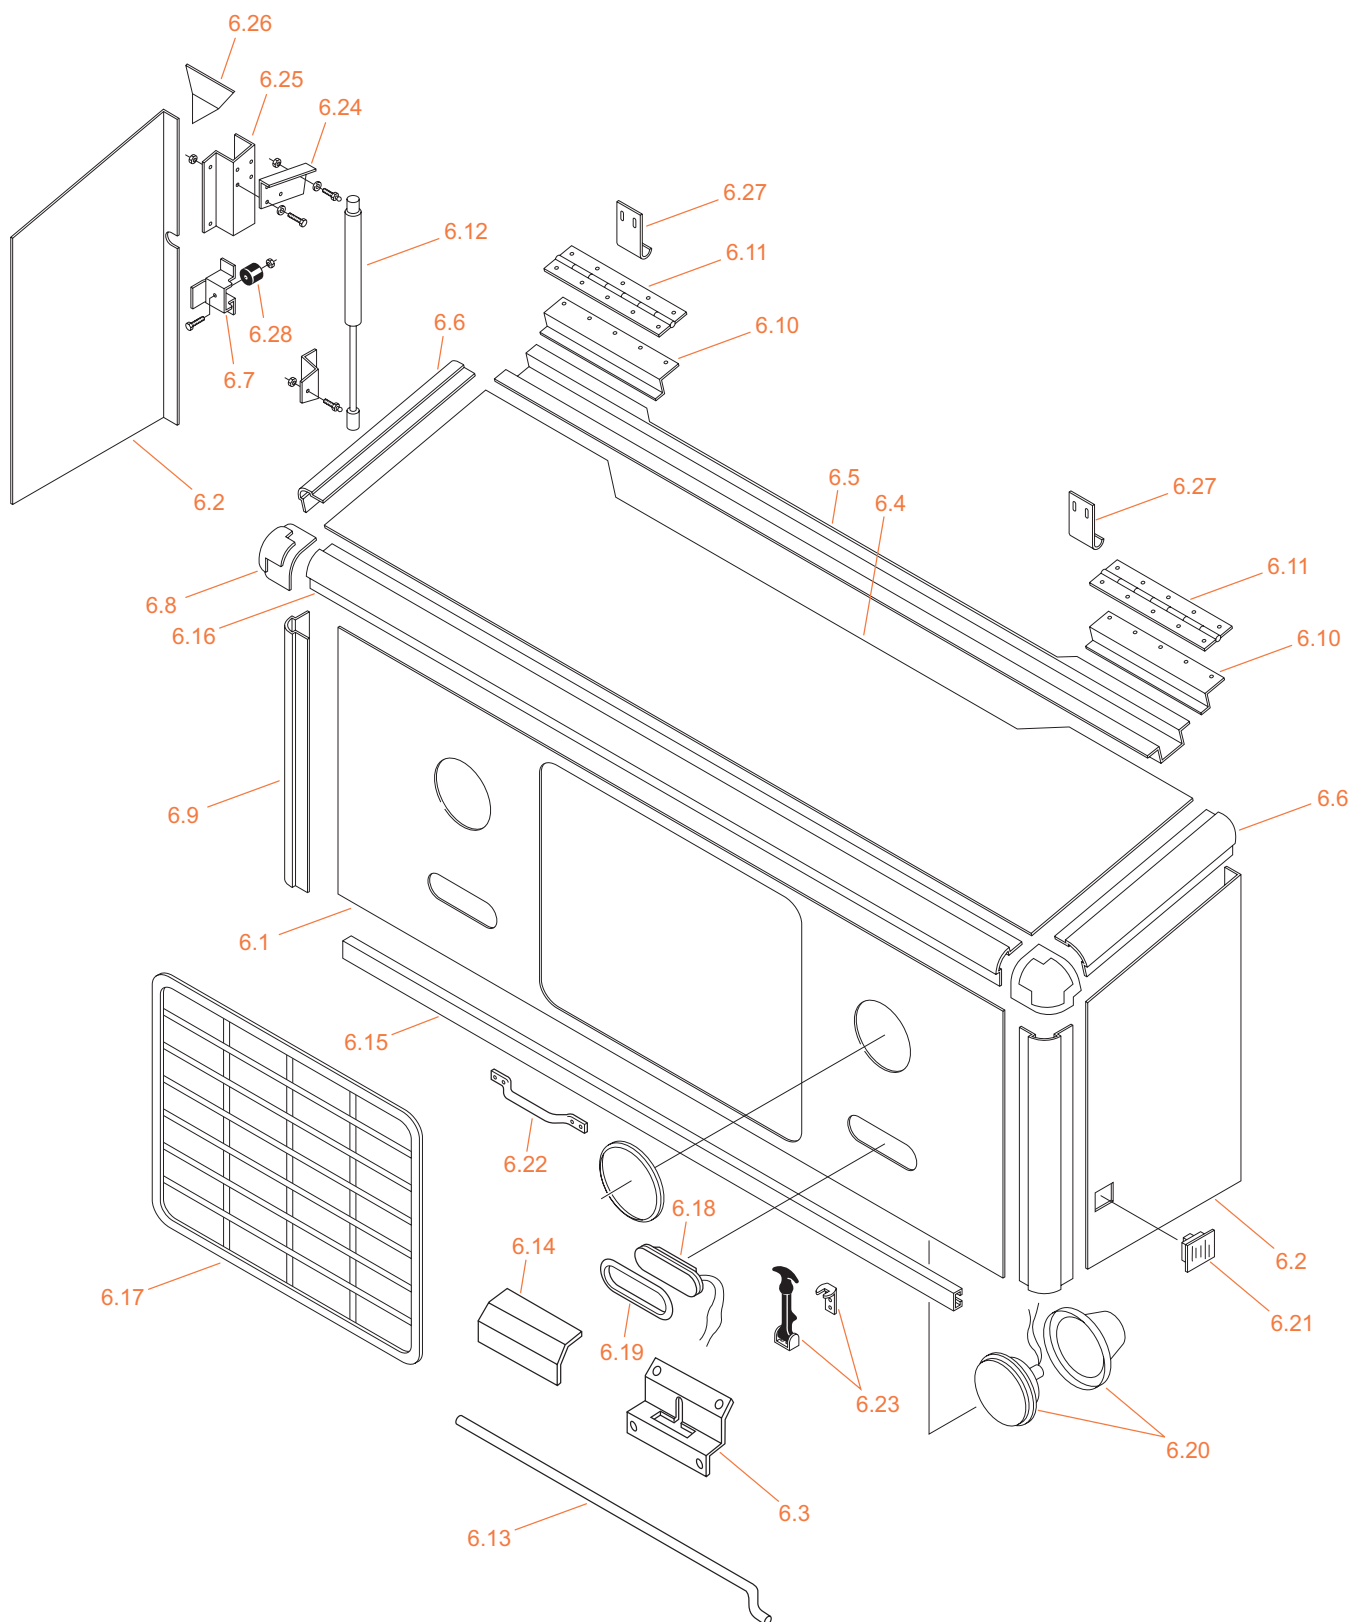


Hood, Aluminum

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

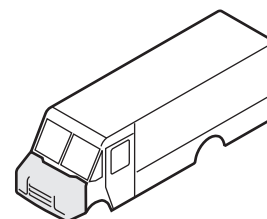

Item	Part Number	Description
6.0		HOOD ASSEMBLY, ALUMINUM
6.1	BSNR	METAL, GRILL
6.2	BSNR	METAL, FENDER
6.3	BSNR	CATCH HOOD PROP
6.4	BSNR	METAL, HOOD
6.5	06601800-09350	STIFFENER 93.5W L/UP NOSE A&B
6.6 LH	06915794	CRNR *OE LH 2'-15/16 06012019
6.6 RH	06915795	CRNR *OE RH 2'-15/16 06012019
6.7	06600740	BRACKET HOOD ALIGN FRT WALKIN
6.8	06800020	CASTING HOOD CORNER
6.9	06012019-Length	IA 4051 CRNR 06012019
6.10	06013029-Length	IA 4701 TRACK 06013029
6.11	08705163-Length	HINGE .093 x 3" x L SS PIN
6.12	08610334	SPRING GAS 135# W/O LCK
6.13	BSNR	PROP ROD
6.14	22813856	BCKR HOOD CATCH
6.15	06003854-Length	IA 7337 CHNL 06003854
6.16	06013009-Length	IA 4175 HOOD 06013009
6.17	54231731	GRILL ASSEMBLY, FORMED 21.50
6.18	16100076	LIGHT FRONT TURN
6.19	16100073	GROMMET FRONT LAMP
6.20	BSNR	HEAD LIGHT ASSY
6.21	16100078	LIGHT SIDE MARKER
6.22	08704347	HANDLE ALUM GRAB
6.23	08700570	LATCH ENG COVER
6.24 LH	22101879	ALIGN BRKT HOOD LH# #30-36
6.24 RH	22101881	ALIGN BRKT HOOD RH# #30-36
6.25 LH	06601799	MOUNT GAS SPRING UPR LH
6.25 RH	06601798	MOUNT GAS SPRING UPR RH
6.26 LH	06601609	GUSSET HOOD LH #30-33 35,36
6.26 RH	06601610	GUSSET HOOD RH #30-33 35,36
6.27	22101878	BRKT COWL ALIGNMENT #32-35
6.28	BSNR	HOLDER DR SOFT SOCKET

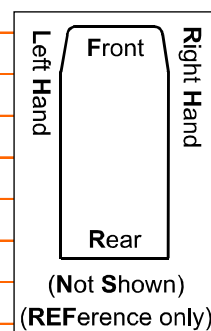

7—Wiper System

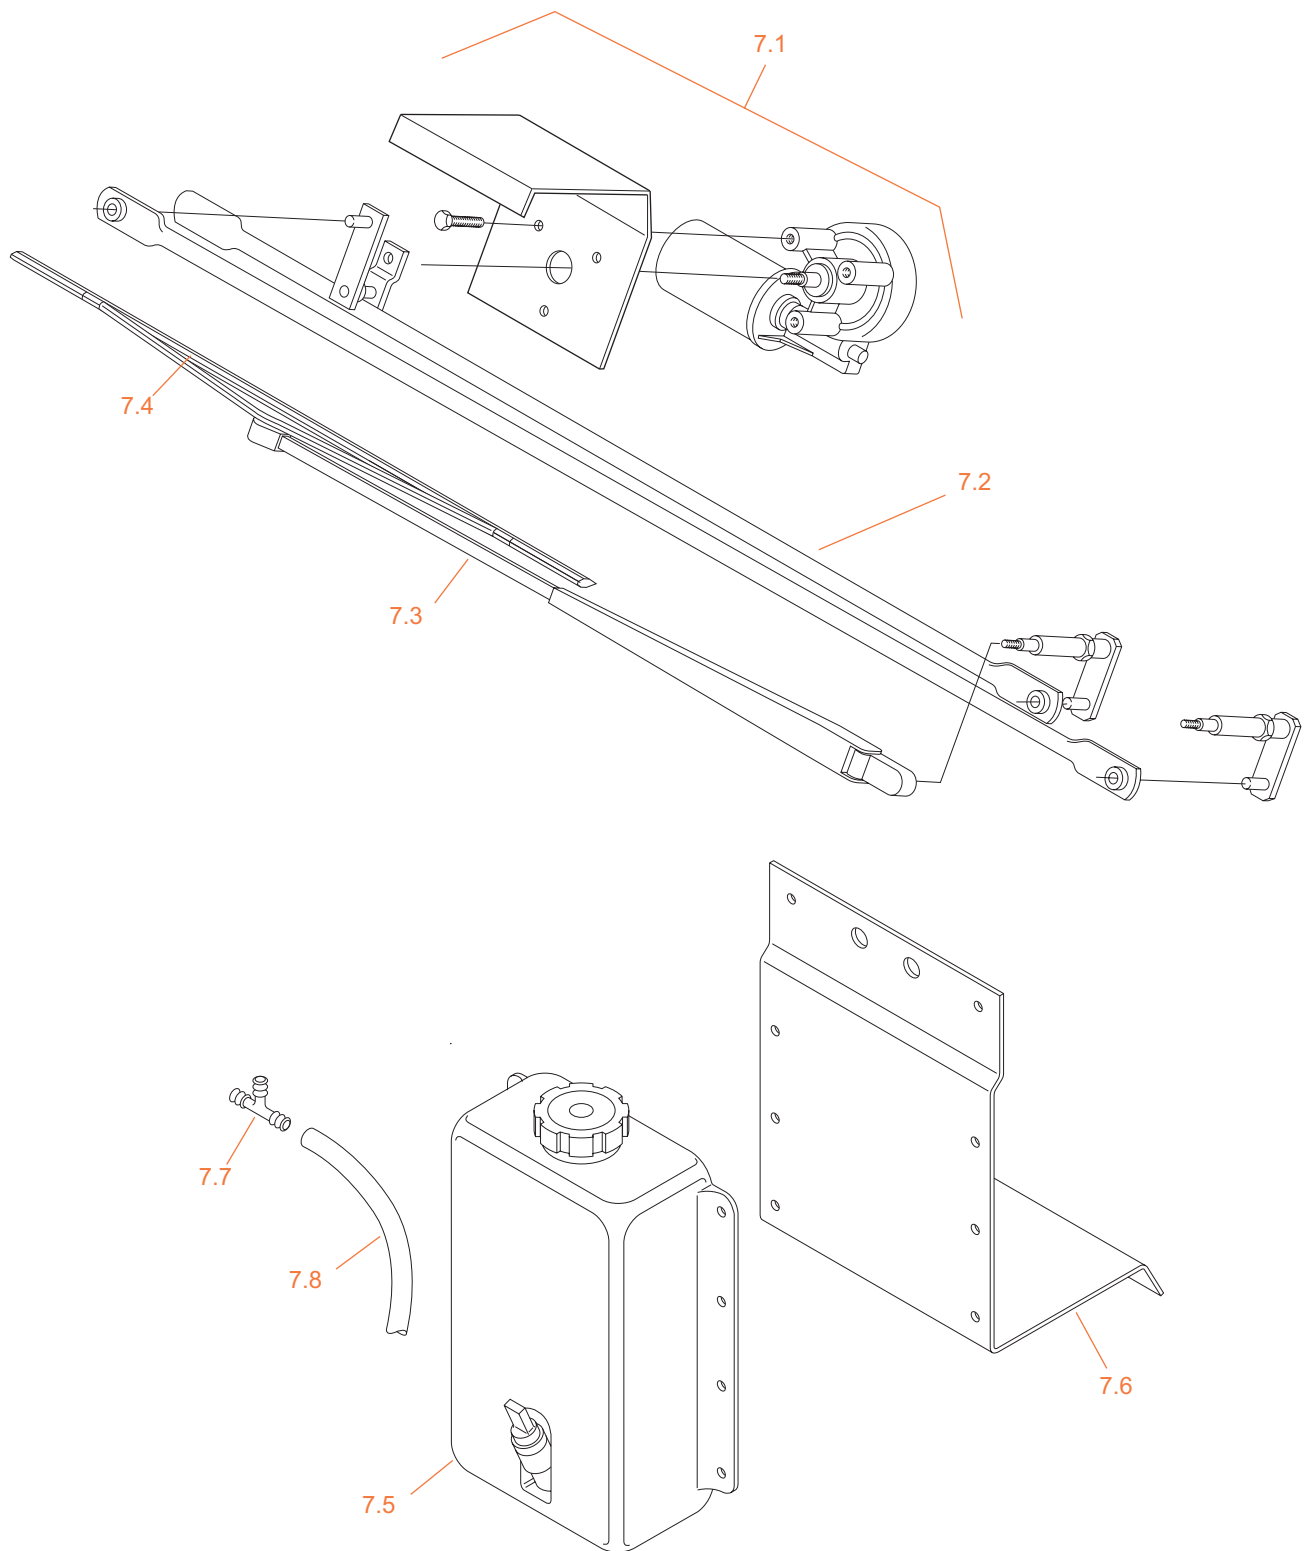


Wiper System

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

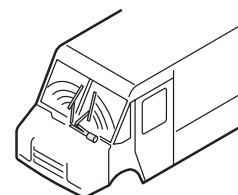


Item	Part Number	Description
7.0	64236779-CHART	WIPER ASY SINGLE
Bosch System (Prior to March 1999)		
7.1	08706624	MOTOR BRKT ASY WIPER
7.2.1	08610466	LINKAGE 78.5W TRUCK
7.2.2	09801393	LINKAGE 86.5-93.5W
7.3 LH	08706629	WIPER ARM LH 86.5-93.5W SYSTEM
7.3.1 RH	08706628	WIPER ARM RH 78.5W SYS
7.3.2 RH	08706628	WIPER ARM SYSTEM RH
Trico System (March 1999 to April 2001)		
7.1	09801548	MOTOR BRKT ASY WIPER
7.2.1	09801531	LINKAGE 78.5W TRUCK
7.2.2	09801569	LINKAGE 86.5-93.5W
7.3 LH	09801539	WIPER ARM LH 86.5-93.5W SYSTEM
7.3.1 RH	09801533	WIPER ARM RH 78.5W SYS
7.3.2 RH	09801534	WIPER ARM SYSTEM RH
Trico System (After April 2001)		
7.1	09801632	MOTOR BRKT ASY WIPER
7.2.1	09801630	LINKAGE 78.5W TRUCK
7.2.2	09801631	LINKAGE 86.5-93.5W
7.3 LH	09801539	WIPER ARM LH 86.5-93.5W SYSTEM
7.3.1 RH	09801533	WIPER ARM RH 78.5W SYS
7.3.2 RH	09801534	WIPER ARM SYSTEM RH
7.4	09801532	WIPER BLADE 24"
7.5.1	08713382	BOTTLE WASHER ASY 4QT
7.5.2	08610254	BTL WASHER ASY 1GL
7.6	06601770	BRACKET WASHER BOTTLE 4QT
7.7.1	08713438	TEE WASHER 1/8 X 1/8 X 3/16
7.7.2	09801594	** TEE WASHER 1/8 X 1/8 X 3/16
7.7.3	09801600	TEE WASHER 1/8 X 1/8 X 5/32
7.8	01400711	HOSE 5/32" W/S WASHER

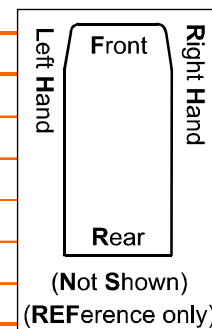

Continued

7—Wiper System (continued)

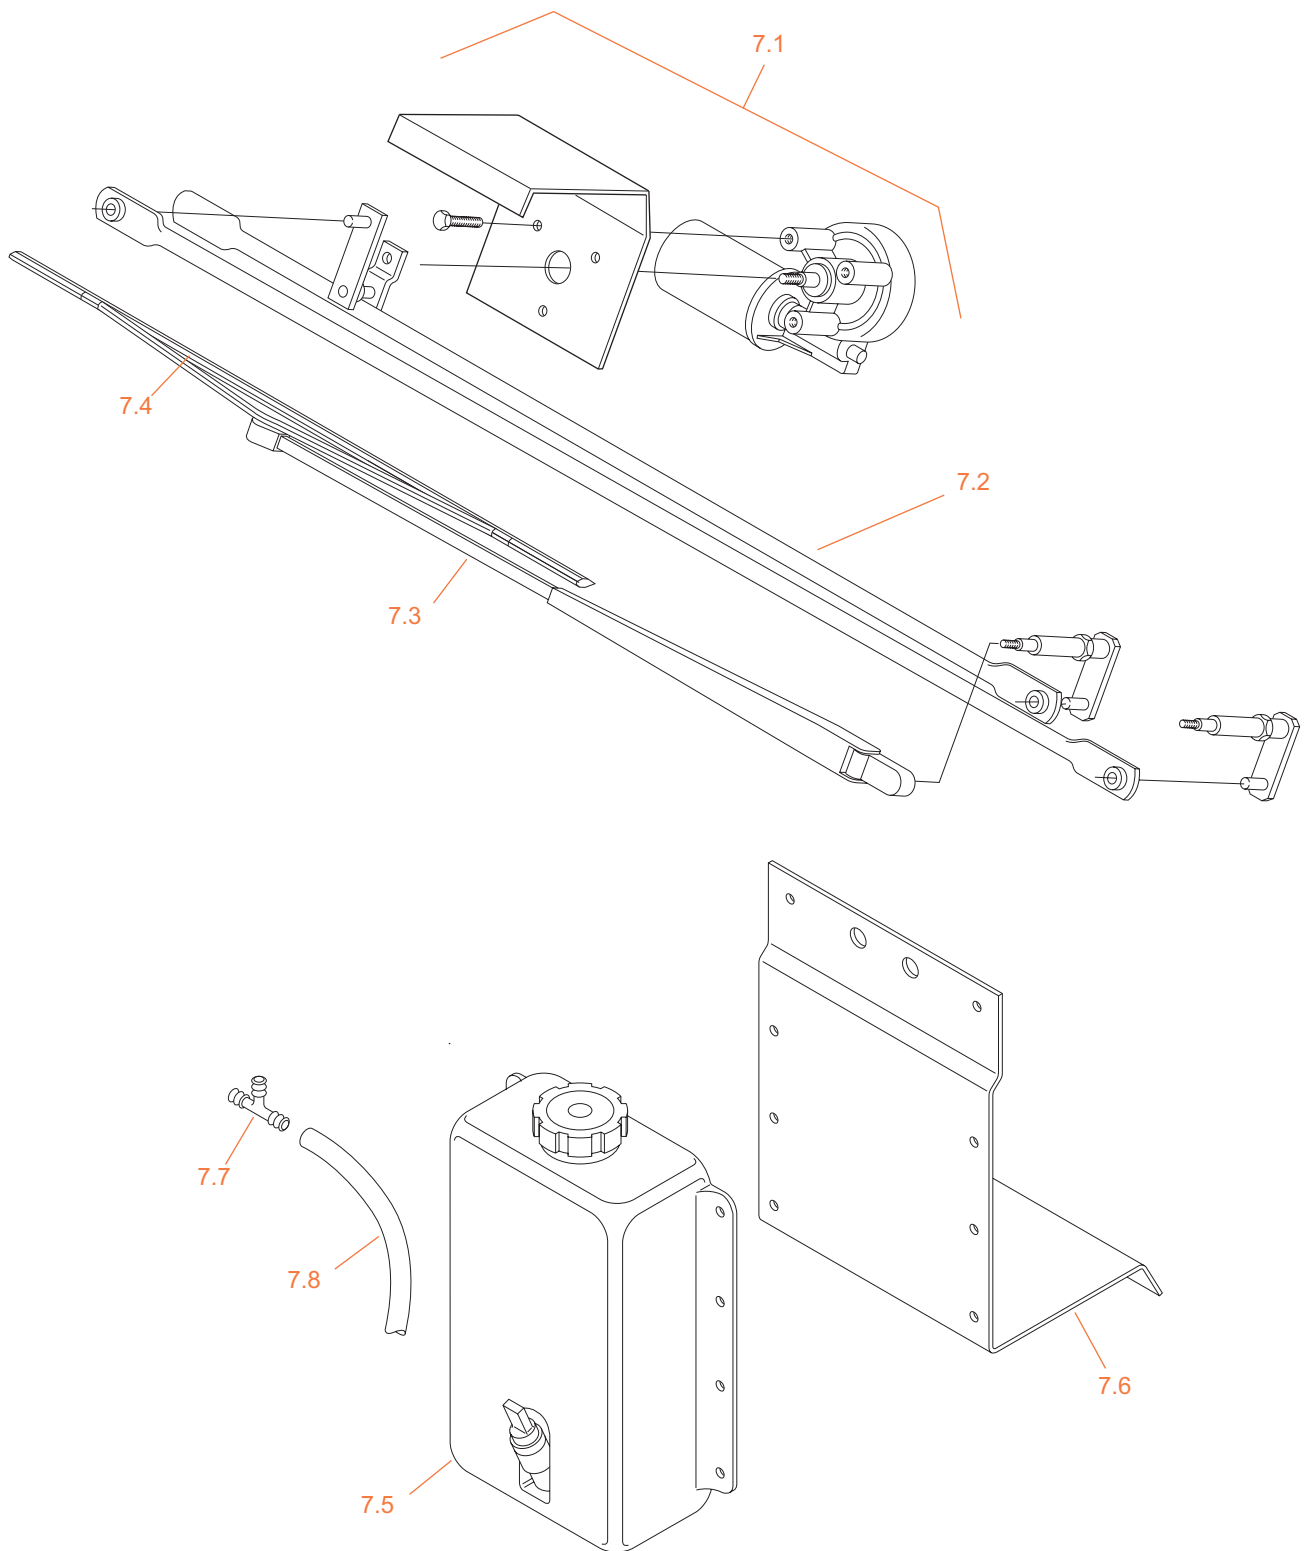


Wiper System

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

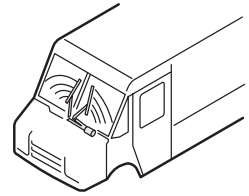

Item	Part Number	Description
7.NS	09801535	WIPER PARTS PACK
7.NS	09801536	WIPER SM MANUAL MAINTENANCE
7.NS	09801542	WIPER LG MANUAL MAINTENANCE
7.NS	16100186	WIPER DELAY MODULE
7.NS	16512188	WIPER MODULE W/CONN

Left Hand


Front

Rear

Right Hand

(Not Shown)
(REFERENCE only)

8—Dash

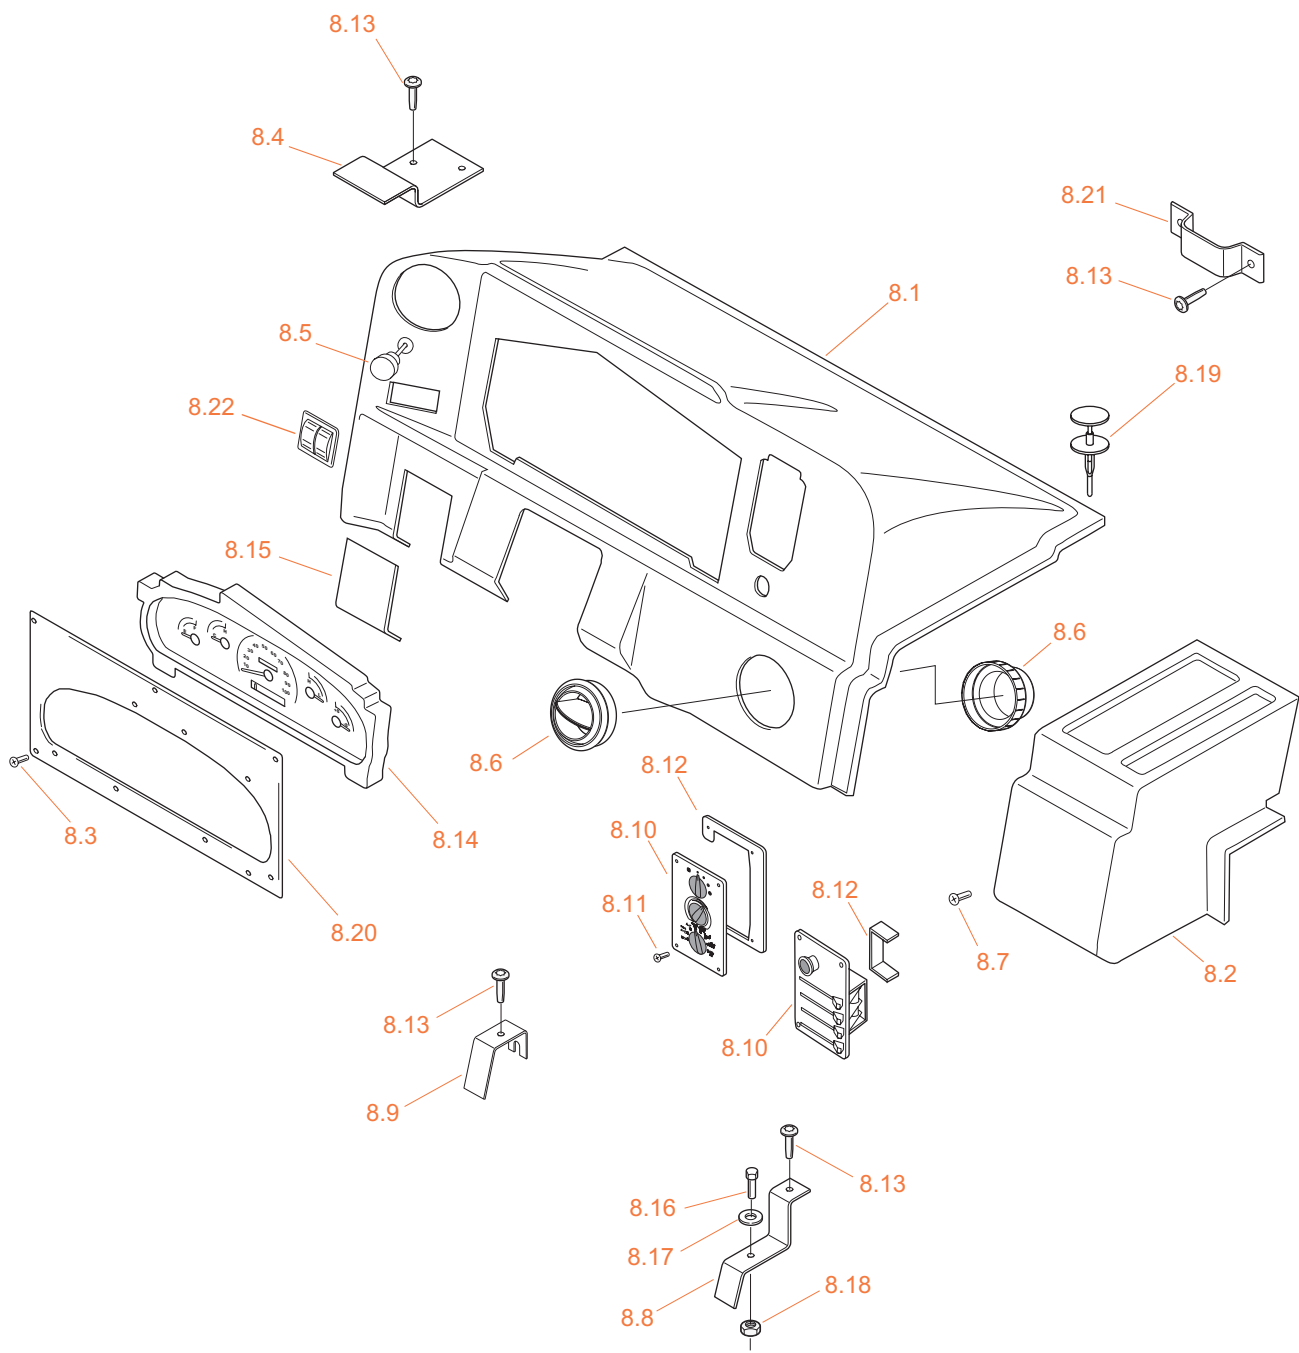


Dash

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

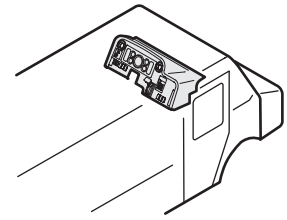


Item	Part Number	Description
8.0		DASH INST FORD
8.1	20510046	DASH ABS FRMD
8.2	20510049	COVER HEATER CABLE
8.3	11300342	SCREW 6 x 3/4
8.4	22814498	BRKT DASH MAIN SUPPT 12GA
8.5.0	Chassis Component	SWITCH-HEADLAMP
8.5.1	11008508	WASHER 5/8 FLAT ZINC
8.5.2	08400137	KNOB, WIPER SWITCH
8.6	17990611	HEATER LOUVER (2-PIECE)
8.7	11300251	SCREW 8 x 3/4 MODI TRS
8.8	22814499	BRKT DASH RH SUPPT 12GA
8.9	22814501	BRKT DASH LWR SUPPT 16GA
8.10	See heater section	HEATER CONTROL
8.11	11301612	SCREW 8 x 1
8.12	06915592	MOUNT HEATER CONTROL .09AL
8.13	11300177	SCREW 1/4-20 x 3/4 TX PN
8.14	Chassis Component	PANEL INSTRUMENT
8.15.0	20510353*	CVR FUSE BLOCK ACCESS
8.15.1	13672286	VELCRO LOOP .5 BLK
8.15.2	13672287	VELCRO HOOK .5 BLK
8.16	11004506	BOLT HX TP 1/4-20 x 3/4 GR5Z
8.17	11008141	WASHER 1/4 FLAT ZC SAE
8.18	11000039	NUT LOCK WXD1/4-20 2WAY GR5 ZN
8.19	08706705	TUF LOK FSTNER
8.20	20510352	BEZEL PANEL
8.21	06918021	SUPPT WIRING LOOM
8.22.1	16511993	SWTCH BODY ON/OFF (POWER VENT)
8.22.2	16511793-END	BEZEL SWITCH END
8.22.3	16511793-MID	BEZEL SWITCH MIDDLE
8.22.4	16511995	SW BODY ON/OFF/ON (AUX. HEATER)
8.22.5	16512027	ACTR AUX HTR / RED LENS
8.22.6	16512004	ACTR LIGHTS / RED LENS
8.22.7	16512005	ACTUATOR FAN / RED LENS
8.22.8	16512034	ACTR PWR VENT RED LENS
8.22.9	16511804	SWITCH, ON/ON (DOME LIGHT)
	*Replacement part will be aluminum. Part number pending.	

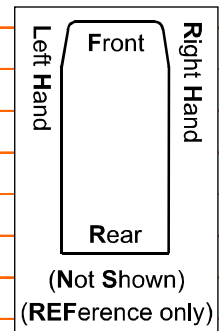


Continued

8—Dash

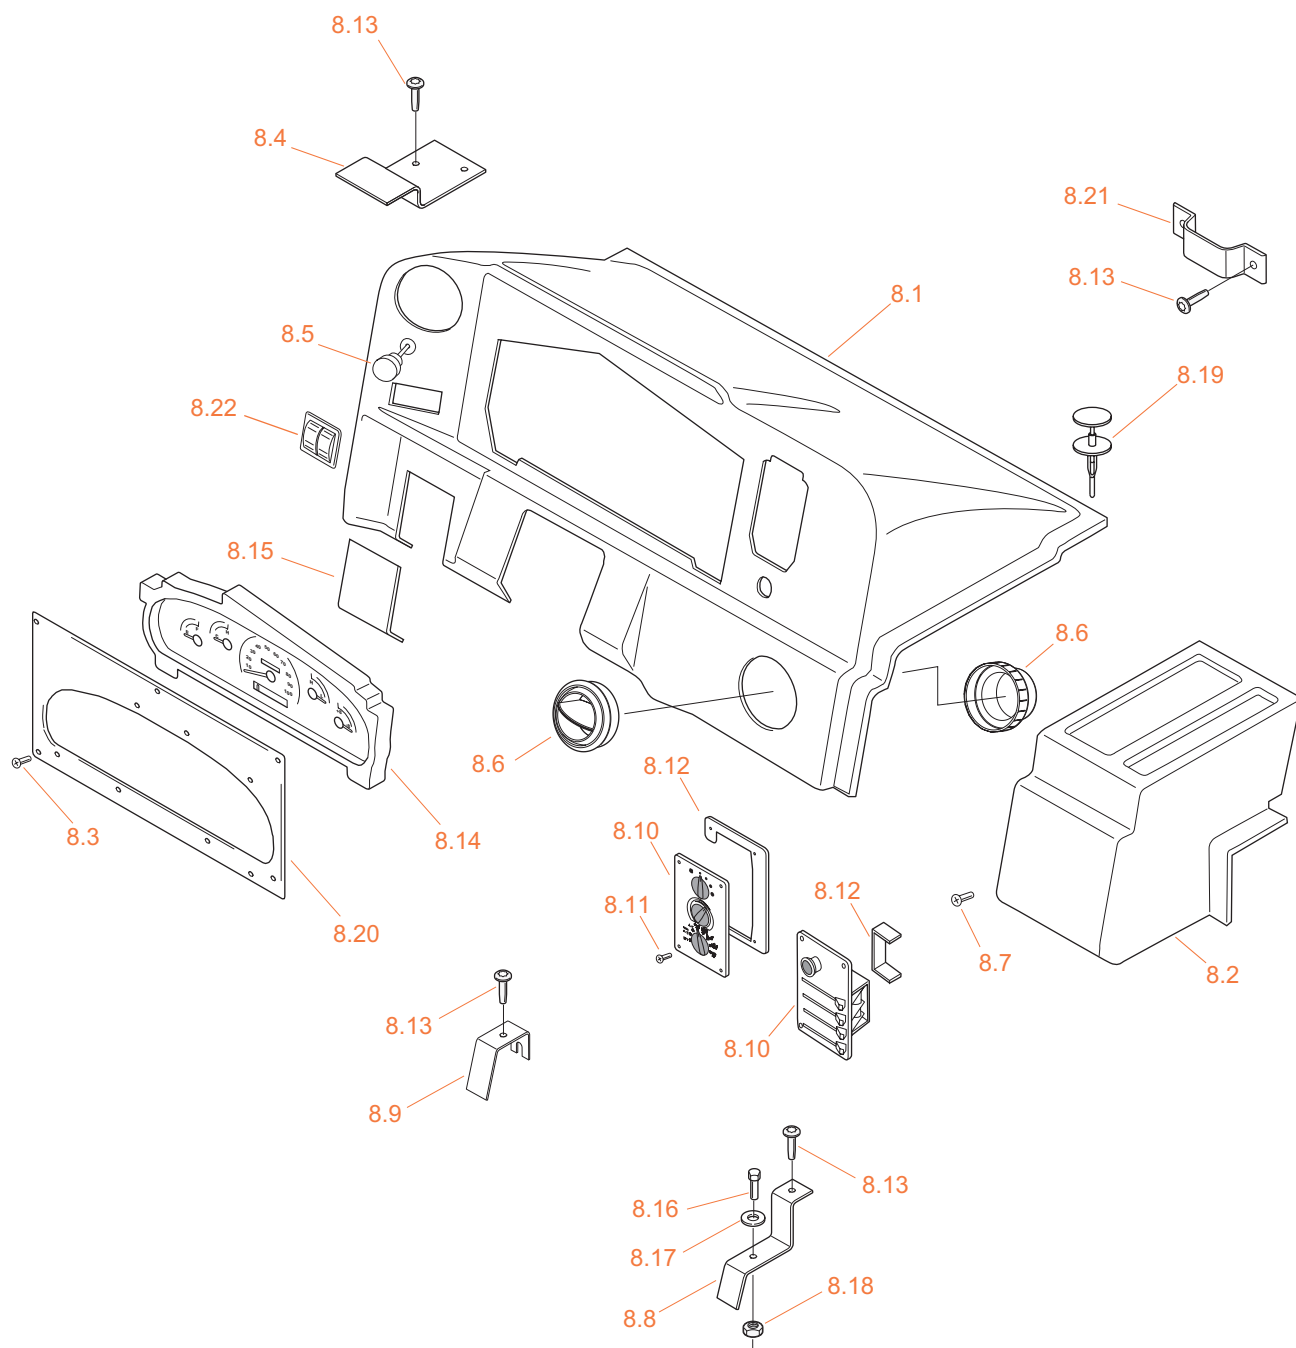


Dash


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.
Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.
Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.
(See the Decoding Part Numbers section for Item, Part, and Description codes.)

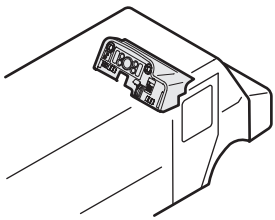

Item	Part Number	Description
8.NS	16511926	FLASHER DOOR AJAR
8.NS	12300537	TAPE BLK 1/16 x 1" x 54'
8.Ref	64236225	ACCESS ASY FUSE BLOCK
8.Ref	64236226	DASH & SUPPT INSTL

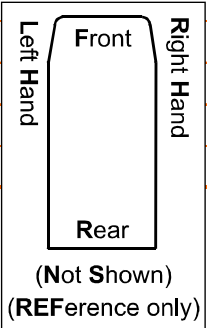

9—Heat (Only) System

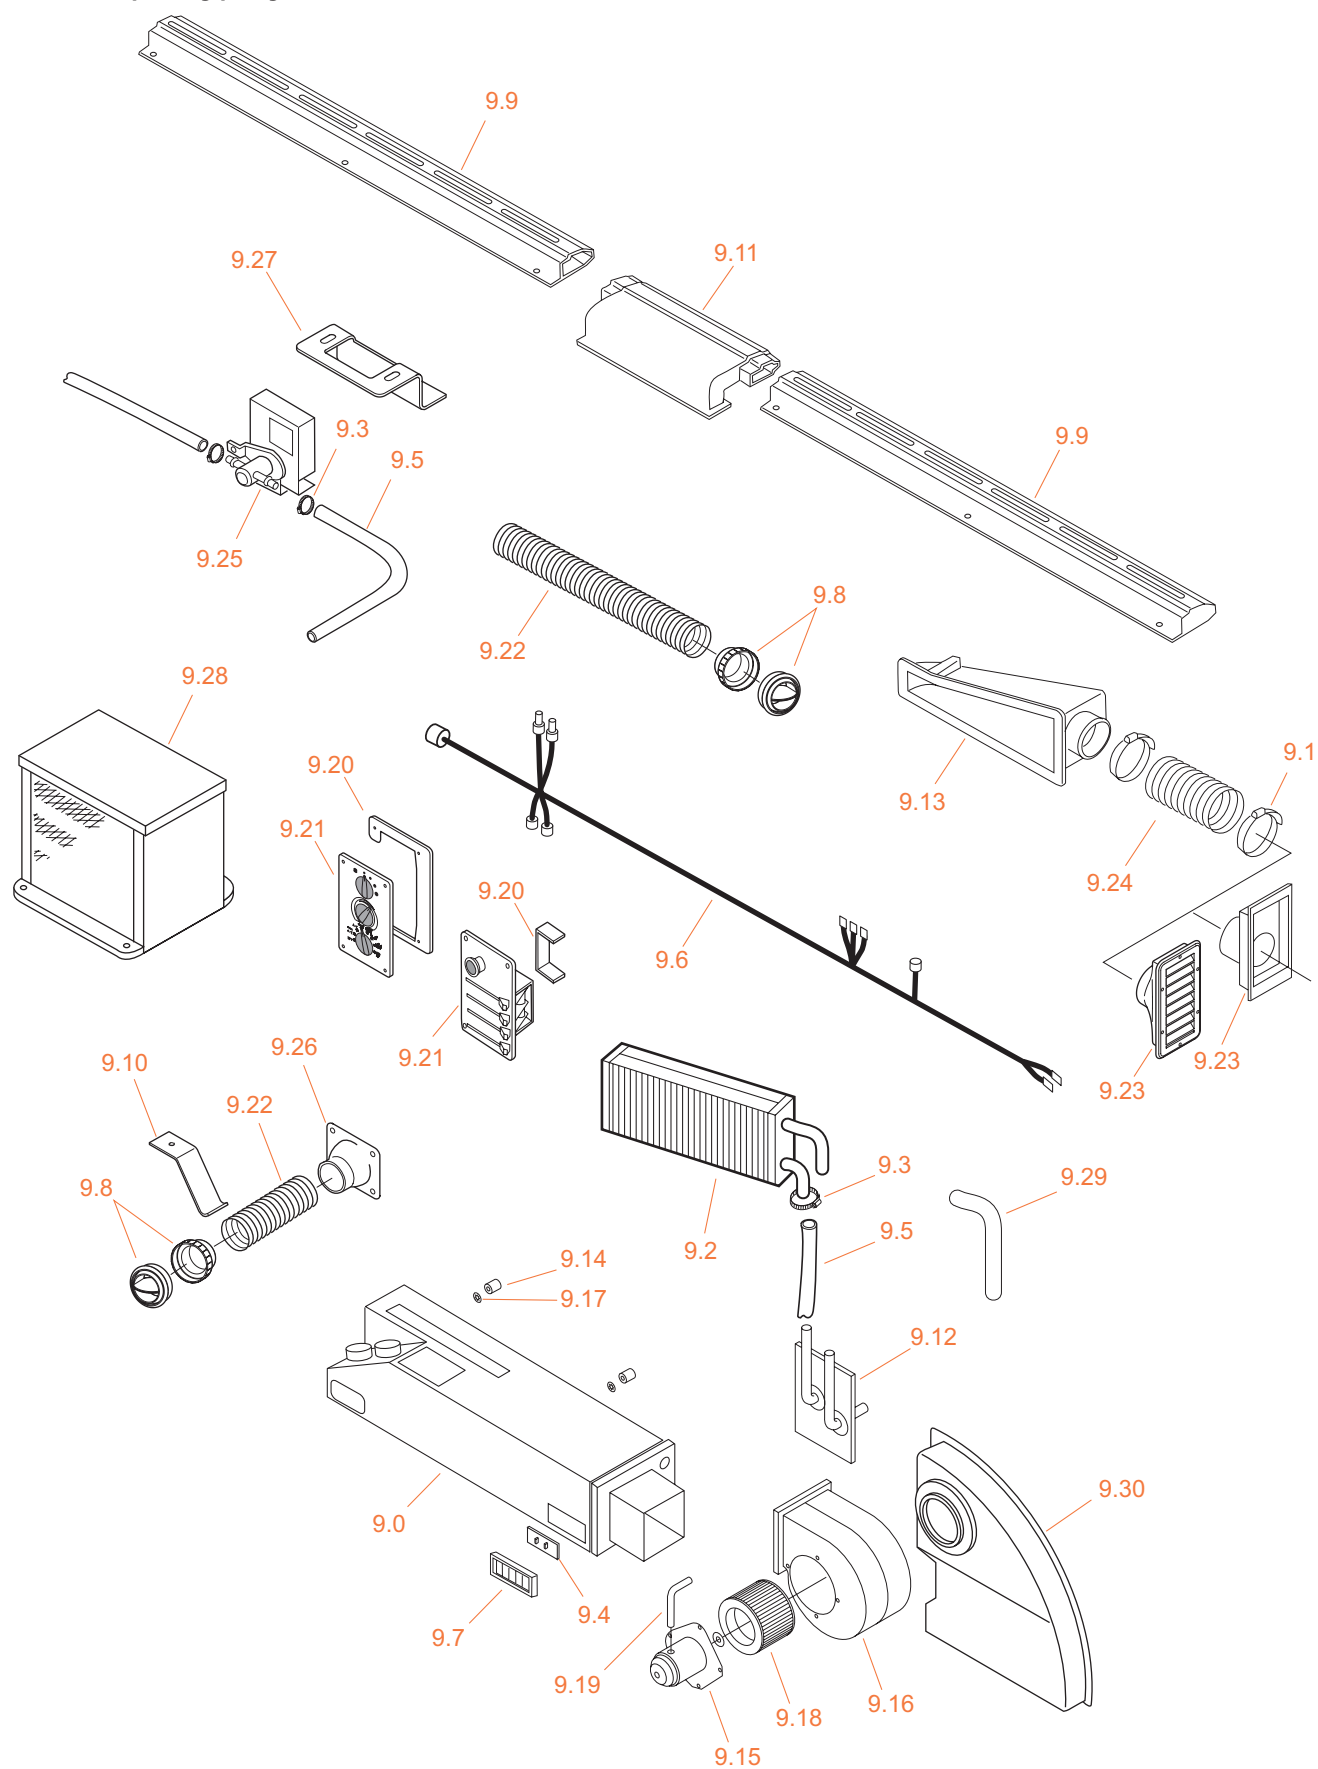


Heat (Only) System

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

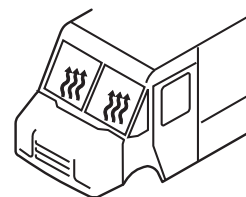


Item	Part No. Manual	Part No. Electric	Description
9.0 H	17900778	17900777	PLEN HTR TUBEFIN
9.1	08707558		CLAMP, HOSE 4.5"
9.2	17990741		HEATER COIL (Heat Only)
9.3.1	08707557		CLAMP, HOSE STD
9.3.2	08610786-00008		CLAMP, HOSE SILICONE
9.4	17990626		RESISTER
9.5.1	19200949		HOSE 5/8 ID (GREEN STRIPE)
9.5.2	18504604		HOSE SILICONE 5/8" I.D. HTR HS (BLUE)
9.6	17990627	Pending	HARNESS, HEATER LAMPS
9.7	07200065		DUCT RH FLOOR DUMP
9.8	17990611		HEATER LOUVER
9.9 LH	17990654		DEFROST DUCT LH
9.9 RH	17990655		DEFROST DUCT RH
9.10	22814500		BRKT FLR VENT SUPPT
9.11	17900544		TRANSITION DUCT ASSY
9.12.1	17900801		TUBE BLKHD FTG
9.12.2	17900814		TUBE BLKHD FTG
9.13.1	17900585		**FRESH AIR INLET
9.13.2	17900925		FRESH AIR INLET
9.14	17900730		SPACER PLENUM 5/8" LG
9.15	17900620		BLOWER MOTOR ONLY
9.16 .0	17900701		BLWR MOTOR ASY W/LNG LIFE MTR
9.16.1	17990649		BLOWER HOUSING
9.16.2	17900438		CLIP, BLOWER HOUSING
9.17	17900733		CLIP RTNR PLEN SPACER
9.18	17990588		BLOWER WHEEL
9.19	17900439		VENT TUBE
9.20	17900864	06915592	BRKT HEATER CONTROL
9.21.0	17900586	17900758	CNTRL HEAD HEAT ONLY
9.21.1	17990869		BLOWER SWITCH
9.21.2	NA	17990722	SWITCH CONTROL HD POTENT
9.21.3	NA	17990723	SWITCH HEAT MODE W\HARNESS
9.21.4	NA	17990724	SWITCH AC MODE W\HARNESS
9.21.5	17990631	17990717	BLOWER SWITCH KNOB
9.21.6	17990632	NA	CONTROL LEVER

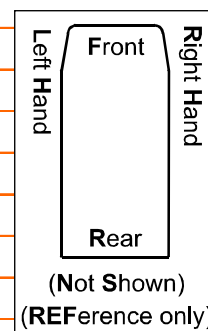


Continued

9—Heat (Only) System (continued)

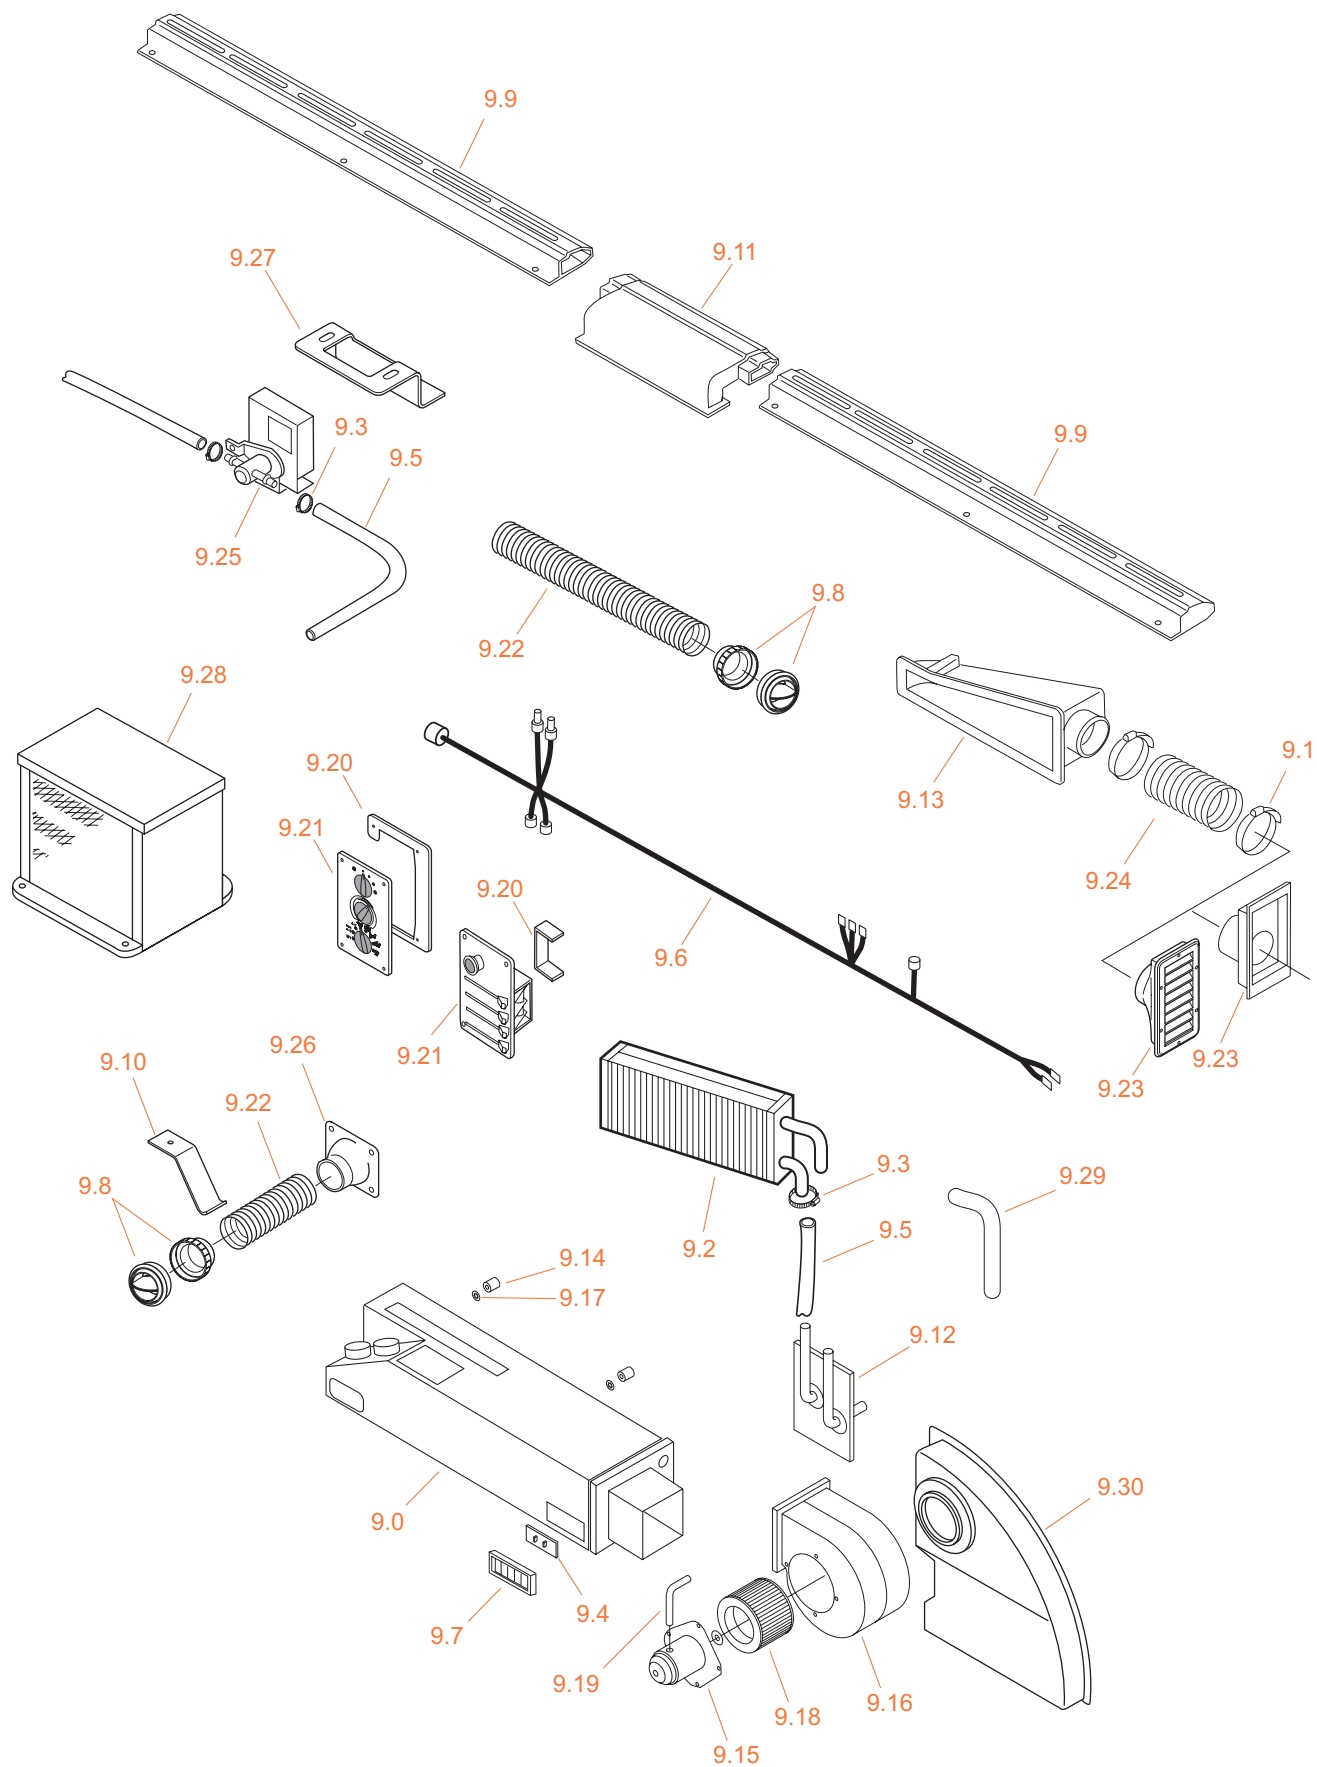


Heat (Only) System

Item	Part No. Manual	Part No. Electric	Description
9.21.7	17990633	NA	CONTROL LEVER KNOB
9.21.8	17990859	07206223	CONTROL PLATE
9.21.9	17990663	Pending	CONTROL PLATE DECAL
9.21.10	17990687	17900746	CONTROL HOUSING
9.21.11	NA	17990718	CONTROL KNOB POTENT
9.21.12	NA	17990719	CONTROL KNOB MODE
9.21.13	NA	17990725	CONTROL MODULE HEAT
9.22	17900493		HOSE 2.5" FLEX HEAT DUCT
9.23.1	07206117		**PLENUM INLET AIR
9.23.2	17900920		PLENUM INLET AIR
9.24	01401392		HOSE 4" ID x 6' AIR DUCT BLACK
9.25.1	17900374	23002134	VALVE SHUTOFF
9.25.2	NA	23002127	VALVE ELECTRIC COOLANT (Service Kit)
9.26	07206145		HOSE ADAPTER FT DUMP
9.27.0	NA	22816151	BRACKET ELECTRONIC HEAT CONTROLS
9.27.1	NA	11305082	SCREW 1/4-20 x 1 TORX F PNHD ZNC
9.28	17990648		HTR AUX 12,500 BTU
9.29	17900748		HTR HOSE MOLDED BKHD
9.30	17990659		INLET DUCT
9.NS	08706165		CLAMP, HOSE 5/8"
9.NS	17990698	NA	CABLE HTR CNTRL 50" (YELLOW TEMP CONTROL)
9.NS	17990690	NA	HEATER CABLE, GREEN 23.6" (DEFROST)
9.NS	17990691	NA	HEATER CABLE, BLUE 26.6" (FLOOR)
9.NS	17990685	NA	HEATER CABLE, RED 23.6" (DASH)
9.NS	NA	17990720	MOTOR ACTUATOR WATER VALVE
9.NS	NA	17990721	MOTOR ACTUATOR ALL DR
9.NS	16512931		PLENUM BULB
9.NS	17990638		HEATER RELAY
9.NS	08707479		CLAMP VINYL-COATED 1-1/2"
9.NS	08707481		CLAMP VINYL COATED 7/8"
9.NS	12300540		SEALANT BLACK
9.NS	08707556		CLAMP HOSE 11/16- 1-1/4
9.NS	19901136		PIPE COVER 1.12 ID x .38 THK x 6'
9.NS	07600089		"Y" 5/8 BARBED NYLON
9.NS	19400000		SPLICE HOSE 5/8" BRASS
9.Ref	64236660		INSTL AUX HEAT CAB
9.Ref	64236804		INSTAL HEAT CONTROL CENTRAL FORD
9.Ref	64236585-00002		INSTL PLNM SPCR HEAT
	See also Section 8.		

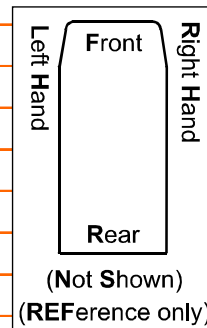

9—Heating and Air Conditioning System

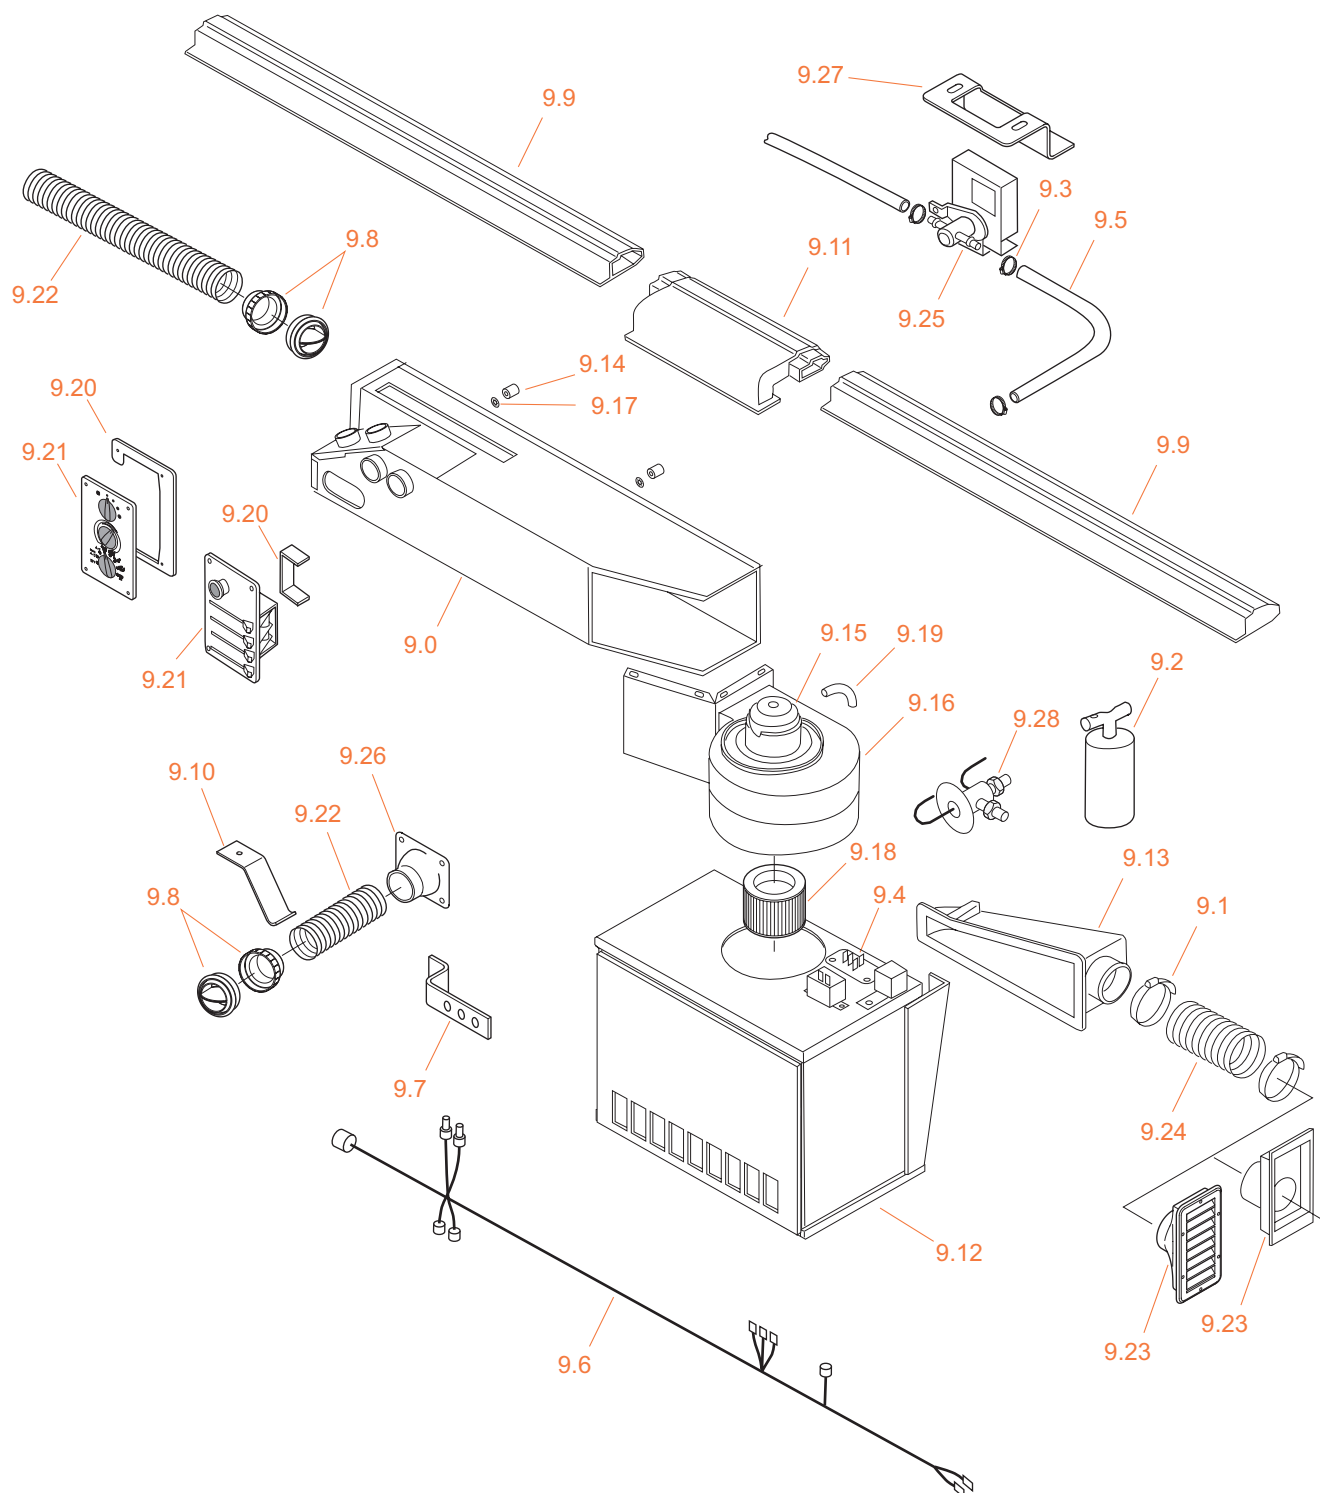


Heating and Air Conditioning System

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

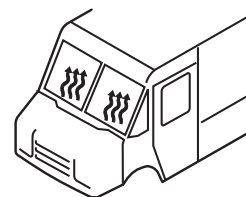


Item	Part No. Manual	Part No. Electric	Description
9.0 A	BSNR	17900743	PLEN A/C ELCT ALL BLK
9.1	08707558		CLAMP HOSE 4.5"
9.2.0	17900753		REC/DRIER STD BLK PCK
9.2.1	17990961		HIGH PRESSURE SWITCH
9.3.1	08707557		CLAMP, HOSE STD
9.3.2	08610786-00008		CLAMP, HOSE SILICONE
9.4	17990626		RESISTOR
9.5.1	19200949		HOSE 5/8 ID (GREEN STRIPE)
9.5.2	18504604		HOSE SILICONE 5/8" I.D. HTR HS (BLUE)
9.6	BSNR	BSNR	HARNESS, HEATER LAMPS (AC)
9.7	BSNR	22813702	BRKT A/C MULTI PURPOSE
9.8	17990611		HEATER LOUVER
9.9 LH	17990654		DEFROST DUCT LH
9.9 RH	17990655		DEFROST DUCT RH
9.10	22814500		BRKT FLR VENT SUPPT #36
9.11	17900544		TRANSITION DUCT ASSY
9.12.1	NA	17900751	EVAP ASY ELECT FORD
9.12.2	NA	17900895	EVAP ASSY ELECT FORD
9.13.1	17900585		**FRESH AIR INLET
9.13.2	17900925		FRESH AIR INLET
9.14	17900473	17900730	PLENUM SPACER 5/8
9.15	BSNR	17900620	BLOWER MOTOR
9.16.0	BSNR	17900744	BLOWER ASY A/C ELECT
9.16.1	BSNR	17900701	BLOWER MOTOR HOUSING
9.17	17900475	17900733	PLENUM SPACER RET CLIP
9.18	BSNR	17990588	BLOWER WHEEL
9.19	BSNR	17900439	VENT TUBE
9.20	17900864	06915592	BRKT HEATER CONTROL

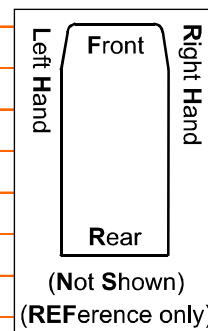

Continued

9—Heating and Air Conditioning (continued)

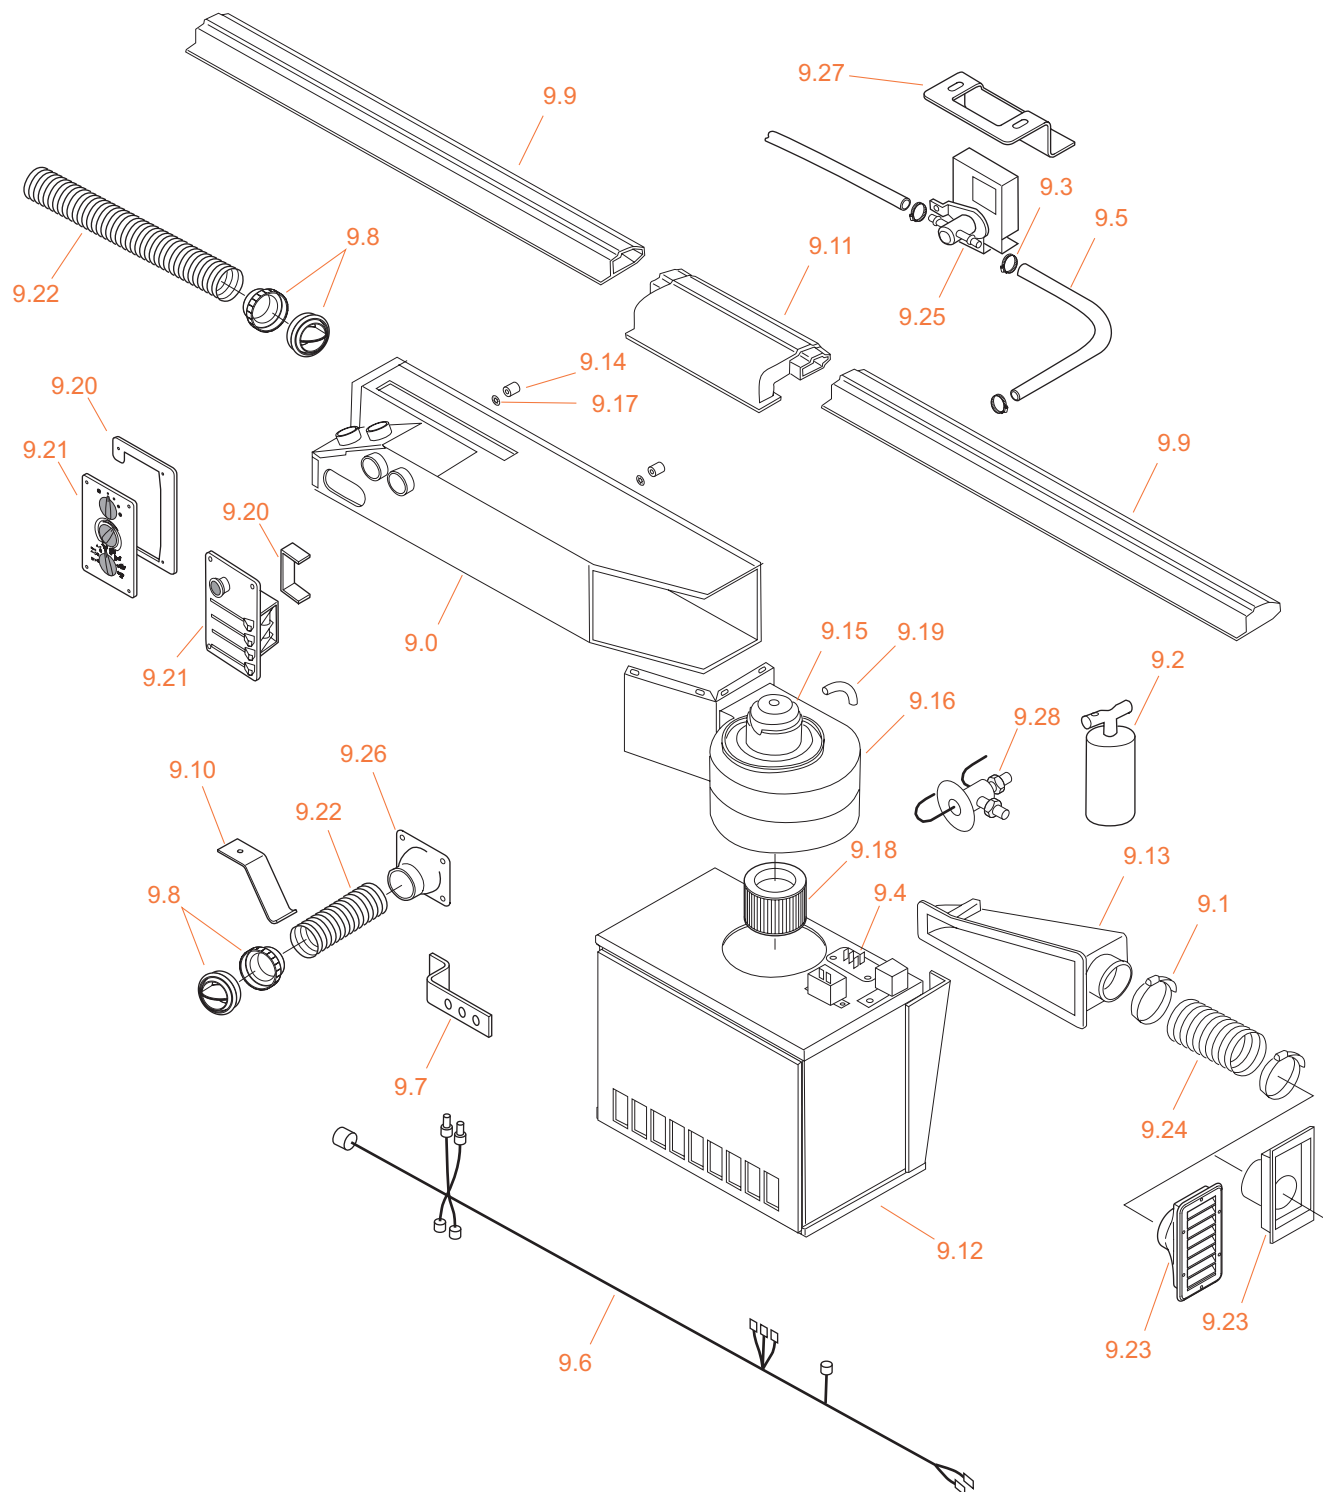


Heating and Air Conditioning System

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

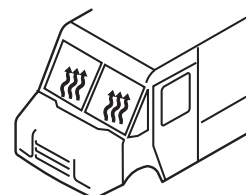

Item	Part No. Manual	Part No. Electric	Description
9.21.0	BSNR	17900746	CONTROL HOUSING ELECTRIC
9.21.1	BSNR	17990869	BLOWER SWITCH
9.21.2	BSNR	17900859	SWITCH CONTROL HD POTENT
9.21.3	BSNR	17990723	SWITCH HEAT MODE WHARNESS
9.21.4	BSNR	17990724	SWITCH AC MODE WHARNESS
9.21.5	BSNR	17990717	BLOWER SWITCH KNOB
9.21.6	BSNR	NA	CONTROL LEVER
9.21.7	BSNR	NA	CONTROL LEVER KNOB
9.21.8	BSNR	07206223	CONTROL PLATE
9.21.9	BSNR	BSNR	CONTROL PLATE DECAL
9.21.10	BSNR	17900746	CONTROL HOUSING
9.21.11	BSNR	17990718	CONTROL KNOB POTENT
9.21.12	BSNR	17990719	CONTROL KNOB MODE
9.21.13	BSNR	17990725	CONTROL MODULE HEAT
9.22	17900493		HOSE 2.5" FLEX HEAT DUCT
9.23.1	07206117		**PLENUM INLET AIR
9.23.2	17900920		PLENUM INLET AIR
9.24	01401392		HOSE 4" ID x 6' AIR DUCT BLACK
9.25.1	17900374	23002134	VALVE SHUTOFF
9.25.2	NA	23002127	VALVE ELECTRIC COOLANT (Service Kit)
9.26	07206145		HOSE ADAPTER
9.27	22816333		BRACKET ELECTRONIC HVAC CNTRL
9.28	17990639		EXPANSION VALVE

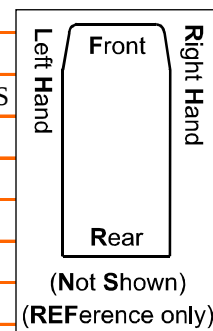

Continued

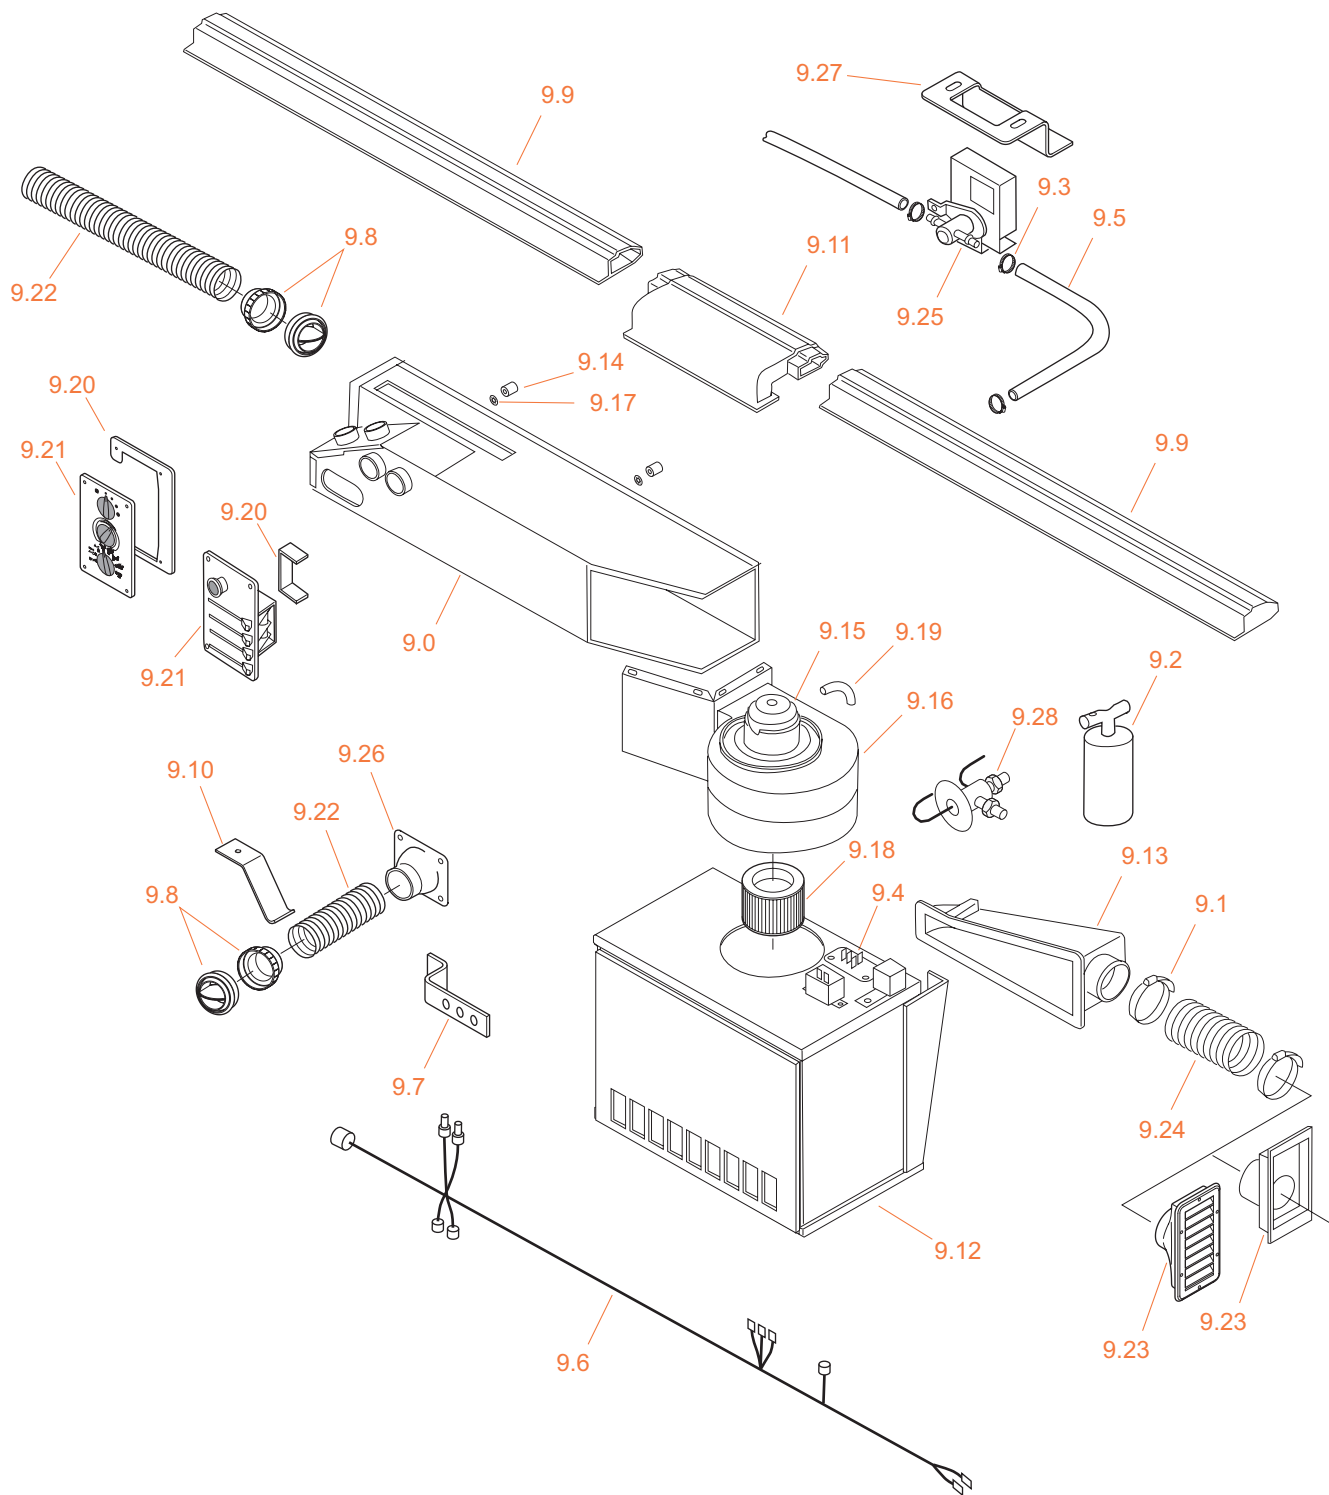9—Heating and Air Conditioning (continued)


Heating and Air Conditioning System

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

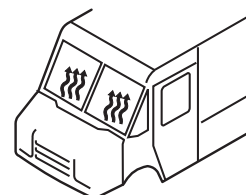

Item	Part No. Manual	Part No. Electric	Description
9.NS	12300540		SEALANT BLACK
9.NS	17990638		HEATER RELAY
9.NS	17990698	NA	CABLE HTR CNTRL 50" (YELLOW TEMP CONTROL)
9.NS	17990741		HEATER COIL (HEAT\AC)
9.NS	08707479		CLAMP VINYL-COATED 1-1/2"
9.NS	08707481		CLAMP VINYL COATED 7/8"
9.NS	08610786-00008		CLAMP HOSE CONSTANT TORQ
9.NS	17900808		SWITCH FAN CLUTCH W/A/C
9.NS	17900563		KIT A/C 97 FORD V6
9.NS	17900566		CONDENSER KIT FORD
9.NS	17900587	17900752	SACK KIT
9.NS	17900862		KIT AC FORD STANDARD
9.NS	16512783		HARNESS JUMPER 2-WAY WEATHER PACK
9.NS	16512070		HARNESS AC PRES SW
9.NS	NA	16512576	HARNESS JMPR MAN TO ELE HTR
9.NS	16400540		HARNESS CAB A/C
9.NS	05302302		TRIM LOCK BLK 1/8" W/ALUM INST
9.NS	08706376		J-CLAMP 1/2" .203 HOLE
9.NS	08707505		CLAMP HOSE 1-13/16-2-3/4
9.NS	12400713		SIKA FLEX BLACK 11 FLOZ
9.NS	16500071		BUSHING SNAP 1/2"
9.Ref	NA	64236817	INSTAL HTR HOSE W/ELEC CONT A/C
9.Ref	64236138-00005		PLENUM SPACER INST
9.Ref	64236585-00005		INSTL PLNM SPCR A/C FD & FRTLNR
	See also Section 8.		

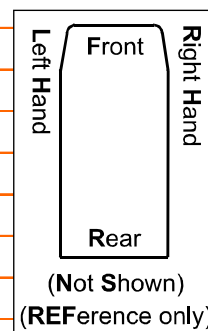


10—Cab Floor Matting, Ribbed

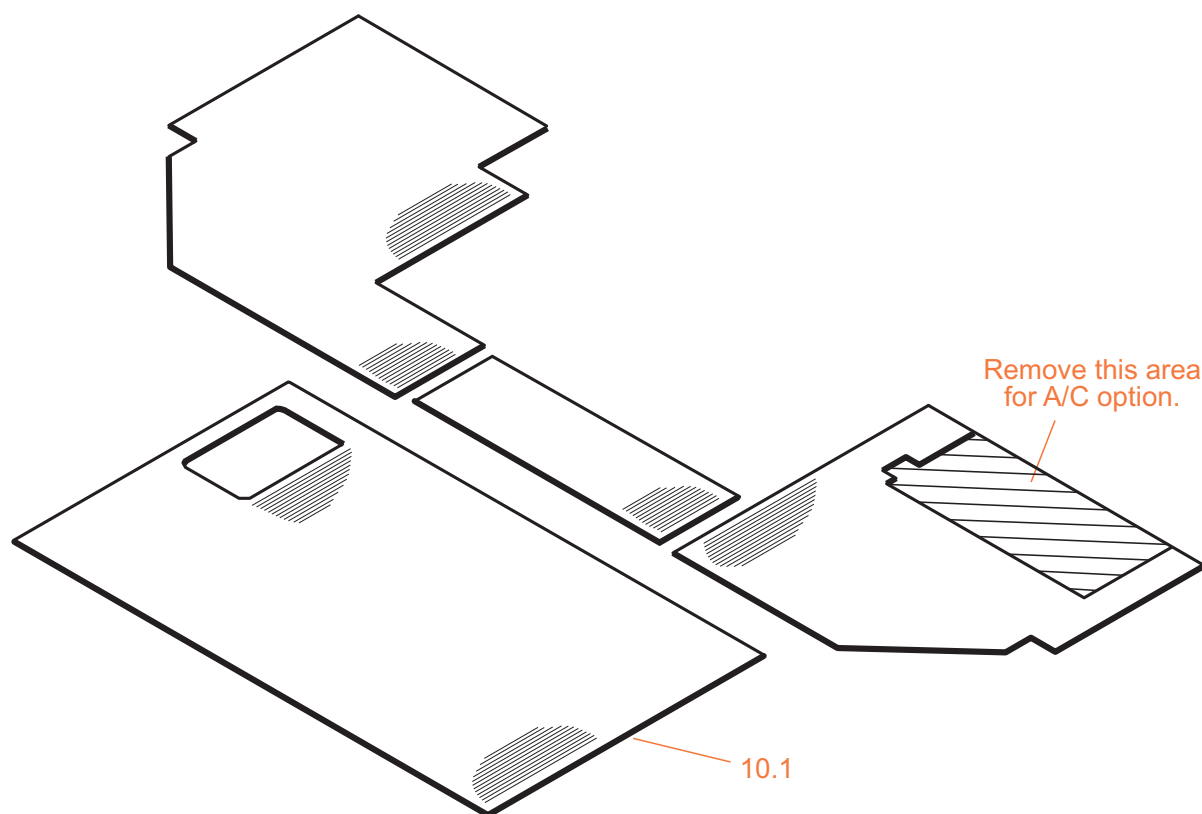


Cab Floor Matting, Ribbed


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.
Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.
Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.
(See the Decoding Part Numbers section for Item, Part, and Description codes.)

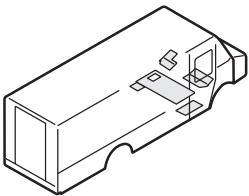

Item	Part Number	Description
10.0 R		CAB MAT
10.1	01520206	RUBBER MAT RIBBED 36"W ROLL

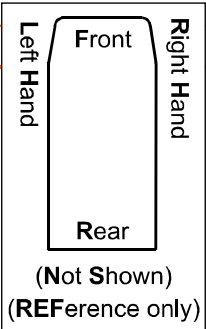

10—Cab Floor Matting, Heavy Duty

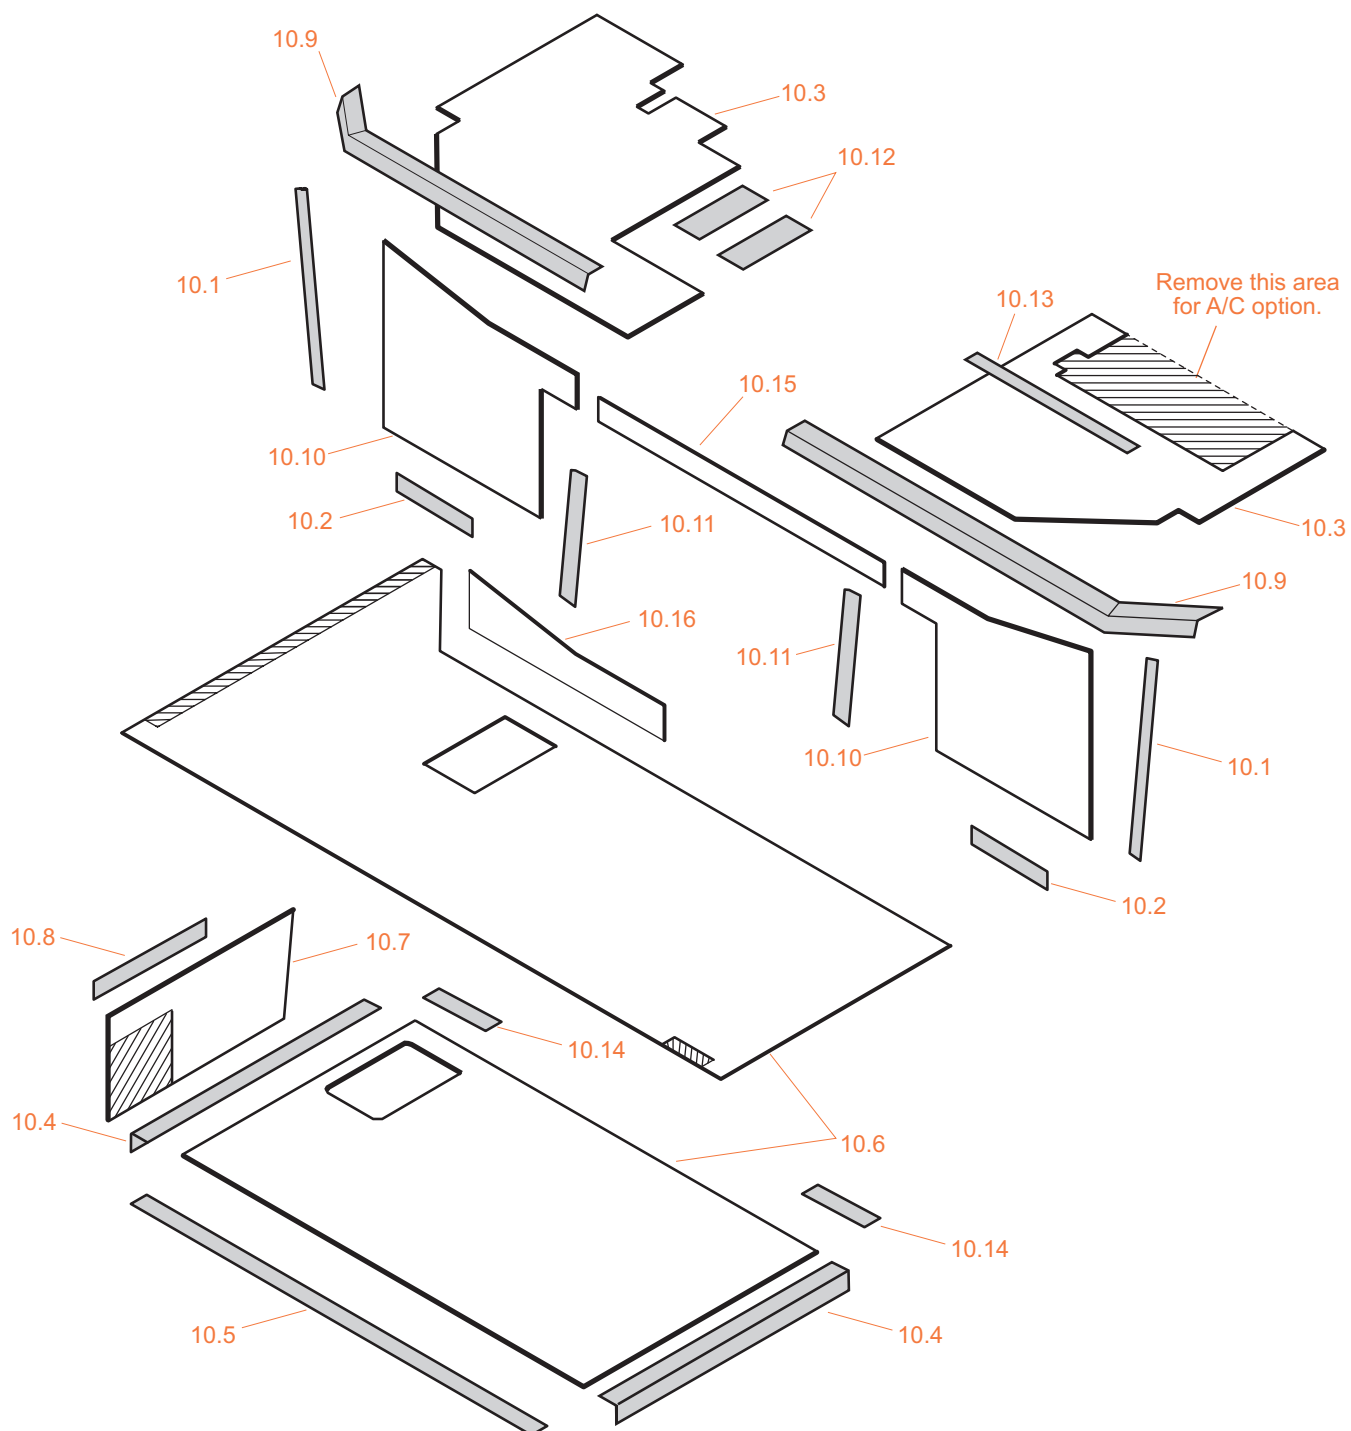


Cab Floor Matting, Heavy Duty

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

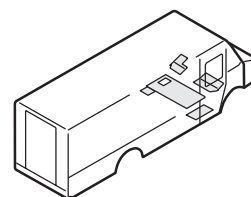

Item	Part Number	Description
10.0 H		CAB MAT INSULATED
10.1 LH	06917106	TRIM S/WELL VERT LH 19.5"
10.1 RH	06917105	TRIM S/WELL VERT RH 19.63"
10.2 LH	06917207	TRDPL .100 x 2 x 10.75
10.2 RH	06917206	TRDPL .100 x 2 x 11.37
10.3 LH	14200753	MAT FLOOR RISER LH (SPECIFY UNIT WIDTH)
10.3 RH	14200665	MAT FLOOR RISER RH (SPECIFY UNIT WIDTH)
10.4 LH	06916191	TRIM MAT RISER LH (SPECIFY LENGTH)
10.4 RH	06916189	TRIM MAT RISER RH (SPECIFY LENGTH)
10.5	06916629	TRIM MAT CRGO FLOOR (SPECIFY LENGTH)
10.6.1	14200663	MAT CAB FLOOR CENTER (Driver's Seat Only)
10.6.2	14200846	MAT CAB FLOOR LH DRLS (SPECIFY WIDTH)
10.7.1	14200642	TRIM, MAT STEPWELL SIDE LH
10.7.2	14200752	MAT S/WELL SIDE W/AUX BATT
10.8	06916628	TRIM MAT SWELL SIDE LH (SPECIFY LENGTH)
10.9 LH	06917108	TRIM MAT RISER LH (SPECIFY UNIT WIDTH)
10.9 RH	06918360	TRIM MAT RISER RH (SPECIFY UNIT WIDTH)
10.10 LH	14200667	MAT S/WELL FRT LH (SPECIFY UNIT WIDTH)
10.10 RH	14200666	MAT S/WELL FRT RH (SPECIFY UNIT WIDTH)
10.11 LH	06917097	TRIM S/WELL LH .100 TP x 16
10.11 RH	06917096	TRIM S/WELL RH .100 TP x 16
10.12	06916631	TRDPL .100 x 3 x 8
10.13	06916826	TRIM MAT PLENUM FRT (SPECIFY UNIT WIDTH)
10.14-86	06917208	TRDPL .100 x 2 x 4
10.14-93	06917209	TRDPL .100 x 2 x 7.5
10.15	14200669	MAT RISER FLOOR 3.5 x 47.75
10.16	14200847	MAT, STEPWELL DOORLESS LH (SPECIFY UNIT WIDTH)
10.NS	14200607	MAT FLOOR 56 x 83
10.NS	12400713	SIKA FLEX BLACK 11 FL OZ
10.Ref	52233090	FL MAT LAYOUT DOORLESS
10.Ref	52232874	FL MAT LAYOUT STD FORD
10.Ref	52232873	FL MAT LAYOUT W\AUX BAT

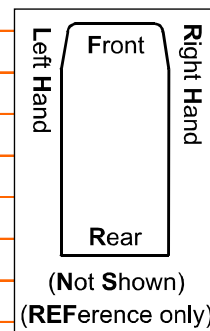

11—Seating, Standard

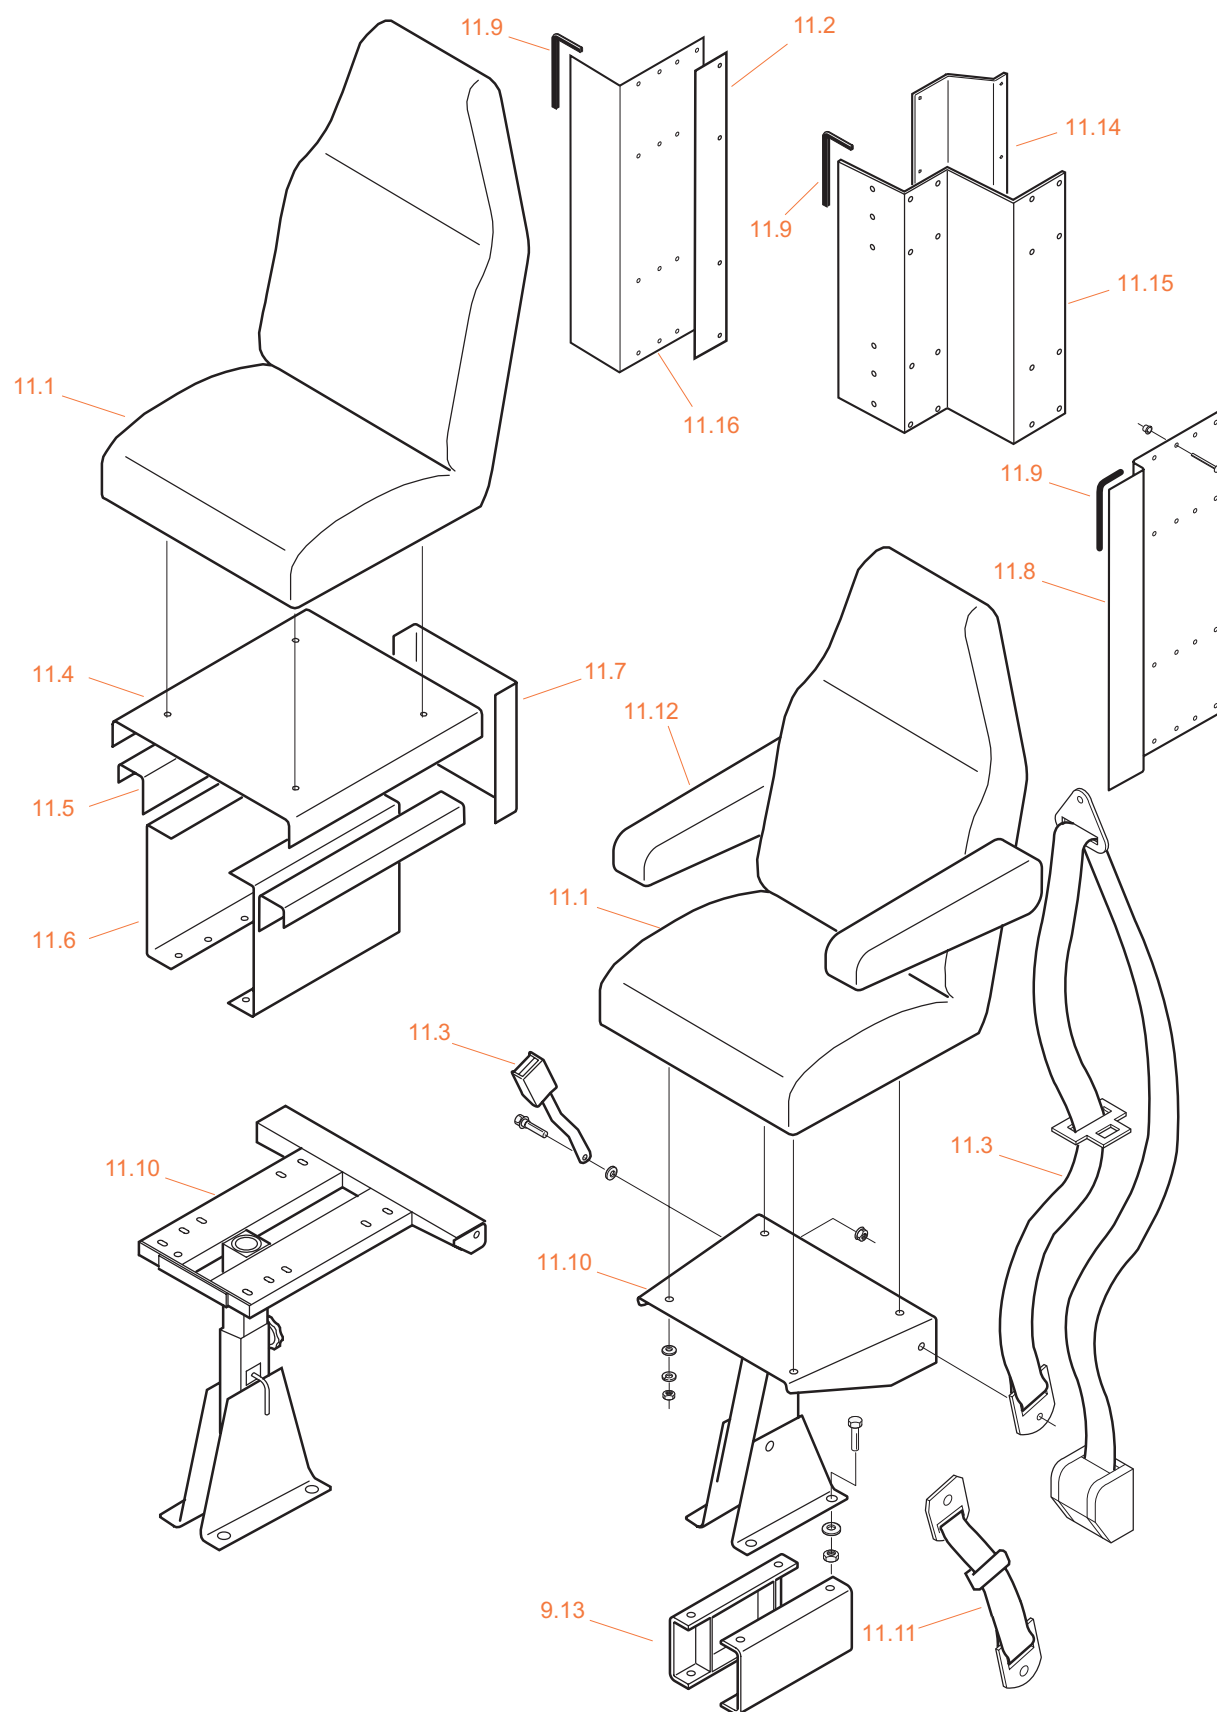


Seating, Standard

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

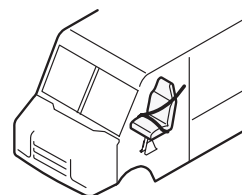


Item	Part Number	Description
11.0		SEATS
11.1.1	13672402	SEAT HB S&P
11.1.2	13105647	SEAT HB BLK VINYL
11.1.3	13112490	SEAT HB S&P W/LMBR
11.1.4	13112508	SEAT HB S&P
11.1.5	13672115	SEAT HB BLK CLOTH
11.1.6	13672415	SEAT HB BLK CORDURA
11.1.7	13672224	SEAT HB BLK NYL LMBR
11.1.8	13112207	SEAT HB BLK W/LMBR
11.1.9	13112517	SEAT HB BRN CORD
11.1.10	13672425	SEAT HB S&P W/LMBR 7" SLD
11.2	06915330	SPACER 3 PT MOUNT DRLS A&B
11.3.1	21310872	SEATBELT ADJ D-RING ORANGE 127"
11.3.2	21310802	SEATBELT ADJ D-RING OR 127
11.3.3	21310850	SEATBELT 3-PT 127" W/STL STRAP
11.4	22101997	RISER SEAT TOP VIKING T-BAR
11.5	22101998	RISER SEAT CHNL VIKING T-BAR
11.6	13112520	PEDESTAL SEAT SIDE VIKING
11.7	13112519	BACK PEDESTAL SEAT VIKING
11.8	22814305	MOUNT 3POINT SEATBELT
11.9	05302302	TRIM LOCK BLK 1/8" W/ALUM INST
11.10.1	13105617	PEDESTAL STATIONARY
11.10.2	13105613	PEDESTAL W/TILT TOP
11.10.3	13672271	HEIGHT ADJ PEDESTAL
11.10.4	13112487	PEDESTAL SWV/TILT 18-20"H
11.11	08610021	BELT ADJ. TETHER 36"
11.12.1 LH	13112530	ARM LH BLK VINYL
11.12.1 RH	13112531	ARM RH BLK VINYL
11.12.2 LH	13112534	ARM LH SALT & PEPPER
11.12.2 RH	13112535	ARM RH SALT & PEPPER
11.12.3 LH	13112536	ARM LH BLK CLOTH
11.12.3 RH	13112537	ARM RH BLK CLOTH
11.12.4 LH	13112542	ARM LH RPS BROWN
11.12.4 RH	13112543	ARM RH RPS BROWN

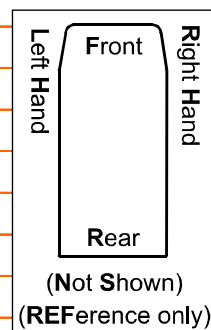

Continued

11—Seating, Standard

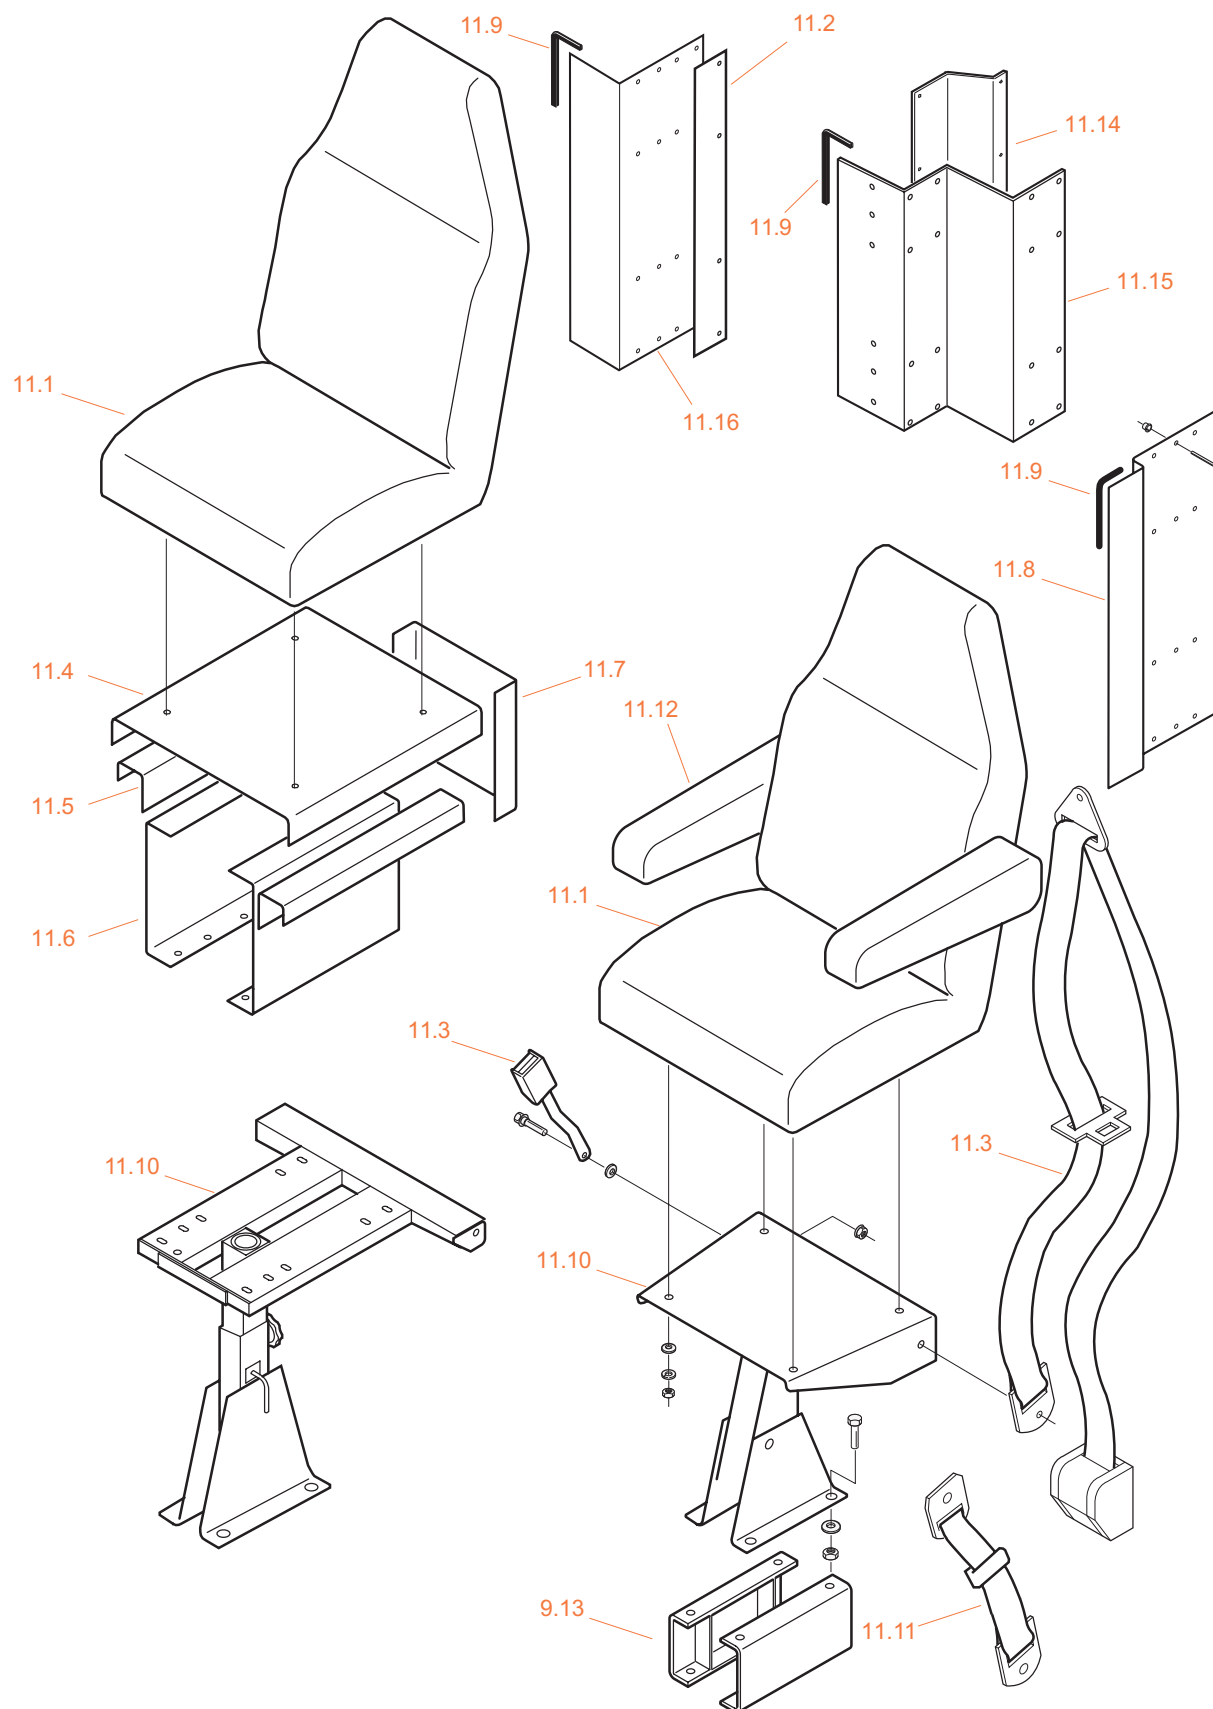


Seating, Standard

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

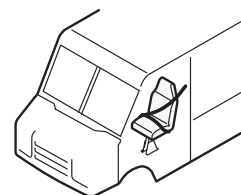


Item	Part Number	Description
11.13	13105574	PEDESTAL RISER 5"
11.14	22102006	BRACE 3PT SBELT MOUNT #30-36
11.15	22102005	MOUNT 3PT SBELT SETBACK #30-36
11.16	22101403	MOUNT 3PT S/BELT DD 6.25 x 8 x 24
11.Ref	64236228	SEAT PED & 2PT S/BELT INSTL
11.Ref	13112521	PEDESTAL ASY VIKING SEAT 32-35
11.Ref	64236149	PEDESTAL ASSY BOSTROM SEAT INSTL
11.Ref	54232130	DETAIL D-RING SEDAN DR
11.Ref	51231308	RELOCATION SEAT TO PEDESTAL
11.Ref	51231423	INSTL SEAT TO PEDESTAL (TORQUE VALUE)
	See also Sections 1 and 14.	

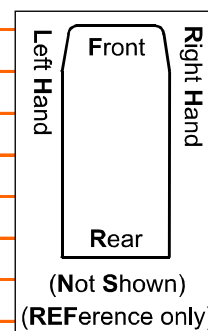

11—Seating, Jump

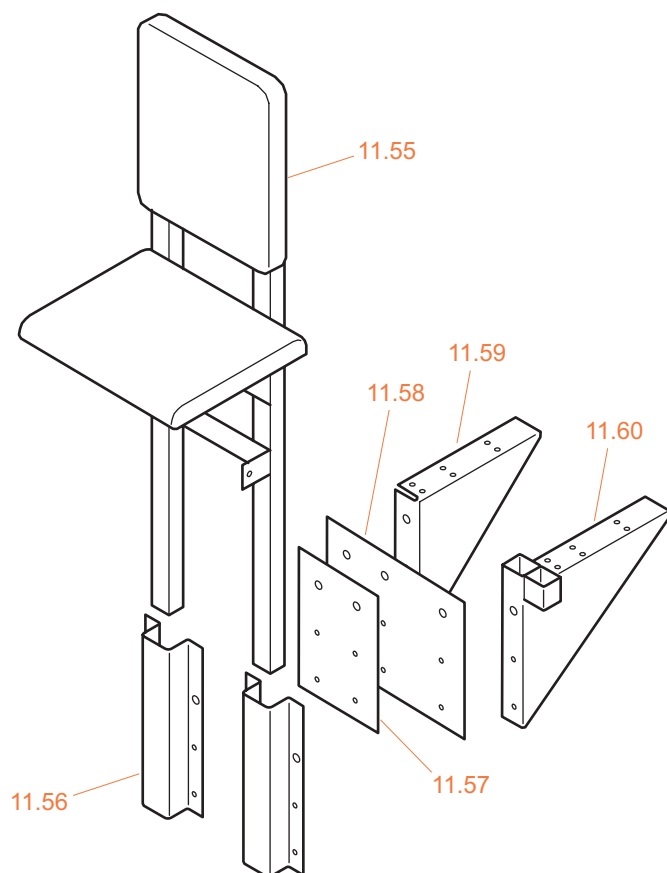

Removable Jump Seat

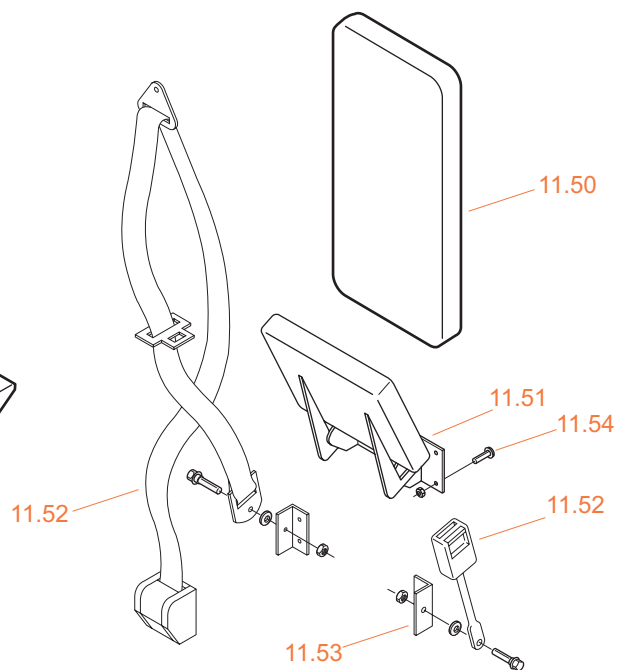

Bulkhead-mounted Jump Seat


Seating, Jump

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

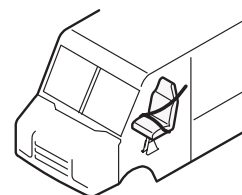

Item	Part Number	Description
11.50	Appendix 54231878	Cushion, Back W\Headrest
11.51	Appendix 54231878	Cushion, Back Highback
11.52.1	21311182	SEATBELT 3-PT 150" ORANGE
11.52.2	21311183	SEATBELT 3-PT 150" BLACK
11.52.3	21310802	SEATBELT ADJ D-RING OR 127
11.52.4	21310690	SEAT BELT 2PT W/RETRACT
11.53	22810292	MOUNT SEAT BELT 3PT BLKHD
11.54	11305092	SCREW 1/4-20 x 3/4 TR PH
11.55.1	13672221	JSEAT 10" W/BLT BLK VINYL
11.55.2	13672230	JSEAT 10" W/BLT BLK NYLON FABRIC
11.55.3	13672240	JSEAT 8" W/BLT SALT & PEPPER
11.55.4	13672258	JSEAT 10" S&P RECLINED 12434
11.55.5	13672223	JSEAT 8" W/BLT BLK 21146-001
11.56	01712184	BRACKET JUMP SEAT HAT 11.75"
11.57	22001746	PLATE JUMPSEAT BACKER
11.58.1	22815122	PLATE J/SEAT BCKR 8" CTS DP STP
11.58.2	22815136	PLATE JSEAT BCKR 10" CTS DP STP
11.59	22102014	BRACE J/SEAT RH
11.60	22102007	BRACE WELDMT JUMPSEAT
11.Ref	54231878	DETAIL-BHD J-ST INSTL
11.Ref	54232242	DETAIL, JUMPSEAT INST
11.Ref	54231877	DETAIL BHD J/ST D-RNG
	See also Sections 1 and 14.	

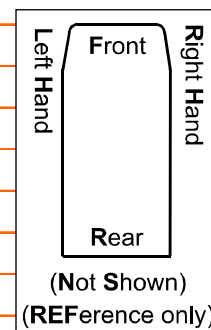

12—Door, Side with Sliding Window

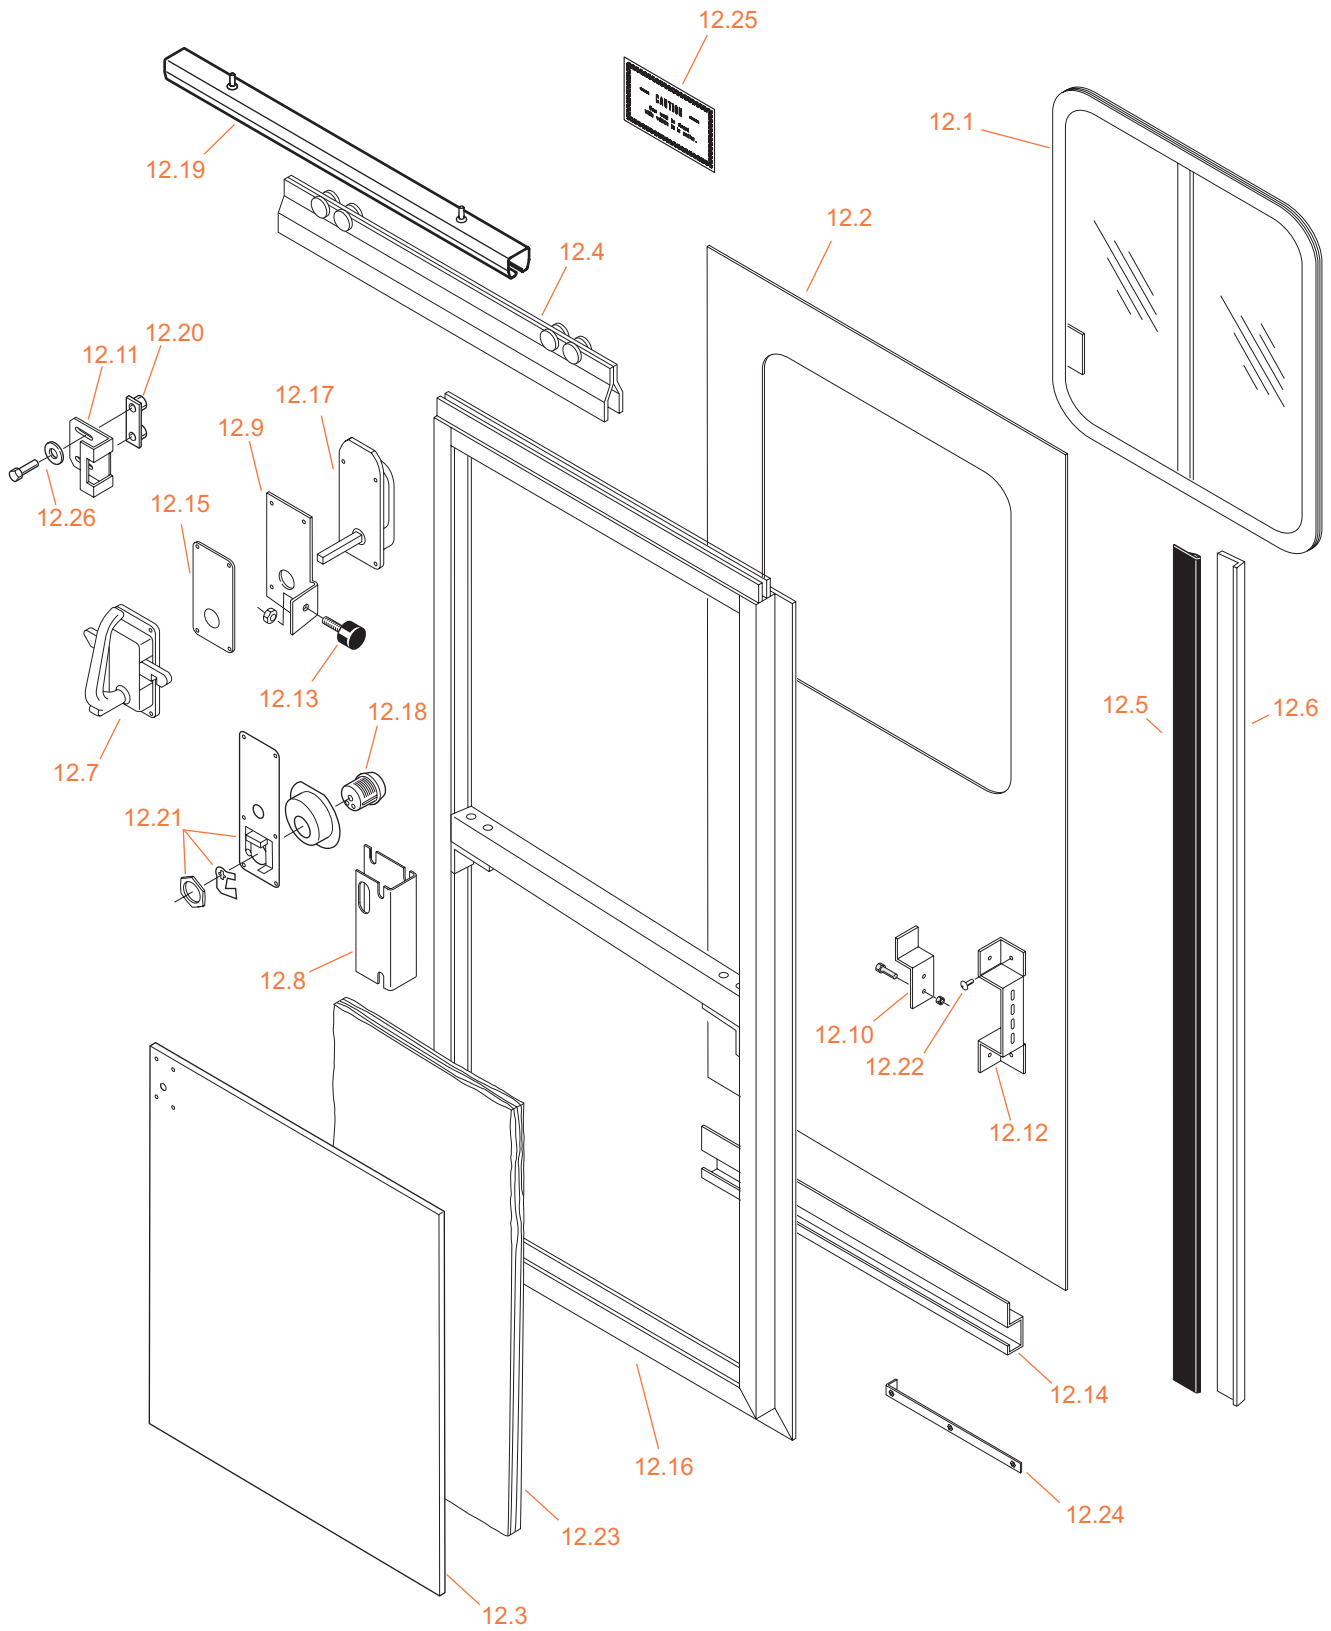


Door, Side with Sliding Window

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

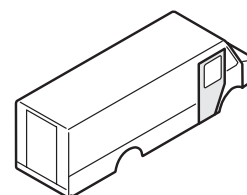


Item	Part Number	Description
12.0 LH	W01022-30	SLIDER DOOR LH W/SLIDER WDW
12.0 RH	W01023-30	SLIDER DOOR RH W/SLIDER WDW
12.0 RH	W01023-36	SLIDER DR RH W/SLDR & LWR GLS
12.0 RH	W01023-41	SLIDER DR RH W/SLDR & LWR LXN
12.1 LH	09801507	WDW SLDR LTCH LH SLV LH
12.1 RH	09801508	WDW SLDR LTCH RH SLV RH
12.1.1	12605908	TAPE FOAM GASKA 1/8 x 3/4
12.1.2	11600217	MAGNA-LOK 3/16" ALUM LONG (REPLACEMENT)
12.2	BSNR	MTL DR EXT SLD
12.3	06502853	MTL INT SLDR DR
12.4	08220195	ROLLER UPR ASY 39.69
12.5	05402170-07850	SEAL SLIDING DR RR 78.5
12.6	06013008-07750	IA4161 ANGLE 77.50 06013008
12.7	08704403	LATCH KASON INT 3/8" SHAFT
12.8 LH	22815232	CHANNEL LATCH MTG LH SLDR DOOR
12.8 RH	22815231	CHANNEL LATCH MTG RH SLDR DOOR
12.9 LH	08401226	BRKT STOP SLD DR ZINC KASON LH
12.9 RH	08401225	BRKT STOP SLD DR ZINC KASON RH
12.10.0	08401252	CATCH SLDG DR RR KASON
12.10.1	11005597	BOLT HXCP 1/4-20 x 1 G5Z
12.10.2	11008141	WASHER 1/4 FLAT ZC SAE
12.10.3	11000039	NUT LOCK WXD1/4-20 2WAY GR5 ZN
12.11	08401266	CATCH SLDG DR FRT KASON
12.12 LH	22813406	MNT CATCH SLDG RECESSED LH
12.12 RH	08401250	CATCH SLDG DR RECESS RH KASON
12.13	08210016	STOP RUBBER FOR SLIDING DOORS
12.14	06014425	LWR GUIDE 41.56 06003904
12.15	01700696	SHIM DOOR .25 x 5.50 x 2.5 KASON
12.16	57231681	FRAME ASY SLDR/STAT LH & RH
12.17.0	08610414	HANDLE CHRM NONLK PDL
12.17.1	11306230	SCREW MA 1/4-20 x 3 FLAT PHIL SS
12.17.2	11000039	NUT LOCK WXD 1/4-20 2WAY GR5 ZN
12.18	08610399*	LOCK CYL W/KEY ABLOY

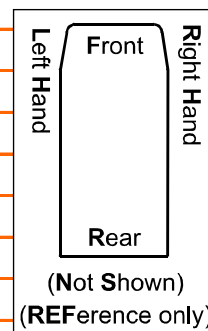

Continued

NOTE: The door frame is built in a fixture. If more than one extrusion is being replaced, it is recommended that you order a complete frame assembly.

12—Door, Side with Sliding Window (continued)

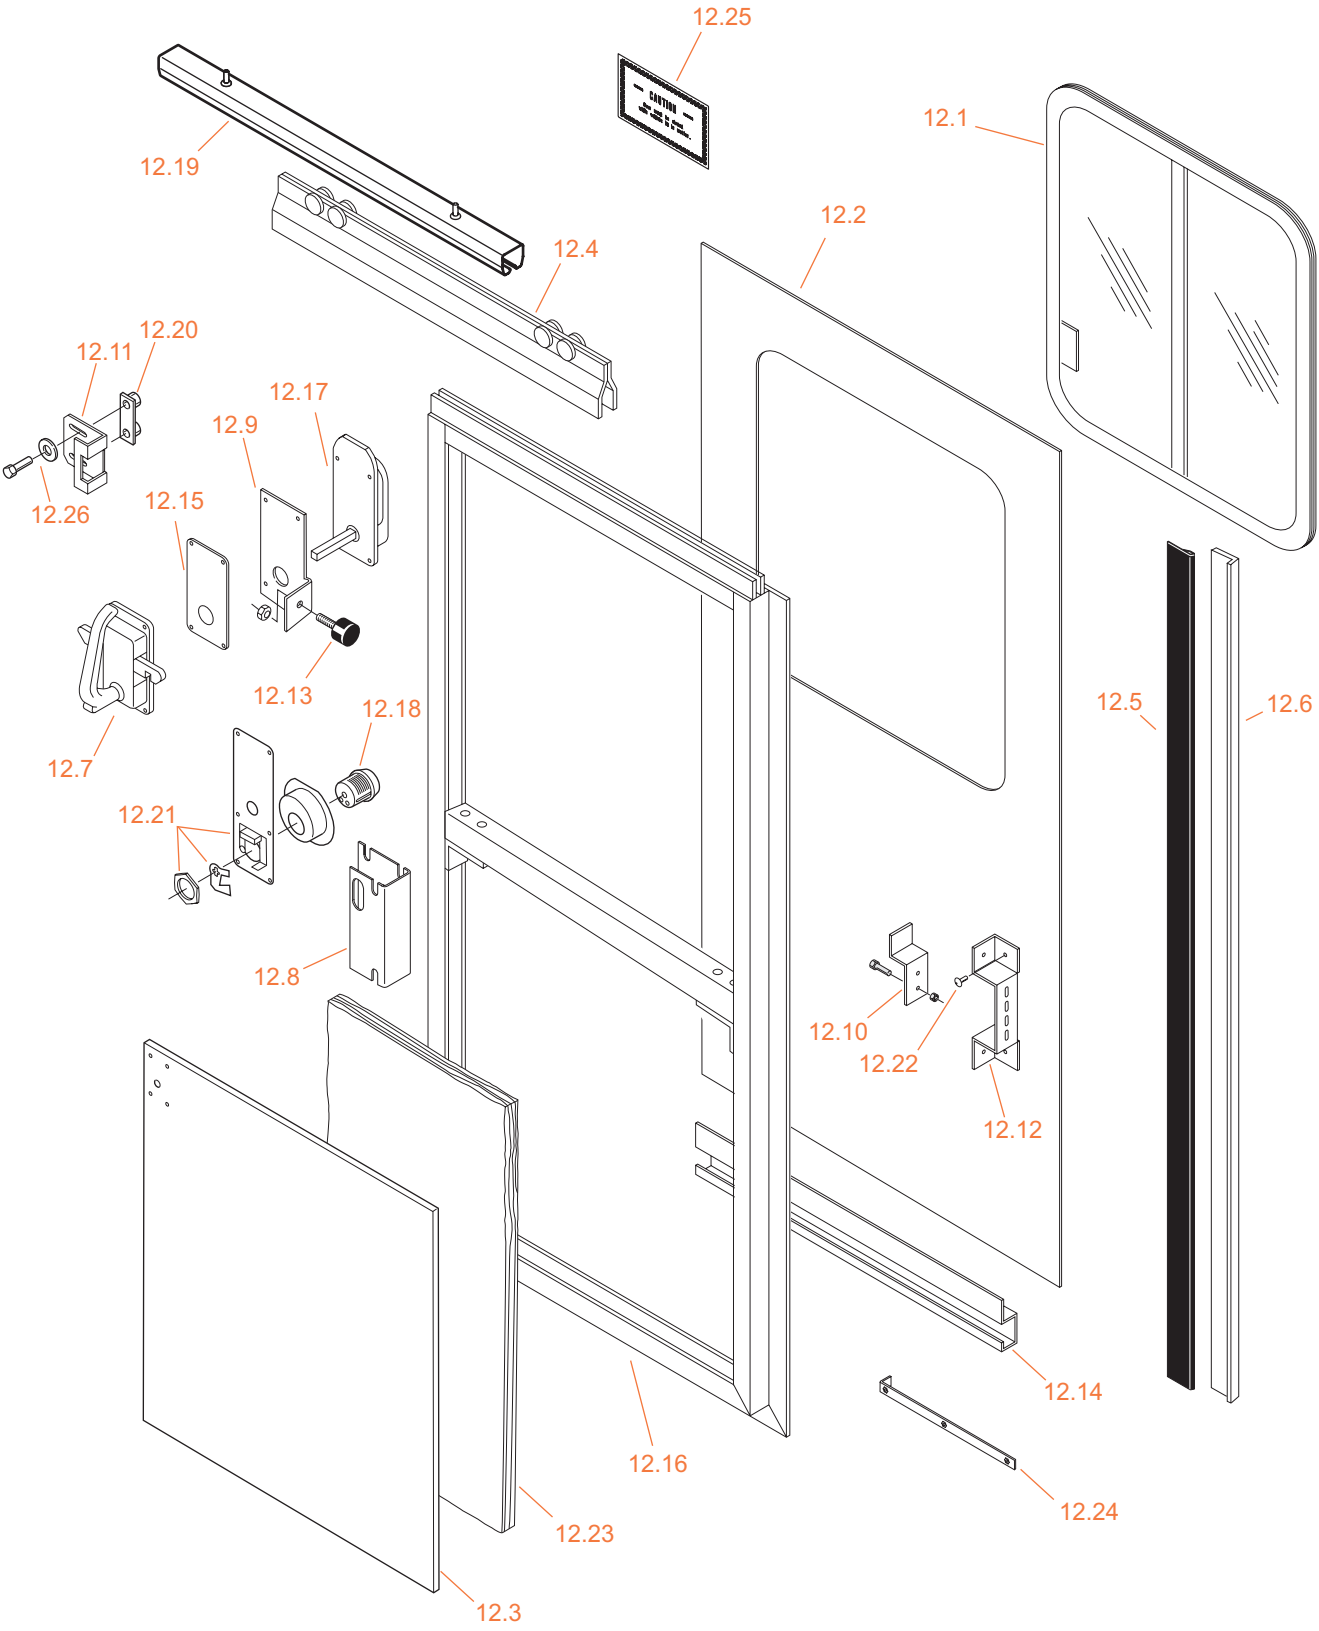


Door, Side with Sliding Window

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

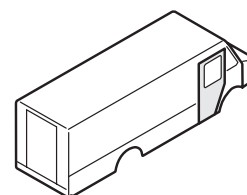


Item	Part Number	Description
12.19.0	08220192	TRK UP SLD 72" 1" BOLTS
12.19.1	11000903	NUT NYLOCK 1/4-20 GR5
12.19.2	11600221	WASHER FLAT 1/4" HRD
12.20	08610402	PLATE ASY NUT KASON FRT CATCH
12.21	08610404*	LOCK ADPT KT ABLOY KASN
12.22	11600108-0308H	RIVET BR HD 3/16 x 1/2
12.23	20510275	INSUL F/GLASS 1" x 21" x 100' 3/PLY
12.24	08610521	PLATE ASY NUT LWR DOOR GUIDE
12.25	03000823	DECAL CAUTION DOOR MUST BE CLOSED
12.26.1	11000033	BOLT 1/4-20 x 1-1/4HXHD CAP G5-Z
12.26.2	11600221	WASHER FLAT 1/4" HRD
12.26.3	11008115	WASHER 1/4 LOCK
	The door frame is built in a fixture. If more than one extrusion is being relaced, it is recommended that you order a complete frame assembly.	
12.NS	12300703	TAPE 3/4" DOUBLE SIDED WINDOW
12.Ref	57231752	CATCH INSTAL FRT KASON
12.Ref	57231998	DR HDWR INST KASON ABLOY
12.Ref	57233034	KASON LATCH & CATCH ALIGNMENT

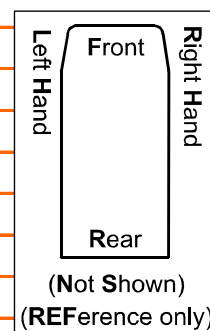

NOTE: The door frame is built in a fixture. If more than one extrusion is being replaced, it is recommended that you order a complete frame assembly.

12—Door, Side with Roll-up Window

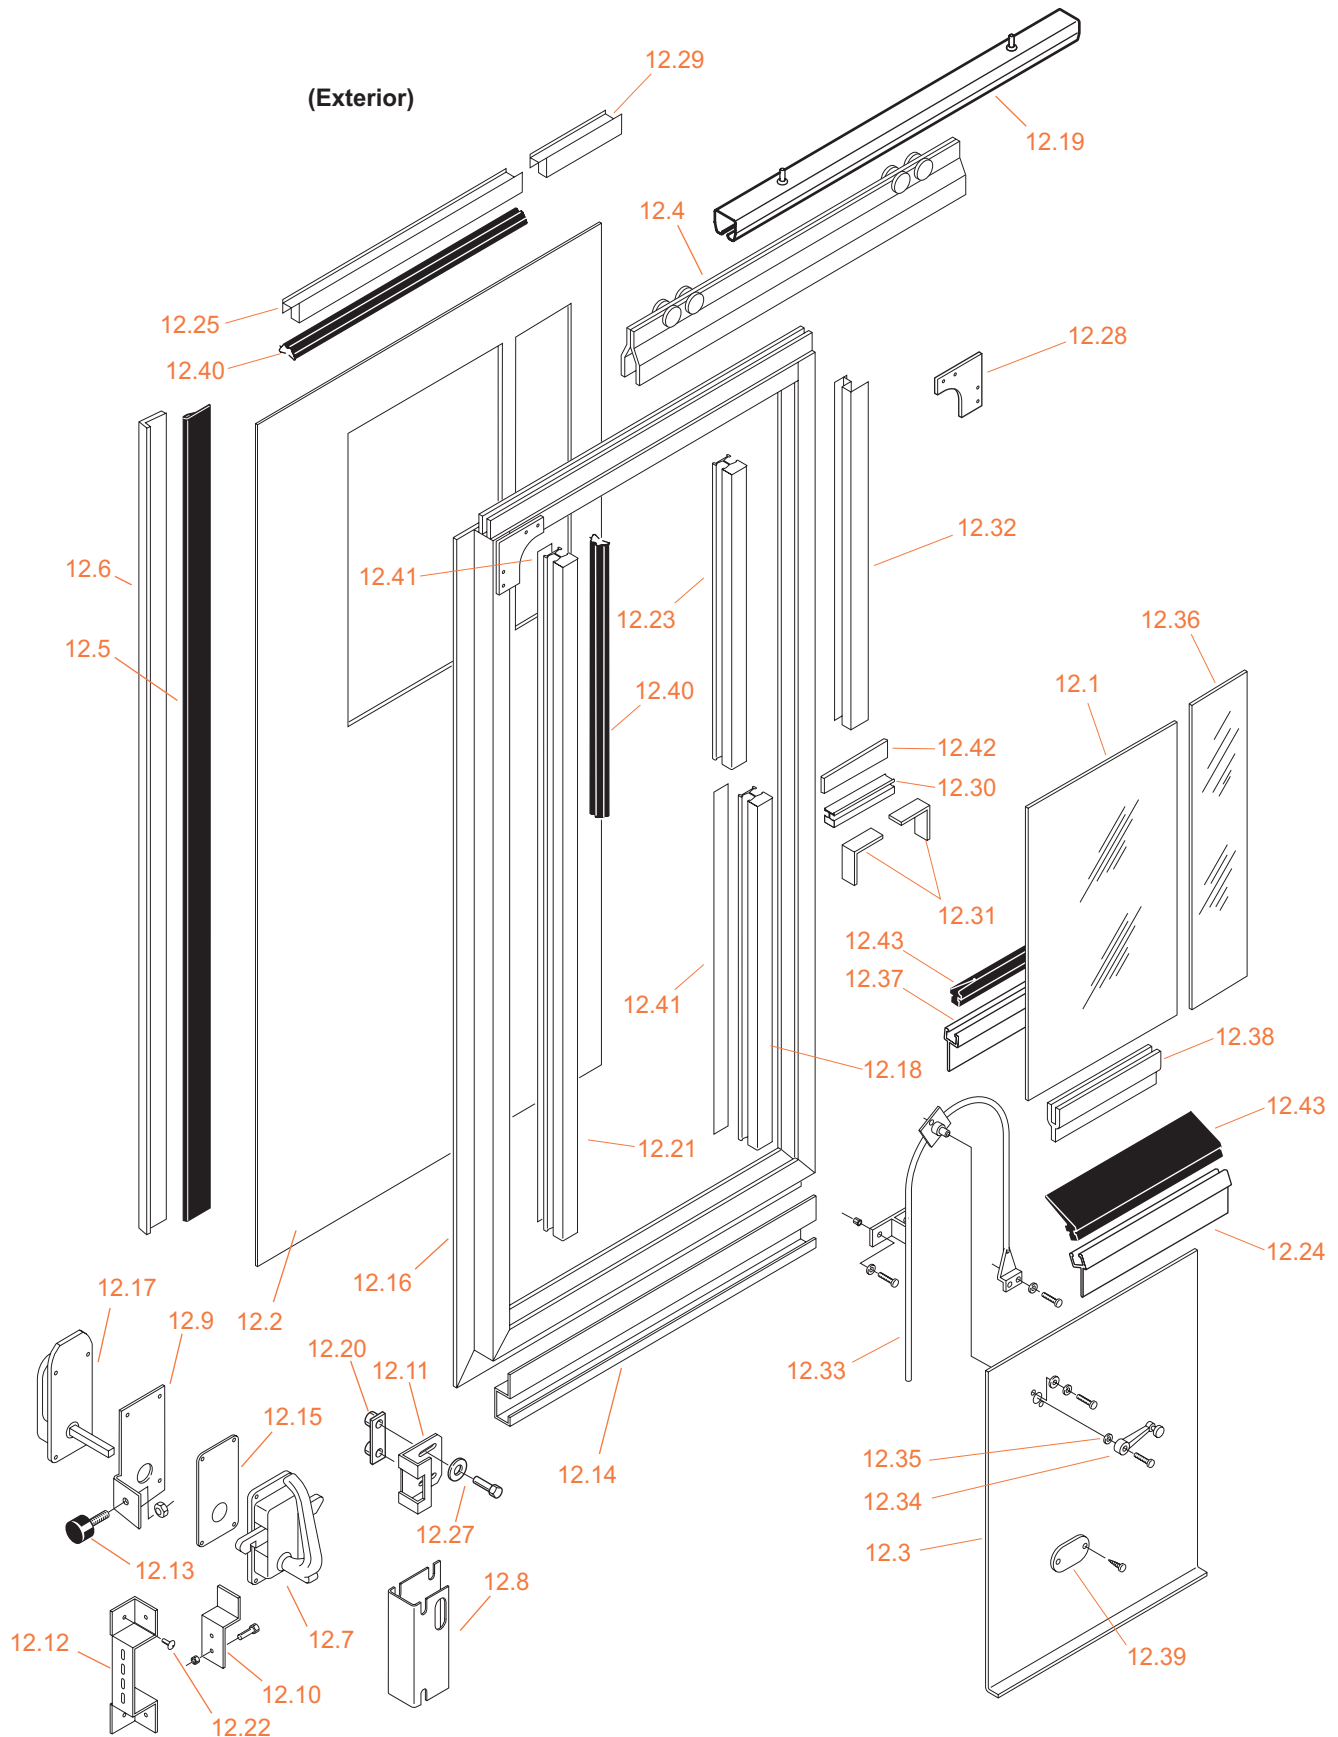


Door, Side with Roll-up Window

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

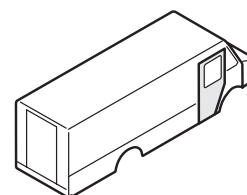


Item	Part Number	Description
12.0 LH	W01022-32	DOOR LH ROLL UP WINDOW
12.1 LH	09080539	GLASS CRANK-UP
12.2 LH	06601682	METAL EXTERIOR LH
12.3 LH	06915535	PLATE REGULAR LH
12.4	08220195	ROLLER ASSY 39.69
12.5	05402170-07850	SEAL REAR 78.5
12.6	06013008-07450	IA4161 ANGLE
12.7	BSNR	HANDLE INTERNAL
12.8 LH	22815232	CHANNEL LATCH LH
12.9 LH	08401226	BRACKET STOP LH
12.10.0	08401252	CATCH REAR
12.10.1	11005597	BOLT HEX CAP 1/4-20 x 1 G5Z
12.10.2	11008141	WASHER 1/4 FLAT ZINC SAE
12.10.3	11000039	NUT LOCK WXD1/4-20 2-WAY GR5 ZINC
12.11	08401266	CATCH FRONT
12.12 LH	22813406	MOUNT RECESSED LH
12.13	08210016	STOP RUBBER
12.14	06014425	LOWER GUIDE 41.56 06003904
12.15	01700696	SHIM DOOR .25 x 5.50 x 2.5
12.16	57231680	FRAME ASSEMBLY
12.17	08706641	HANDLE CHROME 3/8 PUSH
12.18	06012500	POST LOWER 40.03 06003860
12.19.0	08220192	TRACK SLIDER 72" 1" BOLTS
12.19.1	11000903	NUT NYLOCK 1/4-20 GR5
12.19.2	11600221	WASHER FLAT 1/4" HARDENED
12.20	08610402	PLATE ASSY CATCH
12.21	06012498	WINDOW GUIDE LH 50.00 06003859
12.22	11600108-0308H	RIVET BR HD 3/16 x 1/2
12.23	06012387	POST NOTCHED 32.06 06003860
12.24	06850185-02481	IA7137 SEAL
12.25	06003859-02494	IA7299 GUIDE

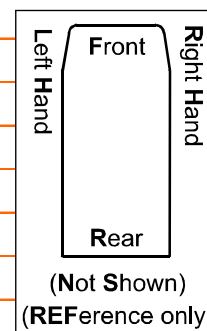

CONTINUED

NOTE: The door frame is built in a fixture. If more than one extrusion is being replaced, it is recommended that you order a complete frame assembly.

12—Door, Side with Roll-up Window (continued)

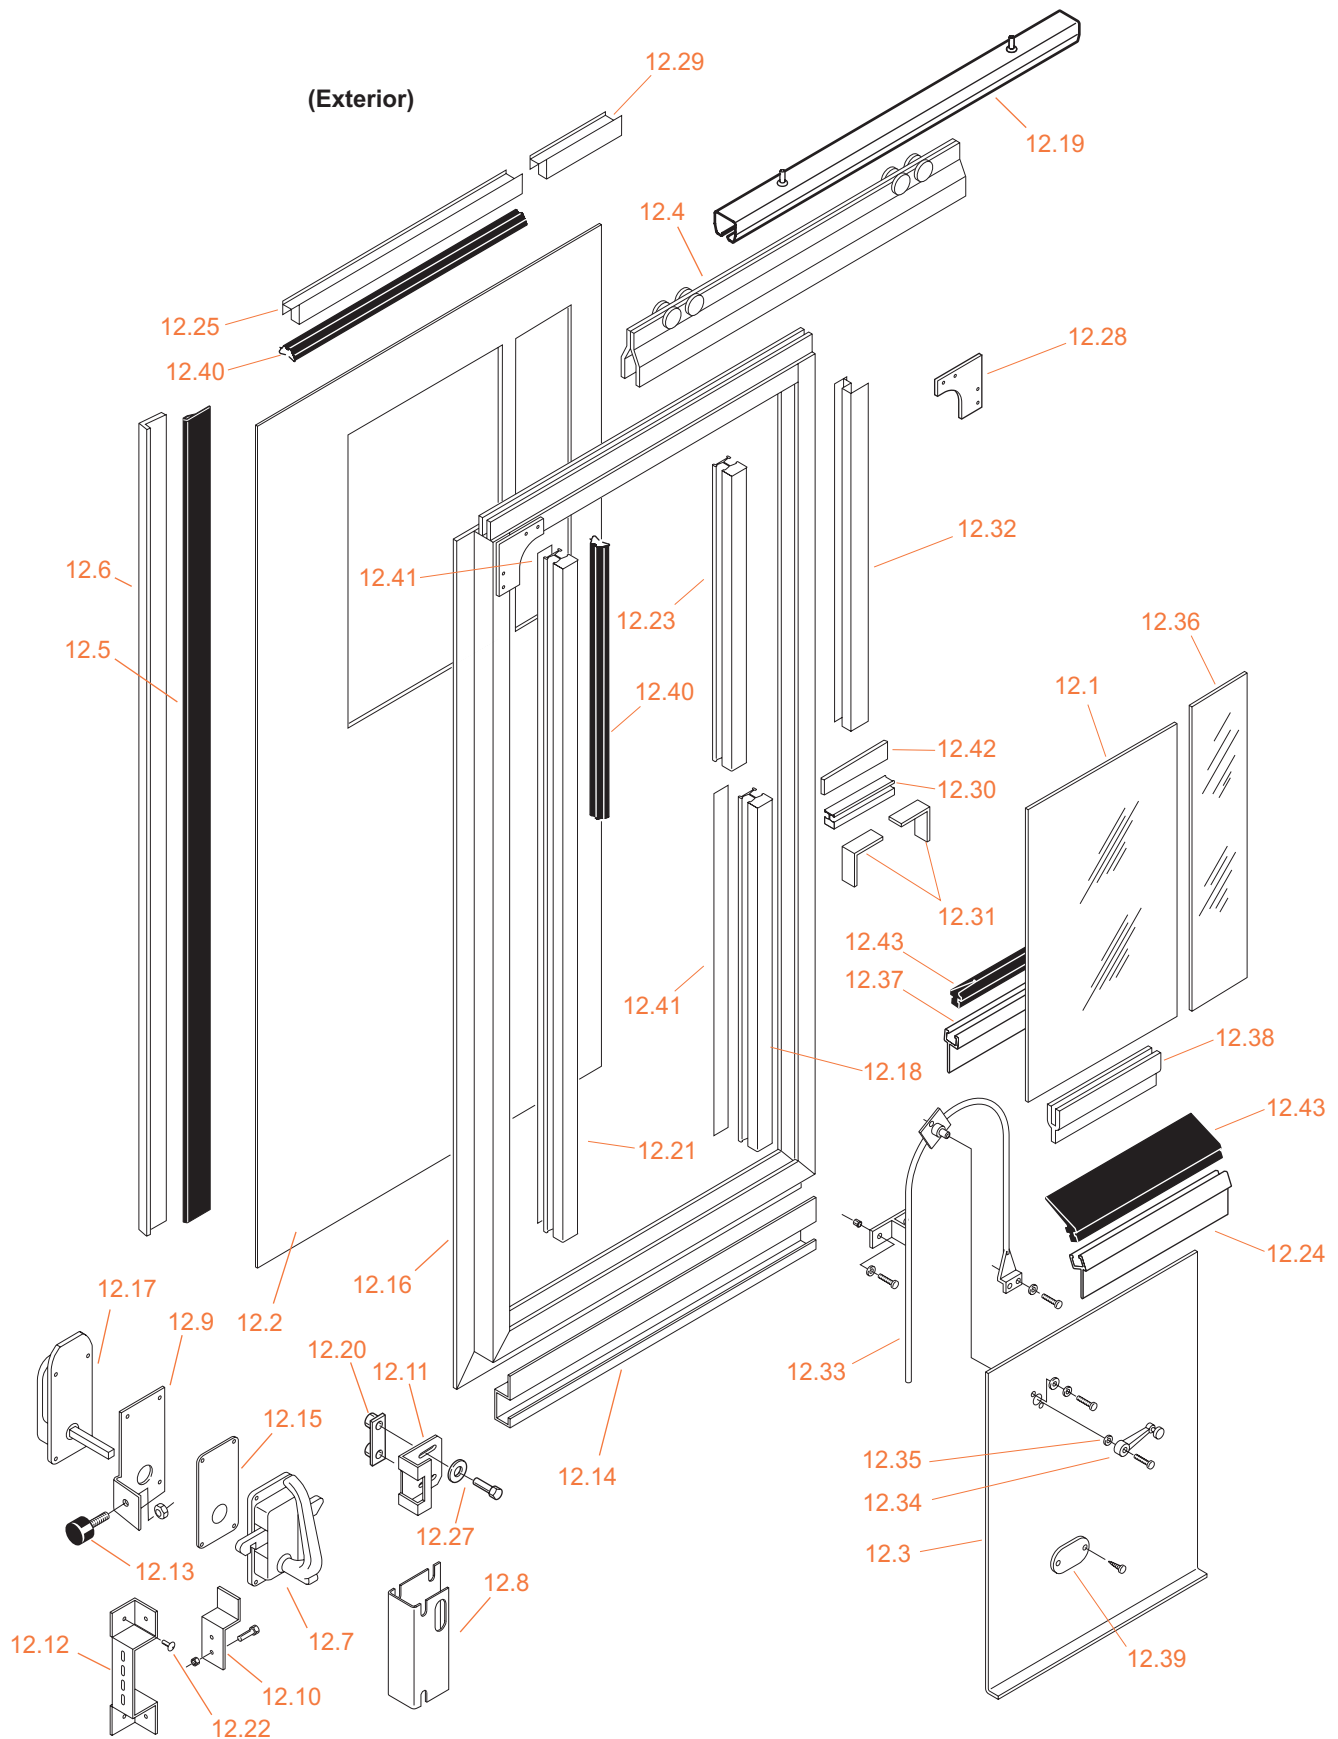


Door, Side with Roll-up Window

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

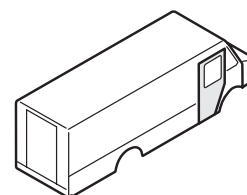

Item	Part Number	Description	Left Hand Right Hand Front Rear (Not Shown) (REFERENCE only)
12.27.1	11000033	BOLT 1/4-20 x 1-1/4 HEX HEAD CAP G5-Z	
12.27.2	11600221	WASHER FLAT 1/4" HARDENED	
12.27.3	11008115	WASHER 1/4 LOCK	
12.28	06502652	GUSSET TOP .125 x 3.81	
12.29	06003859-01119	IA 7299 GUIDE	
12.30	06003860-01119	IA H1454 POST	
12.31	06631354	ANGLE FRONT	
12.32	06012383	GUIDE LH 32.34 06003859	
12.33	09101462	REGULATOR WINDOW LH	
12.34.1	08706600	HANDLE CRANK	
12.34.2	08706601	SPACER HANDLE	
12.35.1	08706603	ESCUTCHEON	
12.35.2	08706602	SPRING ESCUTCHEON	
12.36	09080516	GLASS .188 x 12 x 30.16 TEMPERED TINT	
12.37	06850143-02481	IA 7046 SEAL	
12.38	06910453	BRACKET REGULATOR 06013103	
12.39	06502577	PLATE ACCESS	
12.40	12300662	WEATHER STRIP	
12.41	06502909	ALUM .100 x .90 x 41.75	
12.42	06502908	ALUM .100 x .90 x 11	
12.43	05705497	SEAL	
12.NS	22001734	SHIM 1/8	
12.NS	12300534	TAPE FOAM 1/16 x 3"	
12.NS	12300703	TAPE 3/4" DOUBLE SIDED (WINDOW)	
12.Ref	08610439	HANDLE SHAFT LENGTH	
12.Ref	57231683	FRAME ASSEMBLY LH	
12.Ref	64236922	CATCH ASSY LH	
12.Ref	57231752	INSTALL CATCH	
12.Ref	57233034	LATCH & CATCH ALIGNMENT	

NOTE: The door frame is built in a fixture. If more than one extrusion is being relaced, it is recommended that you order a complete frame assembly.

12—Door, Side Sedan

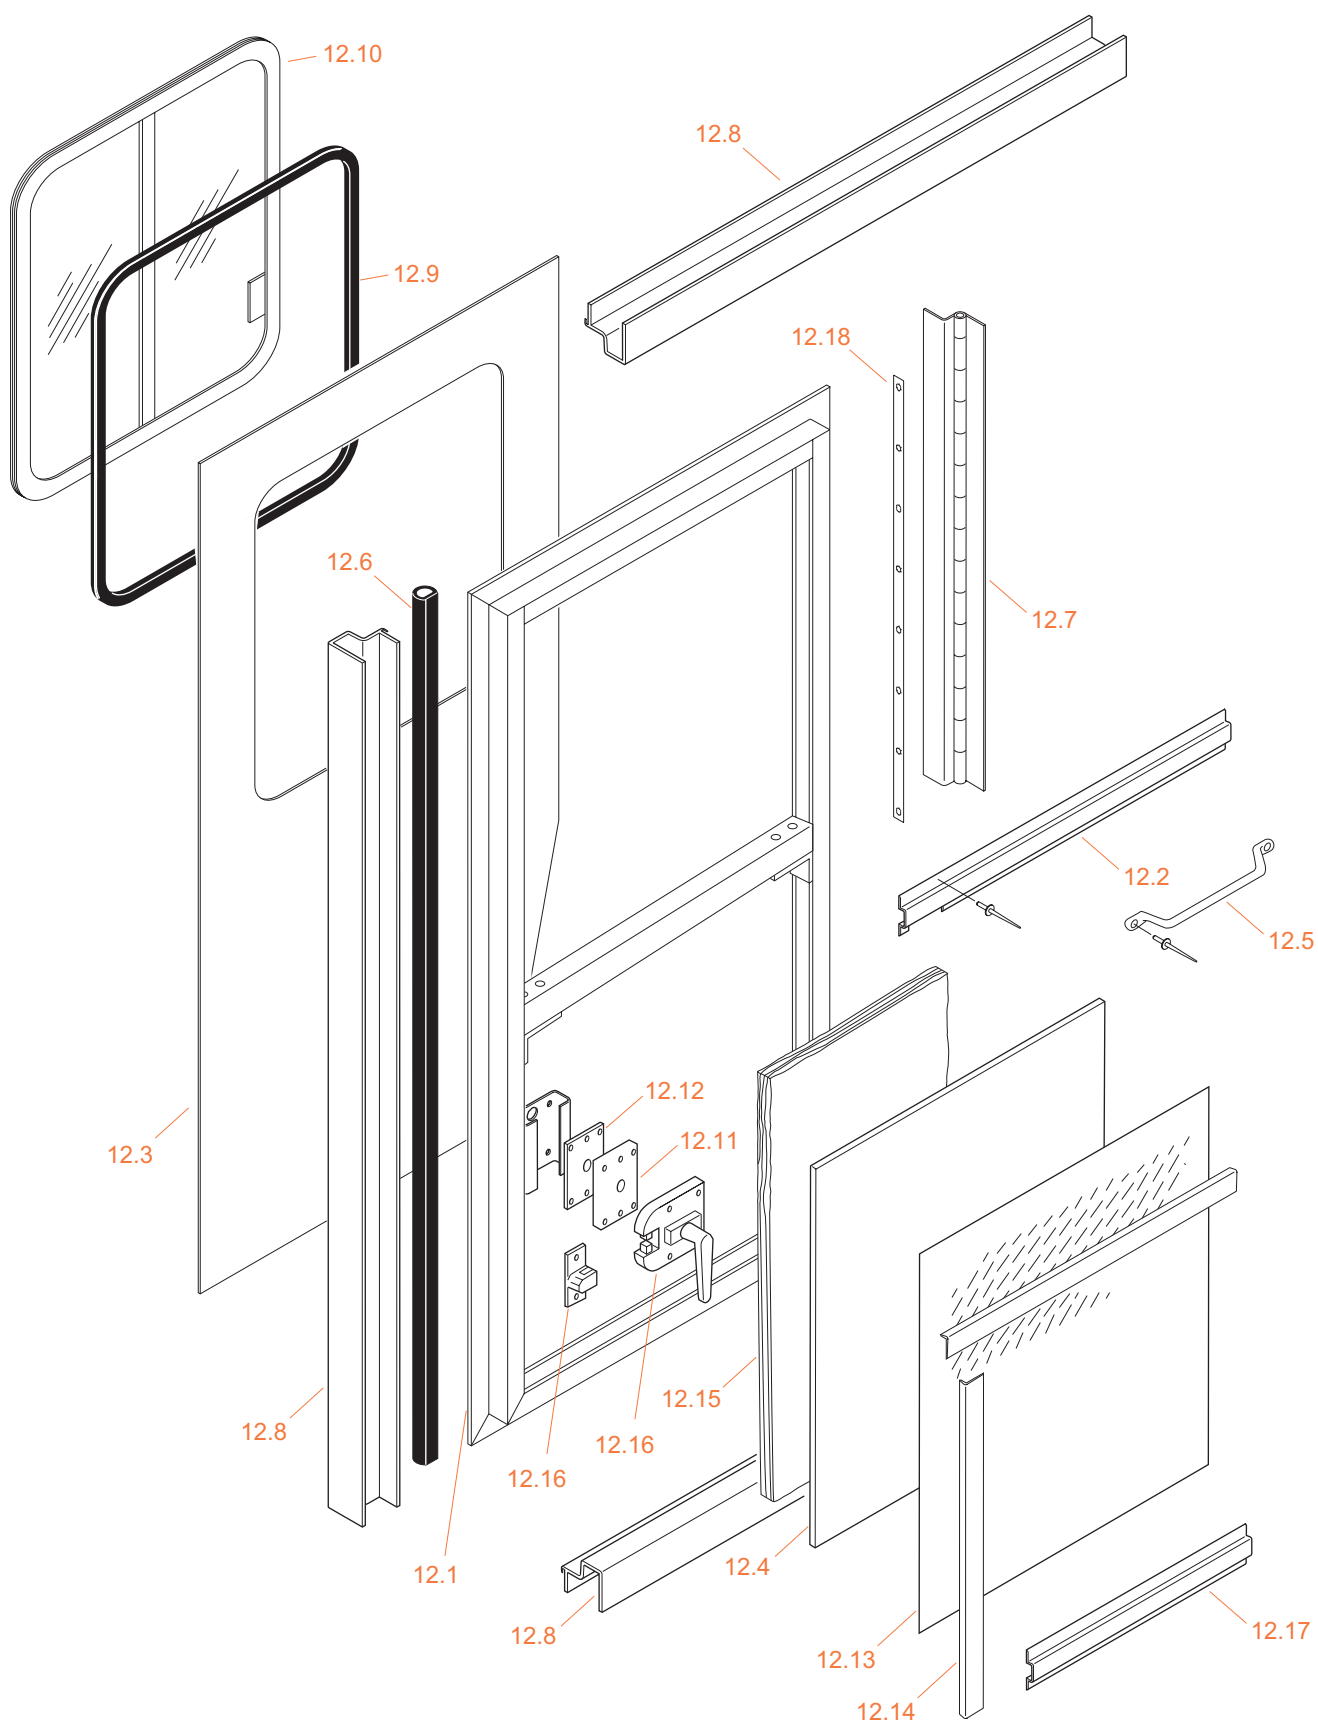


Door, Side Sedan

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

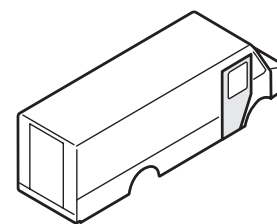


Item	Part Number	Description
12.0		SEDAN DOOR ASSEMBLY
12.1	BSNR	FRAME ASY
12.2 LH	06918061	STIFFNR SDN DR TOP LH
12.2 RH	06918062	STIFFNR SDN DR TOP RH
12.3	BSNR	METAL DOOR EXT SHRT SDN
12.4	BSNR	METAL INT SHT SDN LH SLDR
12.5	08704342	HANDLE GRAB OFFSET
12.6	05402168	SEAL SEDAN DOOR
12.7	08708528	HINGE FRMD 14GA SS x 45" SDN
12.8	06003861-Length	DR SDN EXTR (SPECIFY LENGTH)
12.9	12605908	TAPE FOAM GASKA 1/8 x 3/4
12.10	Parts Guide	WINDOW
12.11	06502626	SPACER LOCK .75 AL x 4.37 x 3.75
12.12	06502627	SPACER LOCK .090 AL x 4.37 x 3.75
12.13	14000625	CARPET GREY
12.14	06002023-Length	TRIM IA 727 ANGLE 06002023
12.15	20510275	INSUL F/GLASS 1 x 21 3/PLY
12.16	08704402	LATCH SEDAN DOOR LH
12.17	06918060	STIFFNR SDN DR BTM RH 30,32-35
12.18	22001745	NUT PLATE .75 x 41
12.Ref	57231988	INST SEDAN DR STIFFENER 30-36

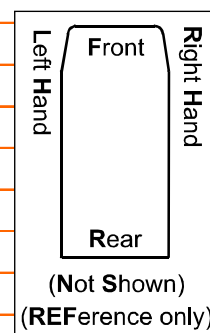

NOTE: The door frame is built in a fixture. If more than one extrusion is being relaced, it is recommended that you order a complete frame assembly.

12—Doorless Panel with Roll-up Window

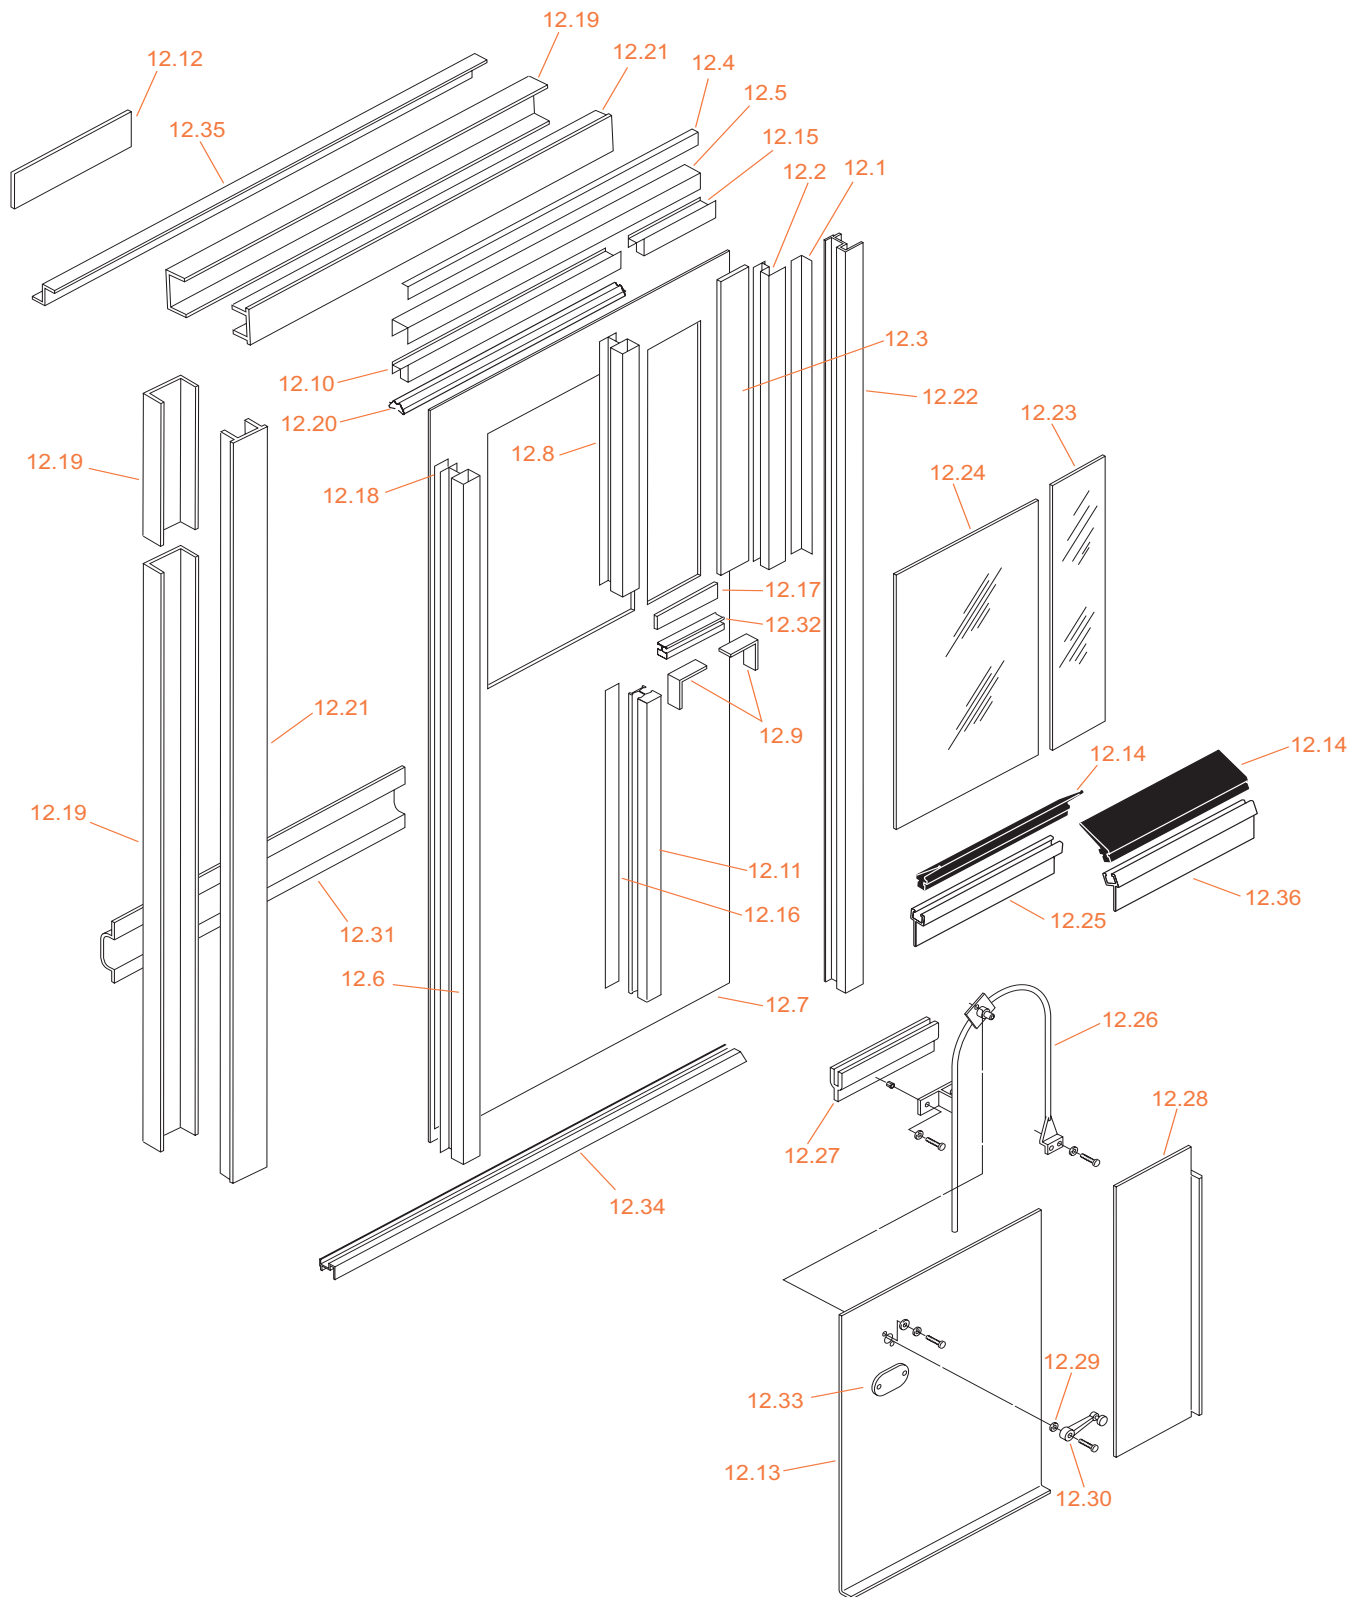


Doorless Panel with Roll-up Window

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

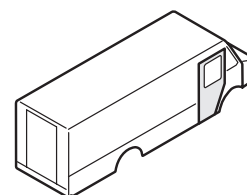


Item	Part Number	Description
12.0		DOORLESS DRIVER PANEL W\CRANK-UP WINDOW
12.1	06001975-03400	AE ANGLE 3/4 x 3/4 (.062) IA 101
12.2	06012383	WDW GUID LH 32.34 06003859
12.3	06503177	ALUM .125 x 1.69 x 35.5
12.4	06013008-03462	IA 4161 ANGLE
12.5	06013003-03462	ALUM EXT WALL STUD 090 IA 3948
12.6	06014407	POST REAR DRLS 75.00 06003860
12.7.1	06917411	PANEL DD SLDR LH
12.7.2	06502900	PANEL DRLS LH C/UP
12.8	06014406-03375	POST UPR DRLS 33.75 06003860
12.9	06631354	ANGLE WNDW FRM MNT FRT
12.10	06003859-02256	AE WINDOW GUIDE IA 7299
12.11	06003860-03775	AE WINDOW POST IA H1454
12.12	06915327	SPACER DD STIFFENER 3 X 9.5"
12.13	06502577	PLATE ACCESS WINDOW REG
12.14	05705497	FLOCKED SEAL
12.15	06003859-00832	AE WINDOW GUIDE IA 7299
12.16	06503176	ALUM .100 x .875 x 37.75
12.17	06503178	ALUM .100 x .875 x 8.0 SHIM
12.18	06503175	ALUM .100 x .875 x 74
12.19	06013049-Length	ALUM EXT RR DR OPENING IA 4755 (SPECIFY LENGTH)
12.20	12300662	W/STRIP GLASS CHNL 6' 75000486
12.21	06013069	ALUM EXT CAP DR CHNL IA 4868 (SPECIFY LENGTH)
12.22	06916338	QTR POST DLH 06000260
12.23	09080546	GLASS DD RU STAT .188 x 9 x 31
12.24	09080524	GLS SD DR C/UP .156 x 23.38 x 33
12.25	06014415	DR SEAL OS LH 22.56 06850143
12.26	09301011	REGULATOR WDW SD LH
12.27.0	06910453	BRCKT WINDOW REGULATOR 06013103
12.27.1	12300703	TAPE 3/4" DBLE SIDE WINDOW
12.28	06916336	PNL LWR DRLS C/UP LH & RH
12.29.1	08706603	ESCUTCHEON
12.29.2	08706602	SPRING ESCUTCHEON
12.30	08706600	HANDLE WINDOW CRANK
12.31	Match sidewall rubrail from Section 15.	
12.32	06003860-00832	POST UPR DRLS 8.32 06003860

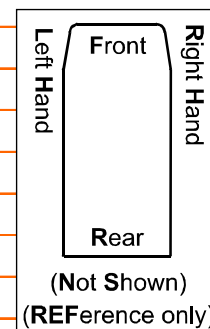

Continued

12—Doorless Panel with Roll-up Window (continued)

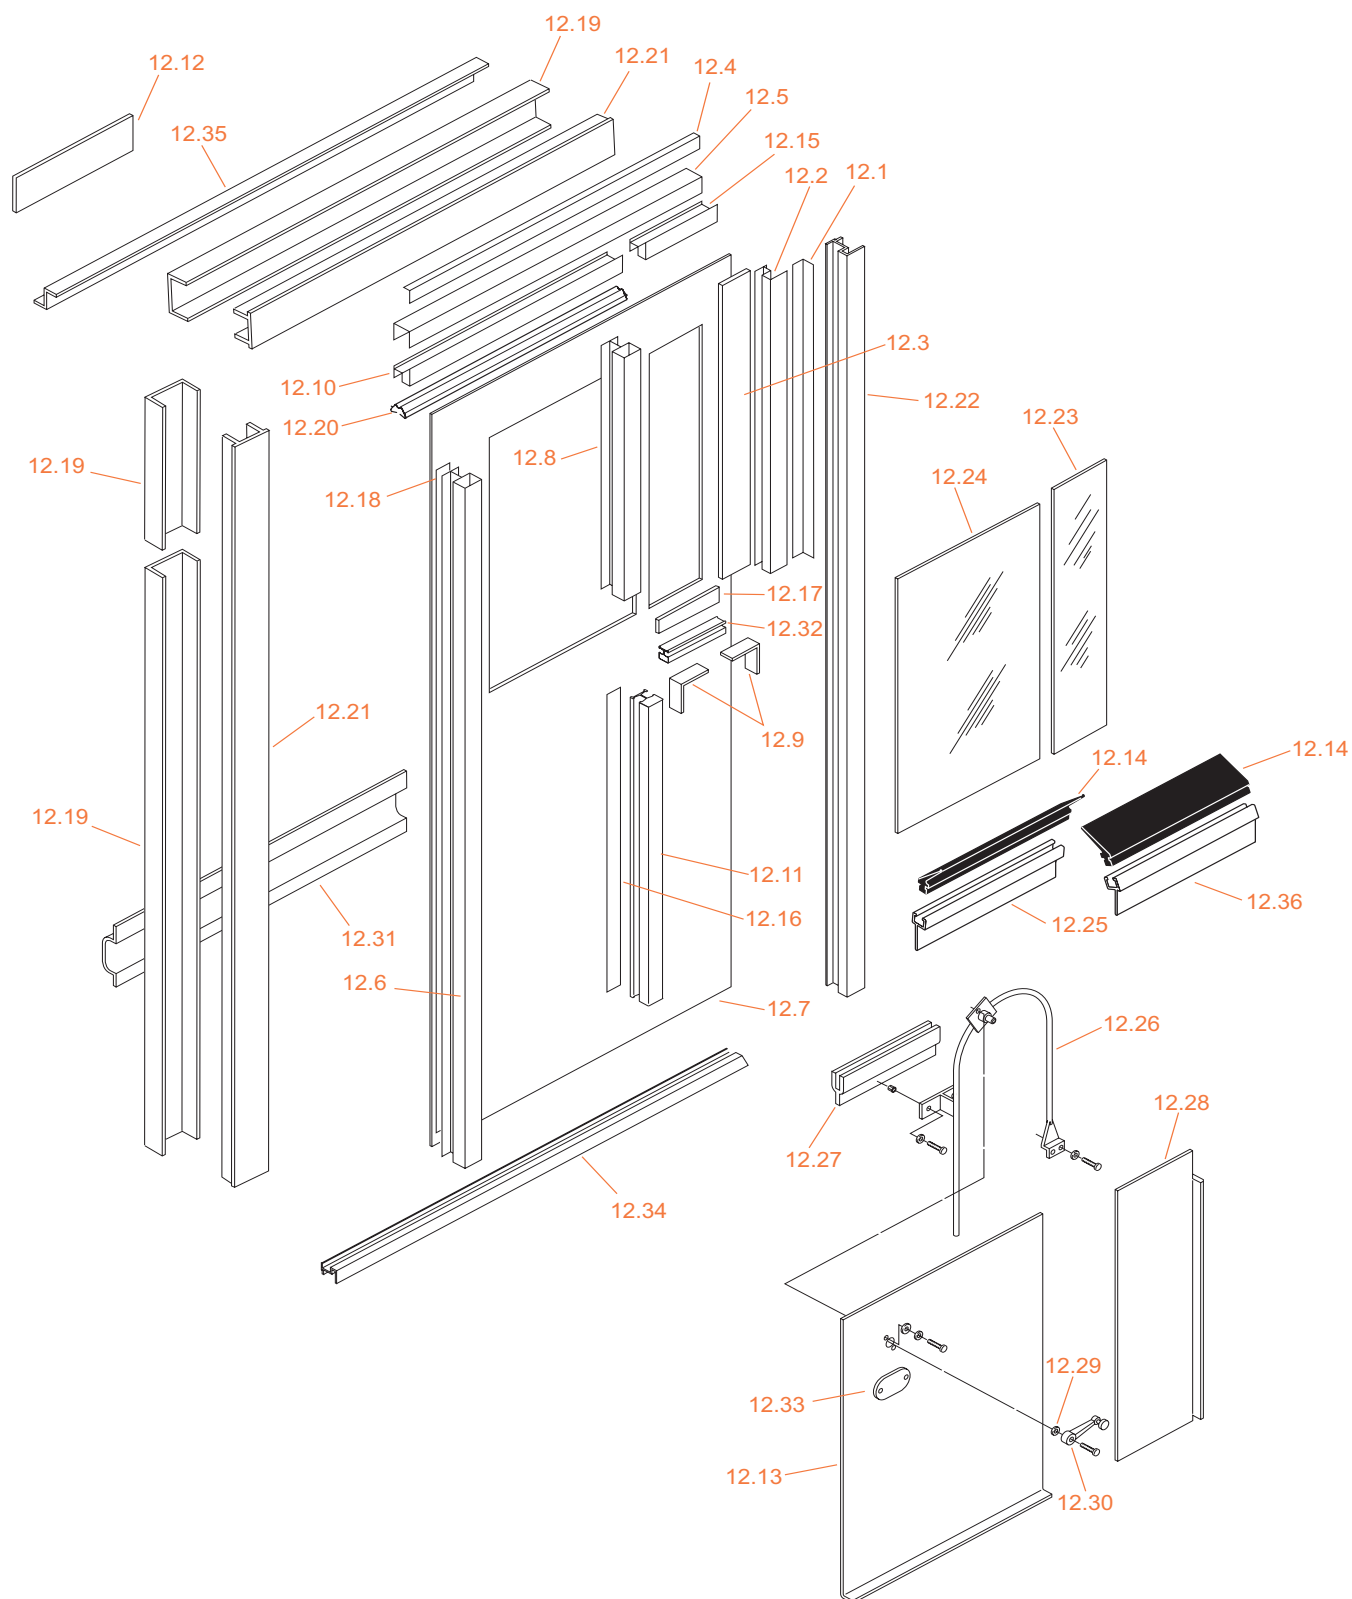


Doorless Panel with Roll-up Window

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

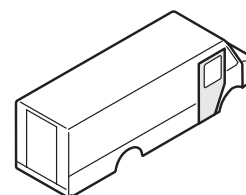

Item	Part Number	Description
12.33	06502683	PLATE WNDW REG LH DD
12.34	06014440	THRES LH DD 6'8 06000260
12.35	06014439	DRIPRAIL LH DD 40" 06011300
12.36	06850185-02256	IA7137 SEAL 22.56 06850185
12.NS	12300703	TAPE 3/4"DBLE SIDE WINDOW
12.NS	54232657	SIDE PANEL ASY DOORLESS POWER WINDOW
12.Ref	09801379	INSTL, CRANK UP WINDOW RGLTR
12.Ref	57231699	PANEL ASY DRLS LH C/UP

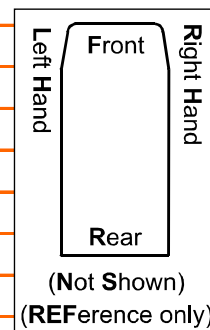

12—Doorless Panel with Electric Window

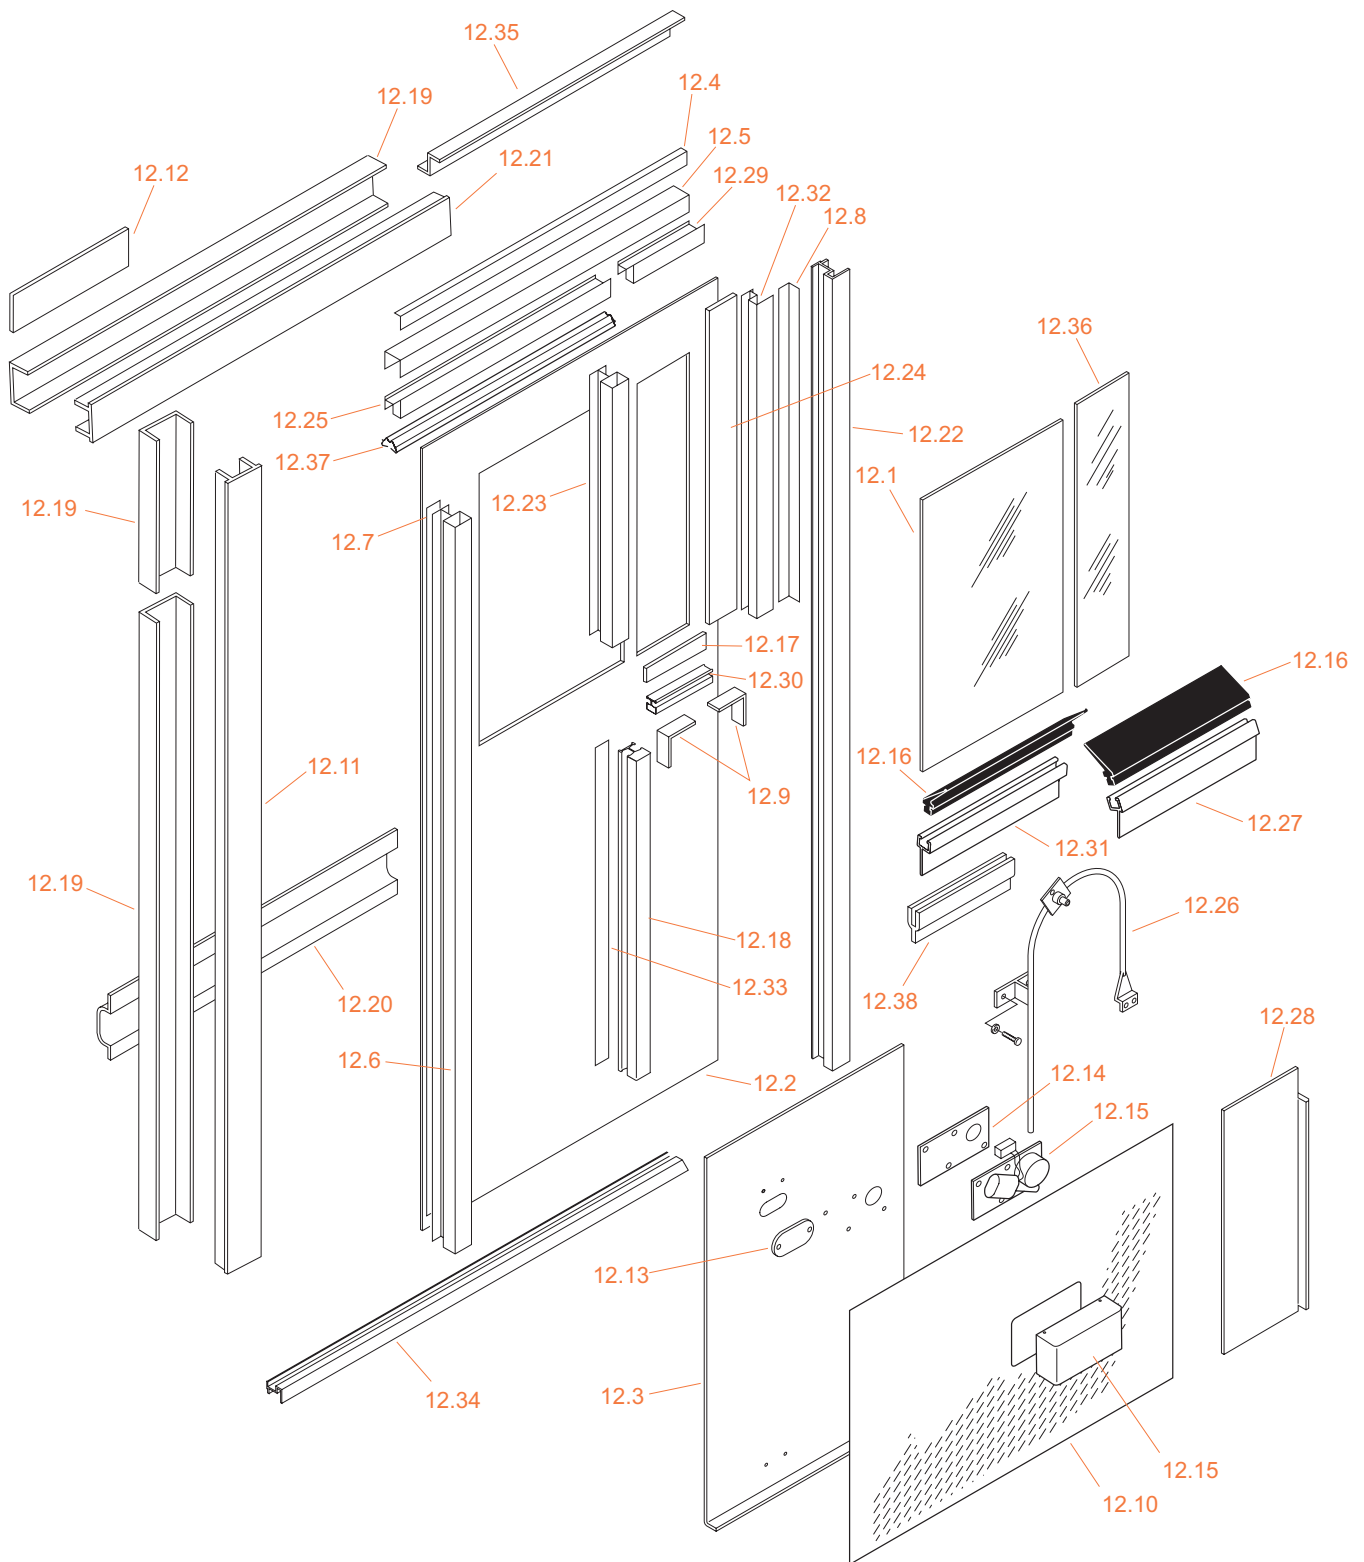


Doorless Panel with Electric Window

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

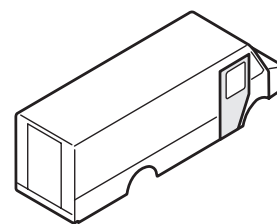


Item	Part Number	Description
12.0	W01024-EF34	DOORLESS LH W/PWR WDW
12.1	09080524	GLASS SD DR C/UP .156 x 23.38 x 33
12.2	06502900	PANEL EXT DRLS LH C/UP
12.3	06920845	PLATE WDO REG. DRLS ELECT LH
12.4	06013008-03462	IA4161 ANGLE
12.5	06013003-03462	ALUM EXT WALL STUD 090 IA3948
12.6	06014407	POST REAR DRLS 75.00 06003860
12.7	06503175	ALUM .100 x .875 x 74
12.8	06001975-03400	AE ANGLE 3/4 x 3/4 (.062) IA101
12.9	06631354	ANGLE WNDW FRM MNT FRT
12.10	54232656	LINER ASSY LH DRLS PNL POWER WINDOW
12.11	06013069-07550	IA4868 CAP 75.50 06013069
12.12	06915327	SPACER DD STIFFENER 3.0 x 9.5
12.13	06502577	PLATE ACCESS WINDOW REG
12.14	09801514	SPACER POWER WINDOW
12.15	09801513	WDW KIT POWER W/COVER
12.16	05705497	FLOCKED SEAL
12.17	06503178	ALUM .100 x .875 x 8.0 SHIM
12.18	06003860-03788	IAH1454 WDW POST 37.88 06003860
12.19	06013049	ALUM EXT RR DR OPENING IA4755 (SPECIFY LENGTH)
12.20	Match sidewall rubrail from Section 15.	
12.21	06013069-05275	IA4868 CAP 52.75 06013069
12.22	06916338	QTR POST DLH 06000260
12.23	06014406	POST UPR DRLS 33.75 06003860
12.24	06503177	ALUM .125 x 1.69 x 35.5
12.25	06003859-02256	AE WINDOW GUIDE IA7299
12.26	09301011	REGULATOR WDW SD LH
12.27	06850185-02256	IA7137 SEAL 22.56 06850185
12.28	06916336	PNL LWR DRLS C/UP
12.29	06003859-00832	AE WINDOW GUIDE IA7299
12.30	06003860-00832	IAH1454 WDW POST 8.32 06003860
12.31	06014415	DR SEAL OS LH 22.56 06850143
12.32	06012383	WDW GUID LH 32.34 06003859

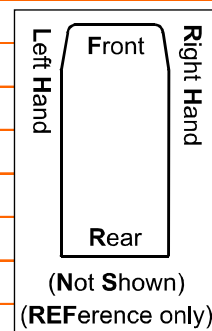

CONTINUED

12—Doorless Panel with Electric Window (continued)

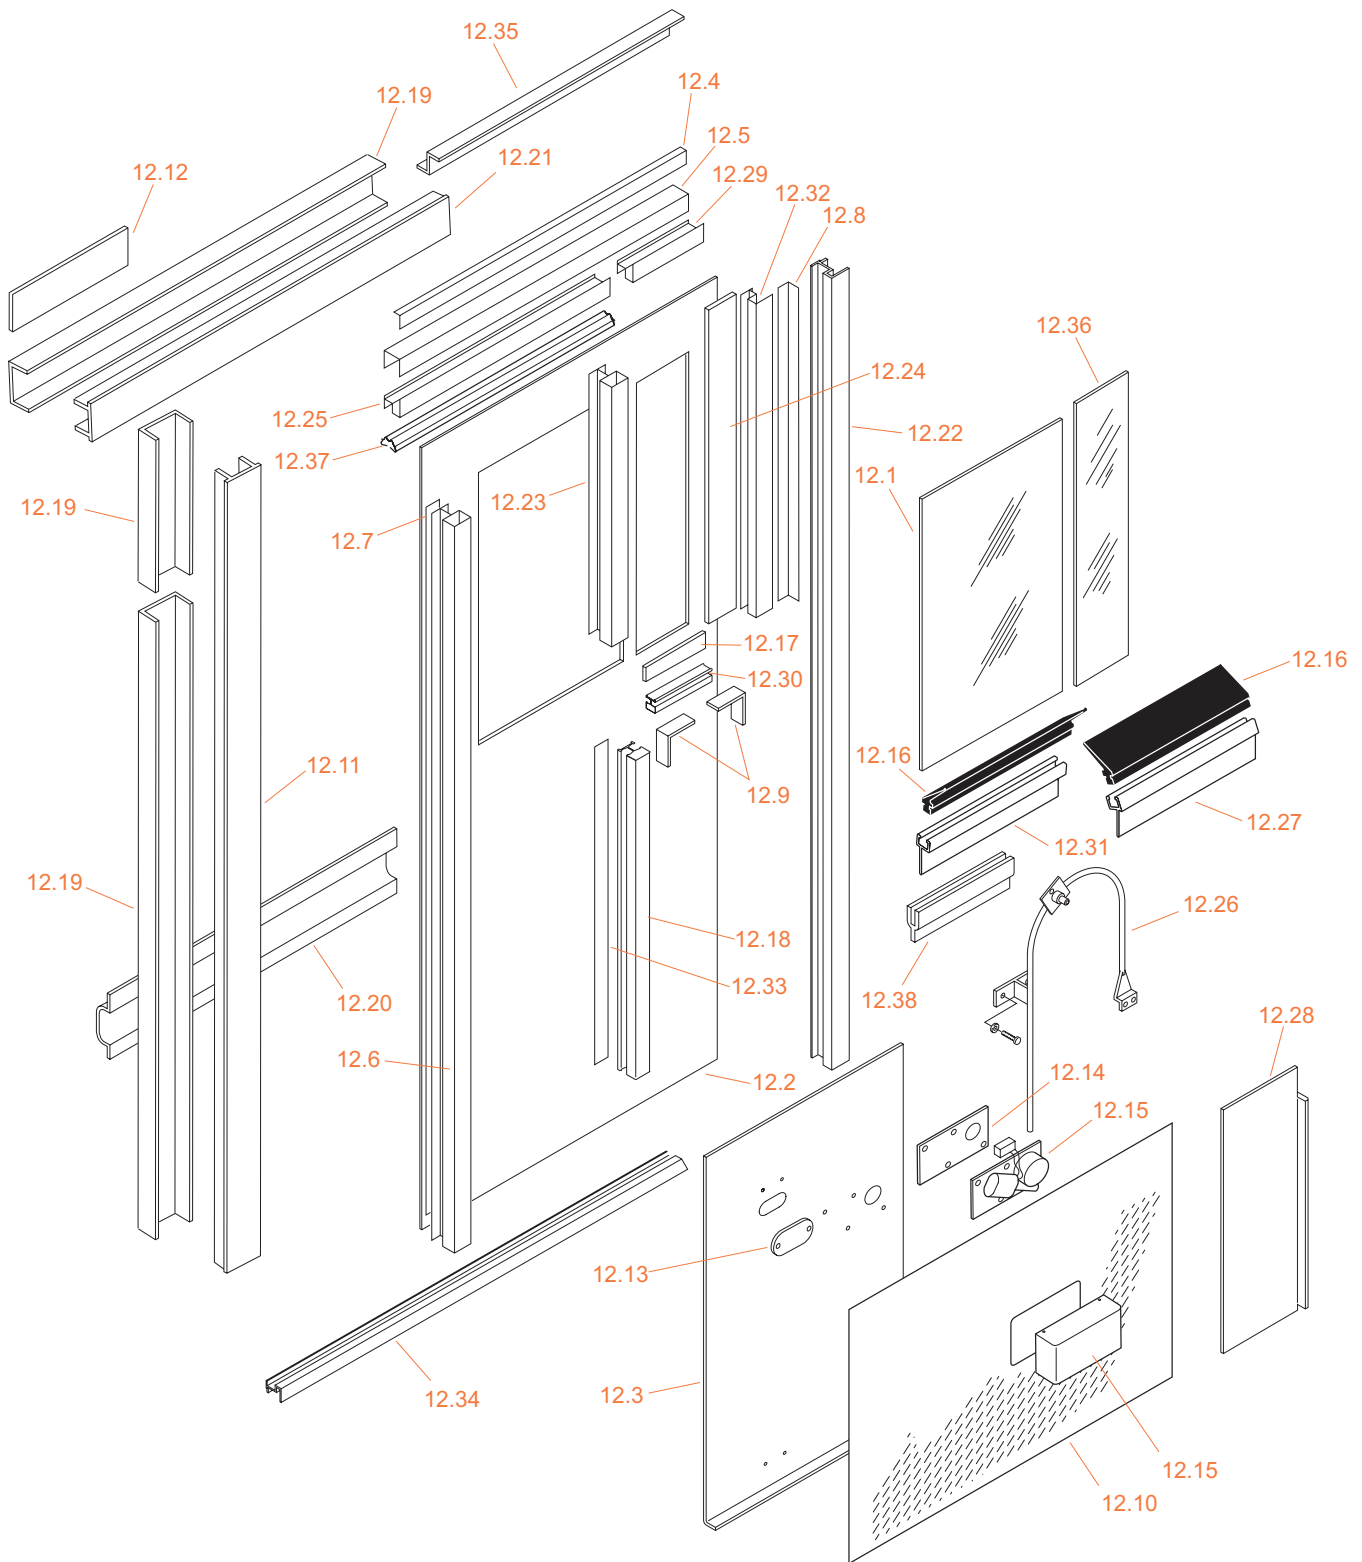


Doorless Panel with Electric Window

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

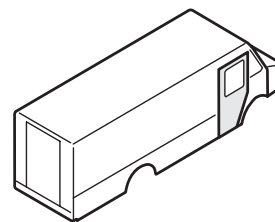

Item	Part Number	Description
12.33	06503176	ALUM .100 x .875 x 37.75 SHIM
12.34	06014440	THRES LH DD 06000260
12.35	06014439	DRIPRAIL LH DD 40" 06011300
12.36	09080546	GLASS DD RU STAT .188 x 9 x 31
12.37	12300662	W/STRIP GLASS CHNL 75000486
12.38.1	06910453	BRCKT WINDOW REGULATOR 06013103
12.38.2	12300703	TAPE 3/4" DBLE SIDE WINDOW
12.NS	14000625	CARPET GREY
12.NS	02100098	LUAN 5/32 48 x 96 3.6UL
12.NS	12300703	TAPE 3/4" DBLE SIDE WINDOW
12.NS	16512624	HARNESS POWER WINDOW
12.Ref	58231025	INSTALL POWER WINDOW REGULATOR
12.Ref	57231699	PANEL ASY DRLS LH C/UP
12.Ref	54232657	SIDE PANEL ASY DOORLESS POWER WINDOW
12.Ref	54232657	SIDE PANEL ASY DOORLESS POWER WINDOW
	See also <i>Utilimaster Quick Reference Parts Guide</i> .	

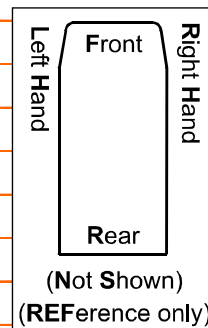

13—Cab Decals and Options

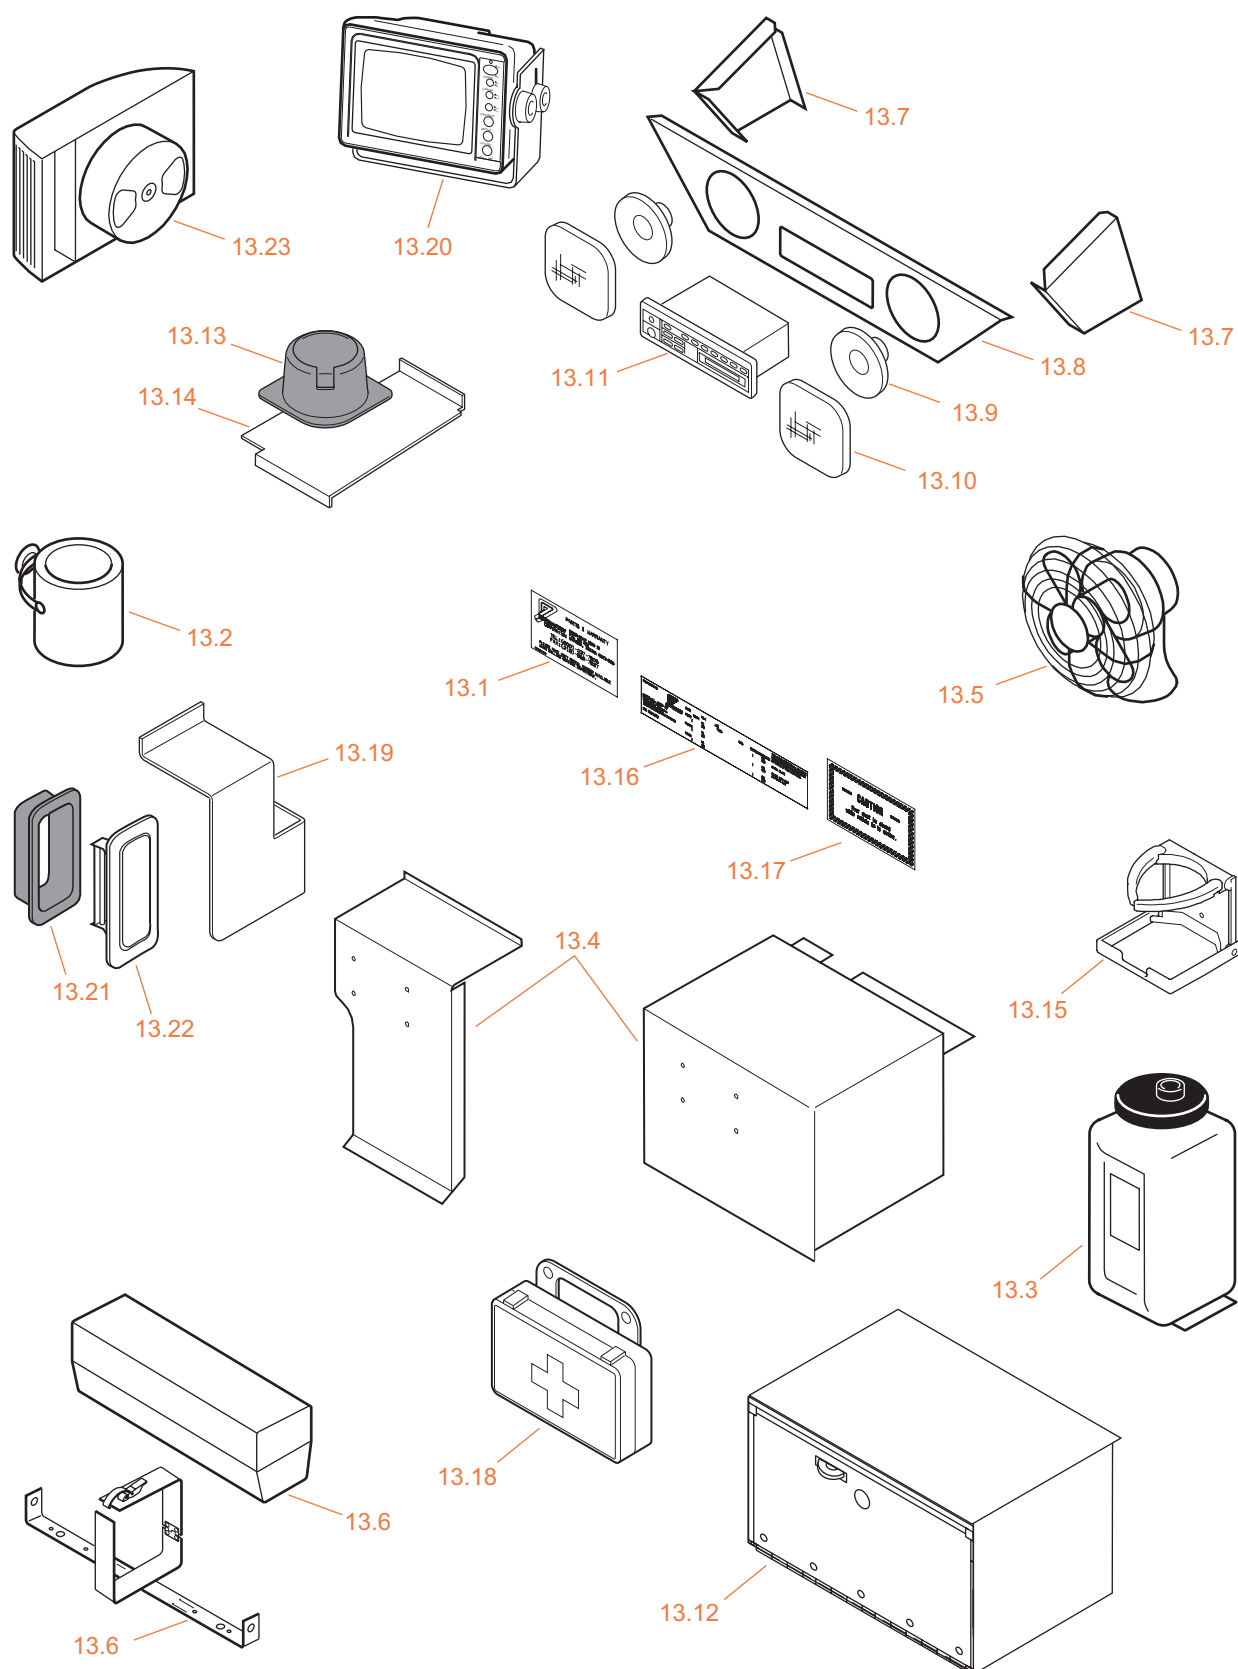

13—Cab Decals and Options

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)



Item	Part Number	Description
13.0		CAB OPTIONS
13.1	03101462	DECAL PARTS & WARRANTY 2.31 x 4.00
13.2	01800113	HOLDER CUP (PIVOT)
13.3	08610254	BTL WASHER ASY 1GL
13.4.1	06916876	COVER HTR MOTOR
13.4.2	22813966	COV A/C MOTOR W/PRINT BASKET MNT
13.4.3	11301401	SCREW 8 x 5/8
13.5.1	17013005	FAN W/SHLD FAN-TASTIC
13.5.2	17900815	FAN CHROME 3-WIRE 2-SPEED
13.6.0	15201720	REFLECTOR KIT TRIANGLE
13.6.1	22815691	BRKT TRIANGLE KIT
13.7 LH	06601691	MOUNT RADIO LH SIDE
13.7 RH	06601692	MOUNT RADIO RH SIDE
13.8.1	06919789	MOUNT RADIO
13.8.2	06916615	MOUNT RADIO FRONT DIN
13.9	17407102	SPEAKER 4" SQ AUDIOVEX
13.10	17400002	COV SPEAKER 4" SQ FLAT
13.11	BSNR	RADIO AM/FM
13.12.0	64236161	BOX ASY GLOVE 8.5 x 10 x 15
13.12.1	08706320	CHAIN VINYL COVERED
13.12.2	08704801	LOCK THUMB
13.13	20510396	CUPHOLDER ASSEMBLY (STATIONARY)
13.14.1	22815726	SUPPORT CUPHLDR 93.5W HYDR
13.14.2	22815638	SUPPORT CUPHLDR 93.5W W/HNDBRK
13.15	20510670	CUP HOLDER FOLD DOWN
13.16	BSNR	FEDERAL CERTIFICATION DECAL
13.17	03000823	DECAL CAUTION DOOR MUST BE CLOSED
13.18.1	21310610	KIT SAFETY
13.18.2	21310611	KIT FIRST AID
13.18.3	21310294	FIRST AID KIT(ENG/FRENCH)
13.19 LH	06919538	GUARD VENT LH HINGELESS
13.19 RH	06919539	GUARD VENT RH HINGELESS
13.20	BSNR	MONITOR BACK-UP SYSTEM
13.21.1	07100184	VENT TRIM RING 2.5"
13.21.2	07206225	VENT TRIM RING .69"
13.22	07100165	VENTILATOR 2-WAY ALUM 4 X 10
13.23	07206234	VENT POWER SCS
	See also Sections 8 and 18.	

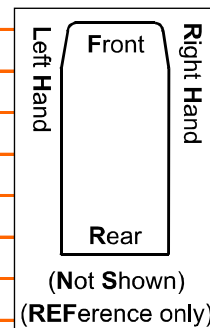

14—Bulkhead, Aluminum

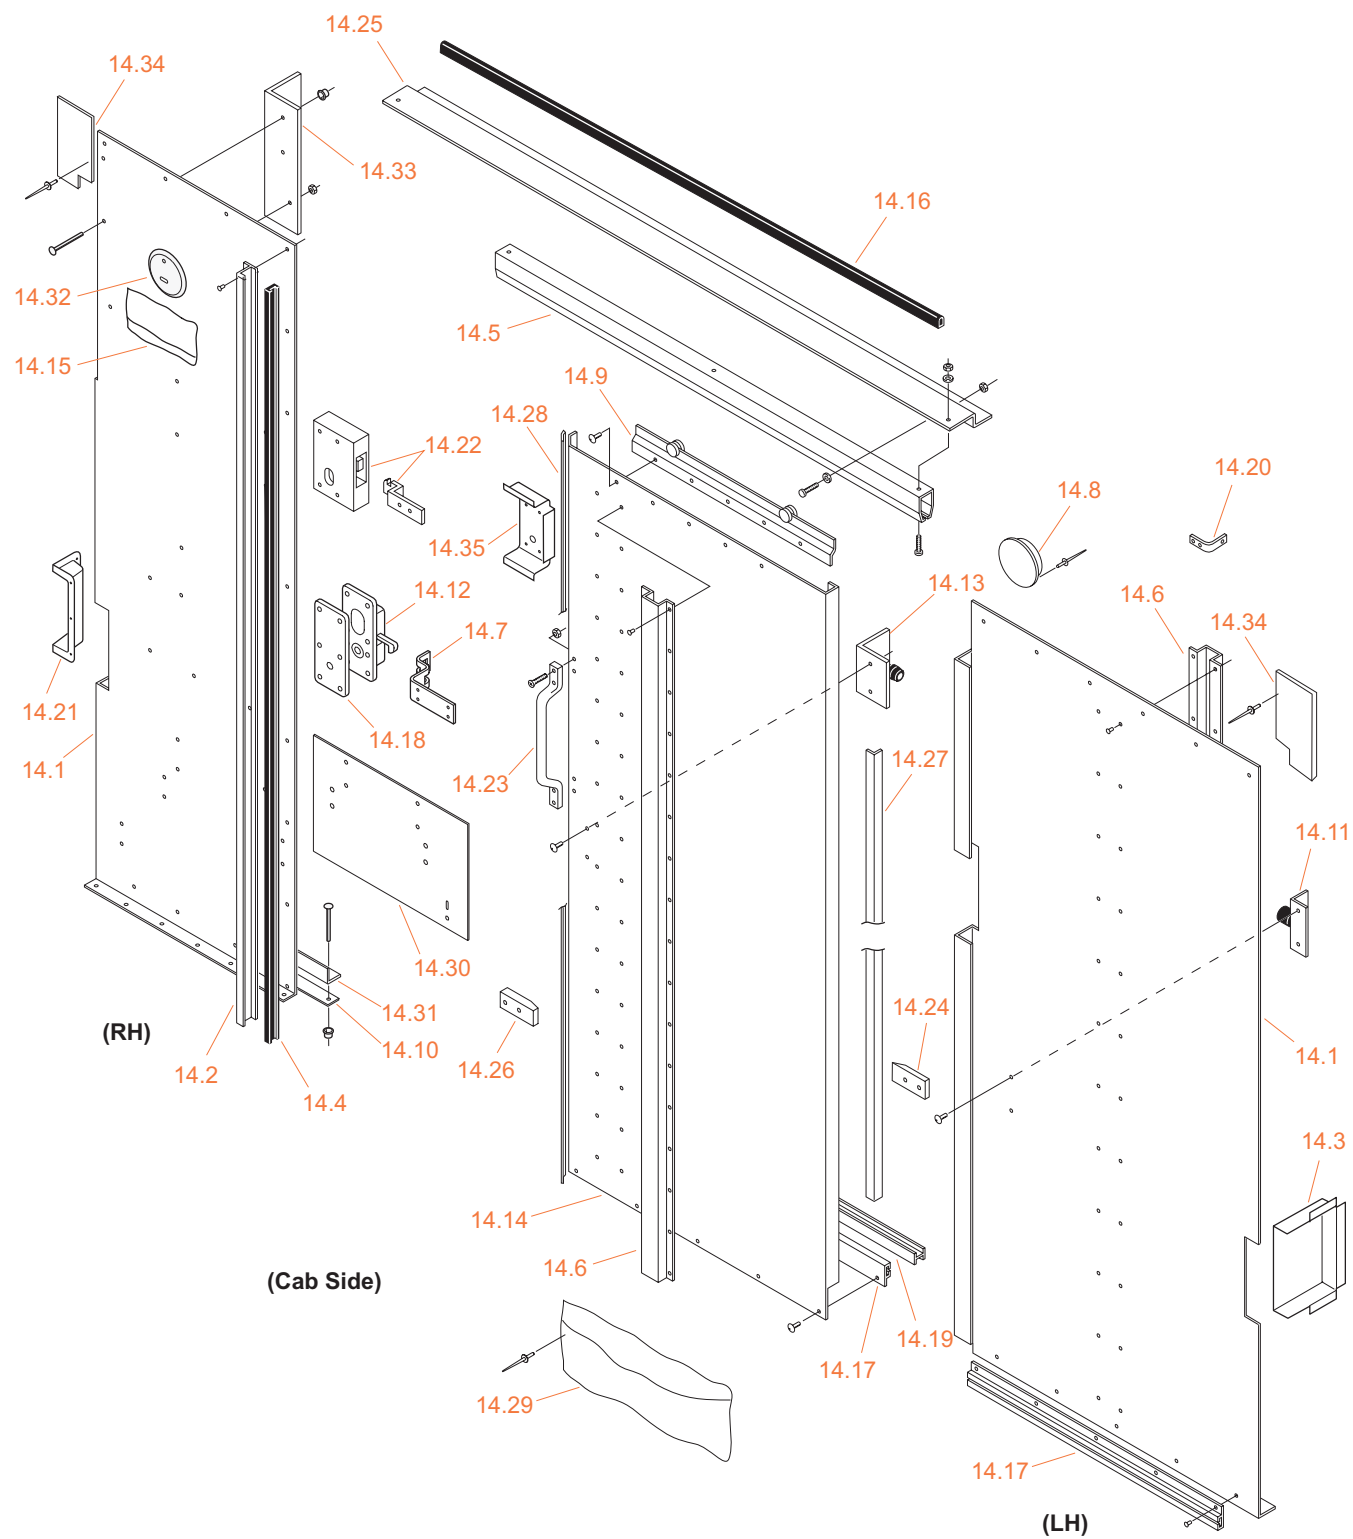


Bulkhead, Aluminum

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

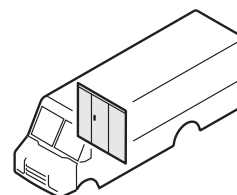


Item	Part Number	Description
14.0		BULKHEAD ASSY, ALUMINUM
14.1	Appendix 06914922	PANEL BULKHEAD
14.2	06013146-Length	W 11123 STOP (SPECIFY LENGTH)
14.3	06601644	COV WDW CRANK HANDLE A&B
14.4	05400214	SEAL B/HEAD 1"W (SPECIFY LENGTH)
14.5	08220043	TRACK BH DR 16GA x 60"
14.6	06002055-Length	IA 1215 HAT 06002055 (Specify Length)
14.7	22810336	BRACKET B/H DR LATCH
14.8	15202126	LIGHT KD 12V CARGO
14.9.1	08610489	ROLLER ASY BLKHD DR 21"
14.9.2	08610491	ROLLER ASY BLKHD DR
14.9.3	08610907	ROLLER ASY BULKHEAD DOOR 25.38"
14.10	06500964	ALUM .125 x 1.5 x 20
14.11	08610356	STOP ASY BH DR RECEPT (FEMALE ASSY)
14.12	08700278	LATCH DOOR LH EBERHARD
14.13.1	08610354	STOP ASY BH DR PLUNGER (SINGLE MALE ASSY)
14.13.2	08610355	STOP ASY BH DR PLUNGER (DOUBLE MALE ASSY)
14.13.3	08210026	DOOR HOLDER (HARD) (Plunger only)
14.14.1	06918167-Height	PNL BHD DR ENF II 28.38W x H
14.14.2	06921164-Height	DOOR AL BHD KEYS ENT H
14.14.3	06918168-Height	PNL BHD DR ENF II 31.88W x H
14.15	01800010	POUCH OBM DOCUMENT HOLDER
14.16.1	05705499	BULB SEAL 1-5/8 x 1 W/ADHSV
14.16.2	05705661-W	SEAL BULKHEAD W/ADHESIVE 80.00
14.17.1	06013189-03188	IA 5635 LWRBH 31.88 06013189
14.17.2	06921726	TRACK DOOR BOTTOM
14.18	06511269	SPACER LATCH 1/4" EBERHARD
14.19-22	08222000	GUIDE B/HD DR UHMW 'H' NTC 22"
14.19-30	20510113	GUIDE B/HD DR UHMW 'H' NTC 30"
14.20	06918209	BRA CE, UPPER BLKHD SUPPORT
14.21	20510538	COV SIDE DR LATCH BKHD POS PRS
14.22	08610352	LOCK BHD (ENFRCCR) ABLOY

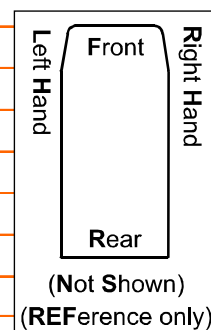

Continued

14—Bulkhead, Aluminum (continued)

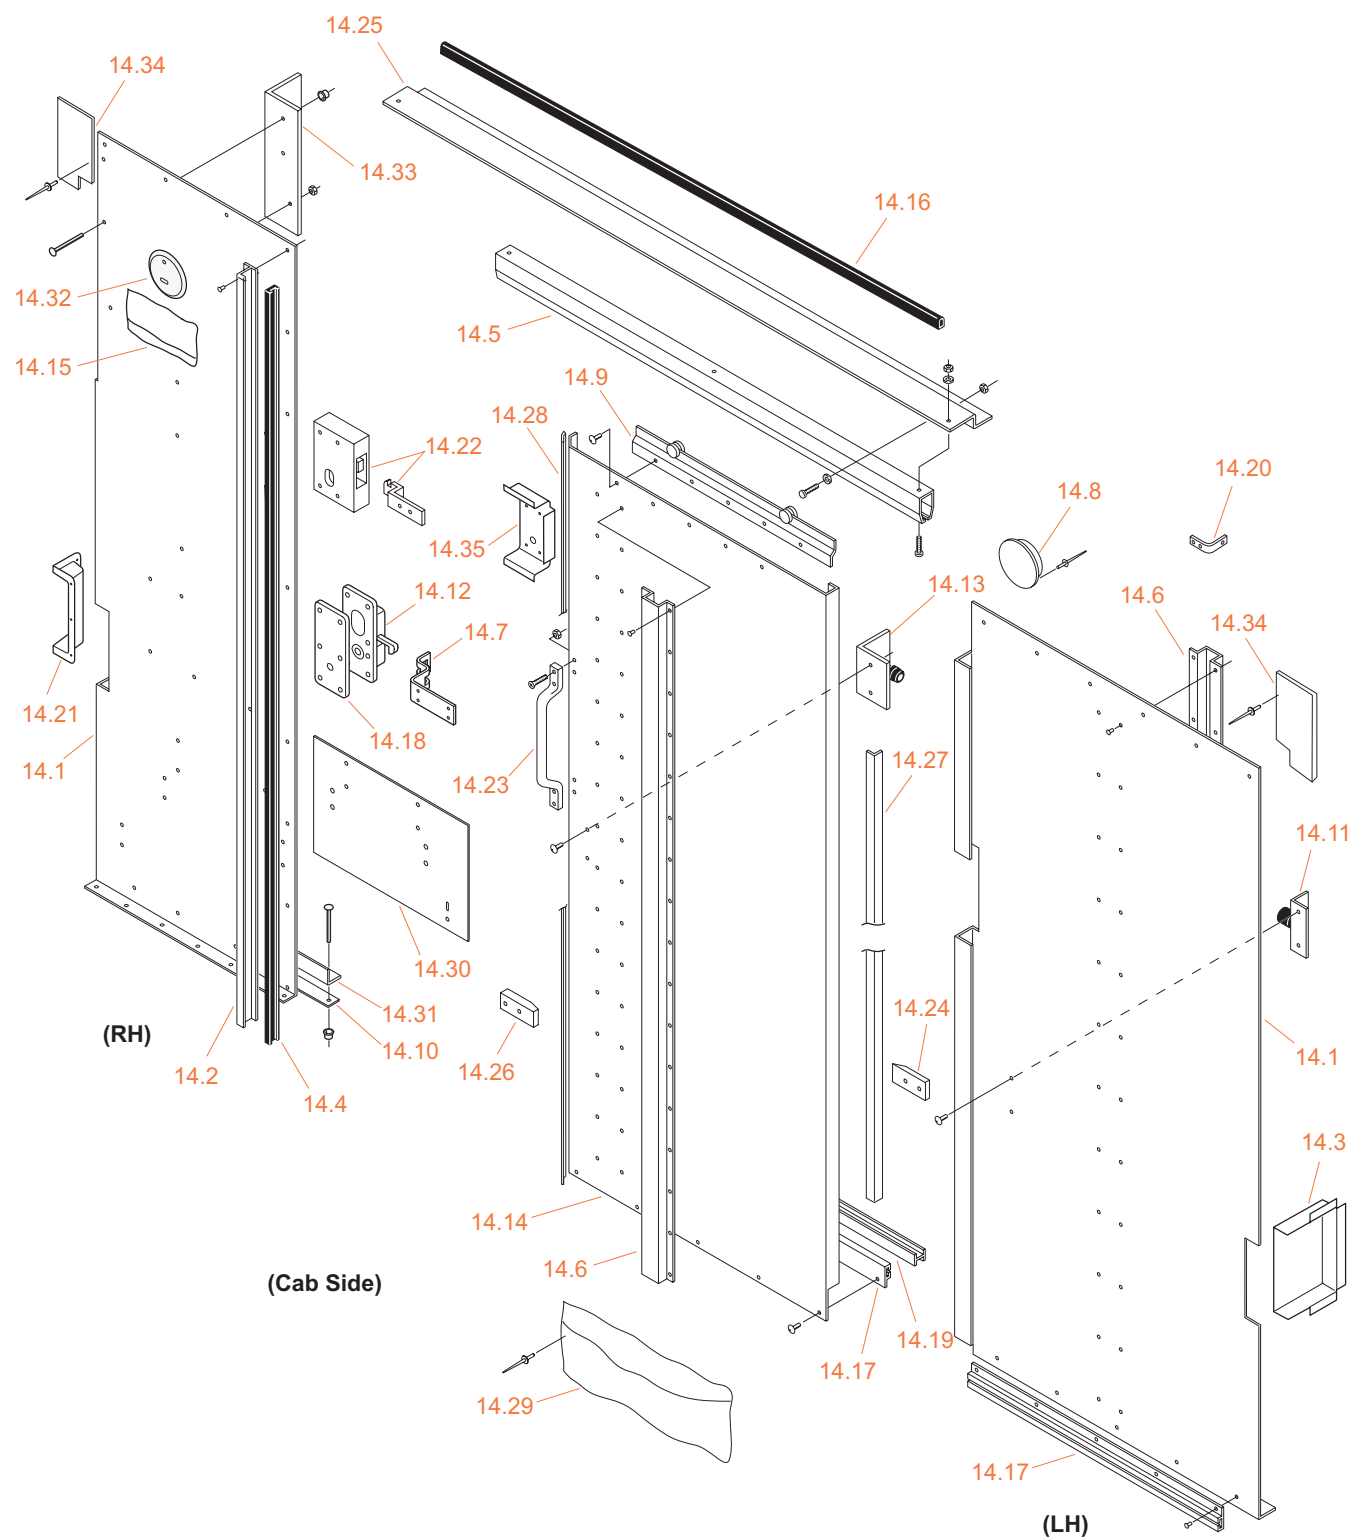


Bulkhead, Aluminum

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

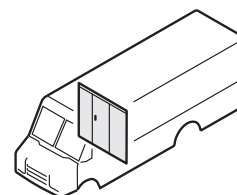

Item	Part Number	Description	Left Hand Front Rear Right Hand (Not Shown) (REFERENCE only)
14.23	08704347	HANDLE ALUM GRAB	
14.24	20510411	SHIM B/H NYLON SPACER-NOISE	
14.25	06000727-Length	IA8597 BH BRACE (SPECIFY LENGTH)	
14.26	20510403	PAD NYLON B/HEAD SHIM	
14.27	06002048	IA3299 ANGLE (SPECIFY LENGTH)	
14.28	06013008-Length	IA4161 ANGLE (SPECIFY LENGTH)	
14.29.1	13672408	POUCH VIR	
14.29.2	01902068	POUCH DOCUMENT	
14.29.3	11401222	RIVET POP BLACK	
14.30	06918099	REINFORCEMENT JSEAT BH/MNT	
14.31	06002050-Length	AE ANGLE .125 x 1.5 x 1.5 IA637	
14.32	16512777	READER ACCESS KYLS ENTRY	
14.33	06014417	ANGLE W/4 HOLES B/H 12.00 06002037	
14.34 LH	22814651-Height	FILLER BHD SIDE SLIDE LH (SPECIFY UNIT HEIGHT)	
14.34 RH	22814650-Height	FILLER BHD SIDE SLIDE RH (SPECIFY UNIT HEIGHT)	
14.35	06919180	BRACKET BLKHD DOOR LATCH (KYLS)	
14.NS	14000625	CARPET, 1 SQ YRD	

14—Bulkhead, Aluminum (continued)

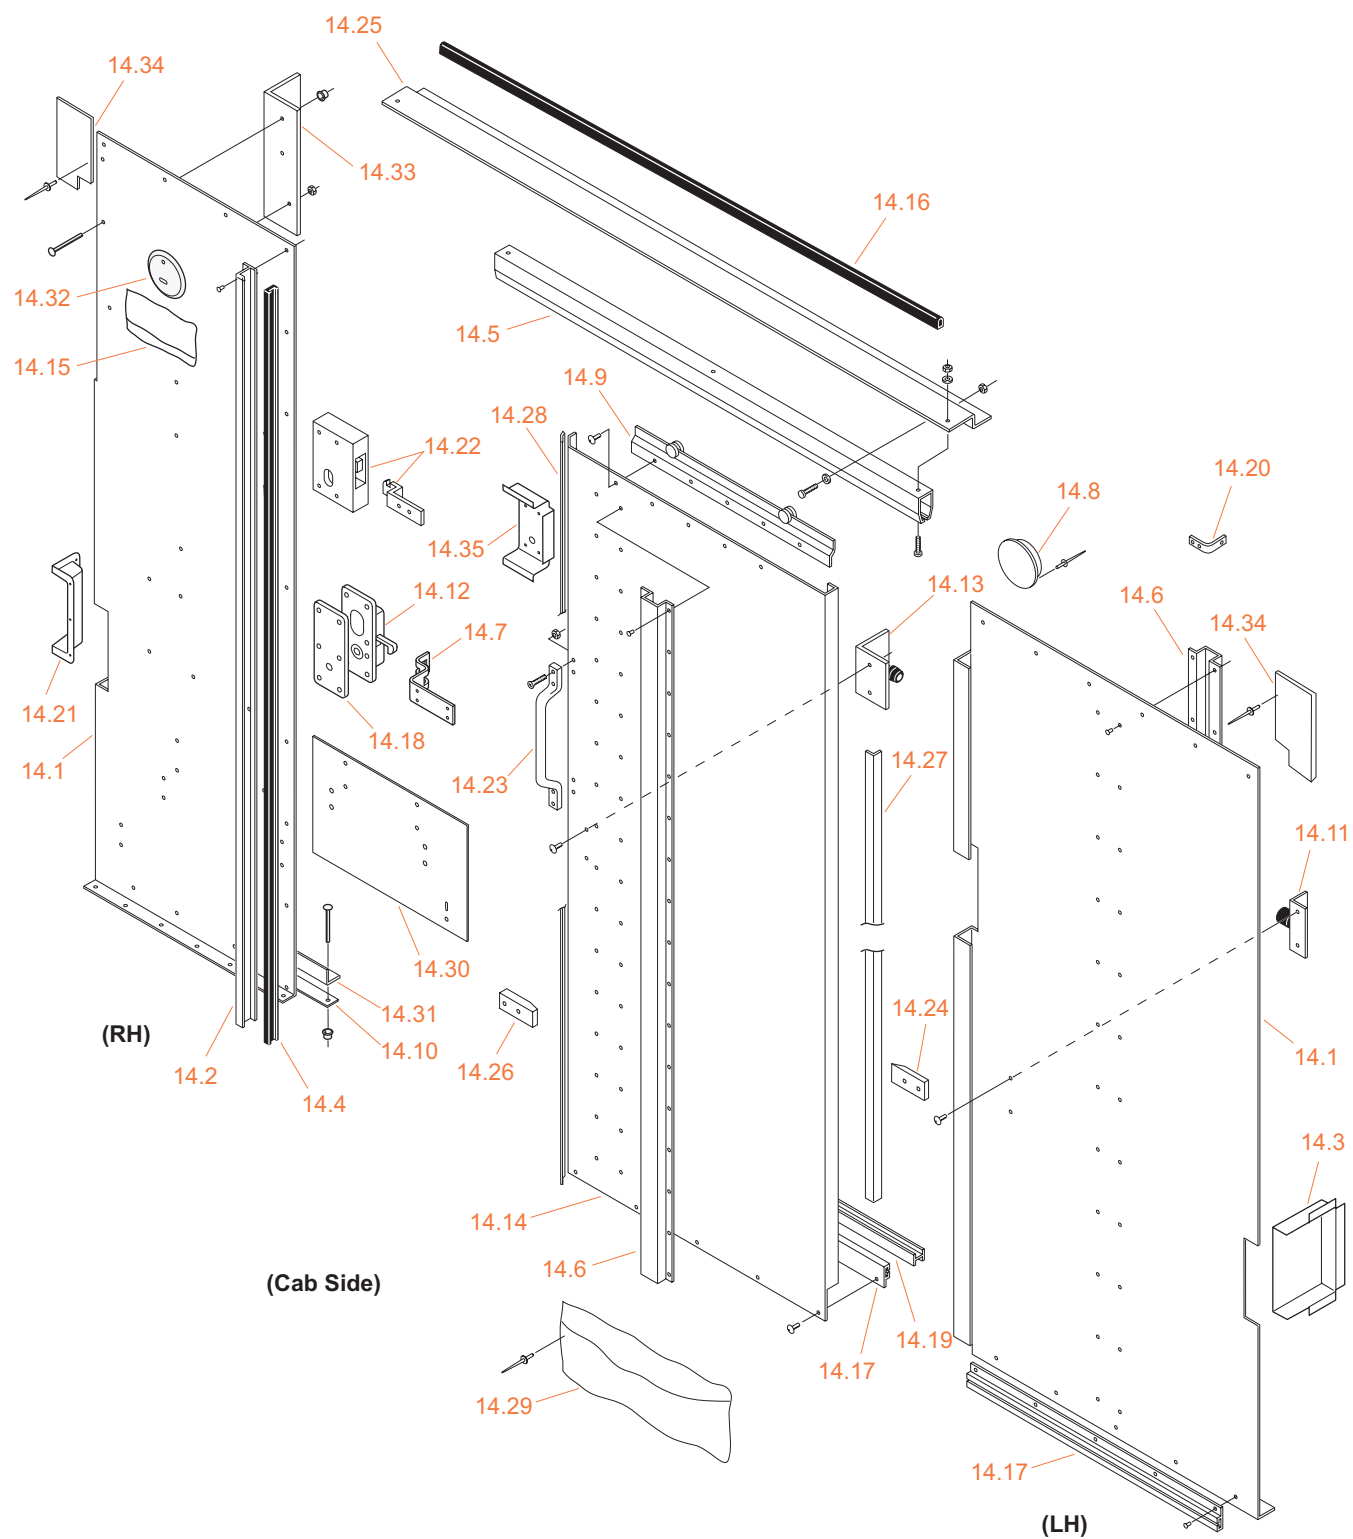


Bulkhead, Aluminum

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

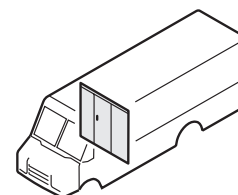

Item	Part Number	Description
14.Ref	54232251	SEAL B/HD II KIT SL/SL
14.Ref	57231989	DOOR ASY ALUM BHD II
14.Ref	57231719	DOOR ALUM BHD STD OPENING CHART
14.Ref	54231887	DETAIL, R-38 HRDWR
14.Ref	54232235	DETAIL-BHD TRACK ALUM
14.Ref	54232241	ALUM BHD II W/JS SL/SL
14.Ref	54231896	BH 78.5 x 73 30" AL SL/SL KSN
14.Ref	54231897	BH 78.5 x 73 AL 50/50 SL/SL KSN
14.Ref	54231898	BH 78.5 x 73 STD SL/SL KSN W/JS
14.Ref	54231899	BH 78.5 x 73 AL 1/2 LH SIDE SL
14.Ref	54231900	BH 78.5 x 73 AL RH SIDE SL WO/JS
14.Ref	54231902	DETAIL-FINGER PULL INSTL
14.Ref	54231965	BH 78.5 x 73 STD SL/SL KSN WO/JS
14.Ref	54232007	BH 78.5 x 73 AL LH SIDE SL SMALL
14.Ref	54232820	ASSY ALUMINUM BULKHEAD
14.Ref	54231886	DETAIL LOWER BLKHD DR ALUM A&B
14.Ref	54231875	DETAIL, BULKHEAD TRACK PROFILE
14.Ref	54231888	DETAIL-KASON HDW INSTL 30-36
14.Ref	54231889	DETAIL-EBERHARDT HDW 30-36
	See also Section 11 for bulkhead mounted jump seat.	

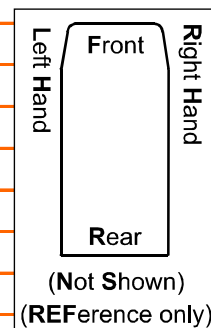

14—Bulkhead, Blandex

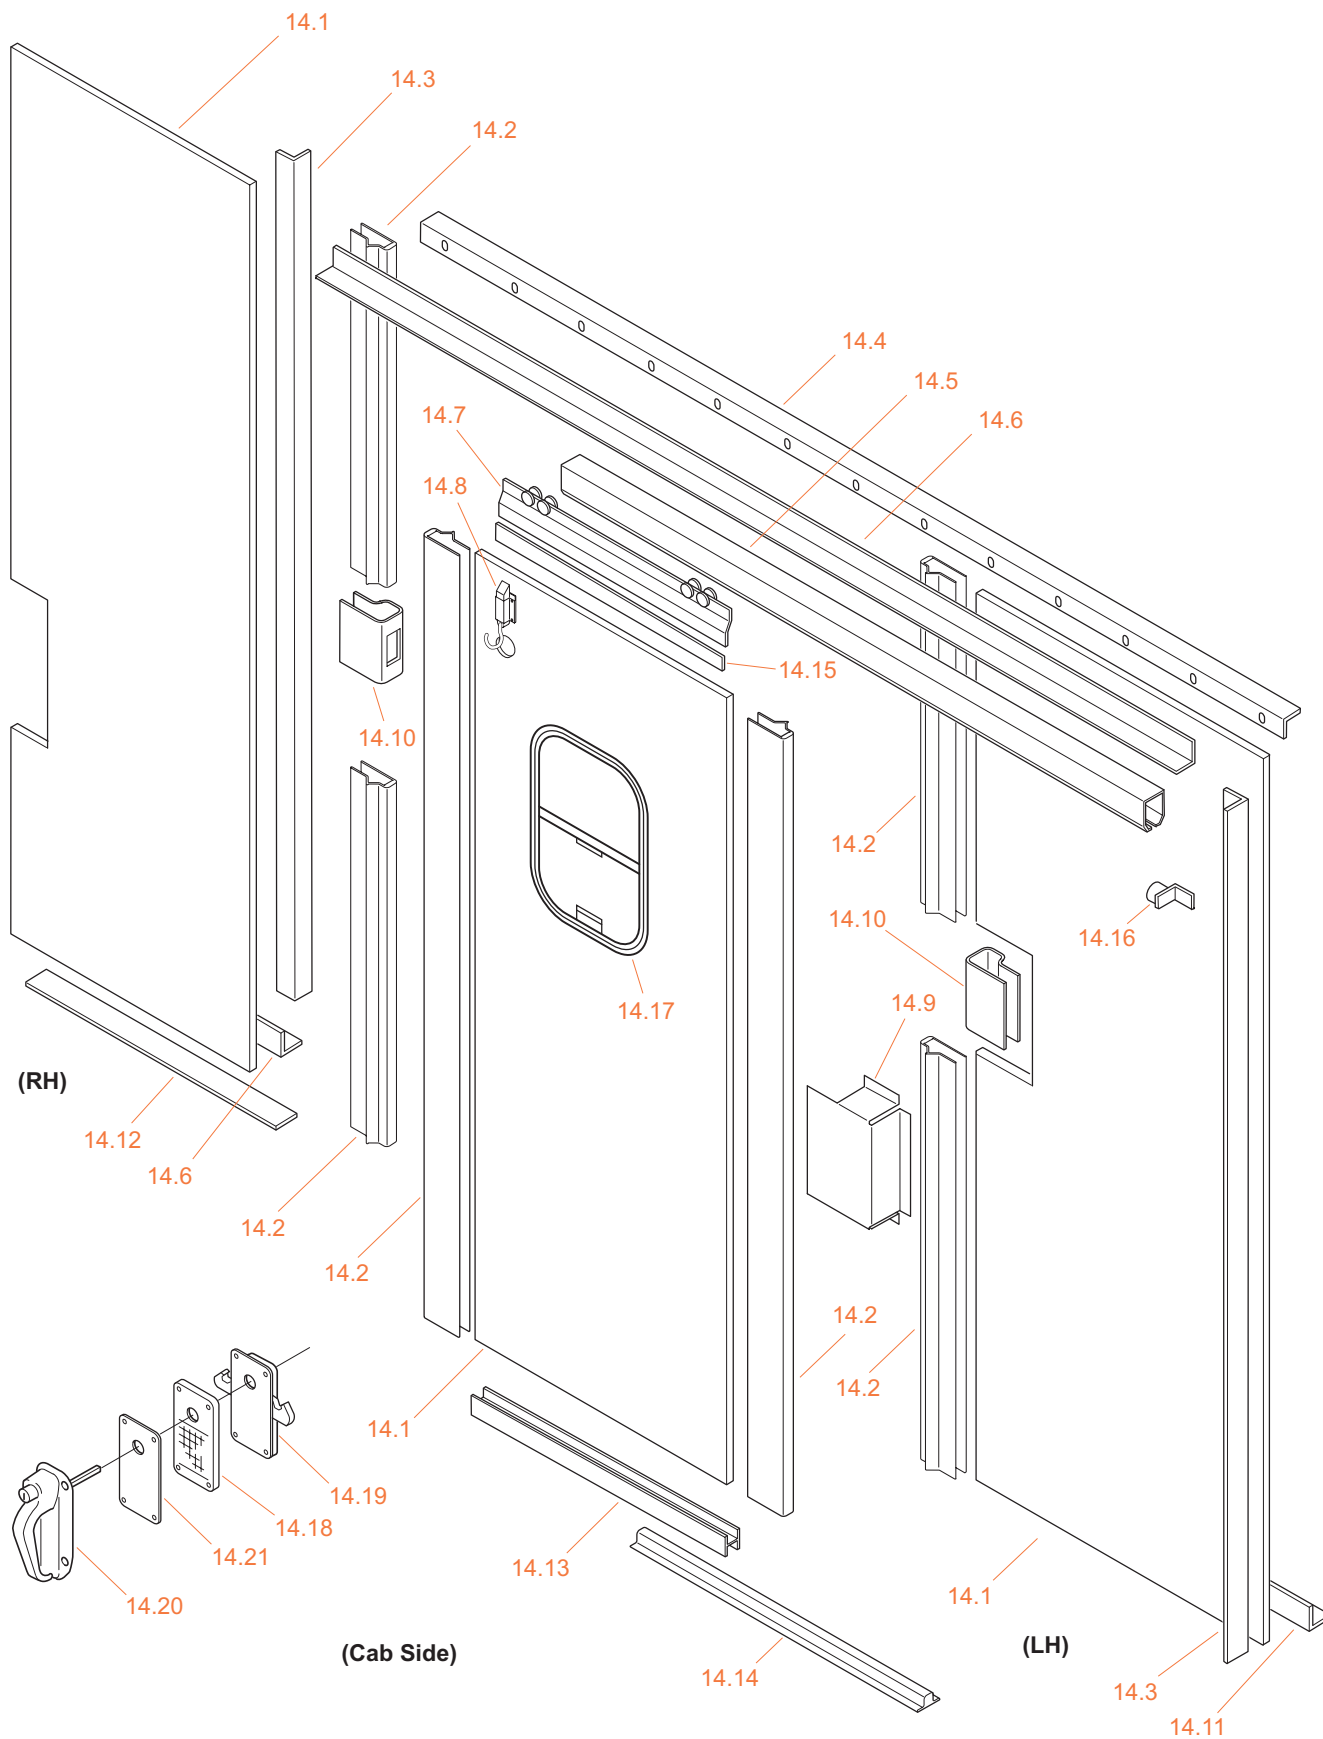


Bulkhead, Blandex

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

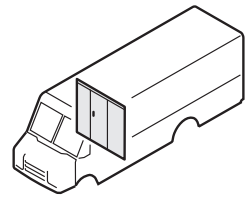

Item	Part Number	Description
14.0		Aluminum Clad (Blandex) Bulkhead
14.1	02101208	BLANDEX .44 x 48 x 96 (BLANK)
14.2	06013164-Length	ALUM EXT B/H DR SEAL IA 5349 (SPECIFY LENGTH)
14.3	06002049-Length	AE ANGLE 1.5 x .188 IA 2072 (SPECIFY LENGTH)
14.4.1	06915617-Length	BRACE BHD TOP RR W \SEALED (SPECIFY LENGTH)
14.4.2	06601808-Length	BRACE BHD TOP RR (SPECIFY LENGTH)
14.5.1	08220155	TRACK BHEAD DR 16GA x 48" 78.5W
14.5.2	08220043	TRACK BH DR 16GA x 60" 86.5W & 93.5W
14.6	06002050-Length	AE ANGLE .125 x 1.5 x 1.5 IA 637 (SPECIFY LENGTH)
14.7.1	08610489	ROLLER ASY BLKHD DR 21"
14.7.2	08610491	ROLLER ASY BLKHD DR 25.38"
14.8.1	08700317	BOLT OFFSET FLUSH
14.8.2	08700318	HOOK 4"
14.9	06601644	COV WDW CRANK HANDLE
14.10	08401240	CATCH B/H LOCK 1"W
14.11	06002050-Length	AE ANGLE .125 x 1.5 x 1.5 IA 637 (SPECIFY LENGTH)
14.12	06500964	ALUM .125 x 1.5 x 20
14.13	06013110-Length	ALUM EXT BTM B/H DR IA 5129 (SPECIFY LENGTH)
14.14	06000270-Length	AE GUIDE RAIL SOLID IA 7467 (SPECIFY LENGTH)
14.15	06918053	SHIM AL BHD .125 x 1.5 x 2.12 W/HLS
14.16.0	54231986	STOP ASY BHD DOOR
14.16.1	08210016	STOP RUBBER FOR SLIDING DOORS
14.17.0	09801612	WDO 18H x 12W VERT SLDR W/SCRN
14.17.1	09081613	TRIM RING
14.18	08610374	SHIM DR .544 x 5.5 x 2.5
14.19	BSNR	INTERIOR HANDLE
14.20	BSNR	EXTERIOR HANDLE
14.21	01700696	SHIM DOOR .25 x 5.50 x 2.5
14.NS	11001401	SCREW 1/4-20 x 11/16 PAN TORX
14.NS	11007502	T-NUT 1/4-20 x 7/16
14.NS	05402091	SEAL DOOR
14.Ref	57233158	INSTL BLANDEX BH DR WDO 18H x 12

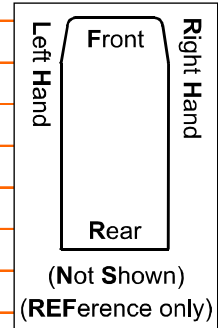

14—Bulkhead, Surge Bars

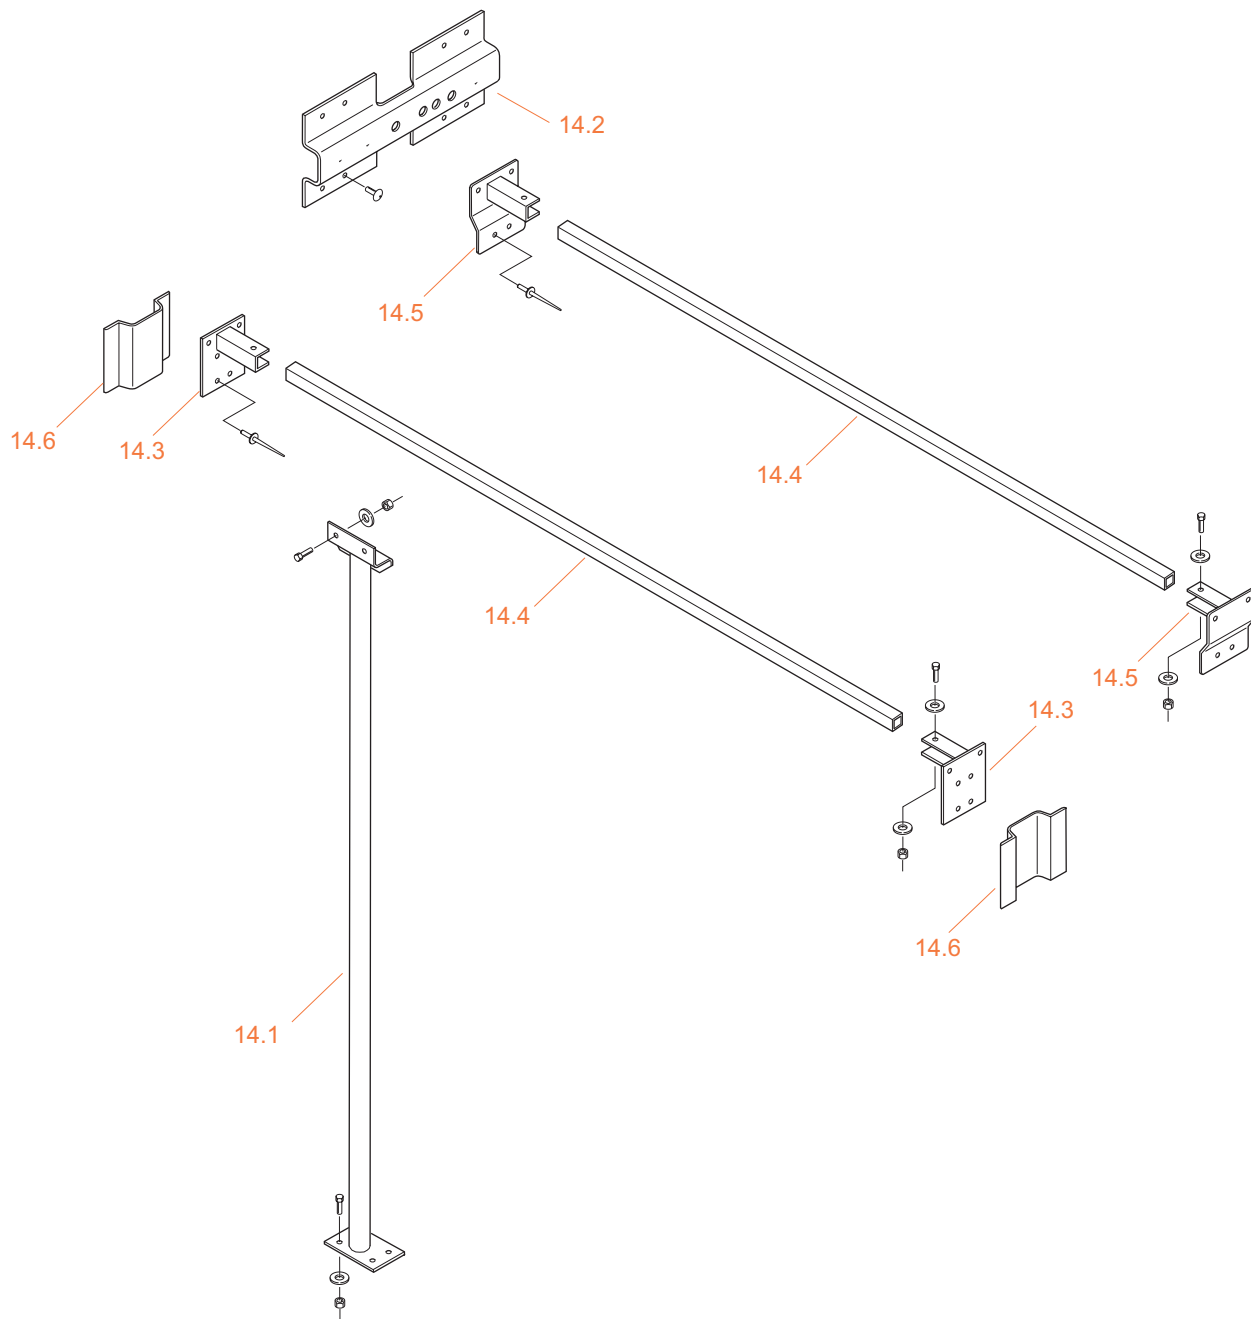


Bulkhead, Surge Bars

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

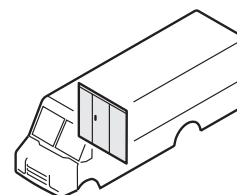

Item	Part Number	Description
14.0		Surge Bars
14.1.1	22813632-Height	WELDMENT,SURGE PIPE 1" (SPECIFY UNIT HEIGHT)
14.1.2	22816060	PIPE WLDMT SURGE 1"ID W/FLR OVERLAY 85"H
14.2	06920547	SPACER SURGE BAR
14.3 LH	22816062	BRACKET WLDMT SURGE BAR LH
14.3 RH	22813638	BRACKET WLDMT SURGE BAR STD
14.4	22200639-Length	TUBE 11GA x 1.5 x 1.5 PAINTED (SPECIFY LENGTH)
14.5	22816036	BRACKET WELDMENT SURGE BAR H/DUTY
14.6	06000142-Length	AE RUBRL IA6964 W14875 STD (SPECIFY LENGTH)
14.Ref	54232292	SURGE BAR ASSY

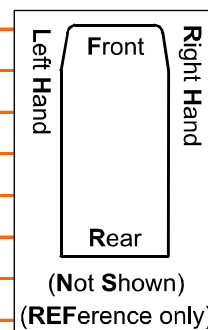

15—Sidewalls

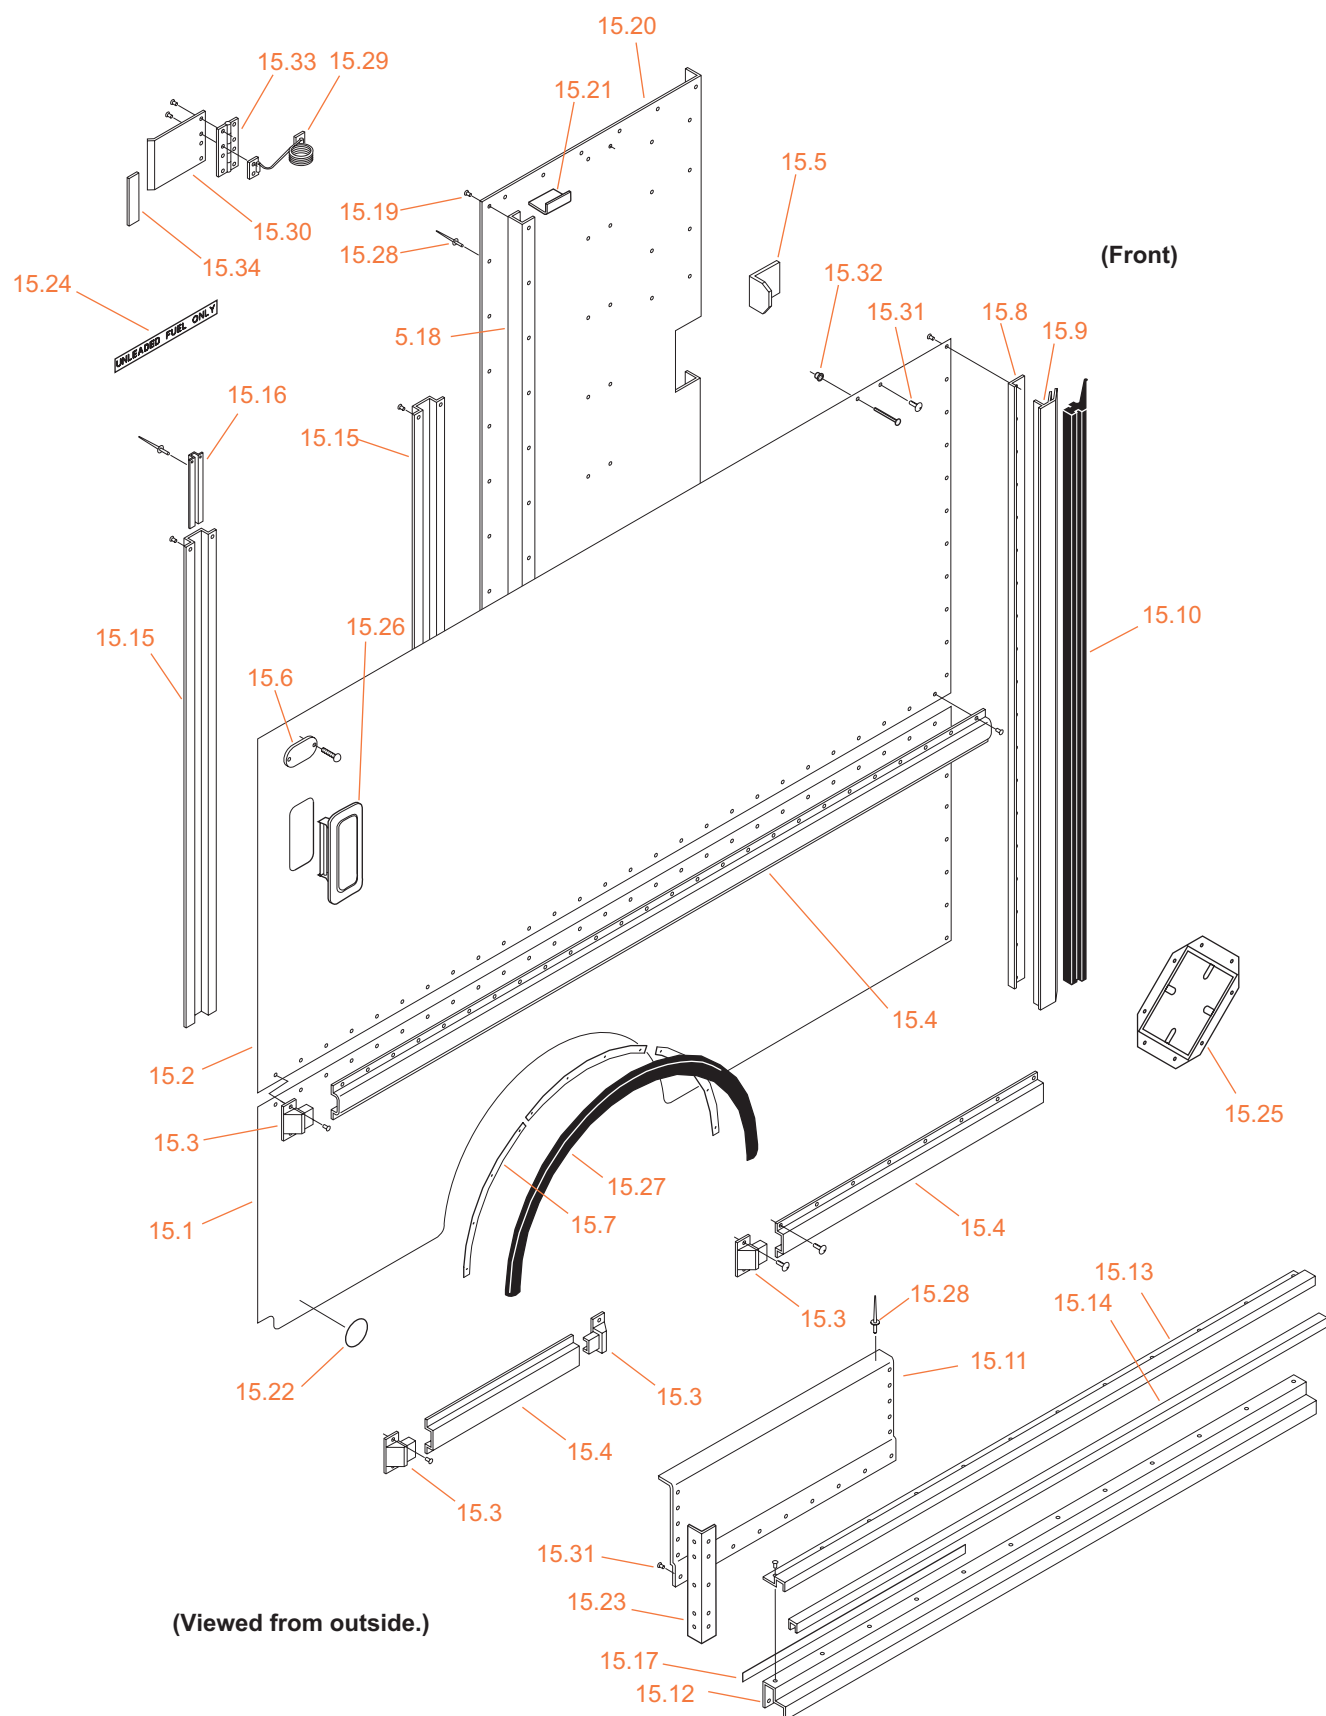


Sidewalls

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

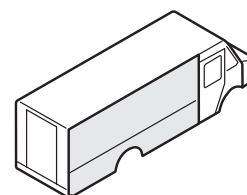


Item	Part Number	Description
15.0		SIDEWALL ASSEMBLY
15.1	BSNR	LOWER METAL .125 x 34 x Length
15.2	BSNR	UPPER METAL .100 x 57 x Length
15.3	06909455	CASTING, RUBRAIL END W/RADIUS
15.4	06000142	RUBRAIL, IA 6964 RAIL (SPECIFY LENGTH)
15.5	06850357	FILLER RAD RUBRAIL
15.6.0	See Section 16	LIGHT CLRNC RED
15.6.1	11300206	SCRW 8 x 1"
15.6.2	11600002	SCREW CAP BLK.137 x 3/4
15.7.0	06916847	TRIM W/W .125 x 20
15.7.1	11600614	RIVET S.STEEL 3/16
15.8	06001991-Length	IA 6001 ANGLE (SPECIFY LENGTH)
15.9	06000847-Length	AE SIDEWALL ANGLE CAP IA 9342
15.10	05705497	SEAL SIDE DOOR "FLOCKED"
15.11	06601725	DR POCKET LOWER
15.12	06003908-Length	IA 8055 DOORWAY (SPECIFY LENGTH)
15.13	06000789-06000	IA 9219 LWR GUIDE HLDR 60.00 06000789
15.14	08610737-06000	GUIDE SLIDING DOOR LOWER 60"
15.15.1	06000142-Length	W 14875 STANDARD STUD (SPECIFY LENGTH)
15.15.2	06013065-Length	IA 4860 HEAVY DUTY STUD (SPECIFY LENGTH)
15.16.0	06000768-01200	IA 9140 GUS RR STUD HD 12.00 06000768
15.16.1	11400023	MAGNA-LOCK 1/4" STL
15.16.2	11600108-0310H	RIVET BR HD 3/16 x 5/8
15.17	06913452	ALUM .125 x .88 x 29.5
15.18	06000645-Length	DR PKT CHNL, IA 7918 TRACK (SPECIFY LENGTH)
15.19	11600108-0309H	RIVET BR HD 3/16 x 9/16
15.20	BSNR	INSTL SHELF DR PKT
15.21	06601720	FILLER DP STUD UPPER
15.22	16200034	REFLECTOR RED TAPE ROUND
15.23	06002050-Length	IA 637 ANGLE .125 x 1.5 x 1.5 (SPECIFY LENGTH)
15.24	03000607	DECAL UNLEADED FUEL ONLY
15.25.1	03102159	CLIPS (ONLY) PLACARD
15.25.2	03101863	PLACARD HAZMAT SOLID
15.25.3	03101390	PLACARD FRM HAZMAT STD KT BASE
15.25.4	03101872	PLACARD HAZMAT SOLID
15.25.5	11401221	RIVET FW 3/16 x 1/4-1/2

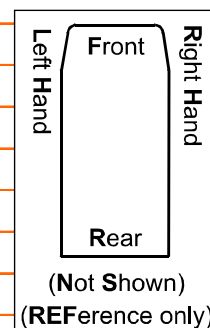

Continued

15—Sidewalls (continued)

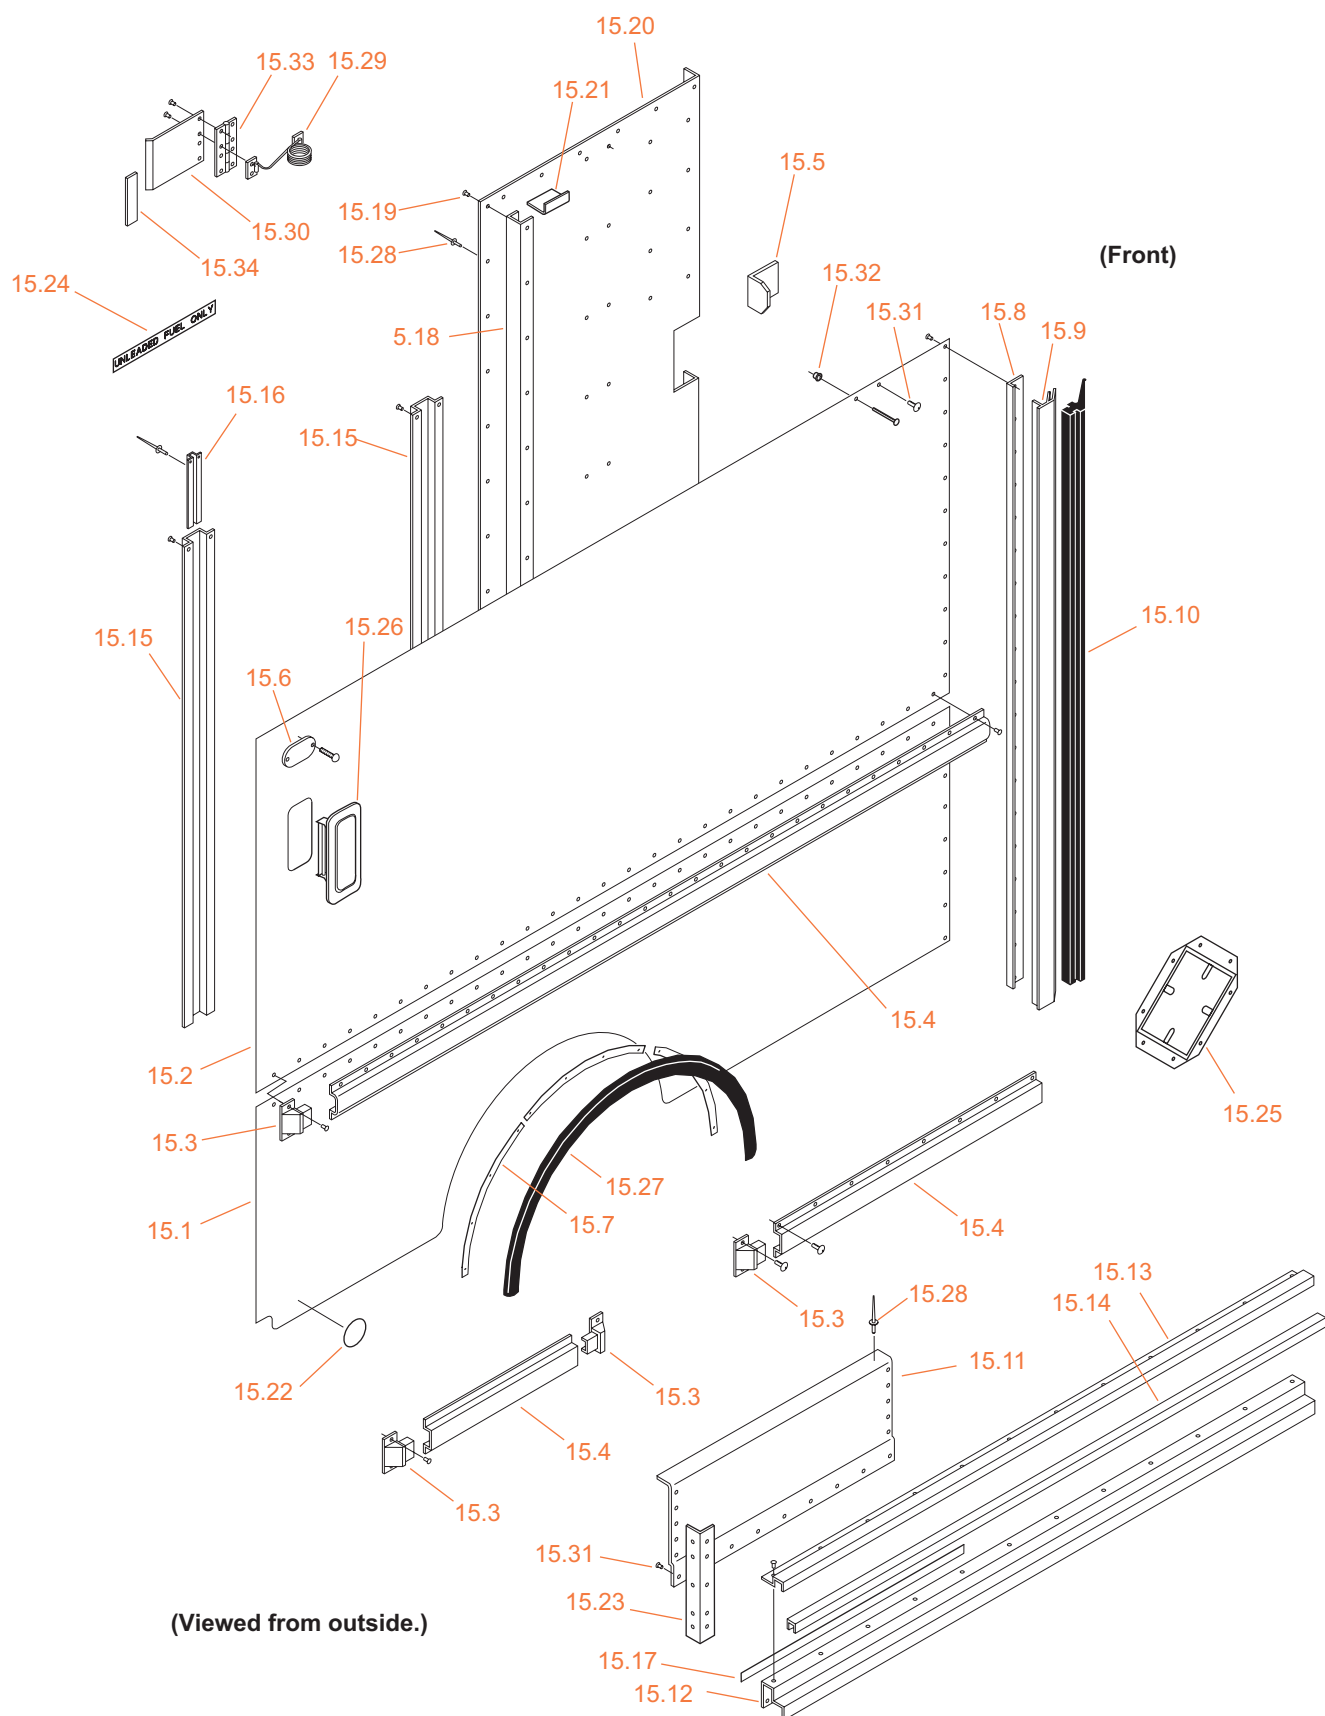


Sidewalls

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

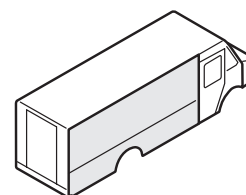

Item	Part Number	Description
15.26.0	07100165	VENTILATOR 2-WAY ALUM
15.26.1	11600108-0308S	RIVET BR HD 3/16 x 1/2
15.27	01303591	FENDERSKIRT RUBBER
15.28	11400023	MAGNA-LOCK 1/4" STL
15.29	08610524	CLOSER DOOR FUEL
15.30	BSNR	DOOR FUEL FILL
15.31	11600108-0308H	RIVET BR HD 3/16 x 1/2
15.32.1	11404001	HUCK MAGNA-GRIP COLLAR
15.32.2	11400051	HUCK TRUSS HEAD
15.33.1	08705184	HINGE 063AL 1 x 1 x 6.25
15.332	08705196	HINGE 063AL 1 x 1 x 7.75
15.34.1	06919710	STOP GAS FILL DOOR
15.34.2	12300537	TAPE BLK 1/16 x 1" x 54' ROLL
15.Ref	53234475	INSTAL FENDER FLARE
15.Ref	57233022	INSTALLATION DOOR POCKET
15.Ref	53234211	ASSY INST SIDEWALL TO ROOF RAIL
15.Ref	53234176	D-SWALL VENT RH UPR RR W/STOP
15.Ref	53233019	FUEL FILL CUT-OUT LOCATION
15.Ref	53234260	INSTL, REAR STUD/ROOF GUSSET-CHART
15.Ref	53233073	WHEELWELL CUTOUT LAYOUTS
15.Ref	53232374	D-SWALL, LOWER SH REAR NOTCH

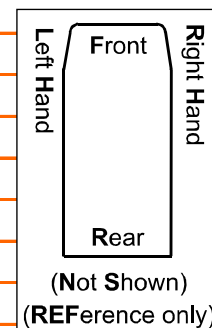

16—Rear Structure, Narrow Swing Doors

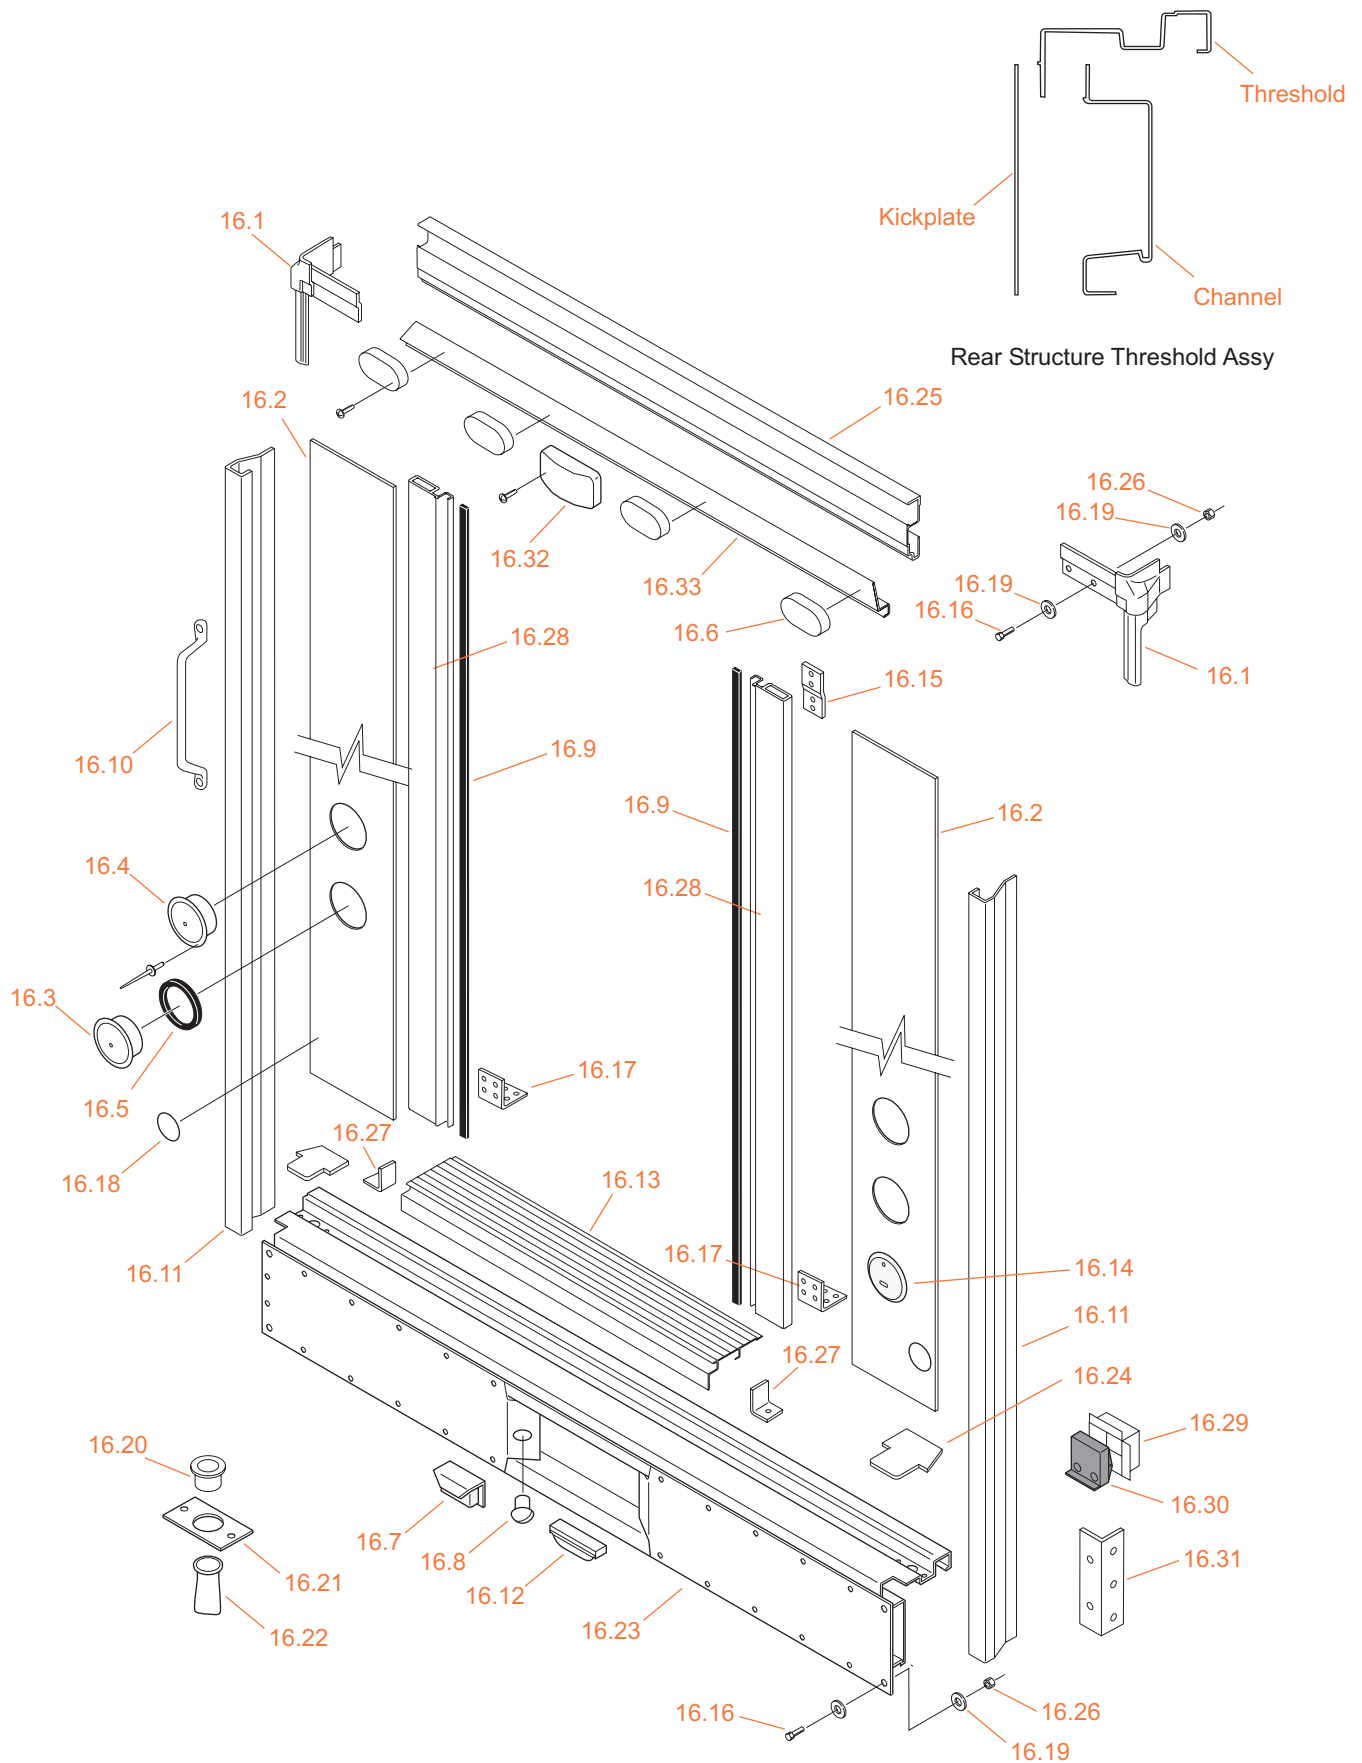


Rear Structure, Narrow Swing Doors

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

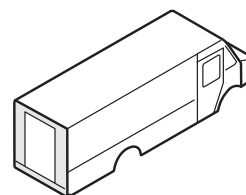

Item	Part Number	Description	Left Hand Right Hand Front Rear (Not Shown) (REFERENCE only)
16.NrSw	55230967	RR STR ASY NARROW SWING DOORS	
16.1 LH	06800094	CASTING RR ROOF LH	
16.1 RH	06800095	CASTING RR ROOF RH	
16.2	Appendix 55230967	REAR METAL	
16.3.1	16100071	LIGHT BACK UP	
16.3.2	15202203	LIGHT BACK-UP KIT	
16.3.3	16500088	LAMP BACK UP	
16.3.4	16511496	TAILLIGHT BU	
16.4.1	16512725	LIGHT RED LED 4" STT W/FLG M418R-2	
16.4.2	16512989	LIGHT LED STT W/FLANGE	
16.4.3	12605901	GASKET FLANGED 4.5"	
16.4.4	15200314	LIGHT TURN/STOP/TAIL	
16.4.5	16100070	LIGHT STOP/TURN/TAIL	
16.4.6	16512782	LT STOP/TURN/TAIL LED	
16.4.7	15202202	LIGHT RED KIT	
16.4.8	16511495	TAILLIGHT S/T/T	
16.5	16100072	GROMMET TAILLIGHT	
16.6.1	16500239	LIGHT CLRNC RED LED	
16.6.2	16512042	LIGHT CLRRANCE 2-1/2 RED	
16.6.3	16512293	CLEARANCE LIGHT RED 18300R	
16.6.4	16512529	LIGHT CLEARANCE RED	
16.6.5	15200409	LIGHT CLEARANCE RED	
16.6.6	16512991	LIGHT LED CLEARANCE RED	
16.6.7	15200547	LIGHT CLEARANCE RED	
16.6.8	15200560	LIGHT CLEARANCE RED	
16.6.9	16100075	CLEARANCE LIGHT RED	
16.6.10	12605903	GASKET LED LIGHT	
16.6.11	16512290	PLUG LED	
16.7.1	15200308	LIGHT LIC PLATE	
16.7.2	16512785	LIGHT LICENSE PLATE	
16.8	16100077	LIGHT LICENSE PLATE	
16.9	05402183	SEAL "D" .375 x .625	
16.10	08704347	HANDLE ALUM GRAB	
16.11	06003852-Length	IA7281 POST (SPECIFY LENGTH)	
16.12.1	16512260	LIGHT LICENSE PLATE	
16.12.2	16512261	LIGHT BASE LIC PLATE FOR 16512260	

Continued

16—Rear Structure, Narrow Swing Doors (continued)

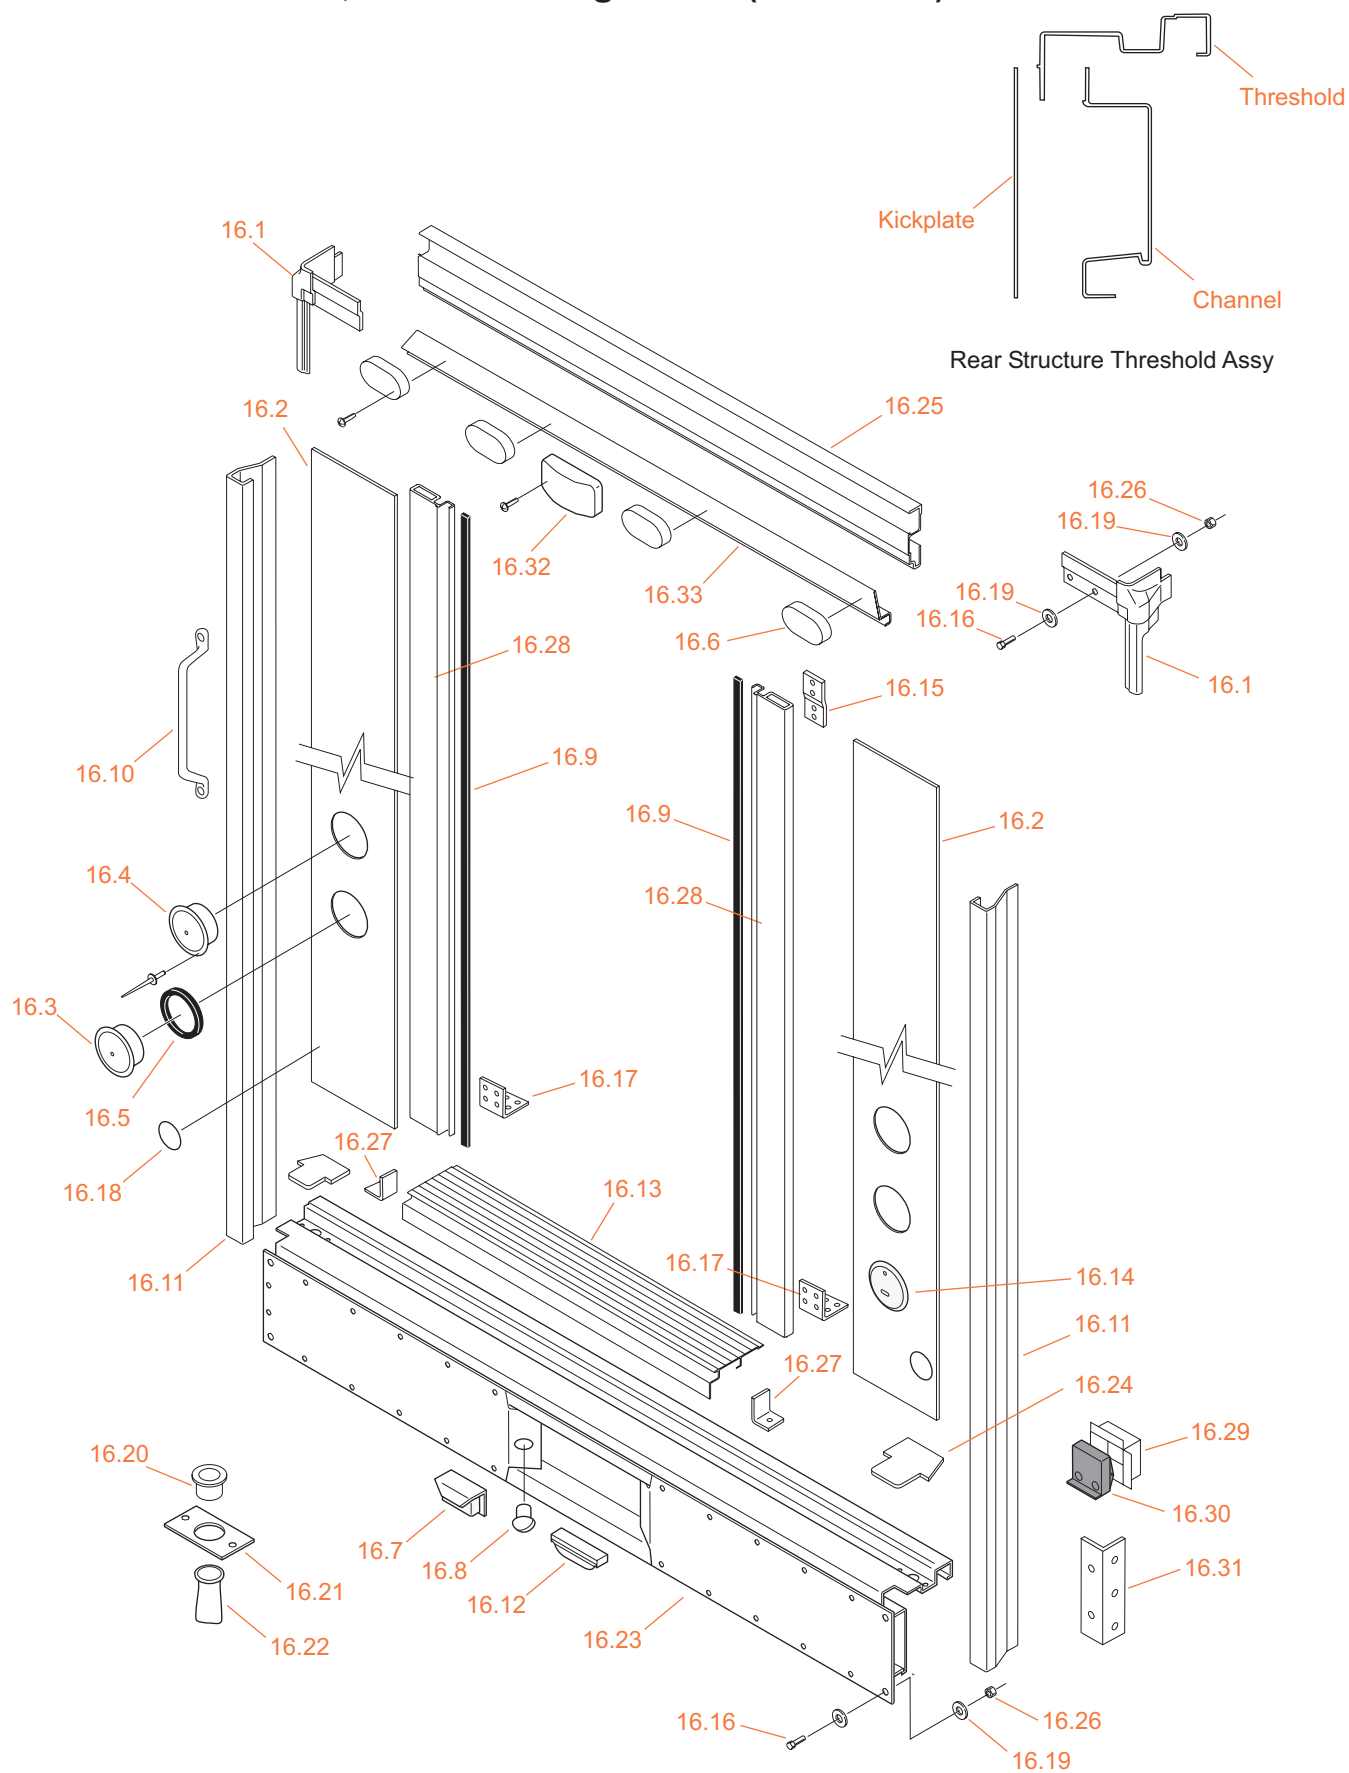


Rear Structure, Narrow Swing Doors

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

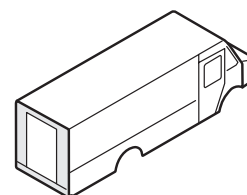

Item	Part Number	Description	Left Hand Front Right Hand Rear (Not Shown) (REFERENCE only)
16.13.1	06012503-CHART	IA7919 FILLER 06003892 (SPECIFY LENGTH)	
16.13.2	06921479-CHART	FILLER T/HOLD 20" SWING DOOR W/RAMP	
16.14	16512777	READER ACCESS KYLS ENTRY	
16.15	06601716	BRACKET RR DR FRAME SWG	
16.16	11600175	BOLT HEX CAP 5/16-18 x 1.5 SS	
16.17	06915579	ANGLE HLS (BRKT) 2" 06002035	
16.18.1	16200034	REFLECTOR RED TAPE ROUND 2.88	
16.18.2	16511547	REFLECTOR RED 3"	
16.18.3	15200498	REFLECTOR RED TAPE (Rectangle)	
16.19	11000160	WASHER 5/16 FLAT SS	
16.20	19901120	GROMMET KAZOO DRAIN	
16.21	06913511	BRKT KAZOO DRAIN .125 x 1.70 x 4.0	
16.22.1	19901122	HOSE DUCK BILL	
16.22.2	19901253	DRAIN RUBBER KAZOO	
16.23.1	Appendix 55231017	KICKPLATE REAR	
16.23.2	06915570-Width	IA9056 THRSH NTCH 06003893	
16.23.3	06012493-Width	IA9055 CHNL MOD 06003891	
16.23.4	06915563-Width	THRESHOLD NTC 06003893	
14.23.5	06920748-Length	THRES RR STR W/KAZOO DRAIN 06000808 (NO TAB)	
16.24	06502677	FILLER RR CORNER POST	
16.25	06916159-Width	IA7473 HDR NTC (SPECIFY UNIT WIDTH)	
16.26	11000040	NUT LCK WXD 5/16-18 2WAY GR5 ZN	
16.27 LH	06917082	IA637 ANGLE LH 1.56 06002050	
16.27 RH	06917080	IA637 ANGLE RH 1.56 06002050	
16.28 LH	06014421-CHART	IAH1645 DR FRM LH 06003900 (SPECIFY LENGTH)	
16.28 RH	06014422-CHART	IAH1645 DR FRM RH 06003900 (SPECIFY LENGTH)	
16.29	06916526	BOX WLDMT SENSOR FEDEX #30-36	
16.30 LH	16512737	ECHO SENSOR LH	
16.30 RH	16512736	ECHO SENSOR RH	
16.31	06915784	ANGLE RR STR SPRT .188 x 2 x 3.38	
16.32.1	16511939	LIGHT CNTR HI-MNTD STOP	
16.32.2	16512635	LITE LED HI/MNT STOP	
16.32.3	16512993	LIGHT REAR CHMSL LED	
16.33	06012496-CHART	IA7934 HDR FIL 06003899 (SPECIFY LENGTH)	

Continued

16—Rear Structure, Narrow Swing Doors (continued)

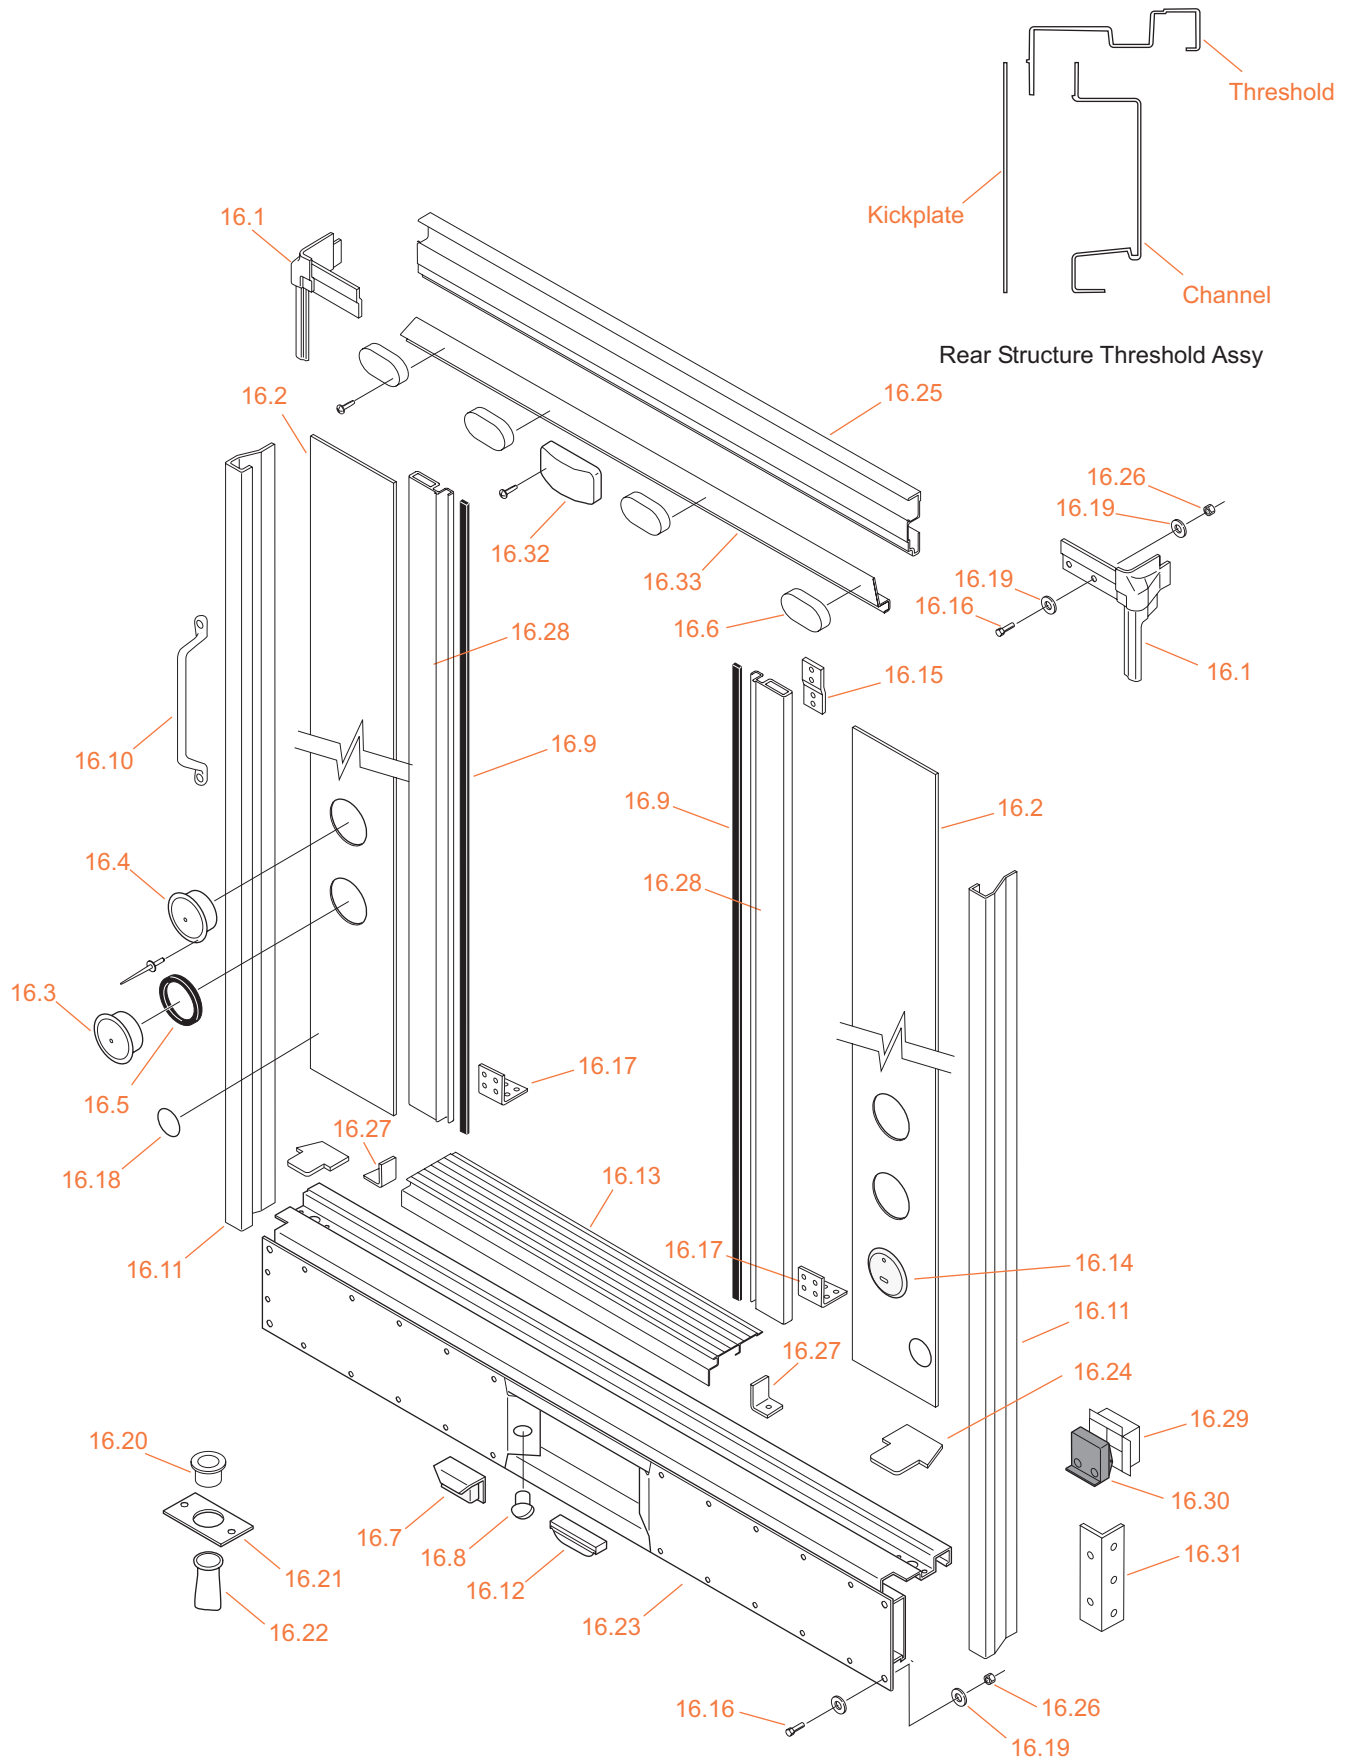


Rear Structure, Narrow Swing Doors

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

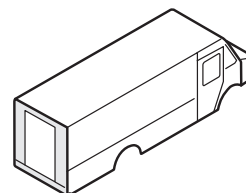

Item	Part Number	Description	Left Hand Right Hand Front Rear Front Rear (Not Shown) (REFERENCE only)
16.Ref	55231276	INSTALL BRKT OFFSET DR HOLDER	
16.Ref	55231310	INSTALL CHMSL LIGHT 16512993	
16.Ref	55231240	INSTL RR CLR LT 1612590 ALL	
16.Ref	55231307	REAR CLEARANCE LIGHT 16513086 INSTL	
16.Ref	55231274	INSTALL RR CLEARANCE LIGHT 16512878	
16.Ref	53234684	GRAB HANDLE LOC RH & REAR 18 x 93.5 x 85	
16.Ref	55231259	RR STR ASY ROLL UP 2PT	
16.Ref	06917081	GUARD INST T/HOLD FILLER	
16.Ref	55230995	KAZOO DRAIN INSTAL	

16—Rear Structure, Full Swing Doors

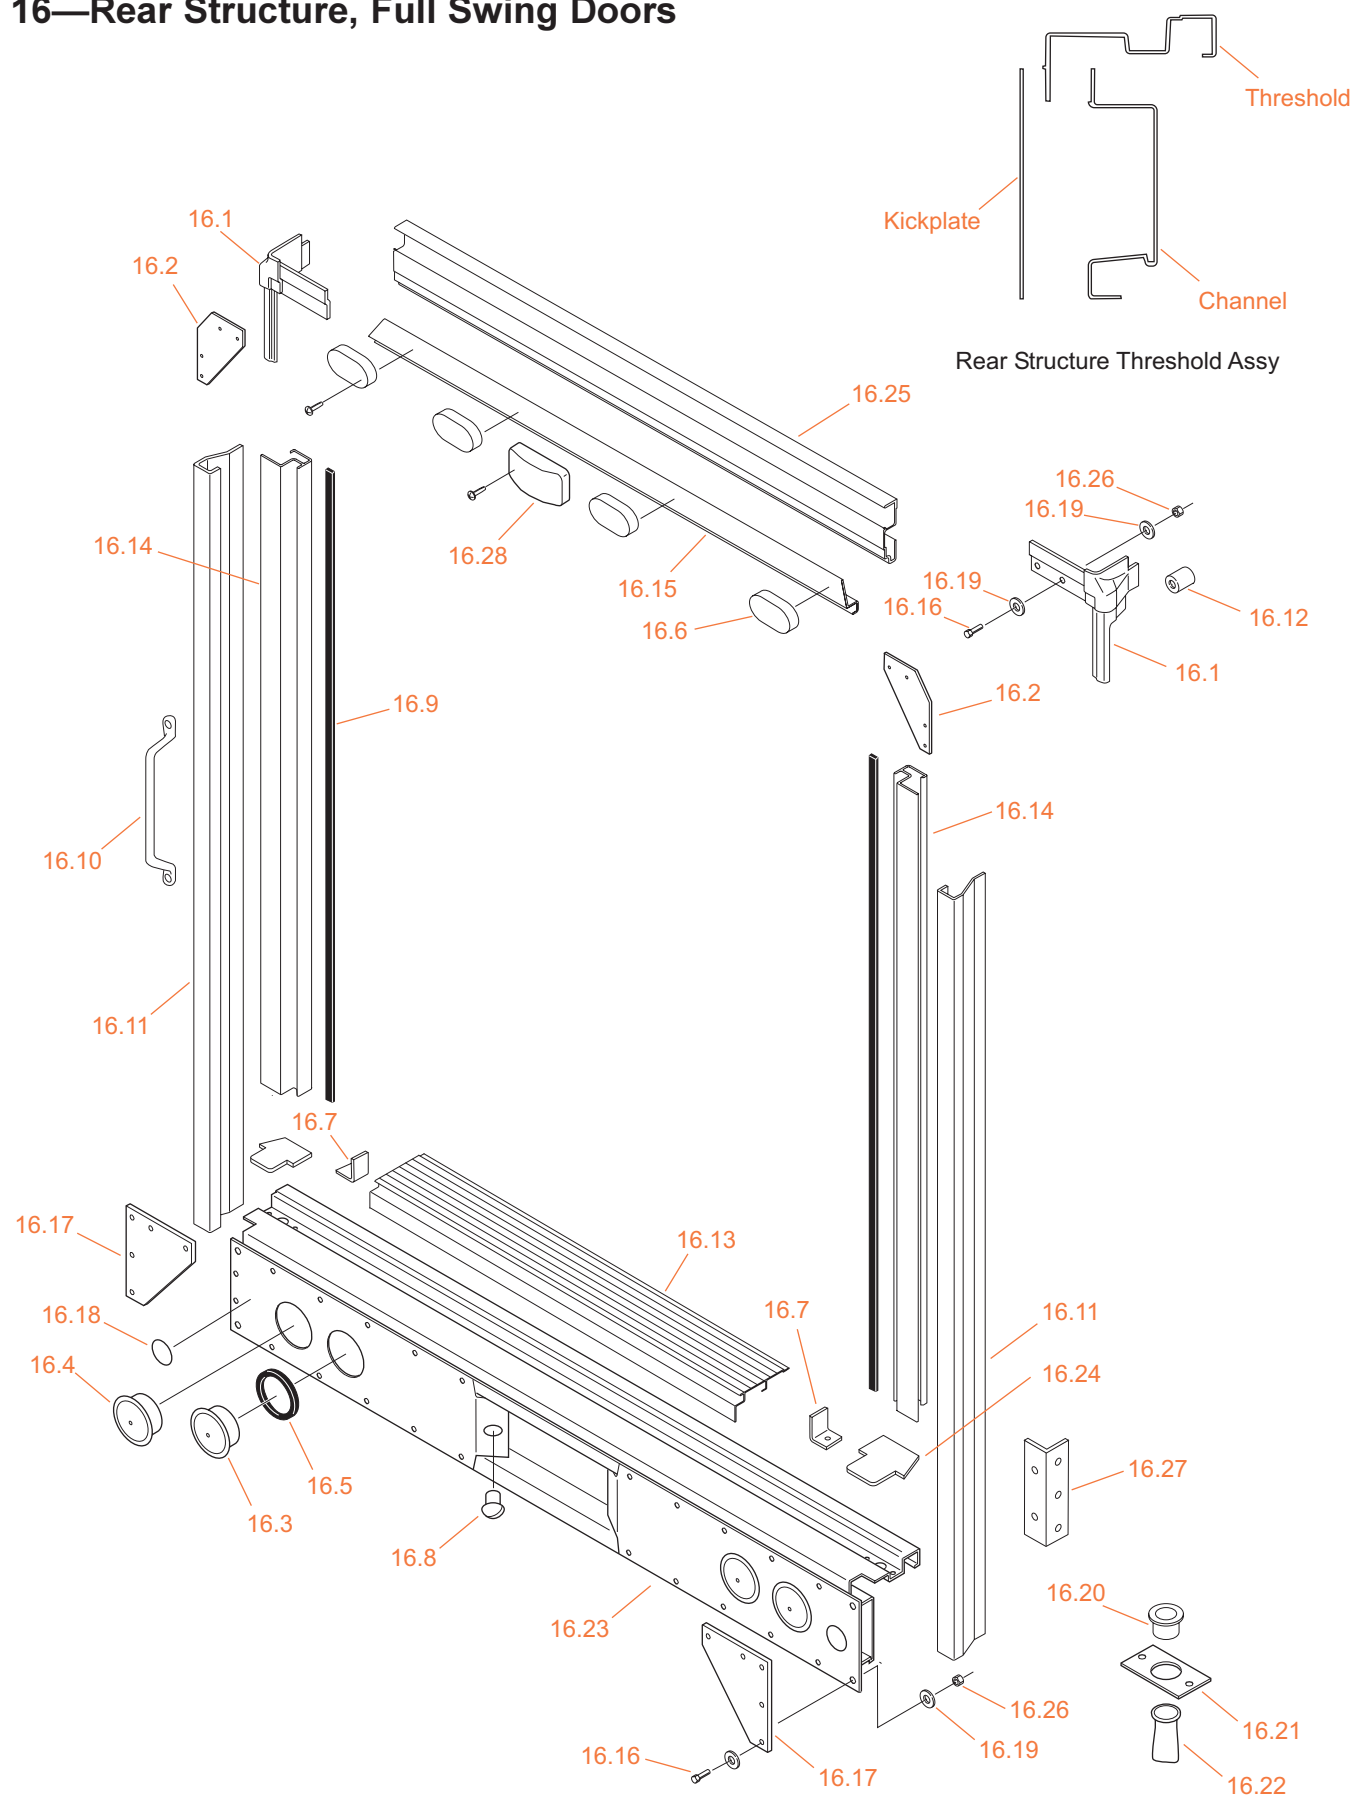


Rear Structure, Full Swing Doors

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

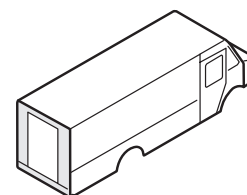


Item	Part Number	Description
16.FS	55230966	RR STR ASY FULL SWING DOORS
16.QF	55230968	RR STR ASY QRT FOLD SWING DOORS
16.1 LH	06800094	CASTING RR ROOF LH
16.1 RH	06800095	CASTING RR ROOF RH
16.2	06915488	GUSSET RR STR UPR SWG/DRS
16.3	See Nar Swg Asy	LIGHT BACK UP
16.4	See Nar Swg Asy	LITE RED LED 4" STT W/FLG
16.5	See Nar Swg Asy	GROMMET TAILLIGHT
16.6	See Nar Swg Asy	LIGHT CLRNC RED LED
16.7 LH	06917082-Length	IA637 ANGLE LH 1.56 06002050
16.7 RH	06917080-Length	IA637 ANGLE RH 1.56 06002050
16.8	See Nar Swg Asy	LIGHT, LICENSE PLATE
16.9	05402183	SEAL "D" .375 x .625
16.10	08704347	HANDLE ALUM GRAB
16.11	06003852-Length	IA7281 POST (SPECIFY LENGTH)
16.12	22813386-00075	TUBE 1"OD x 3/8"ID x 5/16" WALL x .75
16.13.1	06012501-Length	IA7919 FILLER NTC 06003892 (SPECIFY LENGTH)
16.13.2	06012506-Length	FILLER THRES 1/4 FOLD 06003892 (SPECIFY LENGTH)
16.13.3	06923115-Length	FILLER T/HOLD BIFOLD DR W/RAMP (SPECIFY LENGTH)
16.14 LH	06014420-Length	IA7933 FILR LH 06003898 (SPECIFY LENGTH)
16.14 RH	06014419-Length	IA7933 FILR RH 06003898 (SPECIFY LENGTH)
16.15.1	06012497-Width	IA7934 HDR FIL FSWG 06003899 (SPECIFY UNIT WIDTH)
16.15.2	06014437-Width	IA7934 HDR FLR QF 06003899 (SPECIFY UNIT WIDTH)
16.16	11600175	BOLT HEX CAP 5/16-18 x 1.5 SS
16.17.1	06502984	GUSSET LOWER RR STR
16.17.2	22817088	GUSSET REAR STRUCTURE LOWER STEEL
16.18	See Nar Swg Asy	REFLECTOR RED TAPE ROUND
16.19	11000160	WASHER 5/16 FLAT SS
16.20	19901120	GROMMET KAZOO DRAIN
16.21	06913511	BRKT KAZOO DRAIN .125 x 1.70 x 4.0
16.22.1	19901122	HOSE DUCK BILL std
16.22.2	19901253	DRAIN RUBBER KAZOO
16.23	See Nar Swg Asy	KICKPLATE ASY
16.24	06502677	FILLER RR CORNER POST
16.25	See Nar Swg Asy	IA7473 HDR NTC (SPECIFY UNIT WIDTH)
16.26	11000040	NUT LCK WXD 5/16-18 2WAY GR5 ZN

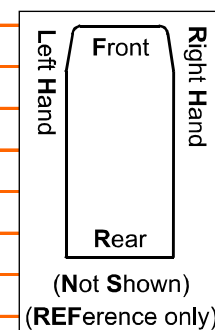

Continued

16—Rear Structure, Full Swing Doors (continued)

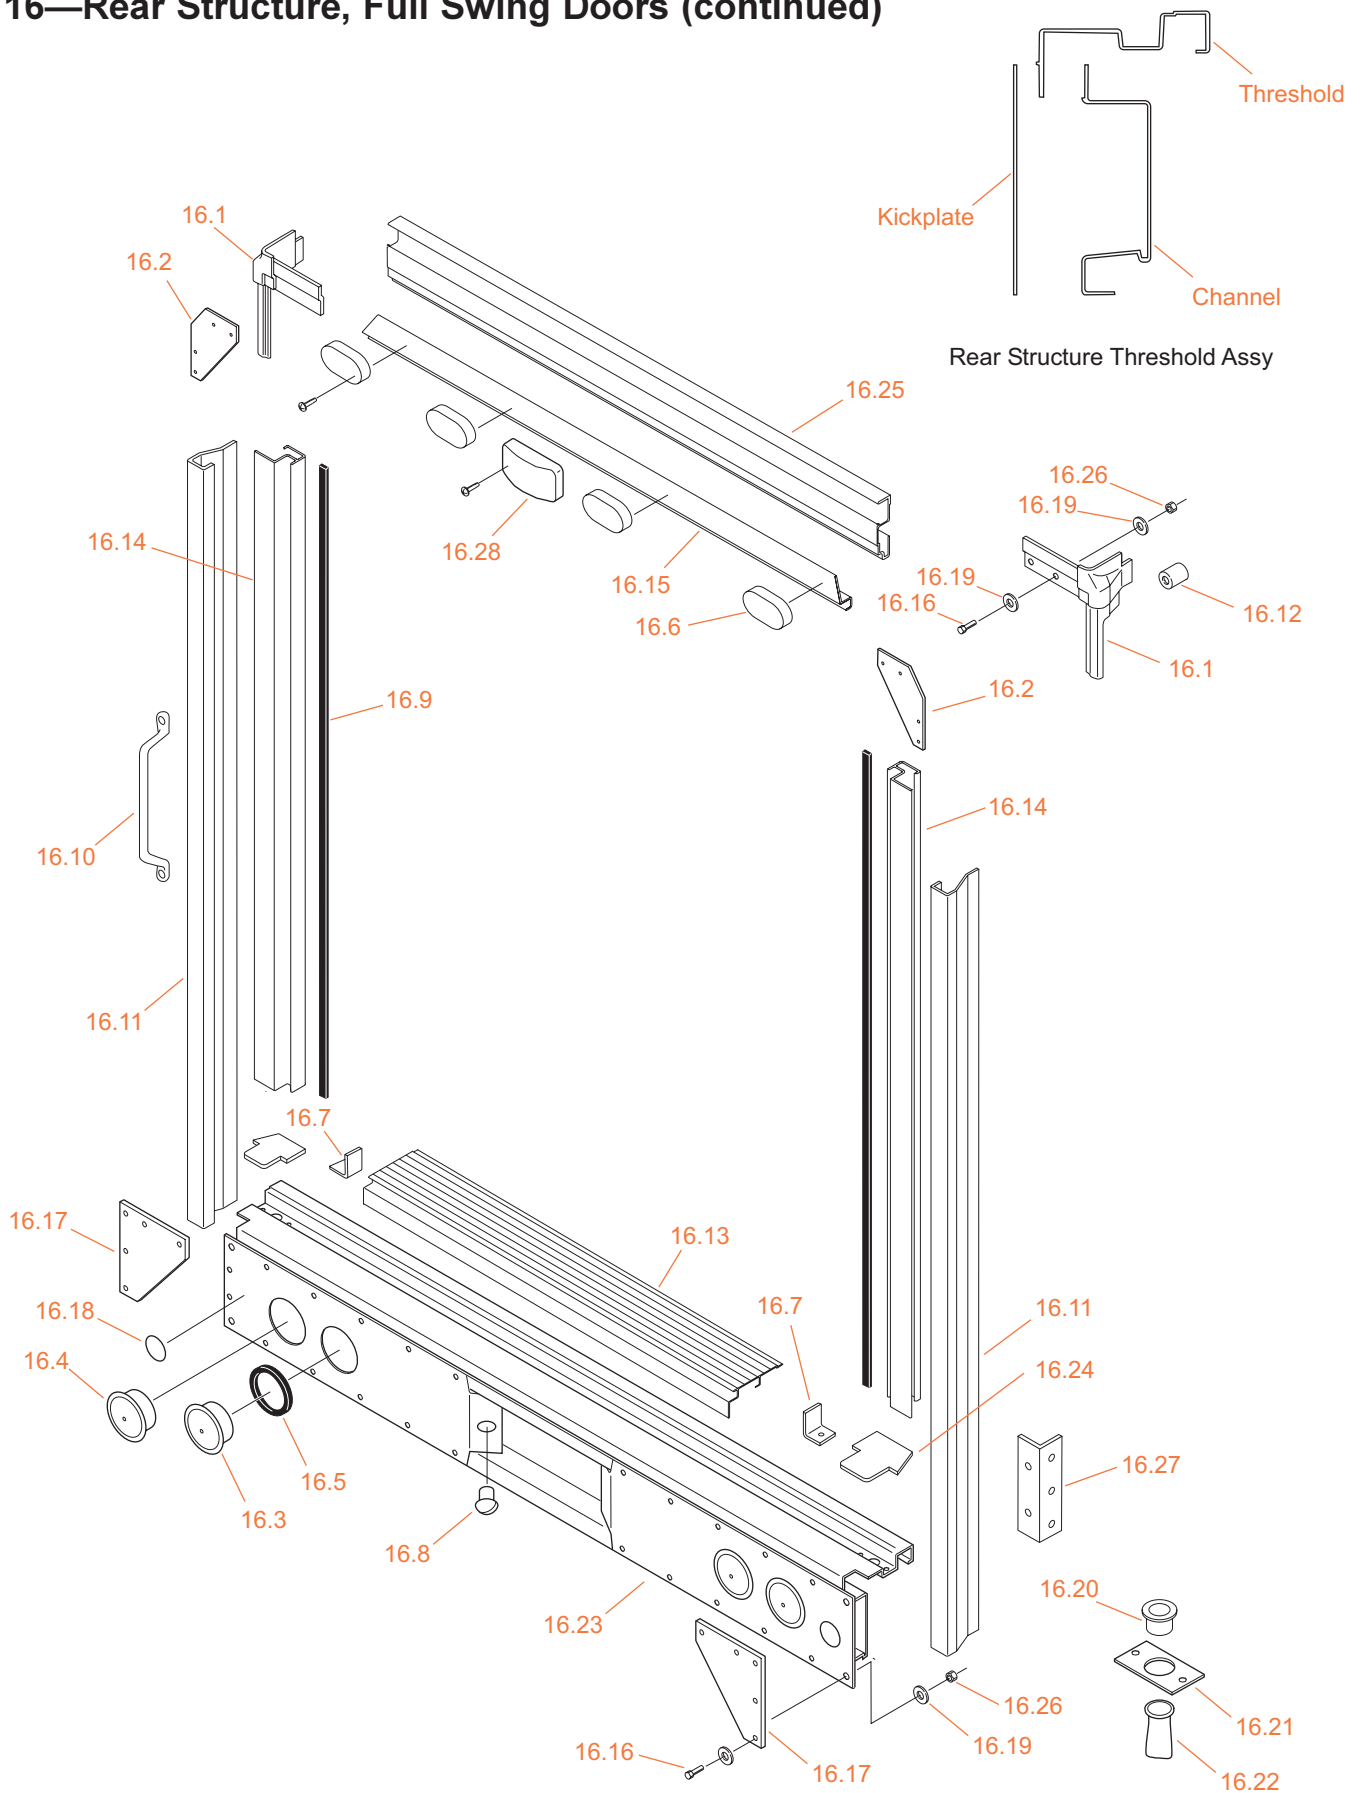


Rear Structure, Full Swing Doors

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

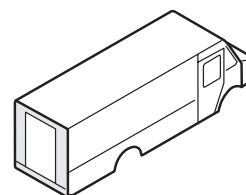

Item	Part Number	Description
16.27	06915784	ANGLE RR STR SPRT .188 x 2 x 3.38
16.28	See Nar Swg Asy	LIGHT CNTR HI-MNTD STOP
16.Ref	55231257	RR STR S/ASY
16.Ref	06917081	GUARD INST T/HOLD FILLER
16.Ref	55230995	KAZOO DRAIN INSTAL
	See also Rear Structure–Narrow Swing Doors.	

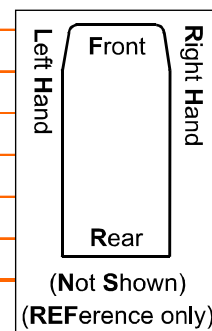

16—Rear Structure, Narrow Roll-up Door

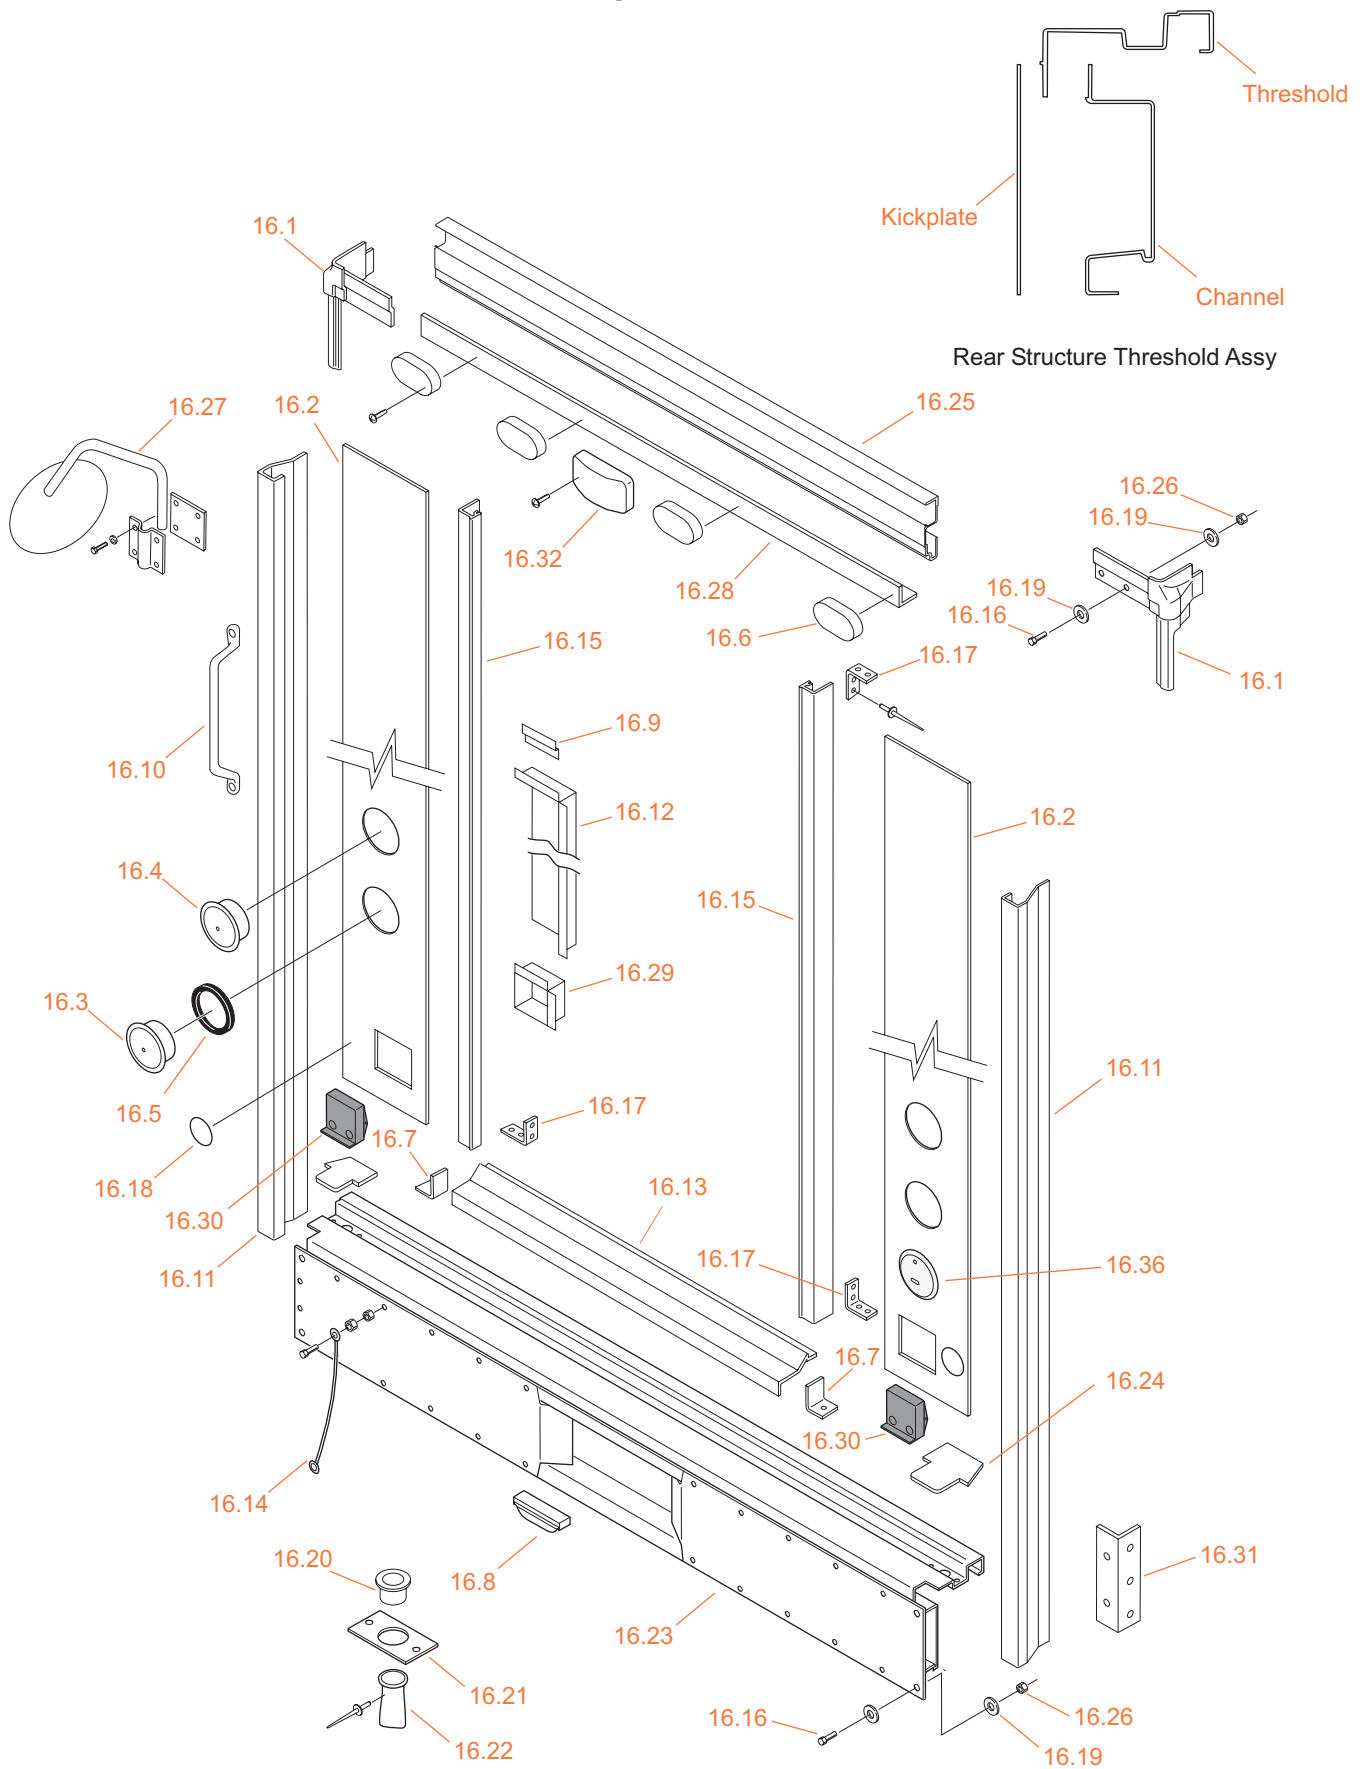


Rear Structure, Narrow Roll-up Door

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

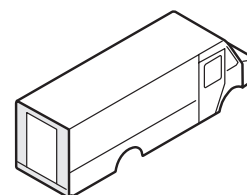


Item	Part Number	Description
16.NR		RR STR ASY NARROW ROLL-UP DOOR
16.1 LH	06800094	CASTING RR ROOF LH
16.1 RH	06800095	CASTING RR ROOF RH
16.2	Appendix 55230969	METAL, REAR STRUCTURE NARROW ROLL-UP
16.3	See Nar Swg Asy	LIGHT BACK UP
16.4	See Nar Swg Asy	LITE RED LED 4" STT W/FLG
16.5	See Nar Swg Asy	GROMMET TAILLIGHT
16.6	See Nar Swg Asy	LIGHT CLRNC RED LED
16.7 LH	06917082	IA637 ANGLE LH 1.56 06002050
16.7 RH	06917080	IA637 ANGLE RH 1.56 06002050
16.8	See Nar Swg Asy	LIGHT LICENSE PLATE
16.9	06601788	BRACKET TAILLIGHT COVER
16.10	08704347	HANDLE ALUM GRAB
16.11	06003852	IA7281 POST (SPECIFY LENGTH)
16.12	06601785	COVER TAILLIGHT 5.11 X 30.89
16.13.1	06916165-Length	THRES FILR RU 2PT (SPECIFY LENGTH)
16.13.2	06915564-Length	FILLER THOLD RU DR 1PT (SPECIFY LENGTH)
16.13.3	06014423-Length	IA8050 THRES FILR RU 06003906 (SPECIFY LENGTH)
16.14.0	10997311	SAFETY CABLE
16.14.1	11000186	BOLT HEX CAP 7/16-14 x 1.5 SS
16.14.2	11000187	NUT 7/16 SS
16.14.3	11000041	NUT LOCK WXD 7/16-14 2WAY ZN
16.15	06003882-Length	IA7739 POST NAR RU (SPECIFY LENGTH)
16.16	11600175	BOLT HEX CAP 5/16-18 x 1.5 SS
16.17 LH	06915987	ANGLE LH HLS 1.50 06002037
16.17 RH	06915988	ANGLE RH HLS 1.50 06002037
16.18	See Nar Swg Asy	REFLECTOR RED TAPE
16.19	11000160	WASHER 5/16 FLAT SS
16.20	19901120	GROMMET KAZOO DRAIN
16.21	06913511	BRKT KAZOO DRAIN .125 x 1.70 x 4.0
16.22.1	19901122	HOSE DUCK BILL
16.22.2	19901253	DRAIN RUBBER KAZOO
16.23	Appendix 55231017	KICKPLATE ASY
16.24	06502677	FILLER RR CORNER POST

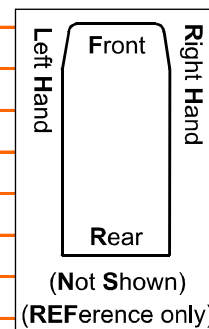

Continued

16—Rear Structure, Narrow Roll-up Door (continued)

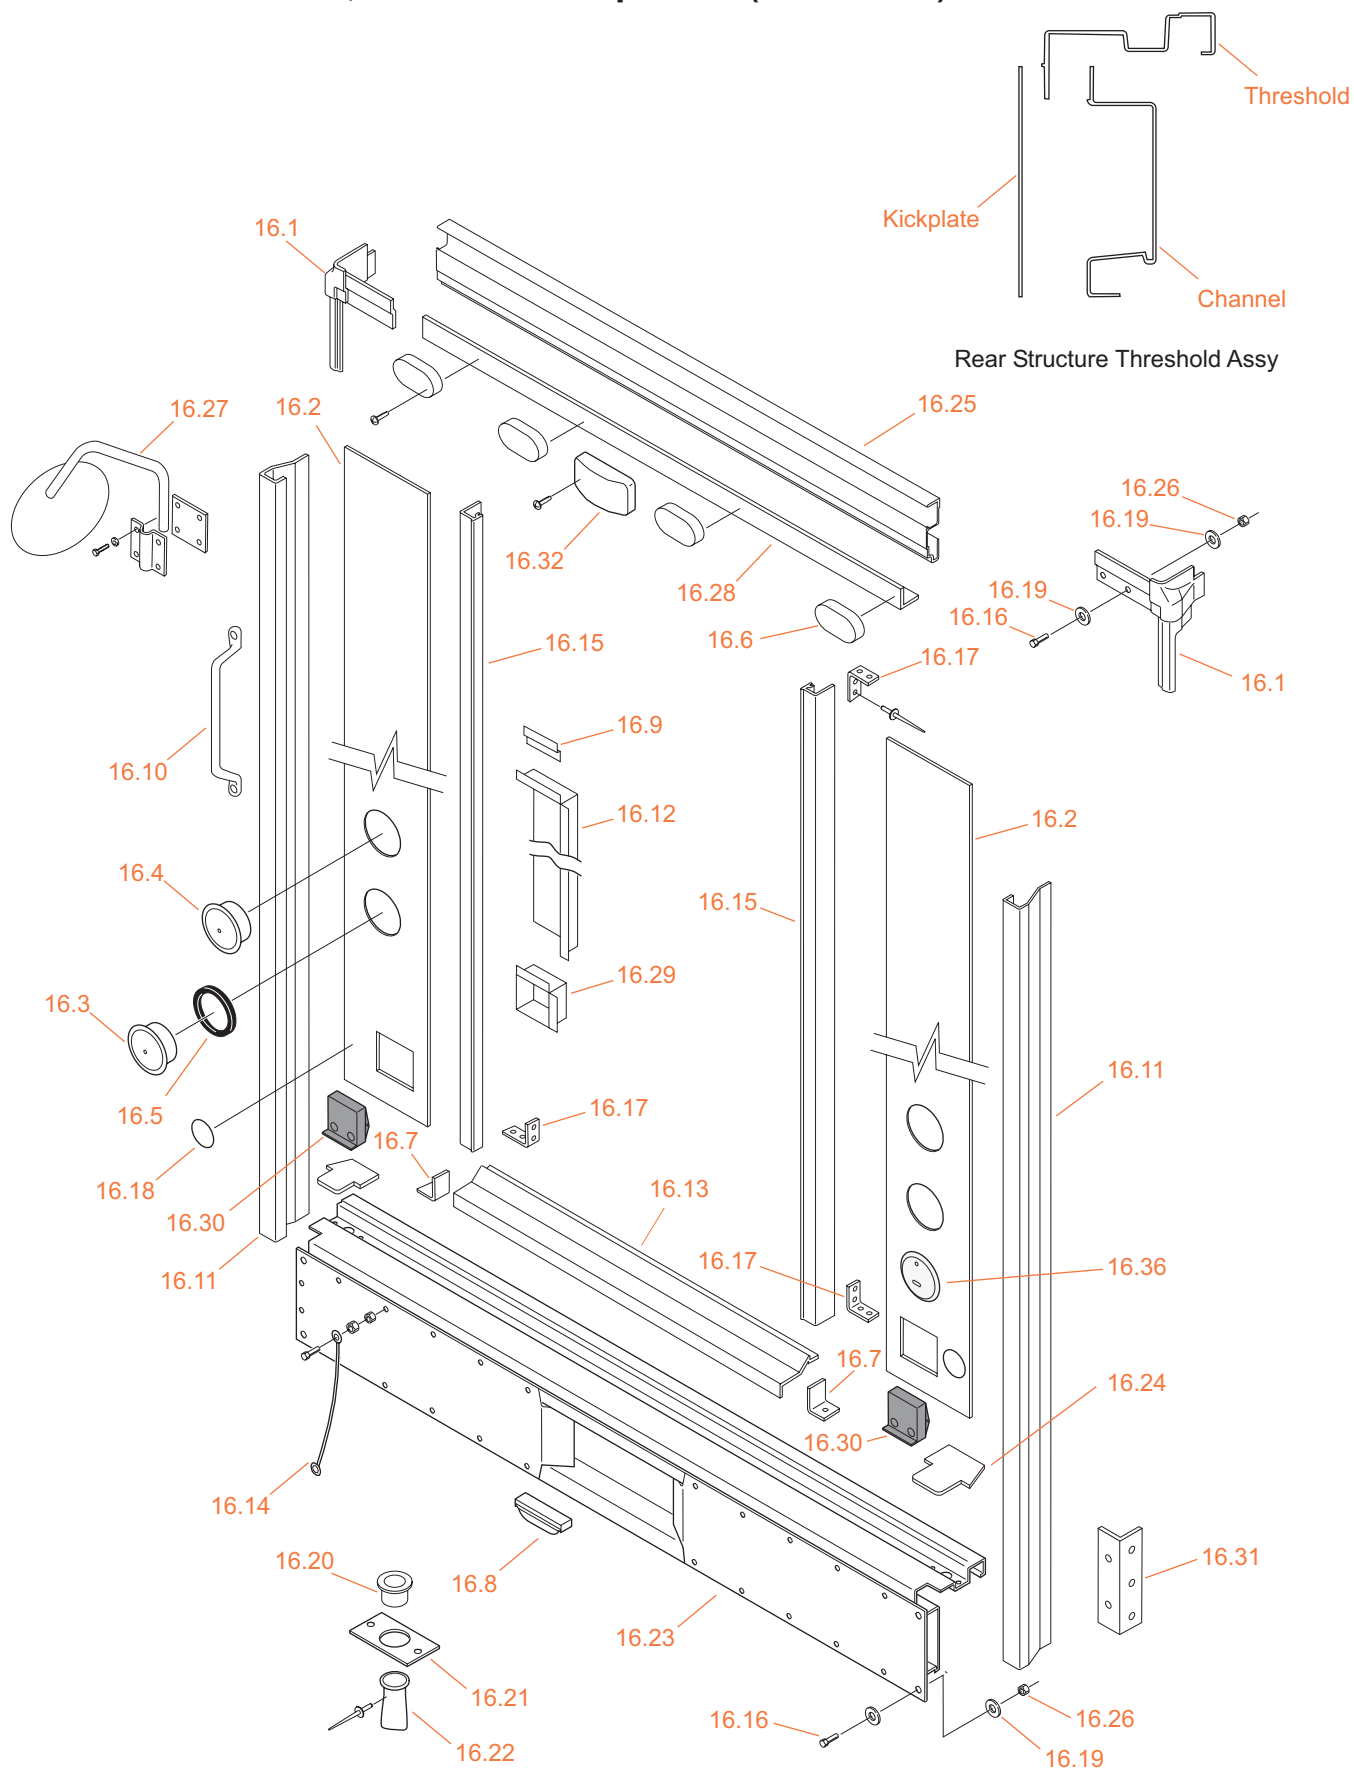


Rear Structure, Narrow Roll-up Door

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

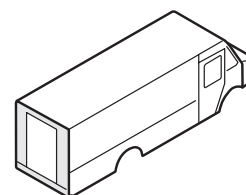

Item	Part Number	Description	Left Hand Right Hand Front Rear (Not Shown) (REFERENCE only)
16.25	06916159	IA 7473 HDR NTC (SPECIFY UNIT WIDTH)	
16.26	11000040	NUT LCK WXD 5/16-18 2W AY GR5 ZN	
16.27	13301649	MIRROR 10" DIA W/BRKT SS	
16.28	06916160-Length	TRIM RUDR HEADER 06003907 (SPECIFY LENGTH)	
16.29	06916526	BOX WLDMT SENSOR FEDEX	
16.30 LH	16512737	ECHO SENSOR LH	
16.30 RH	16512736	ECHO SENSOR RH	
16.31	06915784	ANGLE RR STR SPRT .188 x 2 x 3.38	
16.32	See Nar Swg Asy	LIGHT CNTR HI-MNTD STOP	
16.Ref	55231255	RR STR ASY 86.5W x 81H ECHO	
16.Ref	55230969	RR STR ASY 40" RU 86.5 x 81 2PT	
16.Ref	55231259	RR STR ASY ROLL UP 2PT ECHO	
16.Ref	55231257	RR STR S/ASY	
16.Ref	06917081	GUARD INST T/HOLD FILLER	
16.Ref	55230995	KAZOO DRAIN INSTAL	
See also Rear Structure—Narrow Swing Doors.			

16—Rear Structure, Full Roll-up Door

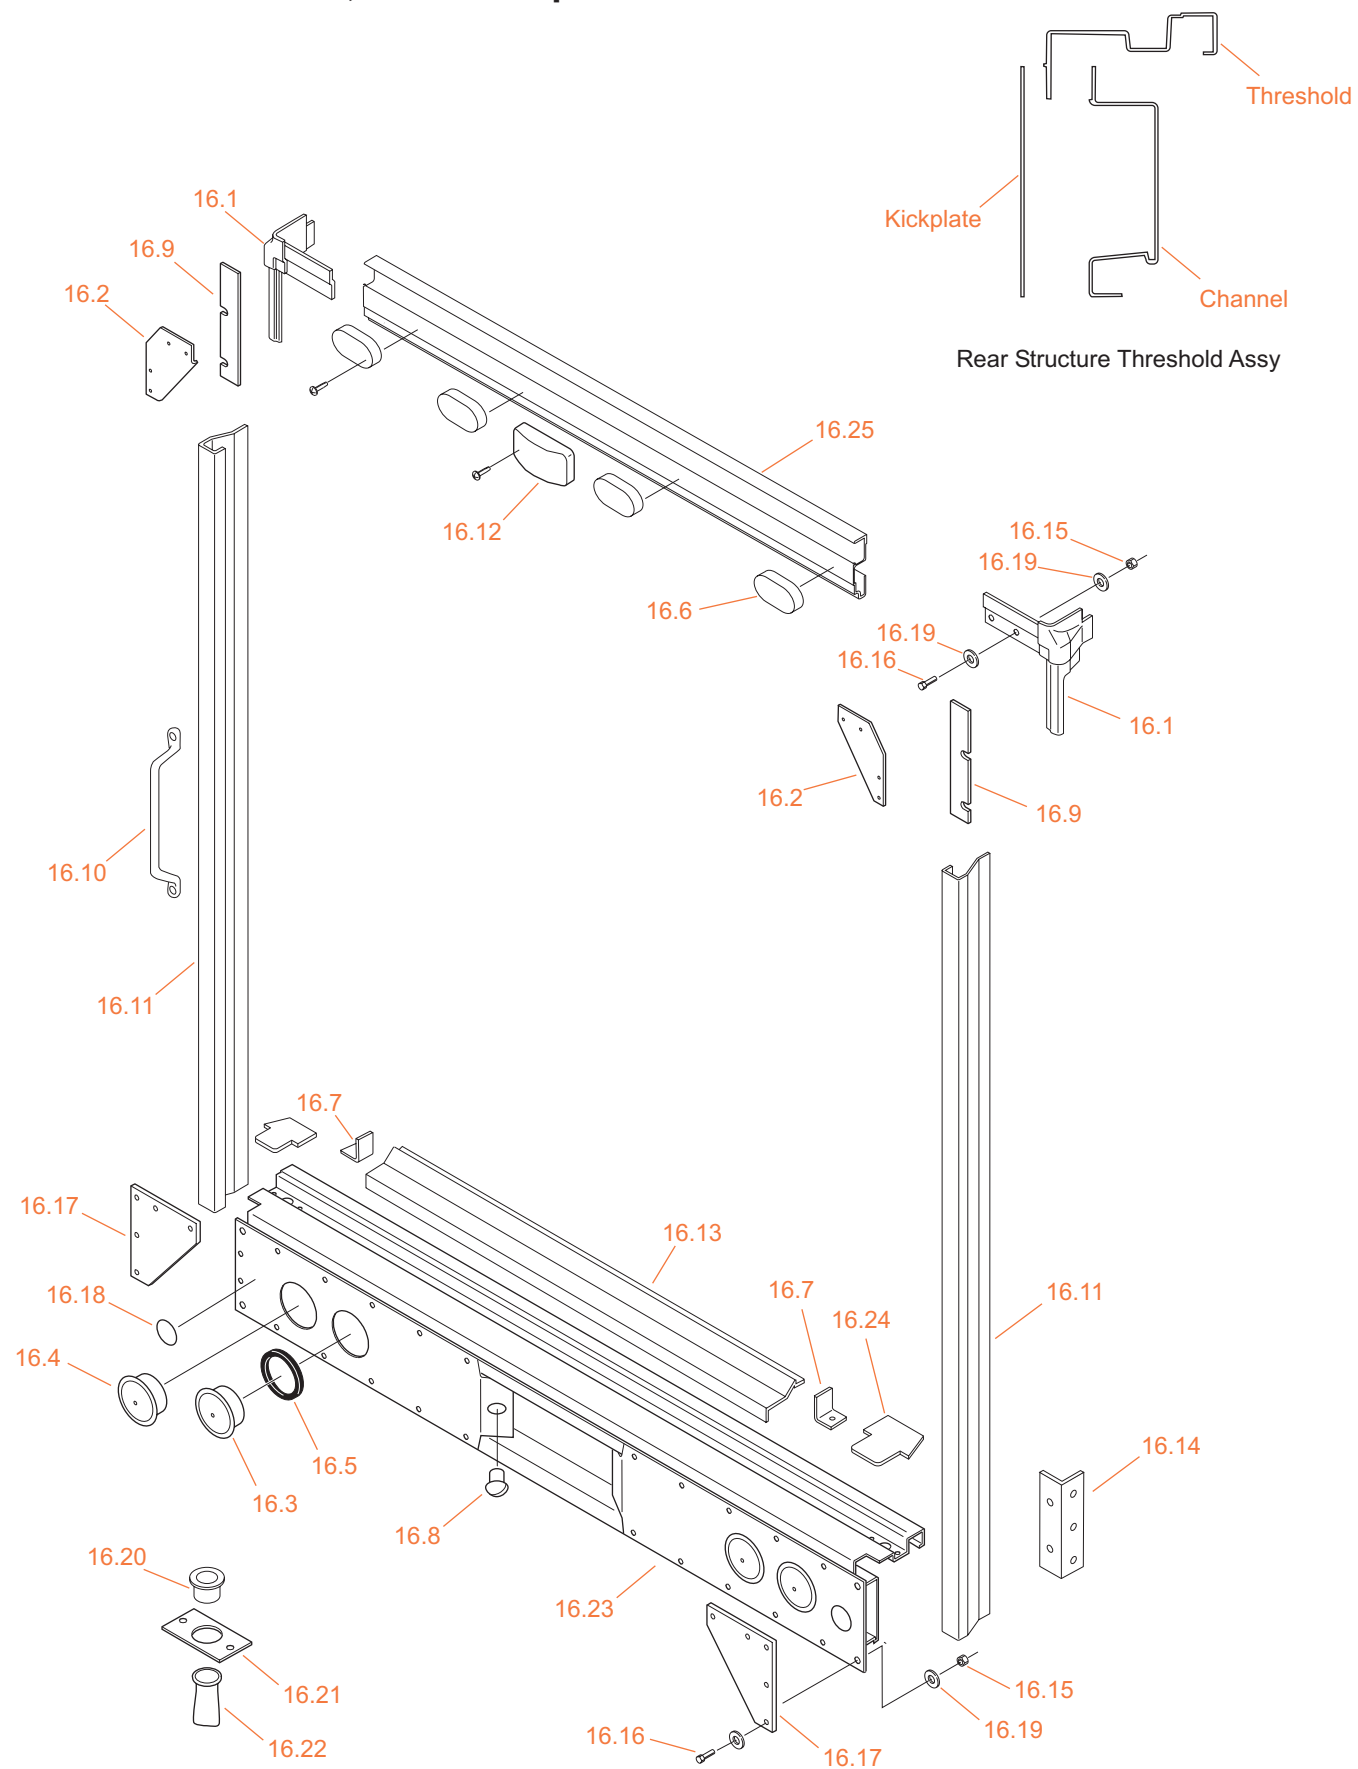


Rear Structure, Full Roll-up Door

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

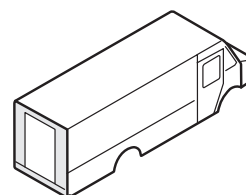

Item	Part Number	Description	Left Hand Right Hand Front Rear (Not Shown) (REference only)
16.FR	55230970	RR STR ASY FULL ROLL-UP DOORS	
16.1 LH	06800094	CASTING RR ROOF LH	
16.1 RH	06800095	CASTING RR ROOF RH	
16.2 LH	06915472	GUSSET RR STR UPR LH	
16.2 RH	06915473	GUSSET RR STR UPR RH	
16.3	See Nar Swg Asy	LIGHT BACK UP	
16.4	See Nar Swg Asy	LIGHT RED 4" STOP	
16.5	See Nar Swg Asy	GROMMET TAILLIGHT	
16.6	See Nar Swg Asy	LIGHT CLRNC RED LED	
16.7 LH	06917082	IA 637 ANGLE LH 1.56 06002050	
16.7 RH	06917080	IA 637 ANGLE RH 1.56 06002050	
16.8	See Nar Swg Asy	LIGHT LICENCE PLATE	
16.9	06915504	SHIM RR STR GUSSET	
16.10	08704347	HANDLE ALUM GRAB	
16.11	06003852-Length	IA 7281 POST (SPECIFY LENGTH)	
16.12	See Nar Swg Asy	LIGHT CNTR HI-MNTD STOP	
16.13	06916165-Length	THRESHLD FILLER (SPECIFY LENGTH)	
16.14	06915784	ANGLE RR STR SPRT .188 x 2 x 3.38	
16.15	11000040	NUT LCK WXD 5/16-18 2WAY GR5 ZN	
16.16	11600175	BOLT HEX CAP 5/16-18 x 1.5 SS	
16.17	06502984	GUSSET LOWER RR STR	
16.18	See Nar Swg Asy	REFLECTOR RED TAPE	
16.19	11000160	WASHER 5/16 FLAT SS	
16.20	19901120	GROMMET KAZOO DRAIN	
16.21	06913511	BRKT KAZOO DRAIN .125 x 1.70 x 4.0	
16.22.1	19901122	HOSE DUCK BILL	
16.22.2	19901253	DRAIN RUBBER KAZOO	
16.23	See Nar Swg Asy	KICKPLATE ASY	
16.24	06502677	FILLER RR CORNER POST	
16.25	06916159-Length	IA 7473 HDR NTC (SPECIFY UNIT WIDTH)	
16.Ref	55231257	RR STR S/ASY	
16.Ref	06917081	GUARD INST T/HOLD FILLER	
16.Ref	55230995	KAZOO DRAIN INSTAL	
	See also Rear Structure–Narrow Swing Doors.		

16—Rear Structure, Full Roll-up Door with Wide Post Option

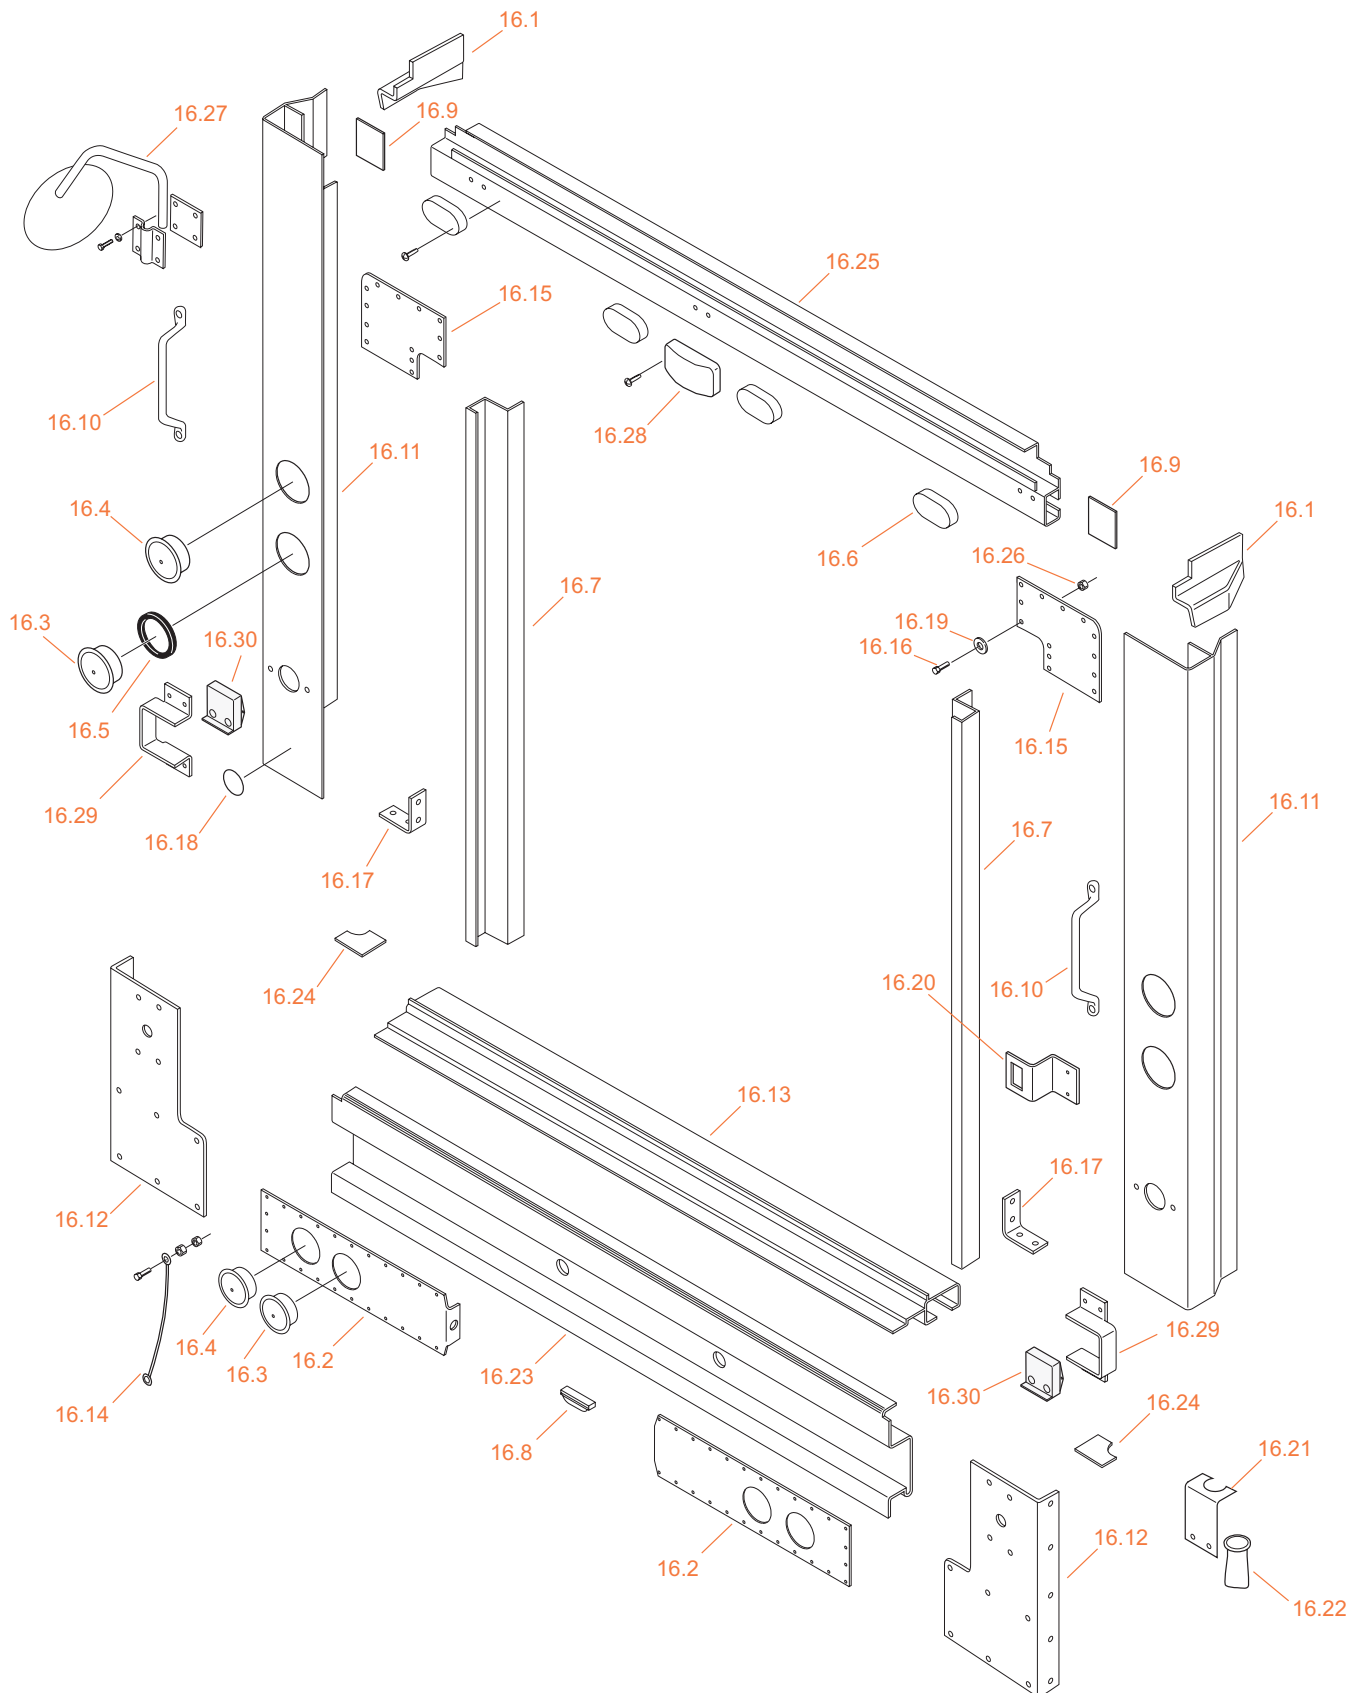


Rear Structure, Full Roll-up Door with Wide Post Option

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

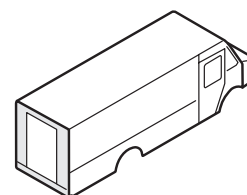


Item	Part Number	Description
16.0.1	55231324	WIDE POST REAR STRCT KP/LIGHTS
16.0.2	55231351	WIDE POST REAR STRCT CRN POST/LIGHTS
16.1 LH	06917694	CAP LH RR CORNER POST
16.1 RH	06917693	CAP RH RR CORNER POST
16.2.1	06918443-Width	K/P BLNK SEALED LIC LT (SPECIFY UNIT WIDTH)
16.2.2	06923737-CHART	K/P BLNK W\LIGHTS (SPECIFY UNIT WIDTH)
16.2.3	06918128-CHART	K/P BLNK NO LIGHTS (SPECIFY UNIT WIDTH)
16.3	See Nar Swg Asy	LIGHT BACK UP
16.4	See Nar Swg Asy	LITE RED 4" STT
16.5	See Nar Swg Asy	GROMMET TAILLIGHT
16.6	See Nar Swg Asy	LIGHT CLRNC RED
16.7	06003916-Length	IA 8592 POST NAR RU 06003916 (SPECIFY LENGTH)
16.8	See Nar Swg Asy	LIGHT LICENSE PLATE
16.9	06917764	ALUM .125 X 3.06 X 3.06
16.10	08704347	HANDLE ALUM GRAB
16.11 .0	06003913-Length	IA 8593 RR CRNR POST 06003913 (SPECIFY LENGTH)
16.11.1 LH	06923733-CHART	IA 8593 RR CRNR POST 06003913 (SPECIFY UNIT SIZE)
16.11.1 RH	06923734-CHART	IA 8593 RR CRNR POST 06003913 (SPECIFY UNIT SIZE)
16.11.2 LH	06919354-CHART	IA 8593 RR CRNR POST 06003913 W\LIGHTS (SPECIFY UNIT SIZE)
16.11.2 RH	06919353-CHART	IA 8593 RR CRNR POST 06003913 W\LIGHTS (SPECIFY UNIT SIZE)
16.12 LH	06918121	GUARD REAR CORNER LH WIDE POST
16.12 RH	06918122	GUARD REAR CORNER RH WIDE POST
16.13	06918126-Width	T/HOLD NTCH 2PT 06003920 (SPECIFY UNIT SIZE)
16.14.0	10997311	CABLE PLASTIC CVRD 10"
16.14.1	11000186	BOLT HEX CAP 7/16-14 x 1.5 SS
16.14.2	11000187	NUT 7/16 SS
16.14.3	11000041	NUT LOCK WXD 7/16-14 2WAY
16.15.1	06920187	PLATE UPR CRNR RR REINF
16.15.2	06924623	PLATE REINF WD POST RR STR UPR COR
16.16	11004442	BOLT HEX 5/16-18 x 1
16.17	06002047-00200	IA 4114 ANGLE 2.00 6002047
16.18	See Nar Swg Asy	REFLECTOR RED TAPE
16.19	11008417	WASHER 5/16 FLAT
16.20	06917783	MOUNTING BRACKET, CARGO LIGHT SWITCH
16.21	06919447	BRACKET DRAIN VALVE WIDE POST

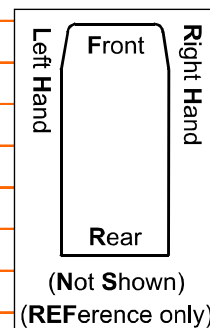

Continued

16—Rear Structure, Full Roll-up Door with Wide Post Option (continued)

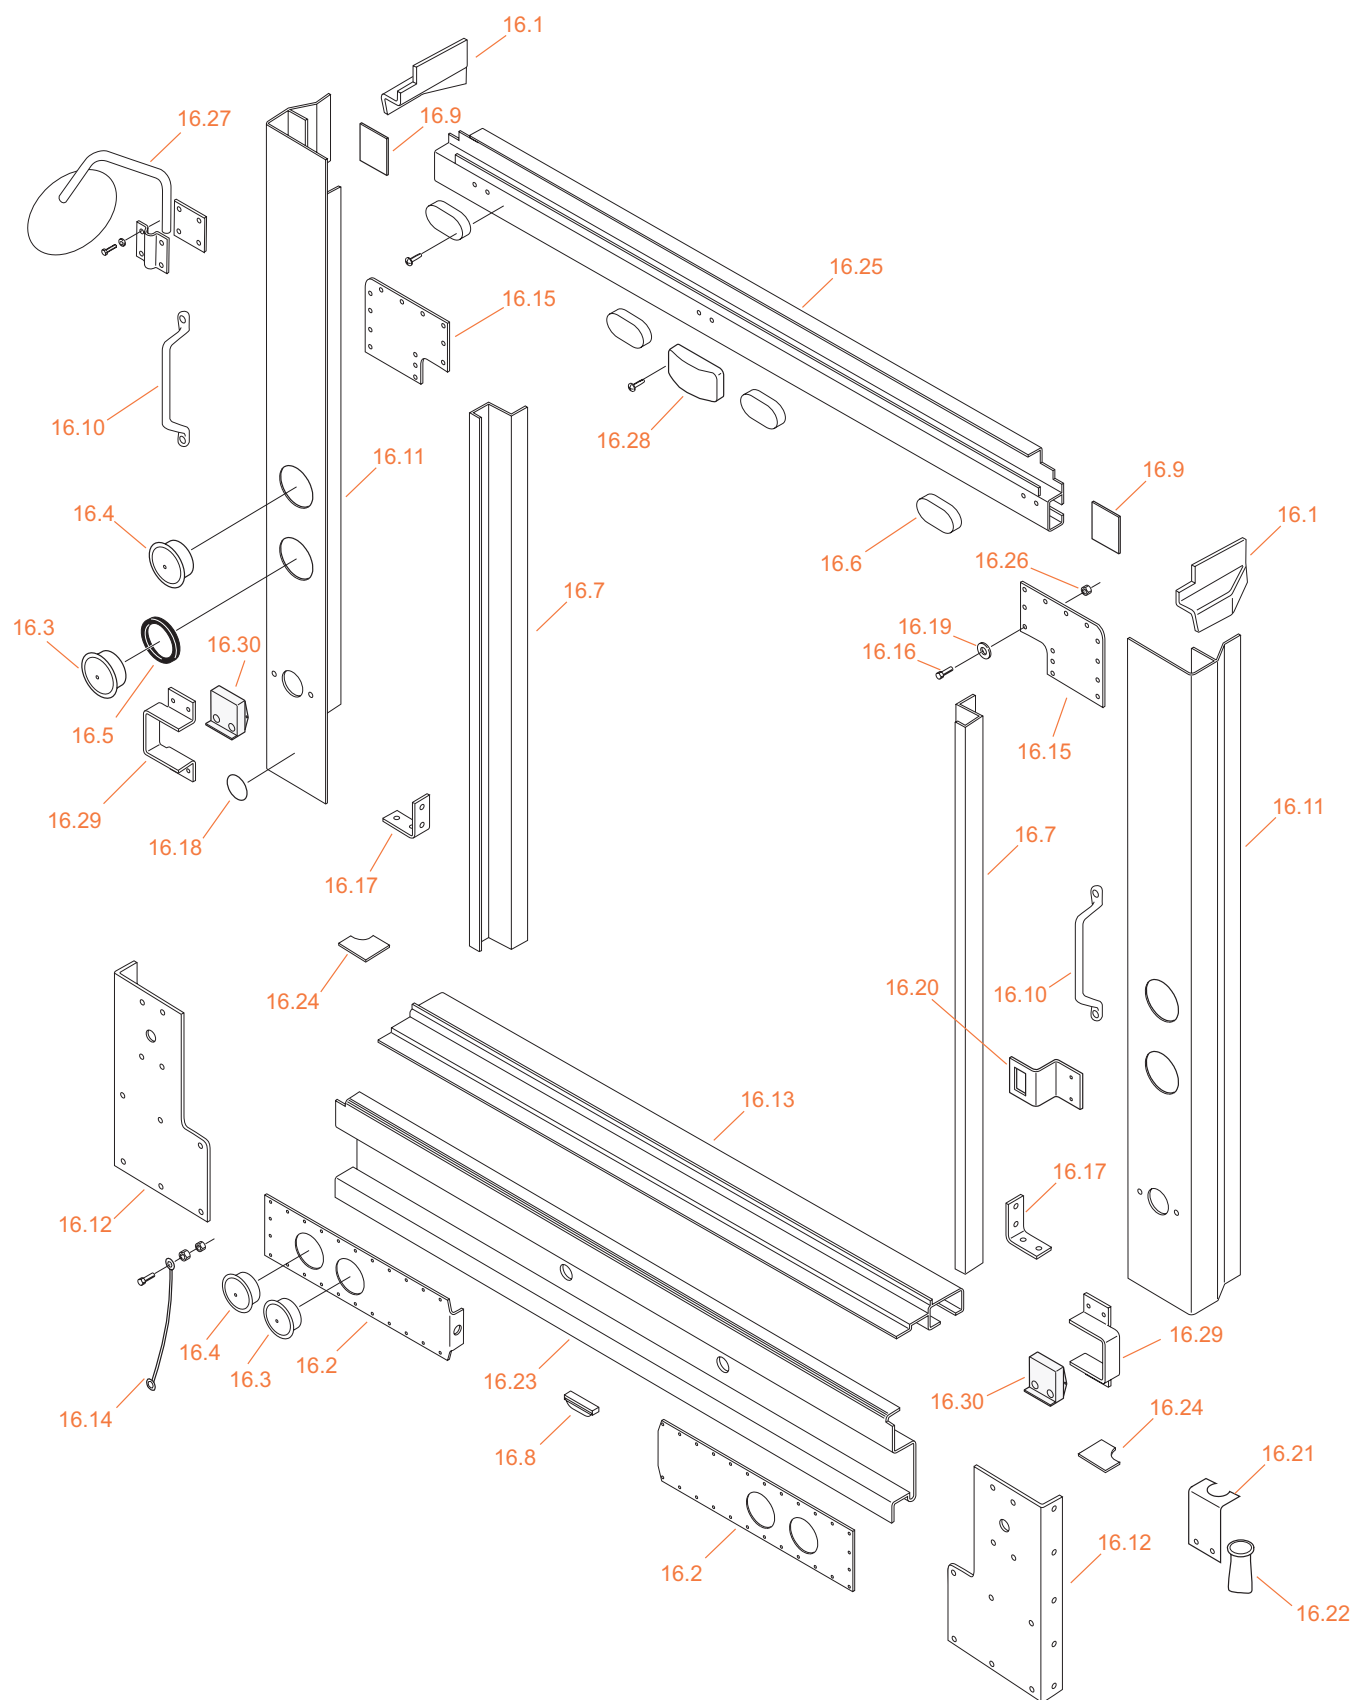


Rear Structure, Full Roll-up Door with Wide Post Option

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

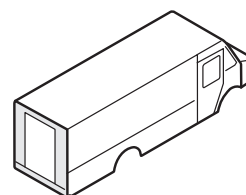

Item	Part Number	Description	Left Hand Right Hand Front Rear
16.22	19800956	VALVE DUCK BILL 077783000	
16.23	06918127	K/PLT CHNL NTC 06003919	
16.24	06917864	FILLER REAR STRUCT WIDE POST	
16.25.1	06919258-CHART	HDR RR STR 06003918 (SPECIFY UNIT SIZE)	
16.25.2	06917684	HEADER REAR 78.00 06003918	
16.25.3	06918125-CHART	HEADER REAR 06003918 (SPECIFY UNIT SIZE)	
16.26	11000040	NUT LCK WXD 5/16-18 2WAY GR5 ZN	(Not Shown) (REFERENCE only)
16.27	13301649	MIRROR 10" DIA W/BRKT SS	
16.28	See Nar Swg Asy	LIGHT CNTR HI-MNTD STOP	
16.29 LH	06918476	GUARD ECHOVISION LH	
16.29 RH	06918477	GUARD ECHOVISION RH	
16.30 LH	16512737	MODULE ECHOVISION LH SENSOR	
16.30 RH	16512736	MODULE ECHOVISION RH SENSOR	
16.Ref	55231230	KAZOO DRAIN INSTAL	
	See also Rear Structure–Narrow Swing Doors.		

17—Door, Rear Roll-up

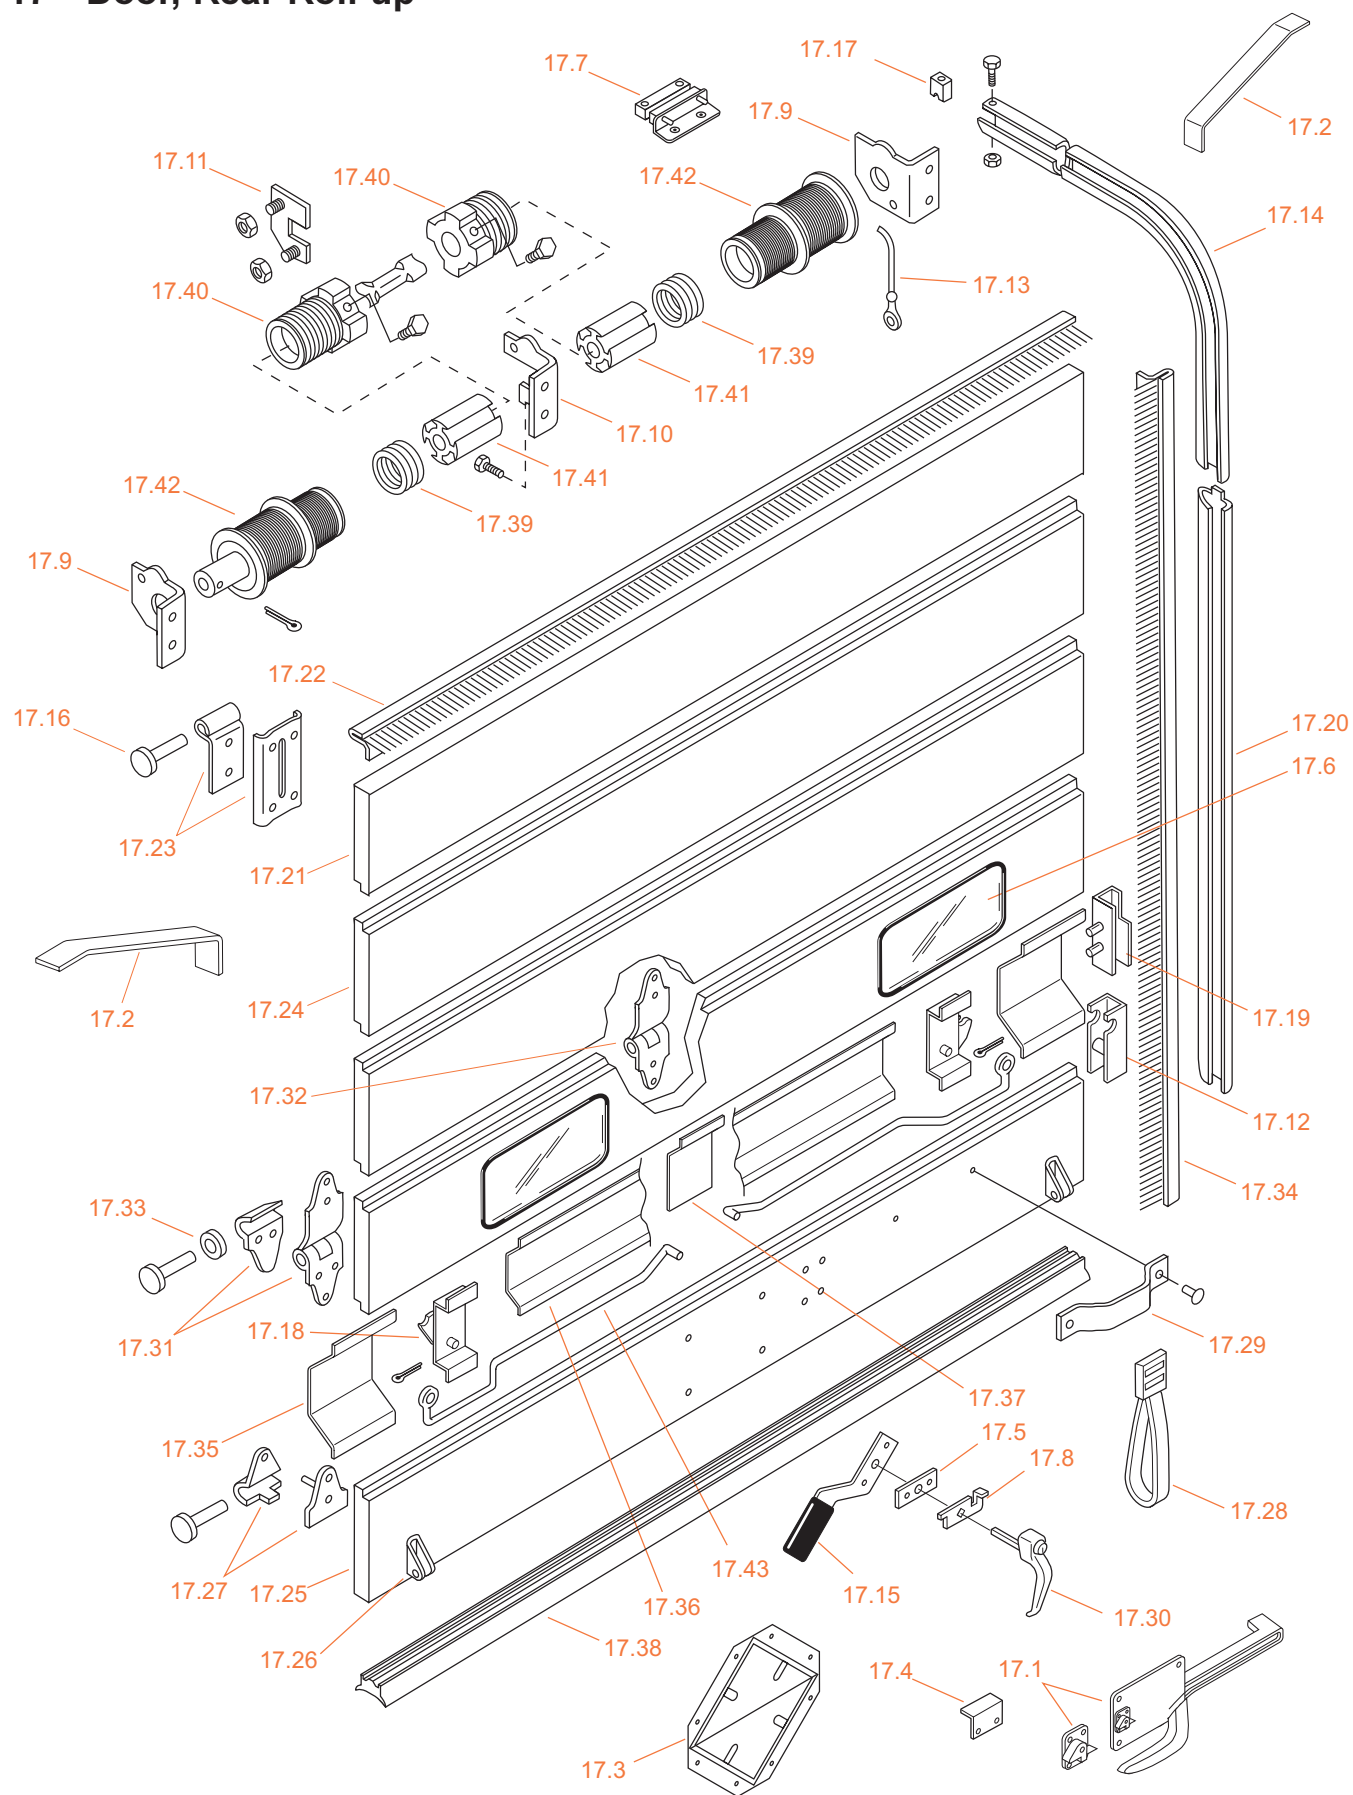


Door, Rear Roll-up

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

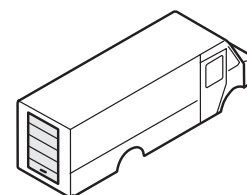


Item	Part Number	Description
17.0	DSNR	REAR ROLL-UP DOOR
17.1	DSNR	MASTER SECURITY (BANANA) LOCK
17.2	06915566	GUSSET NARROW RU DOORS
17.3.1	03101840	PLACARD HAZMAT SPLIT
17.3.2	03101864	PLACARD HAZMAT SPLIT
17.3.3	03101871	PLACARD HAZMAT SPLIT
17.3.4	11401221	RIVET FW 3/16 x 1/4-1/2
17.4.1	22813833	CATCH ASSY RU DR MSL #30-36
17.4.2	22814361	CATCH ASSY RU DR MSL WIDE POST OPT
17.5	DSNR	BOTTOM PLATE
17.6.1	09080405	GLASS 8" x 19" x .219 RAD R-UP DOOR
17.6.2	09080444	GLASS 1/4 x 17-5/8 x 11-5/8
17.6.3	09801338	GLASS 9 x 22 x .219 RAD RU DR
17.6.4	20600021	WINDOW CUTOUT WITH GASKET
17.6.5	05705480	RUBBER RU DR WDO 9 x 22
17.7.1	16511341	SWTCH MGNTC SW DR AJAR
17.7.2	16511398	SWITCH MAGNETIC ACTUATOR
17.8	DSNR	ACTUATOR
17.9 LH	DSNR	BALANCER BRACKET LH
17.9 RH	DSNR	BALANCER BRACKET RH
17.10	DSNR	BALANCER BRACKET CENTER
17.11	DSNR	BALANCER BRACKET CLAMP (CENTER)
17.12	DSNR	LATCH PLATE
17.13	DSNR	STAINLESS STEEL CABLE
17.14	DSNR	HORIZONTAL TRACK
17.15	DSNR	HANDLE, INTERIOR WITH PLASTIC GRIP
17.16	10997091	2" STEEL ROLLERS
17.17	DSNR	2" TRACK STOP BUMPER
17.18 LH	DSNR	LATCH ASSY LH
17.18 RH	DSNR	LATCH ASSY RH
17.19 LH	DSNR	LATCH PLATE MOUNT LH
17.19 RH	DSNR	LATCH PLATE MOUNT RH
17.20	DSNR	VERTICAL TRACK AND MOUNTING ANGLE
17.21	DSNR	TOP PANEL ASSY

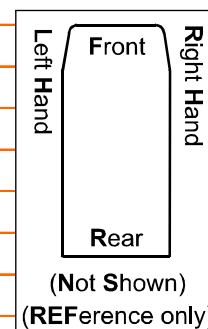

Continued

17—Door, Rear Roll-up (continued)

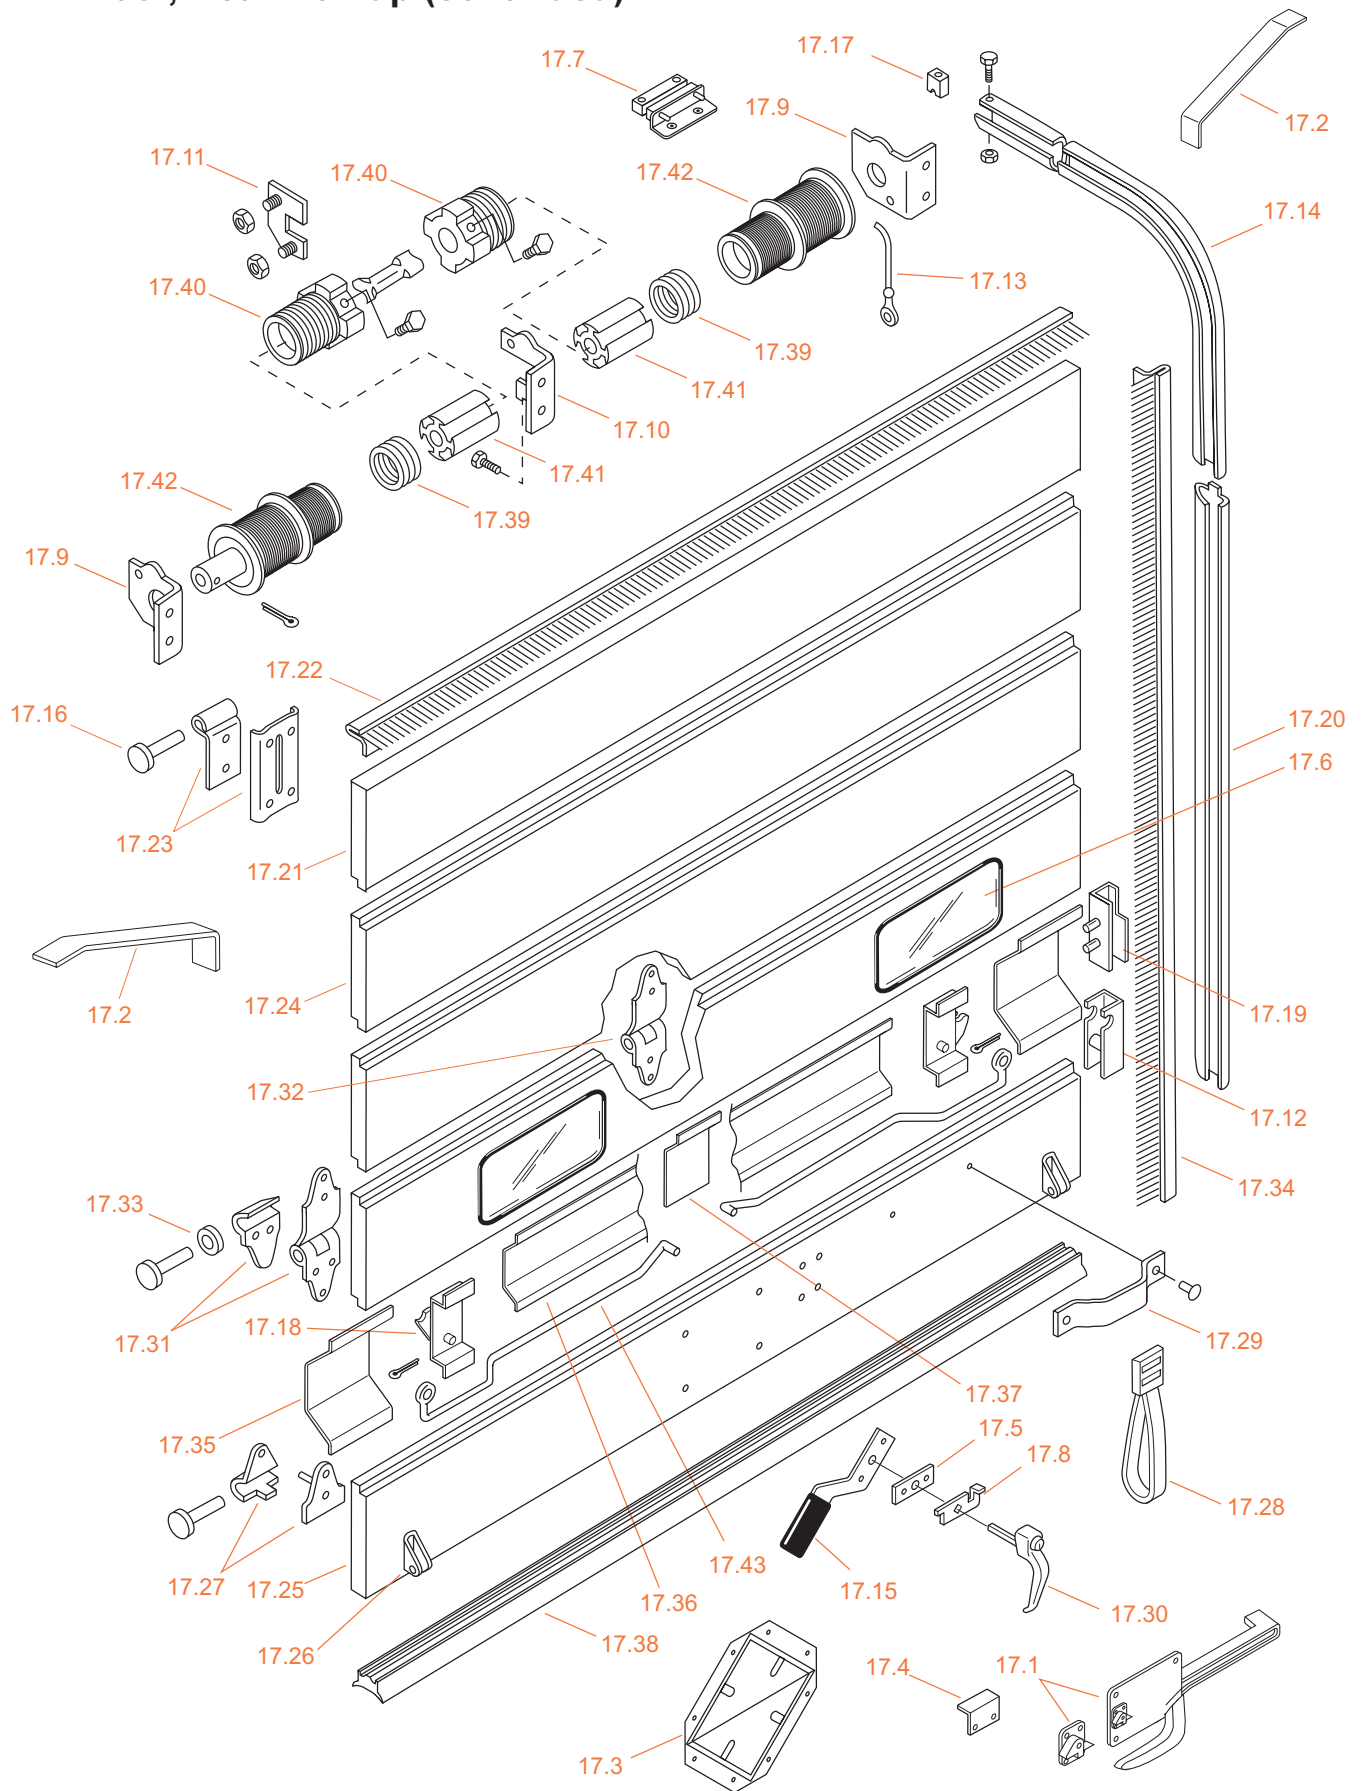


Door, Rear Roll-up

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

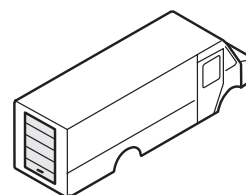

Item	Part Number	Description
17.22	DSNR	DOOR TOP BRUSH SEAL
17.23	DSNR	TOP CLOSURE ASSEMBLY
17.24.1	DSNR	INTERMEDIATE PANEL
17.24.2	DSNR	INTERMEDIATE PANEL
17.25	DSNR	BOTTOM PANEL ASSEMBLY
17.26	DSNR	CABLE ANCHORS
17.27	DSNR	BOTTOM ROLLER BRACKET ASSEMBLY
17.28	DSNR	PULL STRAP
17.29	DSNR	GRAB HANDLE
17.30	DSNR	HANDLE, EXTERIOR
17.31.0	DSNR	ROLLER HINGE ASSEMBLY
17.31.1	DSNR	GASKET, ROLLER HINGE
17.32.0	DSNR	CENTER HINGE
17.32.1	DSNR	GASKET, ROLLER HINGE
17.33	DSNR	SPACER, WASHER (FOR ROLLERS)
17.34	DSNR	SIDE BRUSH SEAL
17.35	DSNR	LATCH COVER
17.36	DSNR	COVER ASSY, LOCK PANEL
17.37.0	DSNR	PLATE ASSY
17.37.1	DSNR	PIN, ACTUATOR
17.38	DSNR	LOWER DOOR SEAL
17.39	DSNR	TORSION SPRING WOUND
17.40	DSNR	CABLE DRUM BEARING ASSEMBLY
17.41	DSNR	SPRING SPACER
17.42	DSNR	WINDING CONE
17.43	DSNR	LOCK ROD
17.NS	10997310	QUICK RELEASE MECHANISM
17.NS	10997311	SAFETY CABLE QUICK RELEASE MECHANISM
	See also Section 16 and the <i>Utilimaster Quick Reference Parts Guide</i> .	

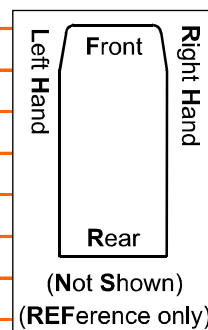

17—Doors, Rear Swing

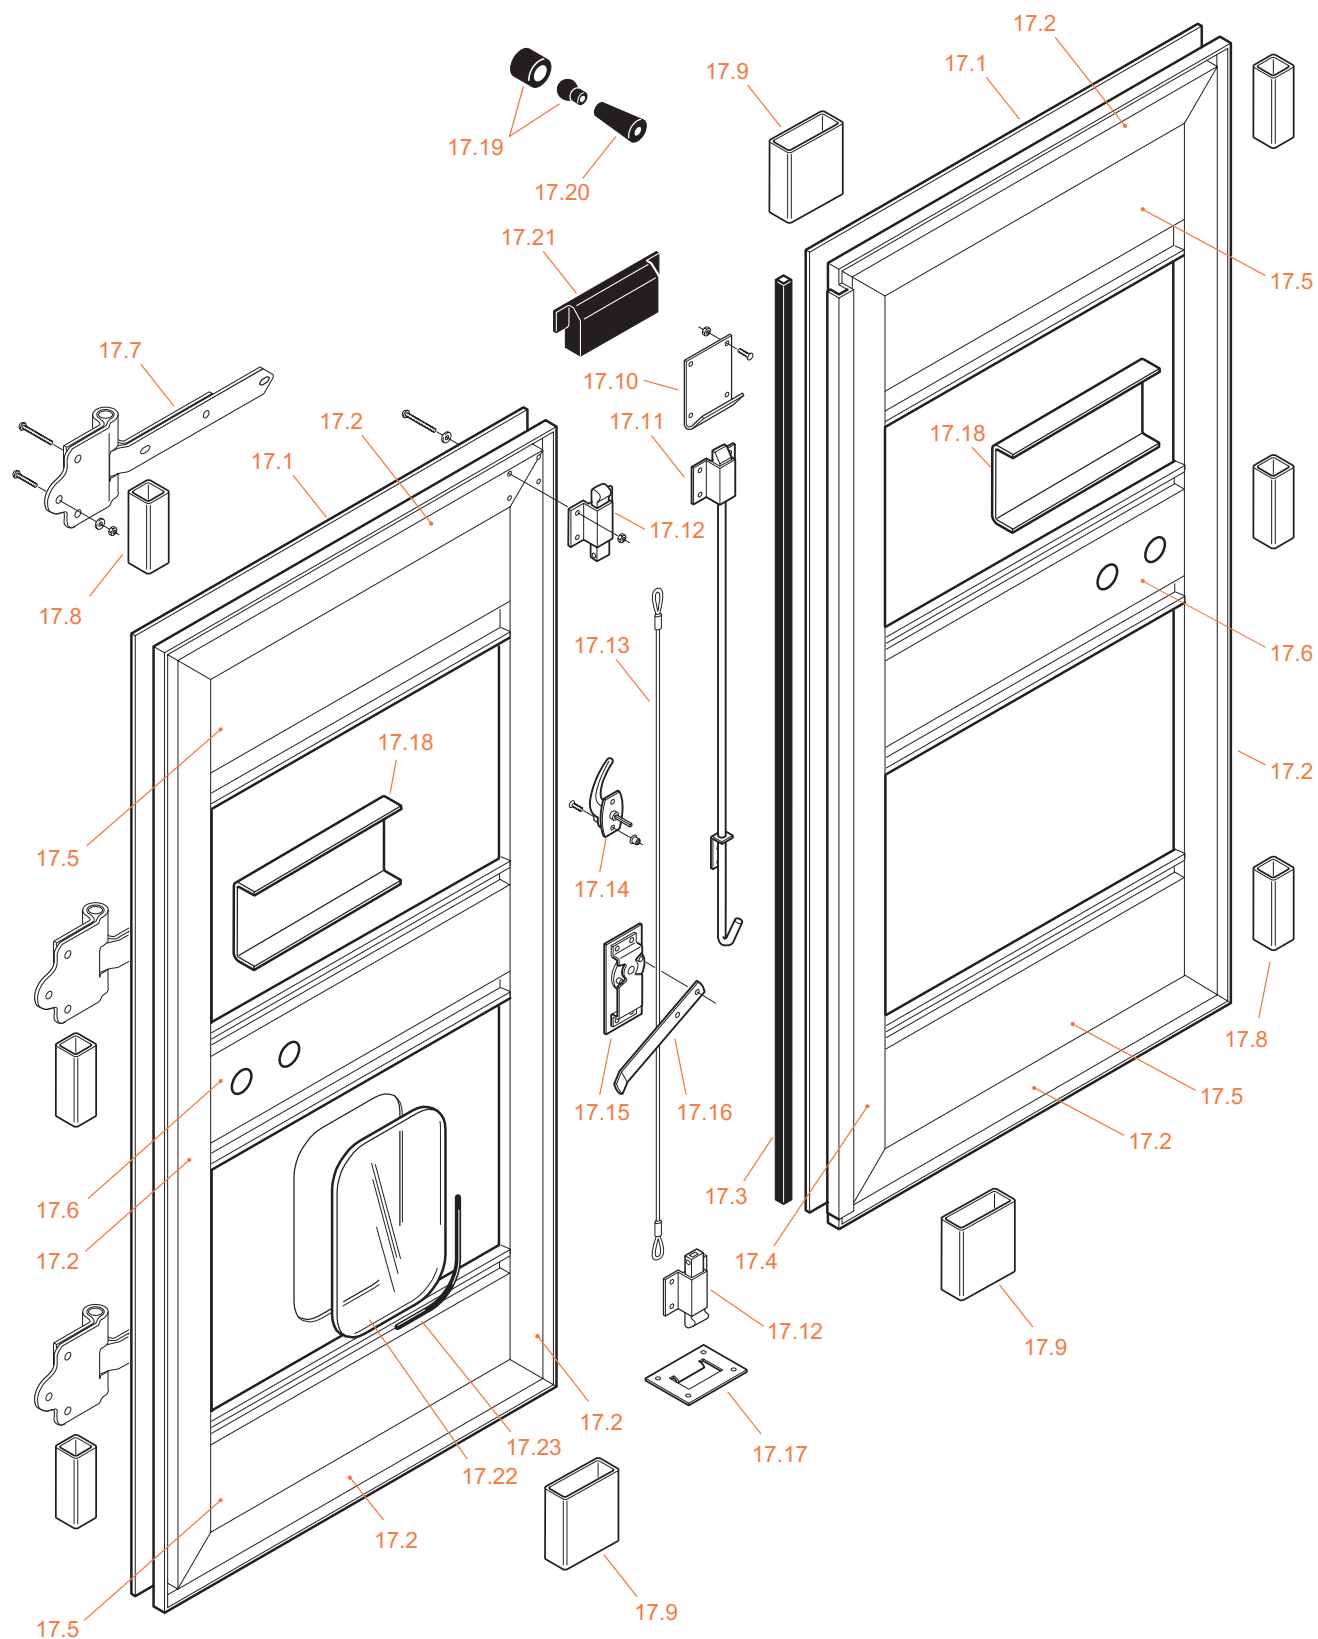


Door, Rear Swing

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

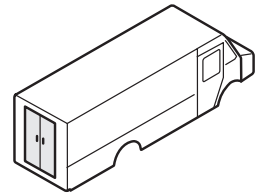

Item	Part Number	Description	Left Hand Front Rear Right Hand (Not Shown) (REFERENCE only)
17.0		REAR SWING DOORS FULL AND QTR FOLD	
17.1.1 LH	06502866-CHART	METAL, REAR SWING DOOR LH (SPECIFY SIZE)	
17.1.1 RH	06502867-CHART	METAL, REAR SWING DOOR RH (SPECIFY SIZE)	
17.1.2 LH	06502966-CHART	METAL, RR DR LH SWG W/1 WDW (SPECIFY SIZE)	
17.1.2 RH	06502967-CHART	METAL, RR DR RH SWG W/ 1WDW (SPECIFY SIZE)	
17.1.3 LH	06502968-CHART	METAL, RR DR LH SWG W/ 2WDW (SPECIFY SIZE)	
17.1.3 RH	06502969-CHART	METAL, RR DR RH SWG W/ 2WDW (SPECIFY SIZE)	
17.1.4 LH	BSNR	METAL, RR DR LH BFLD (SPECIFY SIZE)	
17.1.4 RH	06502970-CHART	METAL, RR DR RH BFLD (SPECIFY SIZE)	
17.1.5 LH	06502971-CHART	MTL RRDR LH BFLD W/ 1WDW (SPECIFY SIZE)	
17.1.5 RH	06502972-CHART	MTL RRDR RH BFLD W/ 1WDW (SPECIFY SIZE)	
17.1.6 LH	06502973-CHART	METAL, RRDR LH BFLD W/ 2WDW (SPECIFY SIZE)	
17.1.6 RH	06502974-CHART	METAL, RRDR RH BFLD W/ 2WDW (SPECIFY SIZE)	
17.2	06012400-Length	IA 7932 SIDE DR BE 06003897 (SPECIFY LENGTH)	
17.3	05402183	SEAL "D" .375 x .625	
17.4	06012490-Length	IA 7931 SIDE DR BE 06003896 (SPECIFY LENGTH)	
17.5.1	06601630-CHART	STIFFNR UP LW DR SWG (SPECIFY SIZE)	
17.5.2	06601718-CHART	STFNR UPR LWR BIFOLD (SPECIFY SIZE)	
17.6.1	06601629-CHART	STIFFNR DR CNTR SWG (SPECIFY SIZE)	
17.6.2	06601717-CHART	STFNR DR CNTR BIFOLD (SPECIFY SIZE)	
17.7	BSNR	HINGE	
17.8	06000125-00300	BACKER, HINGE 1" SQ TUBE IAH122 3.00	
17.9	06000718-00300	BACKER, HARDWARE IAH1746 TUB 3.00 06000718	
17.10.1	22101544	PLATE UPPER STRIKE 6.00	
17.10.2	22101973	PLATE UPPER STRIKE BIFOLD 3.00	
17.11.1	BSNR	DEADBOLT	
17.11.2	08706093	ROD GUIDE ZINC	
17.11.3	08610024	LATCH FINGER PULL W/ 32" ROD	
17.11.4	08700004	ROD 36" W/ FINGER PULL	
17.12	BSNR	SLAM LOCK	
17.13	BSNR	CABLE	
17.14	BSNR	HANDLE, EXTERIOR	
17.15	BSNR	MECHANISM	
17.16	08704374	HANDLE INSIDE	
17.17	22101882	PLATE LWR STRIKER	

Continued

17—Doors, Rear Swing (continued)

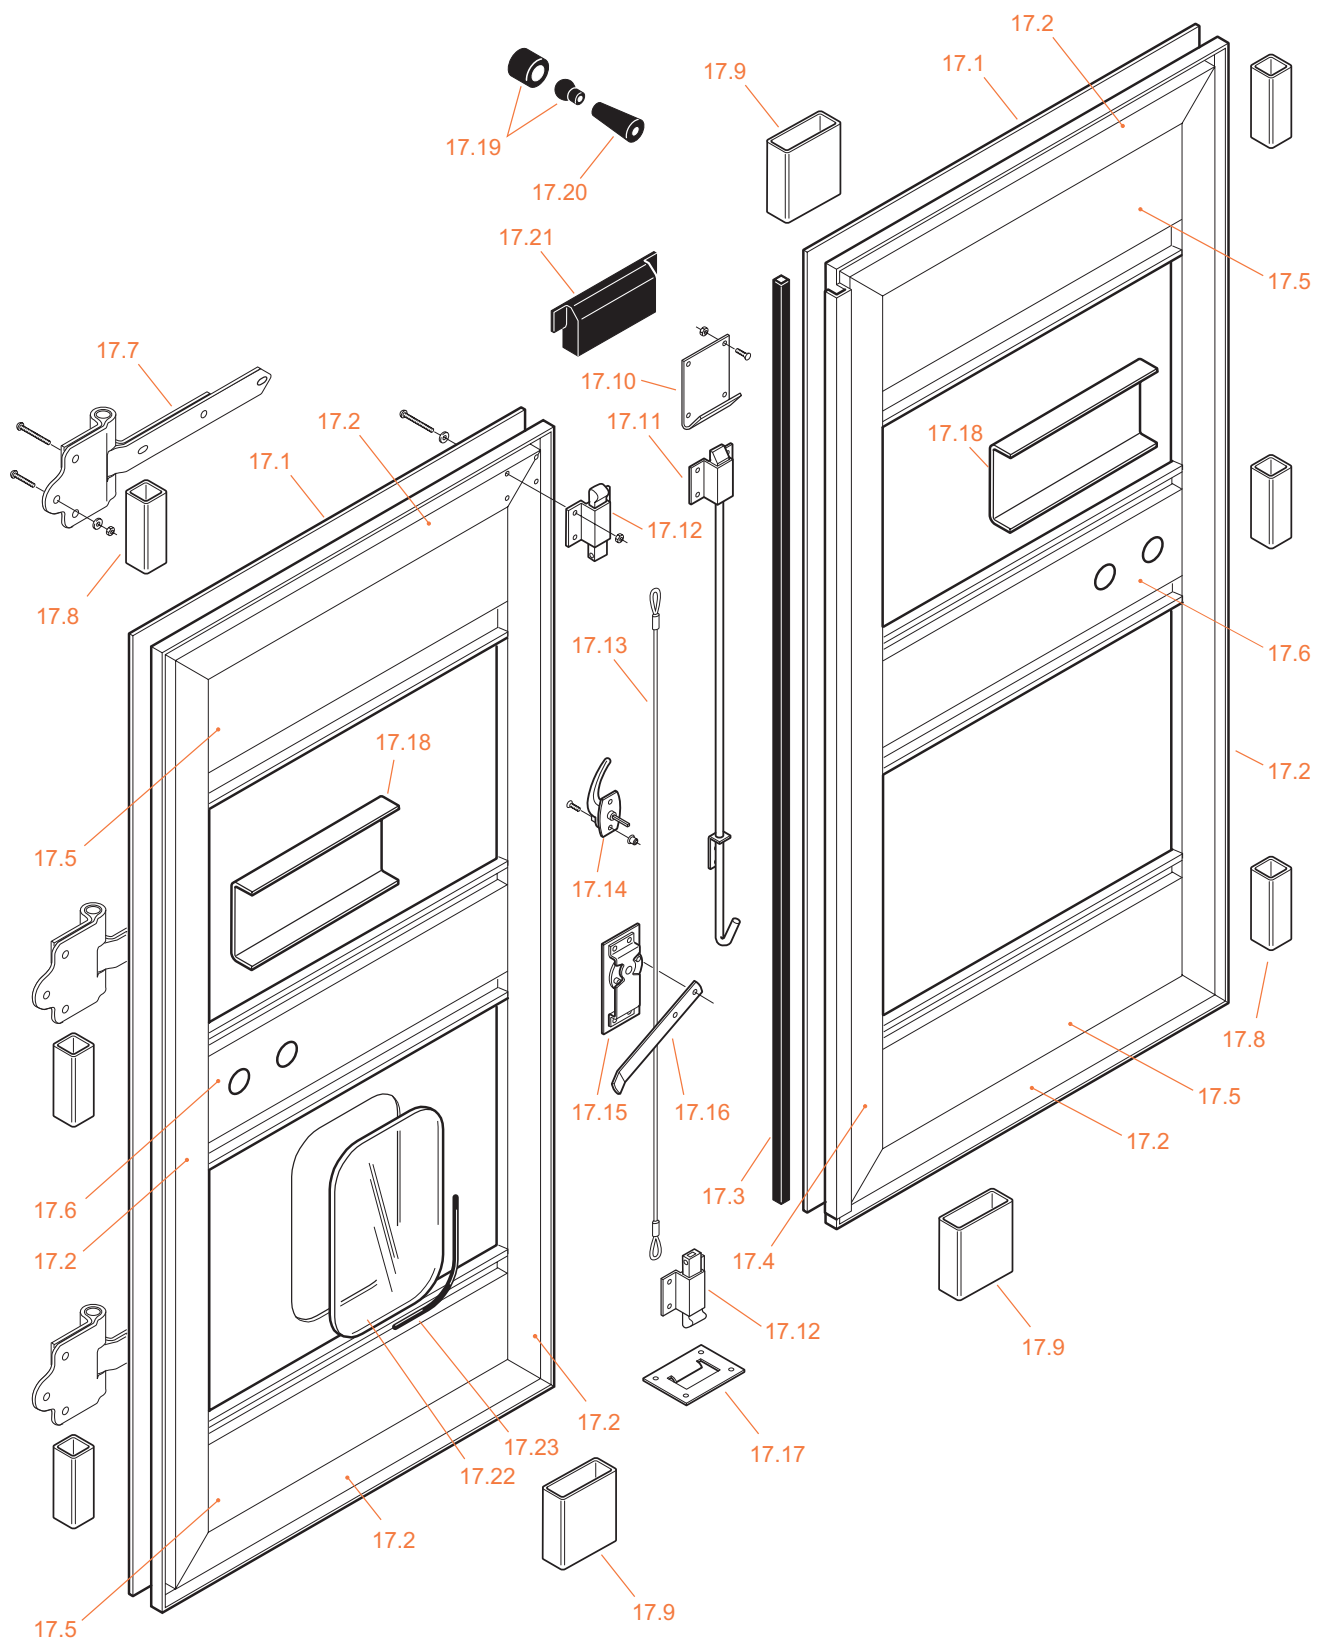


Door, Rear Swing

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

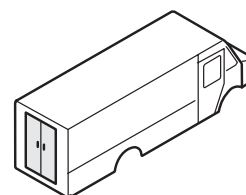

Item	Part Number	Description
17.18	06601705-Length	BACKER HINGE LATCH (SPECIFY LENGTH)
17.19	BSNR	SOCKET AND PLUNGER
17.20	BSNR	PLUNGER EXTENTION
17.21	20510346	COV RR SWG DR LATCH ABS ALL
17.22	09080444	GLASS 1/4 x 17-5/8 x 11-5/8 TMPRD
17.23.1	05402073	WINDOW RUBBER 1/8
17.23.2	05402074	WINDOW RUBBER 3/32
17.Ref	57231632	DR ASY LH RR CHART
17.Ref	57231633	DR ASY RH RR CHART
17.Ref	55231061	RR SWG DR LATCH COV INSTL #30-36

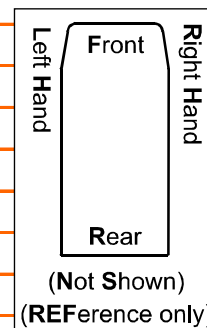

18—Cargo Shelving Option, Fold-up

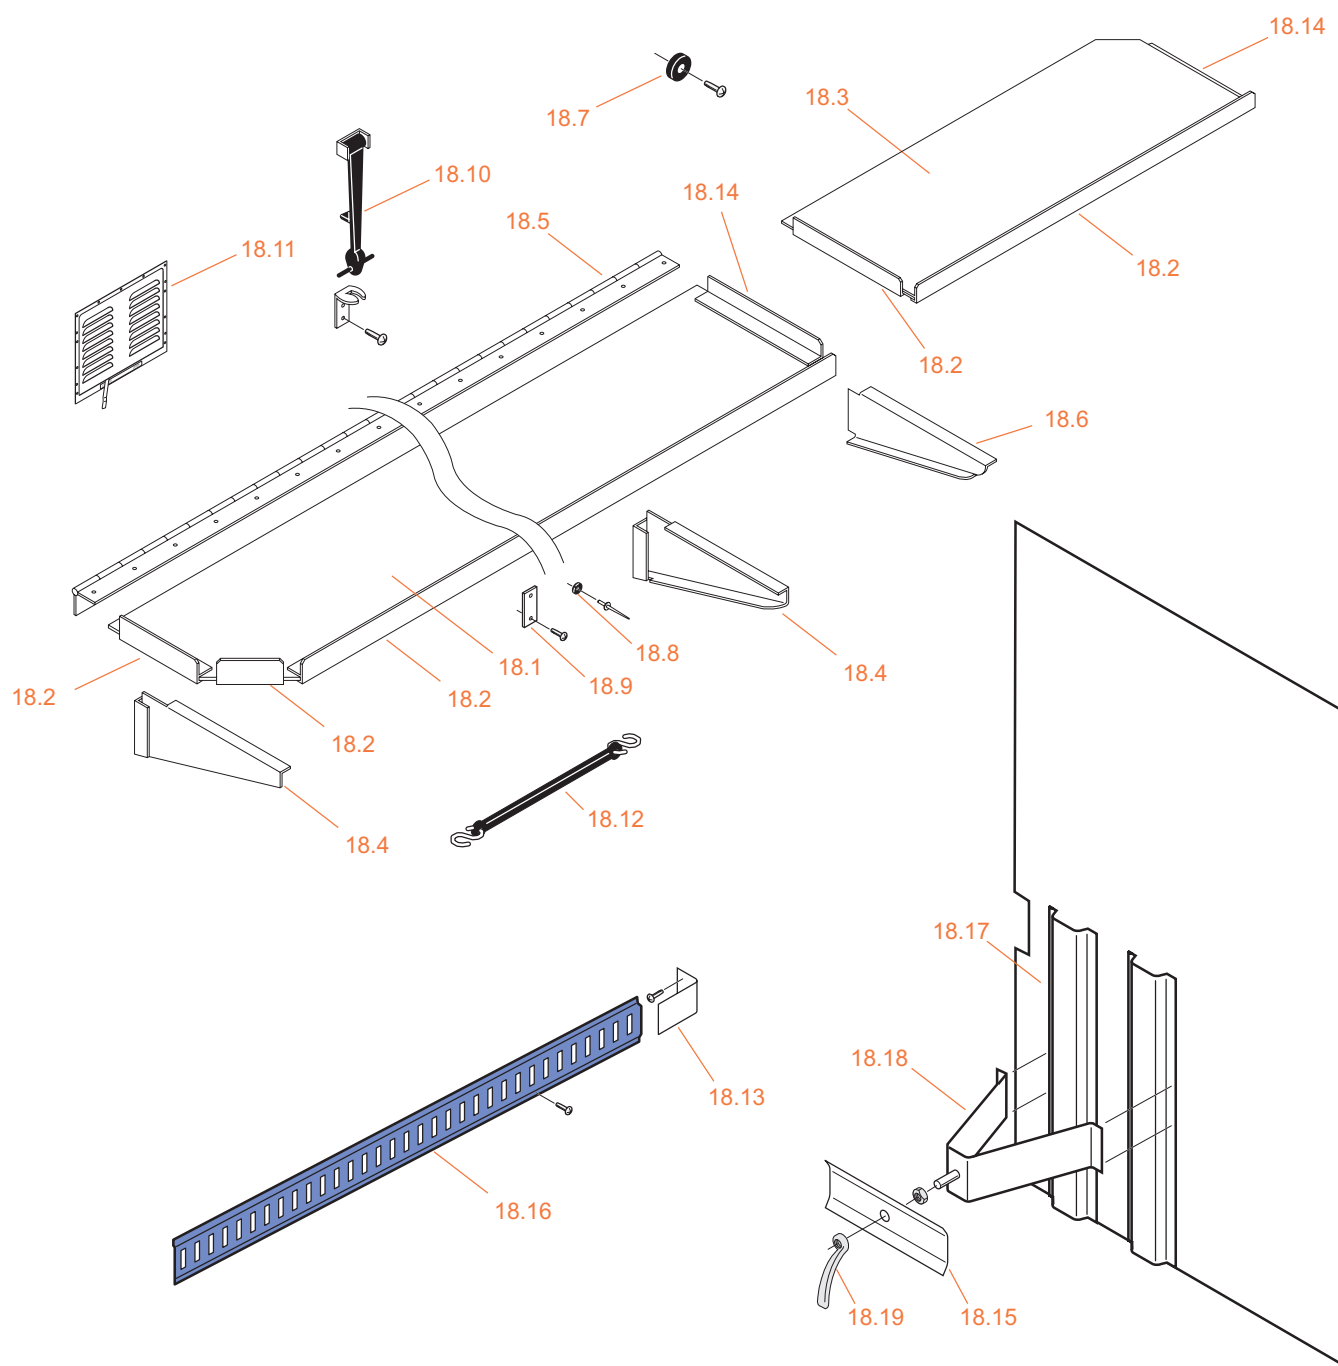


Cargo Shelving Option, Fold-up

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

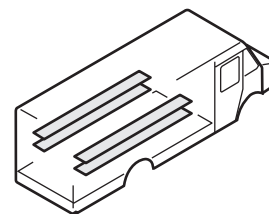


Item	Part Number	Description
18.0		INSTALL SHELF LH FOLDING
18.1	06920482-CHART	SHELF METAL 20" FOLDUP LH .100 (SPECIFY SIZE)
18.2	06914703-Length	SHELF EDGE RBE 06013053 (SPECIFY LENGTH)
18.3.1 RH	06920847	SHLF RH STAT DR PKT 17.06 x 39.19 .100 ALUM
18.3.2 RH	06914698	SHELF FIXED RH DR PCKT 20"
18.4.1 LH	06630773	GUSSET WELDMT LH 17.13
18.4.1 RH	06630763	GUSSET WELDMT RH 17.13
18.4.2 LH	06914669	GUSSET WLDMT LH 20" SHELF
18.4.2 RH	06914668	GUSSET WLDMT RH 20" SHELF
18.4.3 LH	06911250	GUSSET WLDMT LH 9.19"
18.4.3 RH	06911251	GUSSET WLDMT RH 9.19"
18.4.4 LH	06911496	GUSSET WLDMT RS 7x10.81
18.4.4 RH	06911486	GUSSET WLDMT CS 7x10.81
18.4.5 LH	06913095	GUSSET WLDMT LH STAT 17.13"
18.4.5 RH	06913094	GUSSET WLDMT RH STAT 17.13"
18.5	08610280-Length	PIANO HINGE STL .125 x 2 x 2 x (SPECIFY LENGTH)
18.6.1 LH	06914667	GUSSET LH DR PKT 20" SHELF
18.6.1 RH	06914666	GUSSET RH DR PKT 20" SHELF
18.6.2 RH	06914662	GUSSET RH DR PKT 24" SHELF
18.7	08210016	STOP RUBBER
18.8.0	13672282	DUAL LOCK FSTNR 1.12 RND
18.8.1	11400019	BLIND RIVET
18.9.0	20510269	PAD WEAR UHMW .25 x 1.5 x 3.50 HLS
18.9.1	11300249	10-24 x 1 W AFER TEK ZINC PH
18.10	08700114	LATCH FLEX DRAW
18.11.1	07200278	VENTILATOR ALUM 10 x 12
18.11.2	07200275	VENT ALUM LOUVER ONLY
18.11.3	03102154	DECAL BUTTERFLY VENT OPEN/CLOSED
18.12.1	08610265	STRAP RUBBER TARP 15"
18.12.2	08780104	STRAP RUBBER TARP 20"
18.12.3	11600020	HOOK "S"
18.13	06918173	BRACKET E-TRACK MOUNTING .125
18.14	06002050-Length	IA 637 ANGLE 06002050 (SPECIFY LENGTH)
18.15	01902194	SPARE TIRE RETAINER DUAL 30-36

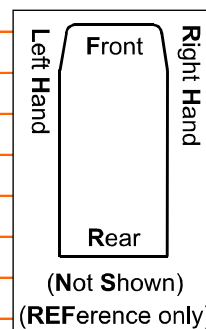

Continued

18—Cargo Shelving Option, Fold-up (continued)

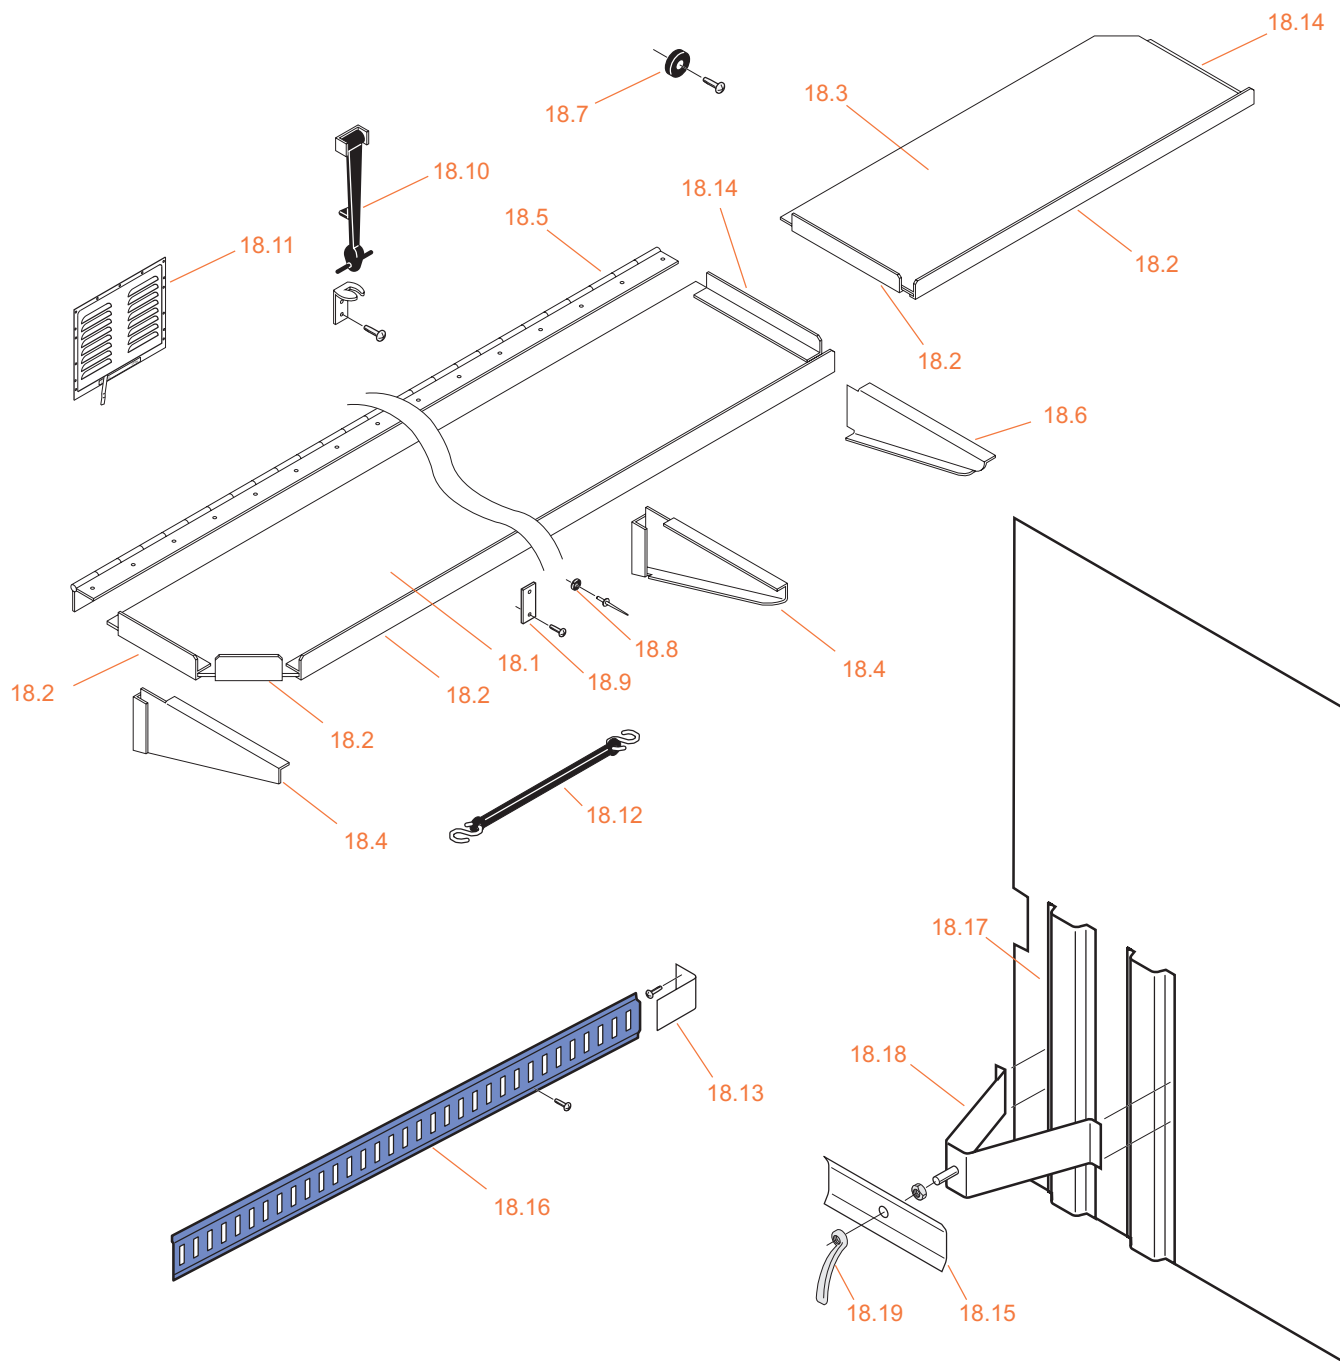


Cargo Shelving Option, Fold-up

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

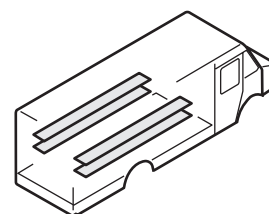


Item	Part Number	Description
18.16.1	08610506	E-TRACK NO HLS GALVANIZED 10'
18.16.2	08610547-19600	TRACK GALV "E" R-FORM 196.00
18.16.3	08610469-Length	TRACK HORIZ"A" (SPECIFY LENGTH) ALUM
18.16.4	08610924	E-TRACK STEEL 83.12
18.17	06920497	RUB RAIL W/RAD&HLS 28.00 06000142
18.18	01902114	BRACKET TIRE CARRIER ASSY DUAL
18.19	11600880	NUT IRON HANDLE 1/2-13
18.NS	08610603-CHART	BAR E-TRACK LOAD (SPECIFY SIZE)
18.NS	12303707	TAPE VINYL 1" WHITE
18.NS	08610875-CHART	BAR F-TRACK SHORING LOAD
18.Ref	53234654	INSTALL LINER E-TRACK
18.Ref	53234543	INSTALL E-TRACK CHART
18.Ref	64236885	INSTALL OPEN/CLOSED DECAL
18.Ref	53233154	SHELF ASY 20" FOLDING LH 14'
18.Ref	53233153	SHELF ASY 20" FOLDING RH 14'
18.Ref	53234553	SHELF ASSY LH FLDG 19'L
18.Ref	53234554	SHELF ASSY RH FLDG 19'L
18.Ref	53234463	SHELF ASY LH BOT DR PCKT STAT
18.Ref	53234457	SHELF ASY LH DR PCKT STAT
18.Ref	53234458	SHELF ASY RH DR PCKT STAT

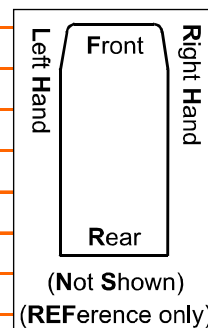


18—Cargo Shelving Option, Laundry Racks

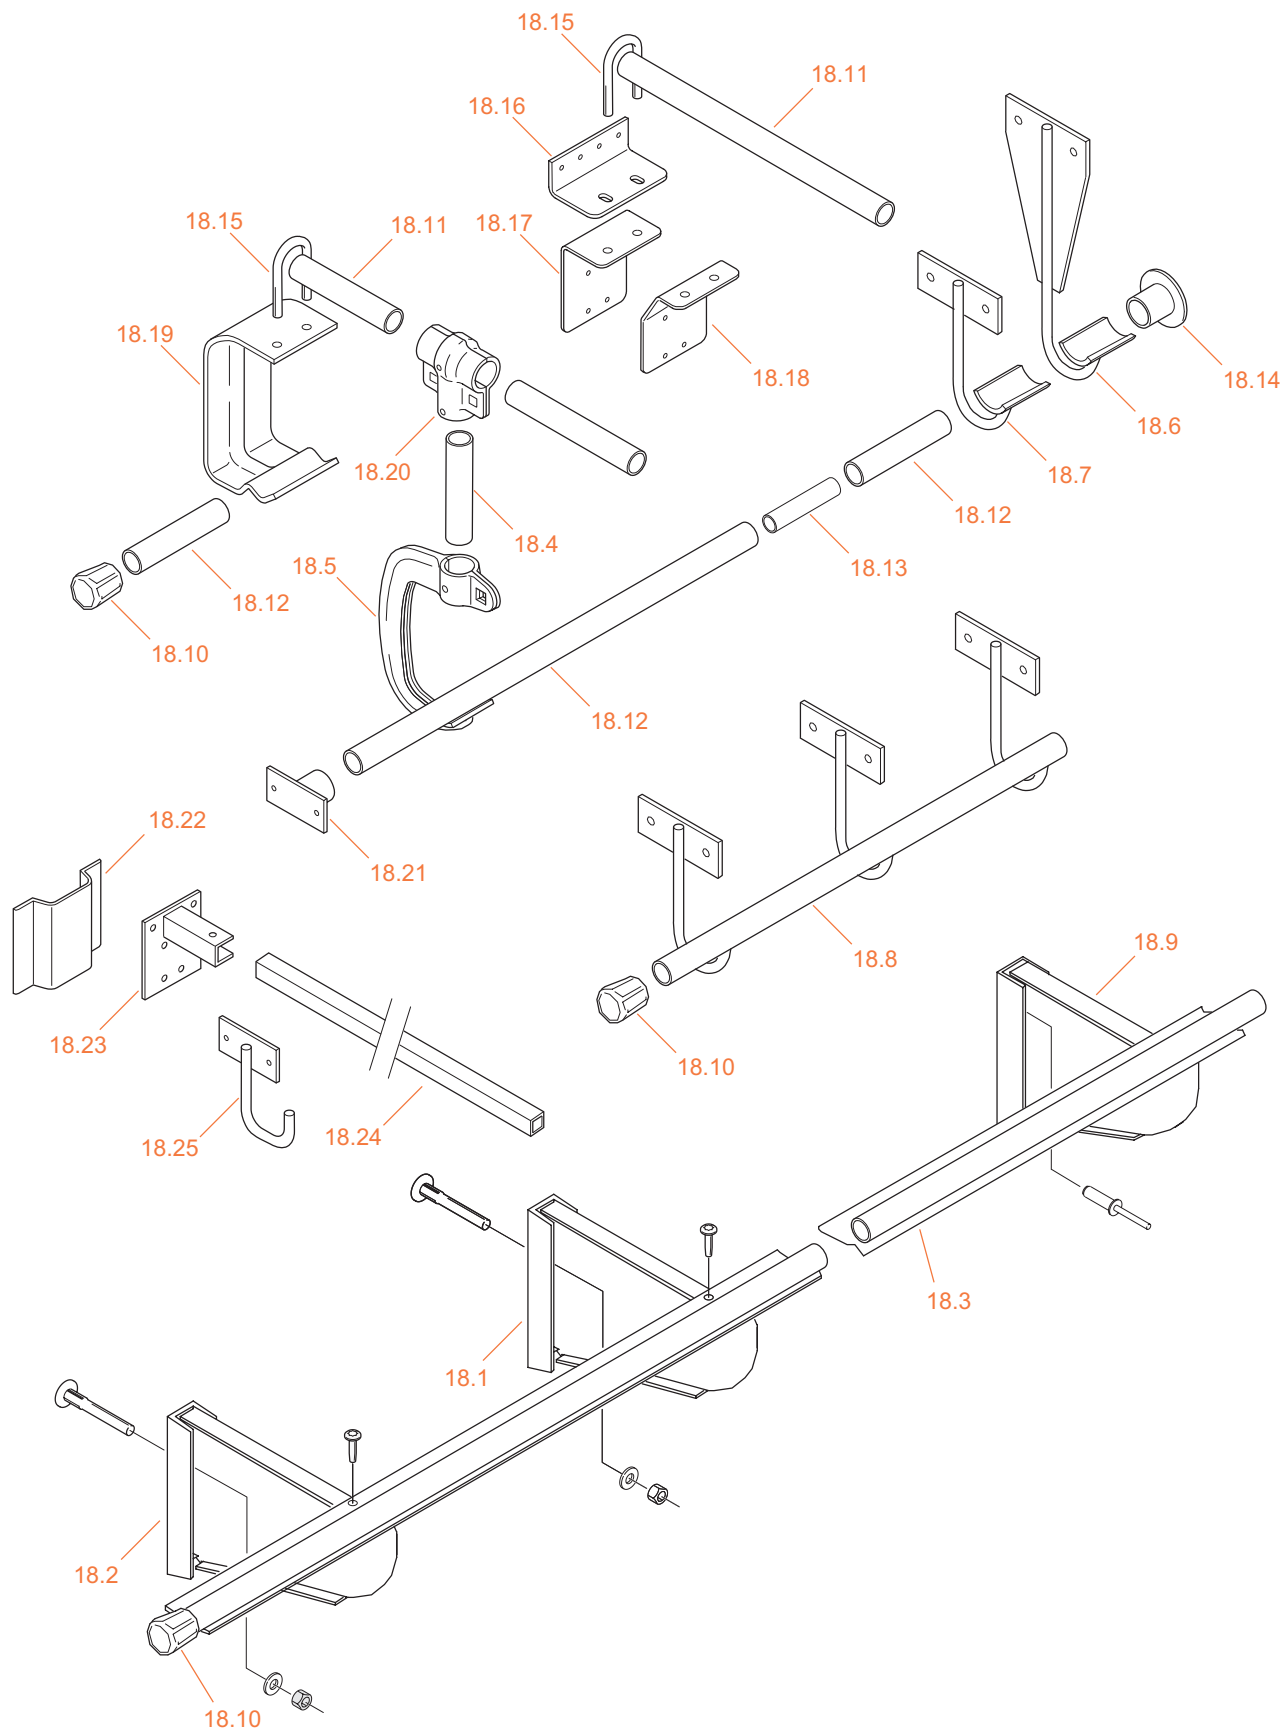

Item	Part Number	Description
18.0		LAUNDRY RACKS
18.1 LH	06916792	GUSSET WLDMT LH 8.51 (TO SIDEWALL)
18.1 RH	06916793	GUSSET WLDMT RH 8.51 (TO SIDEWALL)
18.2 LH	06911496	GUSSET WLDMT 7 x 10.81 (TO DOOR POCKET)
18.2 RH	06911486	GUSSET WLDMT 7 x 10.81 (TO DOOR POCKET)
18.3	22813942	RACK WLDMT LAUNDRY (SPECIFY LENGTH)
18.4	19901266	TUBING BRIGHT ZINC 1.05 OD (SPECIFY LENGTH)
18.5	08610916	HANGER DROP LAUNDRY BAR
18.6 LH	22814951	WELDMENT J HOOK LH 10.62
18.6 RH	22814952	WELDMENT J HOOK RH 10.62
18.7 LH	22814943	WELDMENT J HOOK LH 5.13
18.7 RH	22814949	WELDMENT J HOOK RH 5.13
18.8 LH	21310734-18500	RACK LAUNDRY WELDMENT LH 185"
18.8 RH	21310733-18500	RACK LAUNDRY WELDMENT RH 185"
18.9 LH	06911250	GUSSET WLDMT LH 9.19" (TO DOOR POCKET STIFFENER)
18.9 RH	06911251	GUSSET WLDMT RH 9.19" (TO DOOR POCKET STIFFENER)
18.10	08700573	TIP BUMPER (L/PIPE)
18.11	19901268-Length	TUBING BRIGHT ZINC 1.66 OD (SPECIFY LENGTH)
18.12	19901267-Length	TUBING BRIGHT ZINC 1.31 OD (SPECIFY LENGTH)
18.13	19901272	INSERT 1.31 O.D. TUBING
18.14	22815093	STOP WLDMT END LAUNDRY PIPE
18.15.1	08611019	BOLT-U .31 x 1.75 x 2.25
18.15.2	11000805	NUT HEX 5/16-18 ZINC
18.15.3	11000076	NUT ACORN 5/16-18
18.16	06921869	BRACKET CROSS BAR UPPER
18.17	06921870	BRACKET CROSS BAR LOWER
18.18	06921871	BRACKET CROSS BAR
18.19	08610918	HANGER LAUNDRY BAR
18.20	08610917	CLAMP DROP LAUNDRY BAR (2) PARTS
18.21	22815514	BRKT WLDMT LAUNDRY PIPE
18.22	06000142-Length	AE RUBRL W/RAD IA 6964 W 14875
18.23	22813638	BRKT WLDMT SURGE BAR CRNR
18.24	22200639-Length	TUBE 11GA x 1.5 x 1.5 x PAINTED (Specify Length)
18.25 LH	22813074	J HOOK WLDMT LH 4.75"
18.25 RH	22813073	J HOOK WLDMT RH 4.75"
18.NS	06003909-04800	STUD FILLER FOR IA 6964 IA 8122
18.Ref	53234635	RACK INSTL LAUNDRY SWING DR
18.Ref	53234636	RACK INSTL LAUNDRY ROLL UP DR
18.Ref	53233464	INST L/MNT LAUNDRY RACK 16
18.Ref	53233465	RACK PIPE LOW-MNT INST DOM LIN
18.Ref	19901273	INSERT 1.31 O.D. TUBING INSTL

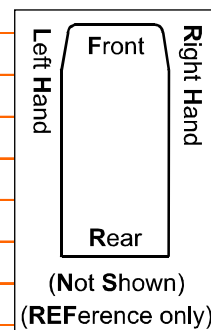

19—Roof

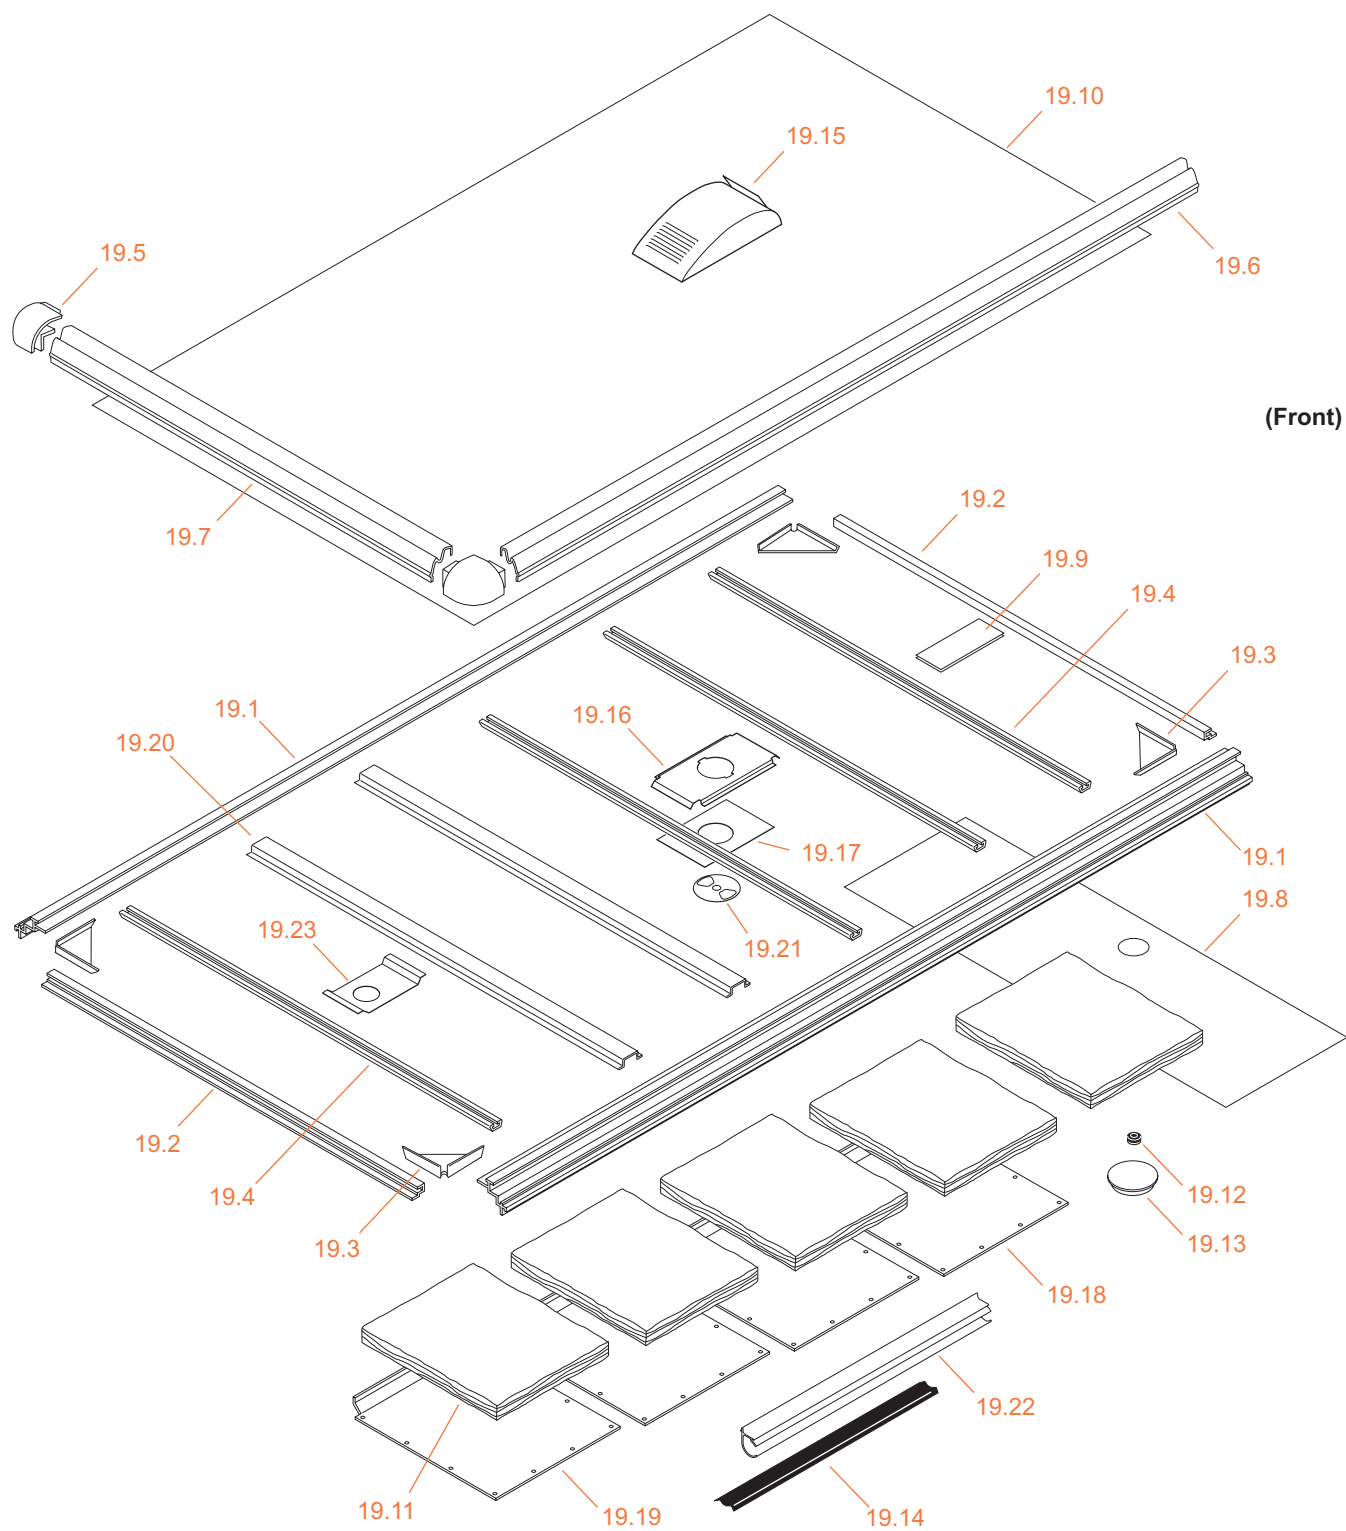


Roof

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

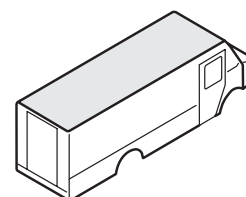


Item	Part Number	Description
19.0		ROOF ASSEMBLY
19.1	06003911-Length	IA 8160 ROOF EDGE (SPECIFY LENGTH)
19.2	06003866-Length	IA 7448 RF END (SPECIFY LENGTH)
19.3	06601460	GUSSET ROOF 7.69 x 8
19.4	22150695-Length	ROOF BOW ANTI-SNAG (SPECIFY LENGTH)
19.5 LH	06850012	CASTING RF CAP REAR LH
19.5 RH	06850011	CASTING RF CAP REAR RH
19.6.0	06000764-Length	IA 9101 RFCAP (SPECIFY LENGTH)
19.6.1	11600519-11AHP	RIVET ENCAP AD66H W/PLASTISOL
19.7	06003875-Length	IA 7474 ROOF CAP (SPECIFY LENGTH)
19.8	06601648-Width	HEADLINER FRONT (SPECIFY WIDTH)
19.9.1	06913673	BACKER CARGO LIGHT 10 x 25
19.9.2	06924500	BACKER CARGO LAMP .080 x 10 x 25
19.10.1	BSNR*	ROOF METAL
19.10.2	01901065	KEMLI 06 x 96 x COIL FW
19.10.3	11400600	RIVET A VEX 3/16 x 3/8
19.11	20510275	INSUL F/GLASS 1" x 21" x 100' 3/PLY
19.12	Part of 19.13	GROMMET
19.13	15202126	LIGHT KD12V CARGO
19.14	05302195	INSERT VINYL BLACK 3/4"
19.15.1	07206132	VENT NON POWER
19.15.2	07206133	VENT 200CFM
19.16	06917078	BACKER VENT ROOF
19.17	06917079	COVER VENT ROOF
19.18	06601778-Width	ROOF LINER W/SKYLITE (SPECIFY WIDTH)
19.19.1	06917113-CHART	LINER LH END 6" SKYLITE
19.19.2	06917112-CHART	LINER RH END 6" SKYLITE
19.19.3	06917110-CHART	LINER RH END 24" SKYLITE 78.5
19.19.4	06917116-CHART	LINER RH END 24" SKYLITE 86.5
19.19.5	06917117-CHART	LINER RH END 24" SKYLITE 93.5
19.19.6	06917118-CHART	LINER LH END 24" SKYLITE 86.5
19.19.7	06917119-CHART	LINER LH END 24" SKYLITE 93.5
19.19.8	06917125-CHART	LINER MID 6" SKYLITE
19.20	22150700-Width	ROOF BOW W/ROOF A/C (SPECIFY WIDTH)
19.21	07205104	GARNISH FOR ROOF VENT
19.22	20510691-14000	TRACK ROOF RAIL CONDUIT 140.00
19.23	06923531	PLATE 4-1/2" OFFSET RECESSED LIGHT

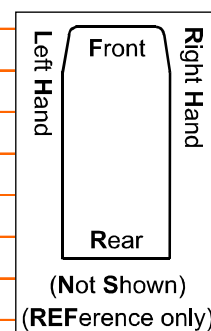

Continued

19—Roof (continued)

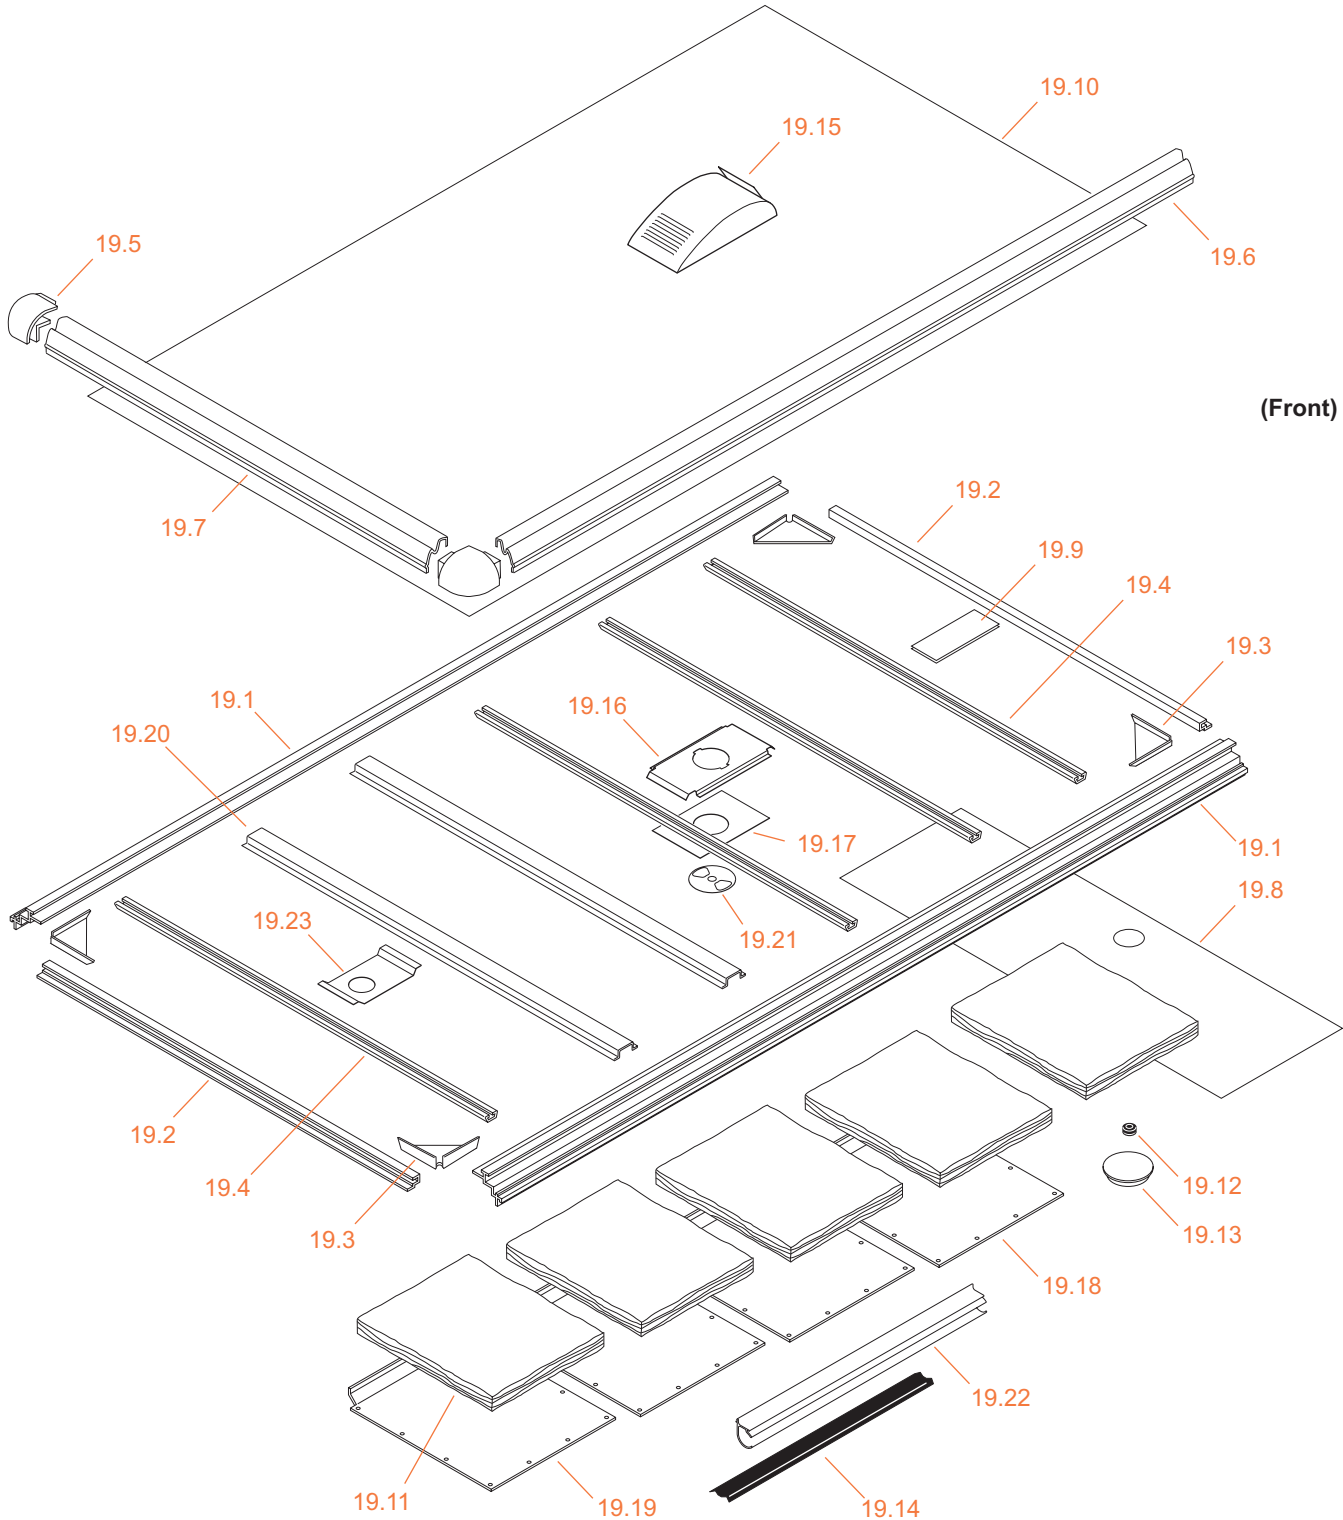


Roof

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

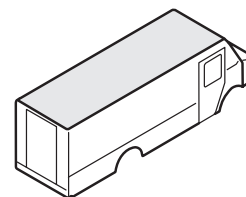

Item	Part Number	Description
19.NS	01900680	SUN PATCH REPAIR KIT
19.NS	12300550	SEALANT, SELF LEVELING
19.NS	12400712	SIKAFLEX ALUM 11FLOZ
19.NS	12605927	ADHESIVE H STR TAPE .015
19.NS	12605933	TAPE ADHESIVE 1/2"
19.NS	12605905	TAPE BUTYL 1/8 x 1-1/4 30' ROLL
19.NS	12605849	TAPE BUTYL 3/16 x 1-1/2 25' ROLL
19.NS	12605928	ADHESIVE URETHANE SEALANT ALUM
19.Ref	56232022	ROOF ASY INSTALL
19.Ref	56232009	INSTL RAD CAP TO ROOF ASSY
19.Ref	53234211	INSTL ASY SIDE SKIN TO ROOF RL

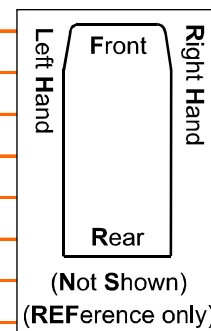

20—Positive Pressure System

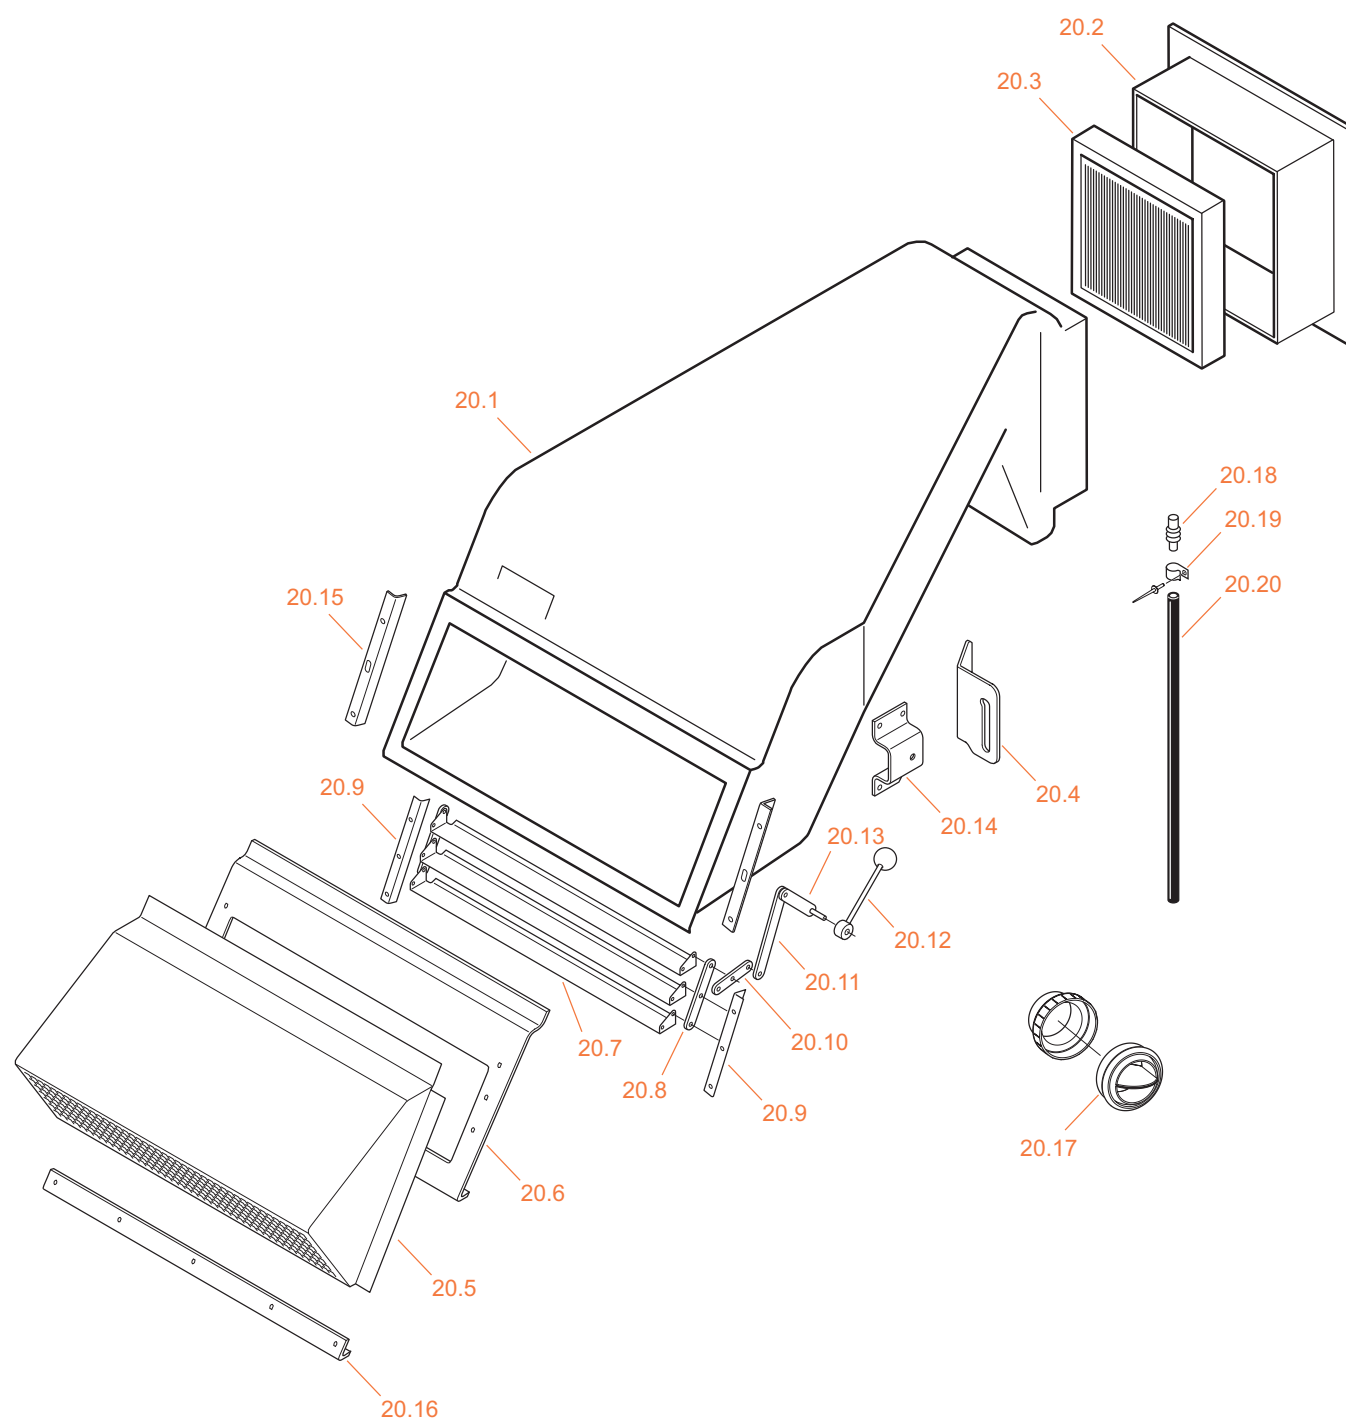


Positive Pressure System

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.



(See the Decoding Part Numbers section for Item, Part, and Description codes.)

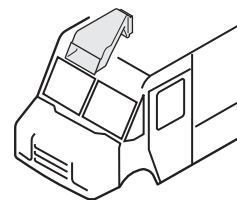

Item	Part Number	Description
20.0	64236594	INSTL DUCT RH POS PRESS
20.1	20510556	WELDMENT POS PRESS DUCT SONIC
20.2	20510553	COLLAR POS PRESS BLKHD MNTG
20.3	08610641	FILTER AIR POS PRESSURE
20.4	06920208	BRKT POS PRESS DETENT-PLASTIC
20.5	06919144	WLDMT POS PRESS INTAKE SCOOP
20.6	06919137	DUCT TOP FRONT POS PRESS RH
20.7	06918854	LOUVER VENT POS PRESS
20.8	22814977	LINKAGE POS PRESS CONNECTOR
20.9 LH	06918513	BRKT LH POS PRESS LOUVER SUPT
20.9 RH	06918514	BRKT RH POS PRESS LOUVER SUPT
20.10	22814978	LINKAGE POS PRESS PIVOT
20.11	22814979	LINKAGE POS PRESS CONTROLLING
20.12	64236583	ASY POS PRES HAND ACTUATOR LEVER
20.13	22815085	ASSY PIVOT ROD/LINKGE POS PRES
20.14	06920027	BRKT POS PRESS LEVER SUPPORT
20.15	06919419	BRACE SUPPORT SIDES POS PRESS
20.16	06919420	BRACE SUPPORT LOWER POS PRESS
20.17	17990611	LOUVER (2-PIECE)
20.18	08610697	DRAIN POS PRESS
20.19	08706376	J-CLAMP 1/2" .203 HOLE
20.20	18504607	HOSE DRAIN 1/2" ID
20.NS	03101903	DECAL POS PRESS INSTRUCTIONS
20.NS	03101844	DECAL POS PRESS "OPEN"/"CLOSE"
20.NS	11600622	WASHER NYLON .50
20.NS	11600623	CLIP RETAINING .25
20.NS	11103030	PIN COTTER 3/32 X 1" ZINC
20.NS	11600618	SPACER HAND ACTUATOR LVR NYLON
20.Ref	20510562	ASSY, DUCT RH POS PRESSURE
20.Ref	64236581	ASSY, DAMPER POSITIVE PRESSURE

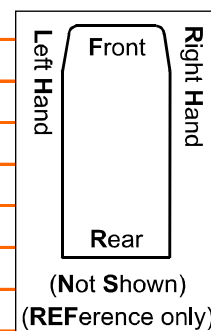

21—Electrical Harnesses

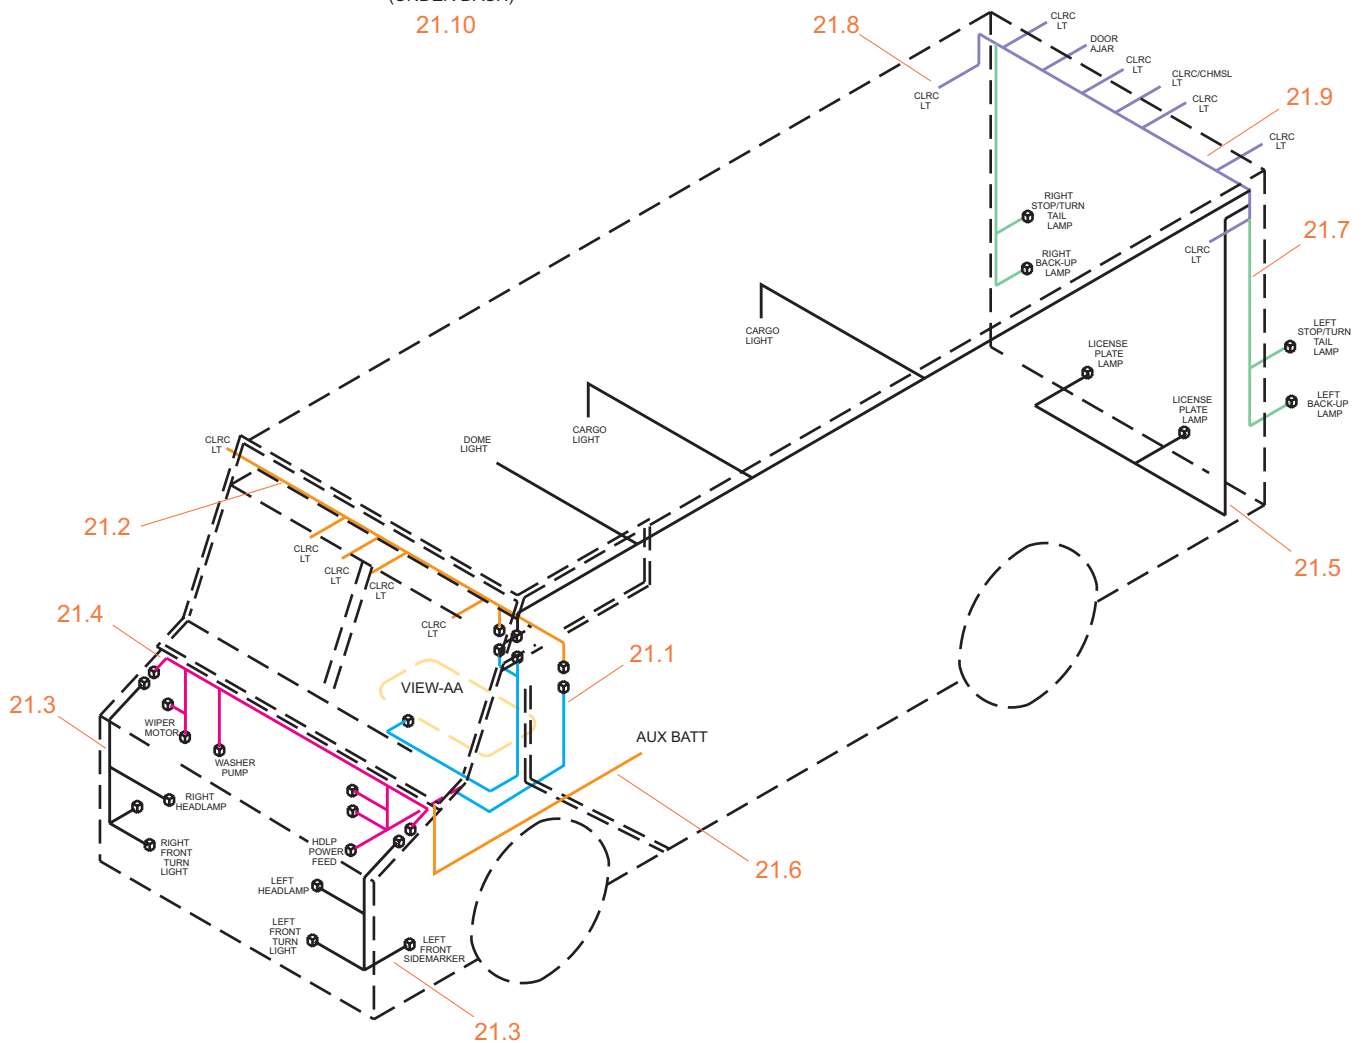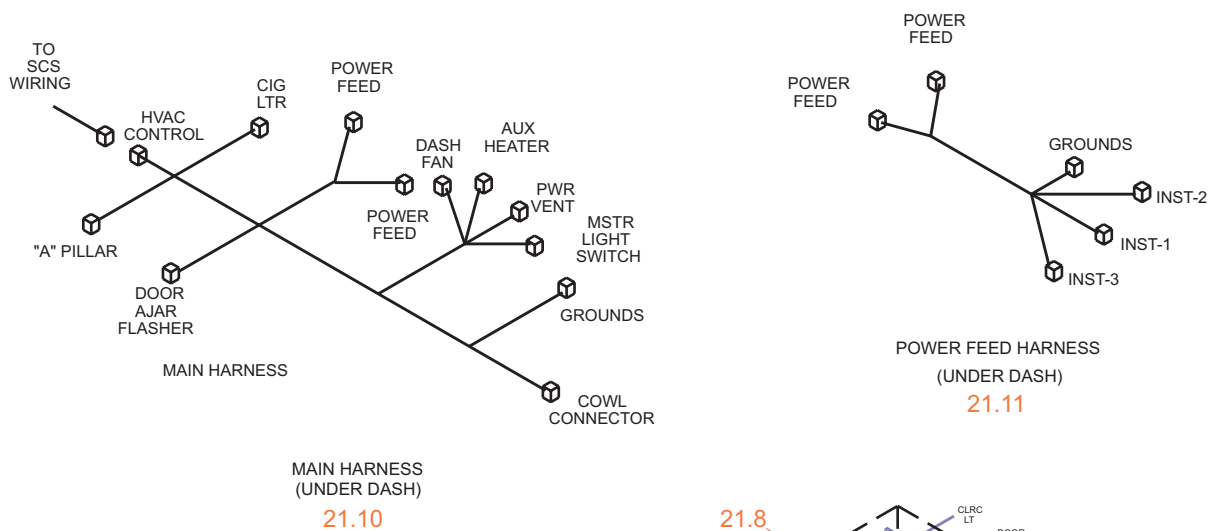


Electrical Harnesses

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

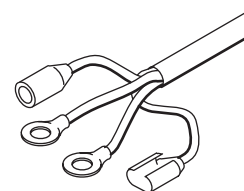

Item	Part Number	Description
21.0		WIRE HARNESS LAYOUT FORD
21.1.1	16512033	HARNESS "A" PILLAR
21.1.2	16512117	HARNESS "A" PILLAR (REAR LIGHTS THRU ROOF)
21.2	16512269	HARNESS FRT CLR/CNTRL GRND/FAN
21.3	16512229	HRNS HDLT/TRN JMPR RECT INCAN
21.4	16512733	HARNESS WIPER HEADLAMP
21.5	16512421	HRNS LOW MNT LIC PLATE LIGHTS
21.6	16512031	HARNESS AUX HTR
21.7	BSNR	HARNESS TAILLAMP JUMPER
21.8	16512290	PLUG LED
21.9	BSNR	HARNESS RR CLR CNTRL/GRND
21.10.1	16511966	**HARN MAIN SGL SW BANK 30-36
21.10.2	16512282	HARNESS MAIN 30-36
21.11.1	16512218	**HARNESS POWER FEED #36 (Prior to Sept 2002)
21.11.2	16513433	HARNESS POWER FEED #36 (After Sept 2002)
21.NS	16511738	CONDUIT PLASTIC 1/4" SLIT
21.NS	16510020	CONDUIT PLASTIC 5/8" SLIT
21.NS	16510019	CONDUIT PLASTIC 3/8" SLIT
21.NS	08706376	J-CLAMP 1/2" .203 HOLE
21.NS	16511906	ISOLATOR BAT
21.NS	16512278	CABLE AUX BATTERY POSITIVE
21.NS	16512424	BATTERY
21.NS	16512279	CABLE AUX BATTERY NEGATIVE
21.NS	16512167	FLASHER HAZ SOLID-STATE
21.NS	16100055	FUSE MAXI 30AMP
21.NS	16512174	TRAY,BATTERY PLASTIC
21.NS	16512175	BATTERY HOLD-DOWN
21.NS	20510341	MAT,RUBBER BATTERY 6 x 11
21.NS	16500096	GROMMET RBR 1.31ID x 2OD
21.NS	16500071	BUSHING SNAP 1/2"
21.NS	16512268	HARNESS WIPER/W SHR BTL IN CAB
21.NS	16512255	HARNESS REAR LAMP FEED
21.NS	16512276	HARNESS AUX BATTERY LOAD
21.NS	16512277	HARNESS AUX BATTERY ALT
21.NS	16512576	HARNESS JMPR MAN TO ELE HTR
21.NS	16512739	HARNESS JUMPER HVAC WATER VALVE
21.Ref	58230444	AUX BATTERY ISOLATOR LOC & RTG
21.Ref	58231024	ASY ECHO W/BU ALM FLUSH MT

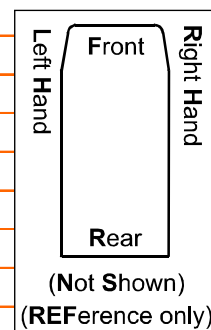

21—Electrical Harnesses, Options

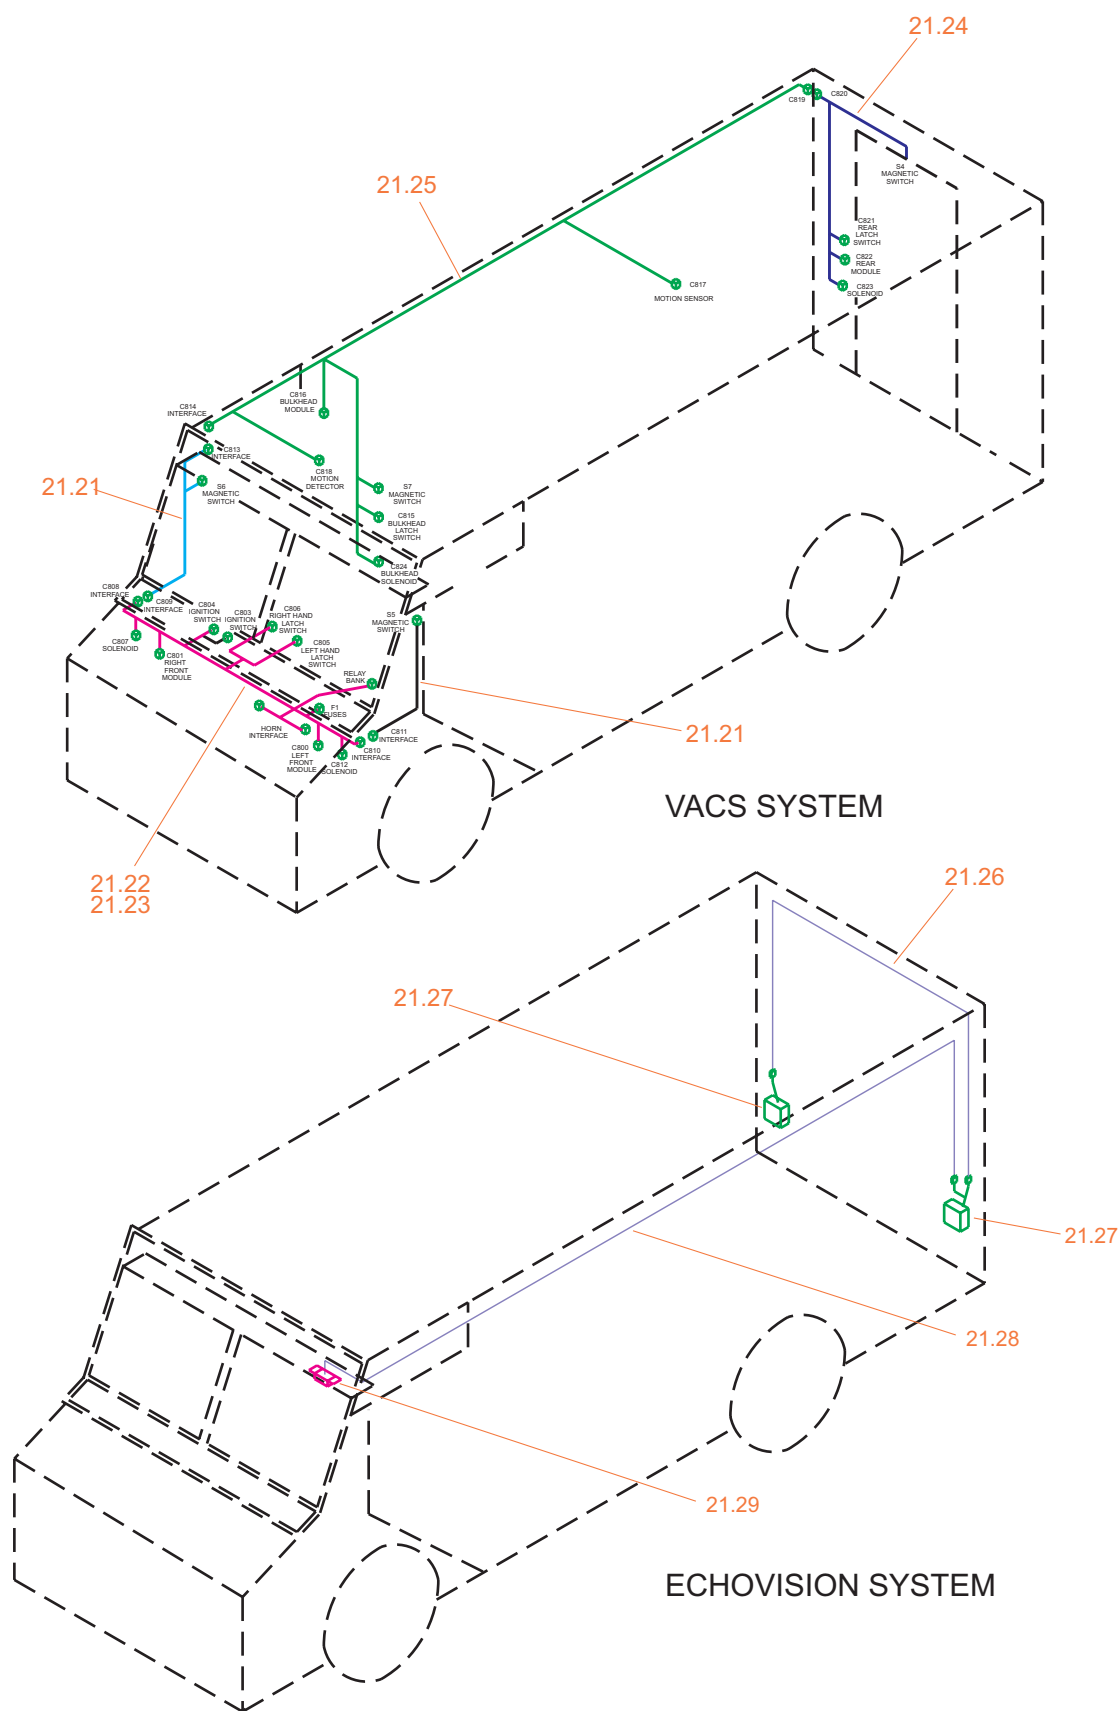


Electrical Harnesses, Options

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

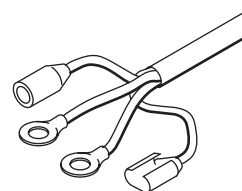

Item	Part Number	Description
21.20		WIRE HARNESS OPTIONS
21.21 LH	16512471	HARNESS LH "A" PILLAR (Keyless)
21.21 RH	16512472	HARNESS RH "A" PILLAR (Keyless)
21.22	16512473	HARNESS DASH (Keyless)
21.23	16512767	HARNESS CHASSIS INTERFACE (Keyless)
21.24	16512475	HARNESS RR JUMPER (Keyless)
21.25	BSNR	HARNESS ROOF (Keyless)
21.26	16512527	CABLE SENSOR TO SENSOR
21.27 LH	16512737	MODULE LH SENSOR
21.27 RH	16512736	MODULE RH SENSOR
21.28	16512526	CABLE W/ALARM (SPECIFY LENGTH)
21.29	16512525	MODULE DISPLAY
21.NS	13672432	GASKET, RUBBER BCK-UP ALM
21.Ref	03102103	MANUAL, VEHICLE ACCESS CONTROLS SYS
21.Ref	58231040	WIRE DIAGRAM KEYLESS ENTRY
21.Ref	58231024	ASY W/BU ALM FLUSH MT

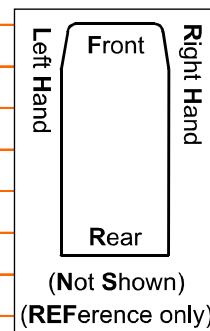

Appendixes

06914922—Bulkhead Panels

APPENDIX 06914922 BULKHEAD PANELS	
Part Number	Description
06914922-H	PNL BHD RH AL SLDR FP 5 W x H
06914927-H	PNL BHD RH SLDR FP 20.25 W x H
06914928-H	PNL BHD RH SLDR FP 22 W x H
06914935-H	PNL BHD RH SLDR KSN 22 W x H
06914950-H	PNL BHD RH CUP FP 5 W x H
06914955-H	PNL BHD RH CUP FP 20.25 W x H
06914956-H	PNL BHD RH CUP FP 22 W x H
06914963-H	PNL BHD RH CUP KSN 22 W x H
06914977-H	PNL BHD RH CUP BST 22 W x H
06914984-H	PNL BHD RH SDN FP 22 W x H
06914991-H	PNL BHD RH SDN KSN 22 W x H
06915008-H	PNL BHD/JS RH SLDR FP 22"
06915010-H	PNL BHD/JS RH CUP FP 22"
06915012-H	PNL BHD RH DRH FP 22 W x H
06915015-H	PNL BHD/JS RH SLDR KSN 22" x H
06915029-H	PNL BHD/JS RH SLDR BST 22"
06915034-H	PNL BHD LH AL SLDR FP 28 W x H
06915036-H	PNL BHD LH SLDR FP 32.25 W x H
06915038-H	PNL BHD LH SLDR FP 35.75 W x H
06915042-H	PNL BHD LH SLDR FP 41 W x H
06915046-H	PNL BHD LH SLDR KSN 28 W x H
06915048-H	PNL BHD LH SLDR KSN 32.25 W x H
06915050-H	PNL BHD LH SLDR KSN 35.75 W x H
06915058-H	PNL BHD LH SLDR R38 28 W x H
06915060-H	PNL BHD LH SLD R38 32.25 W x H
06915062-H	PNL BHD LH SLD R38 35.75 W x H
06915070-H	PNL BHD LH CUP FP 28 W x H
06915072-H	PNL BHD LH CUP FP 32.25 W x H
06915074-H	PNL BHD LH CUP FP 35.75 W x H
06915082-H	PNL BHD LH CUP KSN 28 W x H
06915084-H	PNL BHD LH CUP KSN 32.25 W x H
06915086-H	PNL BHD LH CUP KSN 35.75 W x H
06915096-H	PNL BHD LH CUP R38 32.25 W x H
06915120-H	PNL BHD LH SDN KSN 32.25 W x H

Continued

06914922—Bulkhead Panels (continued)

APPENDIX 06914922 BULKHEAD PANELS	
Part Number	Description
06915144-H	PNL BHD LH DLH FP 32.25 W x H
06915145-H	PNL BHD LH DLH FP 33.88 W x H
06915146-H	PNL BHD LH DLH FP 35.75 W x H
06915148-H	PNL BHD LH DLH FP 37.38 W x H
06915151-H	PNL BHD LH DLH FP 42.25 W x H
06915153-H	PNL BHD LH DLH FP 46 W x H
06915157-H	PNL BHD LH DLH KSN 33.88 W x H
06915160-H	PNL BHD LH DLH KSN 37.38 W x H
06915169-H	PNL BHD LH DLH R38 33.38 W x H
06915719-H	BH W/JS RH SL/SL ENF 22 W x H
06915737-H	BH,LH SL/SL R38 35.75x H
06916564-H	BH LH SL/SL R38 32.25 x H
06916680-H	PNL BHD/JS RH SLDR FP 22"
06916684-H	PNL BHD/JS RH C/UP FP 22"
06921197-H	PANEL BHD RH W/JMPST KYLS ENTRY H
06921332-H	BHD AL SLDR 32.25" x H KEYLESS ENT
06922458	** PNL BHD RH KY ENT POS PRES W/CPT

51231196—Fitzpatrick Bumpers

APPENDIX: 51231196 11" FITZPATRICK STYLE BUMPERS				
PART NO.	UNIT WIDTH	BUMPER WIDTH	MOUNTING CONFIG.	DESCRIPTION
22813348-07850	78.5	80.75	22813293	TREADPLATE
22813348-08650	86.5	88.75	22813293	TREADPLATE
22813348-09350	93.5	95.75	22813293	TREADPLATE
22813349-07850	78.5	80.75	22813293	TREADPLATE W/KIDNEY
22813349-08650	86.5	88.75	22813293	TREADPLATE W/KIDNEY
22813349-09350	93.5	95.75	22813293	TREADPLATE W/KIDNEY
22813350-07850	78.5	80.75	22813293	TREADPLATE W/KIDNEY W/ HOLE
22813350-08650	86.5	88.75	22813293	TREADPLATE W/KIDNEY W/ HOLE
22813350-09350	93.5	95.75	22813293	TREADPLATE W/KIDNEY W/ HOLE
22816009-07850	78.5	80.75	22813293	TREADPLATE W/KIDNEY W/ 2 HOLES
22816009-08650	86.5	88.75	22813293	TREADPLATE W/KIDNEY W/ 2 HOLES
22816009-09350	93.5	95.75	22813293	TREADPLATE W/KIDNEY W/ 2 HOLES
22813351-07850	78.5	80.75	22813293	GRIPSTRUT
22813351-08650	86.5	88.75	22813293	GRIPSTRUT
22813351-09350	93.5	95.75	22813293	GRIPSTRUT
22813352-07850	78.5	80.75	22813293	GRIPSTRUT W/KIDNEY
22813352-08650	86.5	88.75	22813293	GRIPSTRUT W/KIDNEY
22813352-09350	93.5	95.75	22813293	GRIPSTRUT W/KIDNEY
22813353-07850	78.5	80.75	22813293	GRIPSTRUT W/KIDNEY W/ HOLE
22813353-07850	86.5	88.75	22813293	GRIPSTRUT W/KIDNEY W/ HOLE
22813353-07850	93.5	95.75	22813293	GRIPSTRUT W/KIDNEY W/ HOLE
22816010-07850	78.5	80.75	22813293	GRIPSTRUT W/KIDNEY W/ 2 HOLES
22816010-08650	86.5	88.75	22813293	GRIPSTRUT W/KIDNEY W/ 2 HOLES
22816010-09350	93.5	95.75	22813293	GRIPSTRUT W/KIDNEY W/ 2 HOLES

51231199—Chassis Risers

APPENDIX: 51231199 #36 CHASSIS RISERS				
WB	UNIT LENGTH	ITEM 1.10	ITEM 1.15	ITEM 1.23
176	18.0	22815072-08075 22815073-08075	22815069 22815071 22815074 22815075	22813445-05106
176	17.0	22815072-06875 22815073-06875	22815069 22815071 22815074 22815075	22813445-03906
176	16.0	22815072-05675 22815073-05675	22815069 22815071 22815074 22815075	22813445-02706
158	15.0	22815014-05575 22815015-06275	22815012 22815013	22813445-01506
158	14.0	22815014-04375 22815015-05075	22815012 22815013	22813445-00306
158	13.0	22815014-03175 22815015-03875	22815012 22815013	NA
138	12.0	22815066-03975 22815067-04675	22815064 22815065	NA
138	11.0	22815066-02775 22815067-03475	22815064 22815065	NA
124	10.0	NA	22815068-12320 22815070-12320	NA
124	9.0	NA	22815068-11120 22815070-11120	NA

51231252—Fitzpatrick Bumpers

APPENDIX: 51231252 10" FITZPATRICK STYLE BUMPERS - FORD				
PART NO.	UNIT WIDTH	BUMPER WIDTH	MOUNTING CONFIG.	DESCRIPTION
22814112-07850	78.5	80.75	22814106	TREADPLATE
22814112-08650	86.5	88.75	22814106	TREADPLATE
22814112-09350	93.5	95.75	22814106	TREADPLATE
22814113-07850	78.5	80.75	22814106	TREADPLATE W/KIDNEY
22814113-08650	86.5	88.75	22814106	TREADPLATE W/KIDNEY
22814109-07850	93.5	95.75	22814106	TREADPLATE W/KIDNEY
22814114-07850	78.5	80.75	22814106	TREADPLATE W/KIDNEY W/ HOLE
22814114-08650	86.5	88.75	22814106	TREADPLATE W/KIDNEY W/ HOLE
22814114-09350	93.5	95.75	22814106	TREADPLATE W/KIDNEY W/ HOLE
22816007-07850	78.5	80.75	22814106	TREADPLATE W/KIDNEY W/ 2 HOLES
22816007-08650	86.5	88.75	22814106	TREADPLATE W/KIDNEY W/ 2 HOLES
22816007-09350	93.5	95.75	22814106	TREADPLATE W/KIDNEY W/ 2 HOLES
22814115-07850	78.5	80.75	22814106	GRIPSTRUT
22814115-08650	86.5	88.75	22814106	GRIPSTRUT
22814115-09350	93.5	95.75	22814106	GRIPSTRUT
22814116-07850	78.5	80.75	22814106	GRIPSTRUT W/KIDNEY
22814116-08650	86.5	88.75	22814106	GRIPSTRUT W/KIDNEY
22814116-09350	93.5	95.75	22814106	GRIPSTRUT W/KIDNEY
22814117-07850	78.5	80.75	22814106	GRIPSTRUT W/KIDNEY W/ HOLE
22814117-07850	86.5	88.75	22814106	GRIPSTRUT W/KIDNEY W/ HOLE
22814117-07850	93.5	95.75	22814106	GRIPSTRUT W/KIDNEY W/ HOLE
22816008-07850	78.5	80.75	22814106	GRIPSTRUT W/KIDNEY W/ 2 HOLES
22816008-08650	86.5	88.75	22814106	GRIPSTRUT W/KIDNEY W/ 2 HOLES
22816008-09350	93.5	95.75	22814106	GRIPSTRUT W/KIDNEY W/ 2 HOLES

54000000—Quarter Panels

APPENDIX 54000000 QUARTER PANELS						
Prior to 2000*	After 2000*	ABS Intake	Position	Ref No.	Note	Description
06919098	06921092	NA	RH	30	Spl	PANEL QTR RH W/O LOUVERS #30
06601617	06921088	NA	LH	30	Std	PANEL QTR LH #30
06601618	06921089	06924026	RH	30	Std	PANEL QTR RH #30
06915703	Pending	NA	LH	30	Vent	** PANEL QTR LH W/VENT #30
06921091	06921090	06924027	RH	30	Vent	PANEL QTR LH W/VENT #30
06915704	Pending	Pending	RH	30	Vent	** PANEL QTR RH W/VENT #30
06916519	06921093	NA	LH	31, 35	Std	PANEL QTR LH #31,35
06916520	06921094	06924028	RH	31, 35	Std	PANEL QTR RH #31,35
06916516	06921095	NA	LH	31, 35	Vent	PANEL QTR LH W/VENT #31,35
06916517	06921096	06924029	RH	31, 35	Vent	PANEL QTR RH W/VENT #31,35
06920550	06921207	06924254	RH	31, 35	Kyls	PNL QTR RH KYLS ENTRY #35
06920549	06921208	NA	LH	31, 35	Vent Kyls	PNL QTR LH KYLS ENTRY #35
NA	NA	06923197	LH	31, 35	1PCX	PNL QTR LH KYLS 1PC XMBR #35
NA	NA	06923196	RH	31, 35	1PCX	PNL QTR RH KYLS 1PC XMBR #35
NA	NA	06922963	LH	31, 35	1PCX Vent	PNL QTR LH KYLS 1PC XMBR W/VENT
NA	NA	06922962	RH	31, 35	1PCX Vent	PNL QTR RH KYLS 1PC XMBR W/VENT
06918534	06921097	NA	LH	32	Std	PANEL QTR LH #32
06918536	06921098	06924030	RH	32	Std	PANEL QTR RH #32
06918535	06921099	NA	LH	32	Vent	PANEL QTR LH W/VENT #32
06918537	06921100	06924031	RH	32	Vent	PANEL QTR RH W/VENT #32
06918333	06921105	NA	LH	33	Recept	PANEL QTR LH NO VENT W/HTR #33
06915342	06921101	NA	LH	33	Std	PANEL QTR LH #33
06916636	06921102	06924032	RH	33	Std	PANEL QTR RH #33
06916635	06921103	NA	LH	33	Vent	PANEL QTR LH W/VENT #33
06601791	06921104	06924033	RH	33	Vent	PANEL QTR RH W/VENT #33
06918332	06921106	NA	LH	33	Vent Recept	PANEL QTR LH W/VENT & HTR #33
NA	06921212	NA	LH	36	Kyls	PNL QTR LH KYLS ENTRY #36
06920650	06921211	06924255	RH	36	Kyls	PNL QTR RH KYLS ENTRY #36
06503160	06921107	NA	LH	36	Std	PANEL QTR LH #36
06503161	06921108	06924034	RH	36	Std	PANEL QTR RH #36
06601789	06921109	NA	LH	36	Vent	PANEL QTR LH W/VENT #36
06601790	06921110	06924035	RH	36	Vent	PANEL QTR RH W/VENT #36
06920651	Pending	NA	LH	36	Vent Kyls	** PANEL QTR LH KEYLS ENTRY #36
06920854	06921111	NA	LH	36	Vent Recept	PANEL QTR LH W/VENT & HTR #36
2000*						
The front structure design changed in model year 2000. Consult customer service if your unit was built in this year.						
ABS Intake						
The ABS heater intake replaced the punched louvers. You may save time and money upgrading to this design.						
Notes						
Std– Standard						
Vent– Cutout for hingeless vent						
Kyls– Keyless entry						
Recept– Recept for engine block heater						
1PCX– One piece crossmember						
Spl– Special application						
Reference ECNs 116 35 and 16 153.						

54231878—Jump Seats

WITH HEADREST		
OPT/#	Item 11.50	Item 11.51
W00136-30	13672143 - CUSHION,BACK BLACK/VINYL	13672142 - J/SEAT,WALL MNT BLACK
W00136-31	13672237 - CUSHION,BACK SALT & PEPPER	13121022 - J/SEAT,WALL MNT SALT/PEPPER
W00136-32	13010579 - CUSHION,BACK BLACK/NYLON	13112492 - J/SEAT,WALL MNT BLACK
W00136-33	13672137 - CUSHION,BACK BROWN	13672236 - J/SEAT,WALL MNT BROWN
W00136-34	13672196 - CUSHION,BACK RED/BLACK	13672195 - J/SEAT,WALL MNT RED
W00136-35	13672229 - CUSHION,BACK CADET BLUE	13672228 - J/SEAT,WALL MNT BLUE
W00136-36	13015606 - CUSHION,BACK GREY/VINYL	13015605 - J/SEAT,WALL MNT GREY
WITH HIGHBACK		
OPT/#	Item 11.50	Item 11.51
W00137-30	13672245 - CUSHION,BLACK/VINYL 12 X 32	13672142 - J/SEAT,WALL MNT BLACK
W00137-31	13672169 - CUSHION,SALT/PEPPER 12 X 32	13121022 - J/SEAT,WALL MNT SALT/PEPPER
W00137-32	13672246 - CUSHION,BLACK/NYLON 12 X 32	13112492 - J/SEAT,WALL MNT BLACK
W00137-33	13672249 - CUSHION,BROWN 12 X 32	13672236 - J/SEAT,WALL MNT BROWN
W00137-34	13672247 - CUSHION,RED 12 X 32	13672195 - J/SEAT,WALL MNT RED
W00137-35	13672248 - CUSHION,CADET BLUE 12 X 32	13672228 - J/SEAT,WALL MNT BLUE
W00137-36	13672219 - CUSHION,GREY/VINYL 12 X 32	13015605 - J/SEAT,WALL MNT GREY
W00137-43	13672417 - CUSHION,BLACK CORDURA 12 X 32	13672416 - J/SEAT,WALL MNT BLACK CORDURA
W00137-31G	13672460 - CUSHION,S&P ETERNAL 12 X 32	13672459 - J/SEAT,WALL MNT S & P ETERNAL
W001000-32	13672467 - CUSHION,CONTOURED BACK BLK ETERNAL	13672466 - J/SEAT ASSY 16" MINI BLK ETERNAL

Appendix 54231878d

55230967—Rear Swing Door Metal

APPENDIX 55230967 REAR METAL FOR NARROW SWING DOORS						
Unit Size	Item 16.2 LH	Item 16.2 RH	Item 16.2 LH	Item 16.2 RH	Item 16.2 LH	Item 16.2 RH
20" Swing Door	Solid Panel		2 Round Lights		3 Round Lights	
78.5W x 73H	06502923-78573	06502868-78573	06502950-78573	06502949-78573	06502959-78573	06502958-78573
78.5W x 81H	06502923-78581	06502868-78581	06502950-78581	06502949-78581	06502959-78581	06502958-78581
78.5W x 85H	06502923-78585	06502868-78585	06502950-78585	06502949-78585	06502959-78585	06502958-78585
86.5W x 73H	06502923-86573	06502868-86573	06502950-86573	06502949-86573	06502959-86573	06502958-86573
86.5W x 81H	06502923-86581	06502868-86581	06502950-86581	06502949-86581	06502959-86581	06502958-86581
86.5W x 85H	06502923-86585	06502868-86585	06502950-86585	06502949-86585	06502959-86585	06502958-86585
93.5W x 73H	06502923-93573	06502868-93573	06502950-93573	06502949-93573	06502959-93573	06502958-93573
93.5W x 81H	06502923-93581	06502868-93581	06502950-93581	06502949-93581	06502959-93581	06502958-93581
93.5W x 85H	06502923-93585	06502868-93585	06502950-93585	06502949-93585	06502959-93585	06502958-93585
25" Swing Door	Solid Panel		2 Round Lights		3 Round Lights	
78.5W x 73H	06502883-78573	06502882-78573	06502947-78573	06502948-78573	06502957-78573	06502956-78573
78.5W x 81H	06502883-78581	06502882-78581	06502947-78581	06502948-78581	06502957-78581	06502956-78581
78.5W x 85H	06502883-78585	06502882-78585	06502947-78585	06502948-78585	06502957-78585	06502956-78585
86.5W x 73H	06502883-86573	06502882-86573	06502947-86573	06502948-86573	06502957-86573	06502956-86573
86.5W x 81H	06502883-86581	06502882-86581	06502947-86581	06502948-86581	06502957-86581	06502956-86581
86.5W x 85H	06502883-86585	06502882-86585	06502947-86585	06502948-86585	06502957-86585	06502956-86585
93.5W x 73H	06502883-93573	06502882-93573	06502947-93573	06502948-93573	06502957-93573	06502956-93573
93.5W x 81H	06502883-93581	06502882-93581	06502947-93581	06502948-93581	06502957-93581	06502956-93581
93.5W x 85H	06502883-93585	06502882-93585	06502947-93585	06502948-93585	06502957-93585	06502956-93585
29" Swing Door	Solid Panel		2 Round Lights		3 Round Lights	
78.5W x 73H	06502924-78573	06502872-78573	NA	NA	NA	NA
78.5W x 81H	06502924-78581	06502872-78581	NA	NA	NA	NA
78.5W x 85H	06502924-78585	06502872-78585	NA	NA	NA	NA
86.5W x 73H	06502924-86573	06502872-86573	06502952-86573	06502951-86573	06502962-86573	06502960-86573
86.5W x 81H	06502924-86581	06502872-86581	06502952-86581	06502951-86581	06502962-86581	06502960-86581
86.5W x 85H	06502924-86585	06502872-86585	06502952-86585	06502951-86585	06502962-86585	06502960-86585
93.5W x 73H	06502924-93573	06502872-93573	06502952-93573	06502951-93573	06502962-93573	06502960-93573
93.5W x 81H	06502924-93581	06502872-93581	06502952-93581	06502951-93581	06502962-93581	06502960-93581
93.5W x 85H	06502924-93585	06502872-93585	06502952-93585	06502951-93585	06502962-93585	06502960-93585
20" Swing Door	High Mount Round Lights		High Mount Oval Lights		High Mount Square Lights	
78.5W x 73H	06915951-78573	06915952-78573	06915957-78573	06915958-78573	06915963-78573	06915964-78573
78.5W x 81H	06915951-78581	06915952-78581	06915957-78581	06915958-78581	06915963-78581	06915964-78581
78.5W x 85H	06915951-78585	06915952-78585	06915957-78585	06915958-78585	06915963-78585	06915964-78585
86.5W x 73H	06915953-86573	06915954-86573	06915959-86573	06915960-86573	06915965-86573	06915966-86573
86.5W x 81H	06915953-86581	06915954-86581	06915959-86581	06915960-86581	06915965-86581	06915966-86581
86.5W x 85H	06915953-86585	06915954-86585	06915959-86585	06915960-86585	06915965-86585	06915966-86585
93.5W x 73H	06915955-93573	06915956-93573	06915961-93573	06915962-93573	06915967-93573	06915968-93573
93.5W x 81H	06915955-93581	06915956-93581	06915961-93581	06915962-93581	06915967-93581	06915968-93581
93.5W x 85H	06915955-93585	06915956-93585	06915961-93585	06915962-93585	06915967-93585	06915968-93585

55230969—Rear Swing Door Metal

APPENDIX 55230969 (1 of 2) REAR METAL FOR NARROW ROLL-UP DOORS				
Unit Size	Item 16.2 LH	Item 16.2 RH	Item 16.2 LH	Item 16.2 RH
40" Door	Solid Panel		2 Round Lights	
78.5W x 73H	06915653-78573	06915652-78573	06915651-78573	06915650-78573
78.5W x 81H	06915653-78581	06915652-78581	06915651-78581	06915650-78581
78.5W x 85H	06915653-78585	06915652-78585	06915651-78585	06915650-78585
86.5W x 73H	06915647-86573	06915646-86573	06915645-86573	06915644-86573
86.5W x 81H	06915647-86581	06915646-86581	06915645-86581	06915644-86581
86.5W x 85H	06915647-86585	06915646-86585	06915645-86585	06915644-86585
93.5W x 73H	06915641-93573	06915640-93573	06915639-93573	06915638-93573
93.5W x 81H	06915641-93581	06915640-93581	06915639-93581	06915638-93581
93.5W x 85H	06915641-93585	06915640-93585	06915639-93585	06915638-93585
50" Door	Solid Panel		2 Round Lights	
78.5W x 73H	06502932-78573	06502931-78573	06502928-78573	06502927-78573
78.5W x 81H	06502932-78581	06502931-78581	06502928-78581	06502927-78581
78.5W x 85H	06502932-78585	06502931-78585	06502928-78585	06502927-78585
86.5W x 73H	06502932-86573	06502931-86573	06502928-86573	06502927-86573
86.5W x 81H	06502932-86581	06502931-86581	06502928-86581	06502927-86581
86.5W x 85H	06502932-86585	06502931-86585	06502928-86585	06502927-86585
93.5W x 73H	06502932-93573	06502931-93573	06502928-93573	06502927-93573
93.5W x 81H	06502932-93581	06502931-93581	06502928-93581	06502927-93581
93.5W x 85H	06502932-93585	06502931-93585	06502928-93585	06502927-93585
60" Door	Solid Panel		2 Round Lights	
78.5W x 73H	06502930-78573	06502929-78573	06502885-78573	06502884-78573
78.5W x 81H	06502930-78581	06502929-78581	06502885-78581	06502884-78581
78.5W x 85H	06502930-78585	06502929-78585	06502885-78585	06502884-78585
86.5W x 73H	06502930-86573	06502929-86573	06502885-86573	06502884-86573
86.5W x 81H	06502930-86581	06502929-86581	06502885-86581	06502884-86581
86.5W x 85H	06502930-86585	06502929-86585	06502885-86585	06502884-86585
93.5W x 73H	06502930-93573	06502929-93573	06502885-93573	06502884-93573
93.5W x 81H	06502930-93581	06502929-93581	06502885-93581	06502884-93581
93.5W x 85H	06502930-93585	06502929-93585	06502885-93585	06502884-93585
72" Door	Solid Panel		2 Round Lights	
93.5W x 73H	06502985-93573	06502986-93573	06916170-93573	06916171-93573
93.5W x 81H	06502985-93581	06502986-93581	06916170-93581	06916171-93581
93.5W x 85H	06502985-93585	06502986-93585	06916170-93585	06916171-93585
See also next page for 3 Round Lights and High Mount Lights.				

55230969—Rear Swing Door Metal (continued)

APPENDIX 55230969 (2 of 2) REAR METAL FOR NARROW ROLL-UP DOORS				
Unit Size	Item 16.2 LH	Item 16.2 RH	Item 16.2 LH	Item 16.2 RH
40" Door	3 Round Lights		High Mount Lights	
78.5W x 73H	06915655-78573	06915654-78573	06916016-78573	06916019-78573
78.5W x 81H	06915655-78581	06915654-78581	06916016-78581	06916019-78581
78.5W x 85H	06915655-78585	06915654-78585	06916016-78585	06916019-78585
86.5W x 73H	06915649-86573	06915648-86573	06916017-86573	06916020-86573
86.5W x 81H	06915649-86581	06915648-86581	06916017-86581	06916020-86581
86.5W x 85H	06915649-86585	06915648-86585	06916017-86585	06916020-86585
93.5W x 73H	06915643-93573	06915642-93573	06916018-93573	06916021-93573
93.5W x 81H	06915643-93581	06915642-93581	06916018-93581	06916021-93581
93.5W x 85H	06915643-93585	06915642-93585	06916018-93585	06916021-93585
50" Door	3 Round Lights		High Mount Lights	
78.5W x 73H	06502963-78573	06502962-78573	06916022-78573	06916025-78573
78.5W x 81H	06502963-78581	06502962-78581	06916022-78581	06916025-78581
78.5W x 85H	06502963-78585	06502962-78585	06916022-78585	06916025-78585
86.5W x 73H	06502963-86573	06502962-86573	06916023-86573	06916026-86573
86.5W x 81H	06502963-86581	06502962-86581	06916023-86581	06916026-86581
86.5W x 85H	06502963-86585	06502962-86585	06916023-86585	06916026-86585
93.5W x 73H	06502963-93573	06502962-93573	06916024-93573	06916027-93573
93.5W x 81H	06502963-93581	06502962-93581	06916024-93581	06916027-93581
93.5W x 85H	06502963-93585	06502962-93585	06916024-93585	06916027-93585
60" Door	3 Round Lights		High Mount Lights	
78.5W x 73H	06502965-78573	06502964-78573	06916028-78573	06916031-78573
78.5W x 81H	06502965-78581	06502964-78581	06916028-78581	06916031-78581
78.5W x 85H	06502965-78585	06502964-78585	06916028-78585	06916031-78585
86.5W x 73H	06502965-86573	06502964-86573	06916029-86573	06916032-86573
86.5W x 81H	06502965-86581	06502964-86581	06916029-86581	06916032-86581
86.5W x 85H	06502965-86585	06502964-86585	06916029-86585	06916032-86585
93.5W x 73H	06502965-93573	06502964-93573	06916030-93573	06916033-93573
93.5W x 81H	06502965-93581	06502964-93581	06916030-93581	06916033-93581
93.5W x 85H	06502965-93585	06502964-93585	06916030-93585	06916033-93585
72" Door	3 Round Lights		High Mount Lights	
93.5W x 73H	06916172-93573	06916173-93573	06916174-93573	06916175-93573
93.5W x 81H	06916172-93581	06916173-93581	06916174-93581	06916175-93581
93.5W x 85H	06916172-93585	06916173-93585	06916174-93585	06916175-93585

55231017—Kickplates

APPENDIX 55231017 KICKPLATES		
LOCATION OF TAIL LIGHTS	LOCATION OF LICENSE	PART NUMBER
STANDARD IN KICKPLATE	PLATE IN CENTER	06601671-W
STANDARD IN KICKPLATE	PLATE ON SIDE METAL	06915414-W
IN SIDE METAL	PLATE ON LEFT HAND	06916328-W
IN SIDE METAL	PLATE ON RIGHT HAND	06916327
IN SIDE METAL	PLATE ON SIDE METAL	06916950-W
IN SIDE METAL	PLATE IN CENTER	06601696-W
1 LIGHT IN KICKPLATE	PLATE IN CENTER	06601742-W
3 LIGHTS IN KICKPLATE	PLATE IN CENTER	06918102-W
OPTIONAL RECTANGULAR LIGHTS	PLATE IN CENTER	06601697-W
OPTIONAL OVAL LIGHTS	PLATE IN CENTER	06601698-W
IN LIFTGATE	PLATE IN LIFTGATE	06502934

More Information

Utilimaster Quick Reference Parts Guide

Easily find commonly replaced parts for most Utilimaster vehicles in the *Utilimaster Quick Reference Parts Guide*. This illustrated document includes more part numbers for bumpers, door hardware, electrical components, window glass, heater, air conditioner, hood, mirrors, sun visors, vents, mud flaps, roll-up door parts, seats, wiper, and many other parts. It also includes sealants, window replacement, and other repair kits.

Utilimaster Glossary of Terms

If you are not familiar with some of the terminology used in this manual, you can find many Utilimaster and industry associated terms and definitions in the *Utilimaster Glossary of Terms—Body Information Guide*.

Utilimaster Body Service Manual

Read about routine maintenance procedures, troubleshooting, proper adjustment methods, vehicle repair, aftermarket upgrades, and much more in the *Utilimaster Body Service Manual*.

Download Files

Many support documents are downloadable (as Adobe® Acrobat® PDF files) from our web site at www.utilimaster.com. Click on the Ordering Parts button, to access the download page. To view the guide you must have the Adobe Acrobat Reader version 3.0 or higher installed on your computer. Acrobat readers are available free for all leading computer operating systems on the Adobe web site (www.adobe.com).

Contact Utilimaster

Browse our site for more information about Utilimaster and its products or contact Utilimaster Customer Service by using one of the following methods:

- Call 800-237-7806 (or 574-862-3219).
- Fax to 574-862-7637.
- Email to CustSvc@Utilimaster.com.
- Mail to the following address:

Utilimaster

Attn: Customer Service Department



65528 State Road 19


P.O. Box 585

Wakarusa, IN 46573-0585

U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

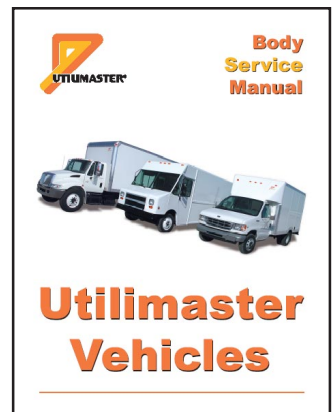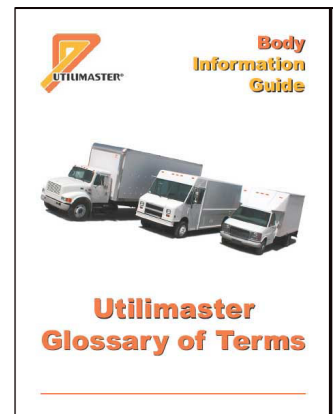

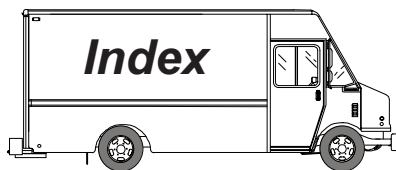

A

Access

Battery 20

Fuel sending unit 24

Address

National Highway Traffic Safety Administration 13

U.S. Department of Transportation 13

Utilimaster

Customer service 166

Parts department 10

Publications department 3

Warranty department 12

Air conditioning 62

Appendixes 156

B

Battery access 20

Body serial number 9

Bulkhead

Aluminum 98, 156

Blandex 104

Surge bars 106

Bumpers 14, 18, 158, 159

C

Cab

Cowling 28

Floor 20

Front structure 30

Matting 70

Options 96

Cargo floor 24

Chassis 14

Codes 7

Cowling 28

Customer service 7, 8, 9, 10, 12, 166

D

Dash 54, 58

Decals 96

Decoding part numbers 7

Door

Hardware 166

Pocket 140

Doorless panel 88, 92

Doors

Bulkhead

Aluminum 98

Blandex 104

Cab sedan 86

Cab sliding 78, 82

Doorless panel 88, 92

Rear

Roll-up 132

Swing 136

E

Echovision

112, 122, 128, 154

Electrical components 166

Electrical harnesses 152, 154

Email 10, 12, 166

Engine Cover 28

F

Fan 96

Federal Certification Label 9

Firewall. See Cowling

Floor

Cab 20

Cargo 24

Matting 68, 70

Forms 10, 12

Front cab floor 20

Front structure 30

Fuel fill 24, 108

G

Glass. See Window

Glossary of terms 166

H

Heater 58, 62, 166

Hood

Aluminum 48

Fiberglass 44

RIM 38

Hoses

Air conditioning 62

Heater 58, 62

I

Item numbers 7

K

Kickplate

112, 118, 122, 126, 128, 165

L

Laundry racks 144

Lights. See *also* Rear structure

Headlamps 30, 44

Rear 112

Switches 54, 56

Wire harness 152

M

Matting, floor 68, 70

Metal

Cowl 28

Door 78, 82, 86, 136, 162, 163

Doorless panel 88, 92

Header 30

Quarter panel 30, 160

Rear 112, 122, 162

Roof 146

Shelf 140

Sidewall 108

Mirrors 30, 166. See *also* Rear structure

Model numbers 9

Mud flaps 24, 166

N

Numbers

Body serial number 9

Item 7

Model 9

Parts 7

Phone 10, 12, 13, 166

VIN 9

P

Parts

Guide 166

Lists 14

Numbers 7

Ordering 10, 11

Phone numbers 10, 12, 13, 166

Pipe racks. See Shelving: Laundry racks

Positive Pressure System 150

R

Racks. See Shelving

Radio 96

Rear door

Roll-up 132

Swing 136

Rear structure

Full roll-up (standard) 126

Full roll-up (wide post) 128

Full swing 118

Narrow roll-up 122

Narrow swing 112

Revisions 3

Roof 146

S

Safety 13
Seat belts 72, 76
Seats
 Jump 76, 161
 Pedestal 72, 166
Sedan door 86
Service manual 166
Shelving
 Fold-up 140, 142
 Laundry racks 144
Sliding door 78, 82
Steps 20
Sun visors 166
Surge bars 106

T

Threshold 20, 108, 112, 118, 122, 126, 128

U

Utilimaster body serial number 9
Utilimaster Body Service Manual 166
Utilimaster Glossary of Terms 166
Utilimaster Quick Reference Parts Guide 166

V

VACS 30, 98, 112, 122, 154
Vents 30, 96, 108, 140, 166
VIN 9
Visors 166

W

Warranty claims 12
Web site 3, 10, 12, 166
Wheelwells 24
Window
 Bulkhead 104
 Cab 30
 Doorless panel 88, 92
 Driver's roll-up 88
 Quarter 30
 Rear roll-up door 132
 Side door 78, 82
Windows 166
Windshield 30
Wiper system 50, 166
Wiring schematics 166



Part Number: 03102245-PY00EN

©Utilimaster Corporation, 65906 State Road 19, P.O. Box 585, Wakarusa, Indiana, 46573-0585, USA
