



Body Parts Manual



Truck Body and Utilivan

Read First: Top Tips on Using This Online Manual

Browse pages with Bookmarks (hyperlinks) or thumbnails

A **bookmark**, at the left of the screen, is a hyperlink to a page. From any page in this document, you can use bookmarks to jump to any section heading.

To jump to a topic by using its bookmark, point to the bookmark name, and when the arrow becomes a pointing hand, click on the name. If a triangle (or + sign) appears to the left of the bookmark, click the triangle (or + sign) to show or hide subordinate bookmarks.




Thumbnails are visual icons of the actual pages. After selecting the thumbnail view button (Acrobat Reader ver. 3.0) or tab (ver. 4.0/5.0; “Page” tab in 6.0), you can quickly browse for parts sections just by the “look” of the page. Click on the appropriate thumbnail to view that page.



Use the Zoom and Fit tools for magnification of page sections

Select the Zoom tool. (In ver. 4.0 and later, when the Hand tool is selected, you can temporarily change to the Zoom tool by holding down the Ctrl key and the space bar at the same time.) Click and drag to draw a rectangle around the area you want to magnify.



To return to an overview, you can click on one of the following buttons:

- The Fit Page button scales the *entire* page to display within the main window.
- The Fit Width button scales the page *width* to display within the main window.



Use the Text tool for copying selected text into other applications

You can select text in a PDF document, copy it to the Clipboard, and paste it into another application. **By pasting parts descriptions and numbers into your email or parts form template, you can order parts much faster than through phoning or faxing.** To select text and copy it to the Clipboard:

1. Click the Text Selection tool.
2. Click and drag over the text you want to select. When you release the mouse button, the selected text stays highlighted.
3. Hold down the Ctrl key and press C on the keyboard to copy the selected text to the Clipboard.



Find parts or procedures with the Find tool

Use the Find tool to search for a fragment of a word, a complete word, or multiple words in the active document. To **find** a word (e.g., a part name):

1. Click the Find tool.
2. In the Find What text box, enter the text to be found and click Find. When the program finds the text, the Find dialog box closes and the page containing the text is displayed with the text highlighted.
3. To find the **next occurrence** of the word, press F3, press Ctrl + G, or reopen the Find dialog box and click Find Again.



Revision Control

Revision A

July 2004

Important Notices

©2004, Utilimaster.®

Printed in U.S.A.

Title: *Truck Body and Utilivan—Body Parts Manual*

Utilimaster Corporation attempts to provide information that is accurate, complete, and useful. All information contained in this manual is based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice. Should you find inadequacies in the text, please send your comments to the following address:

Utilimaster
Attn: Designer of Technical Publications
65906 State Road 19, P.O. Box 585
Wakarusa, Indiana, 46573-0585, U.S.A.

This material is confidential and the property of Utilimaster. It is shared with your company for the sole purpose of helping you with the operation of the described equipment.


Utilimaster makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Utilimaster shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Utilimaster expressly disclaims all responsibility and liability for the installation, use, performance, maintenance, and support of third-party products. Customers are advised to make their independent evaluation of such products.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Utilimaster.

Utilimaster®, Utilivan®, Trademaster®, Metromaster®, Aeromaster®, and Aerocap® are registered trademarks of Utilimaster Corporation. DuraPlate® is a registered trademark of Wabash Technology Corporation. All other trademarks are products of their respective companies.

Browse the award-winning web site www.utilimaster.com for more information about Utilimaster and its products.

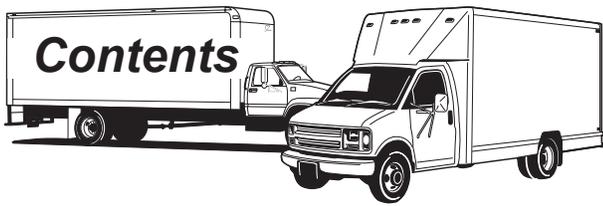

<i>Revision Control</i>	3
<i>Important Notices</i>	3
<i>Introduction</i>	7
<i>Decoding Part Numbers</i>	7
<i>Finding Part Numbers</i>	7
<i>Item Numbers</i>	7
<i>Part Number with a Suffix</i>	8
<i>Part Descriptions</i>	8
<i>Vehicle Identification</i>	8
<i>Vehicle Identification Number (VIN)</i>	9
<i>Unit (or Body) Serial Number and Federal Certification Label</i>	9
<i>Work Order Numbers</i>	9
<i>Utilivan and Truck Body Differences</i>	10
<i>Wall Construction Types</i>	10
<i>Ordering Parts</i>	11
<i>How to Order</i>	11
<i>Returns</i>	11
<i>Customizable Parts Order Form</i>	11
<i>Faxable Parts Order Form</i>	12
<i>Filing Warranty Claims</i>	13
<i>Reporting Safety Defects</i>	14
<i>United States Only</i>	14
<i>Canada Only</i>	14
<i>More Information</i>	15
<i>Download Files</i>	15
<i>Utilimaster Quick Reference Parts Guide</i>	15
<i>Utilimaster Glossary of Terms</i>	15
<i>Utilimaster Body Service Manual</i>	15
<i>Contact Utilimaster</i>	15

<i>Diagrams and Parts Lists</i>	16
1— <i>Subframe and Cargo Floor, Utilivan</i>	16
1— <i>Subframe and Cargo Floor, Truck Body</i>	20
2— <i>Rear Bumpers</i>	24
2— <i>Rear Bumper with Ramp and Ball Hitch</i>	26
3— <i>Rear Structure, Medium-duty</i>	28
3— <i>Rear Structure, Heavy-duty</i>	30
4— <i>Rear Roll-up Door</i>	32
4— <i>Rear Swing Doors, Cam Lock</i>	36
4— <i>Rear Swing Doors, Slam Lock</i>	38
5— <i>Sidewalls, Aluminum</i>	40
5— <i>Sidewalls, FRP</i>	42
5— <i>Sidewalls, DuraPlate</i>	44
6— <i>Roof Assembly</i>	46
6— <i>Roof Front Caps</i>	48
6— <i>Aerocap Headliner</i>	50
7— <i>Front Wall, Aluminum</i>	52
7— <i>Front Wall, FRP Solid</i>	54
7— <i>Front Wall, FRP Solid with Setback Wall</i>	56
7— <i>Front Wall, FRP with Sliding Door</i>	58
7— <i>Front Wall, Narrow FRP Aerocap with Sliding Door</i>	60
7— <i>Front Wall, 96W FRP Aerocap with Sliding Door</i>	62
7— <i>Front Wall, DuraPlate</i>	64
8— <i>Electrical Harnesses</i>	66
9— <i>Cargo Options</i>	72
10— <i>Cabover Option</i>	74
11— <i>Roof Ladder Option</i>	76

<i>Appendixes</i>	78
01901972— <i>Rear Dock Extension</i>	78
02805529— <i>DuraPlate Panels</i>	79
06402141— <i>Roof Metal</i>	80
10300865— <i>Rear Door Assembly</i>	81
22100241— <i>Rear Corner Post</i>	82
22100557— <i>Rear Header</i>	83
22101200— <i>Front Z-post</i>	83
22800102— <i>Front Sheet Radius</i>	84
22813454— <i>Tire Plates</i>	84
51304294— <i>Crossmember Weldments</i>	84
52300250— <i>Wide Threshold Plate</i>	85
53301006— <i>FRP Sidewalls</i>	86
54300274— <i>Front Wall Z-post</i>	86
54300346— <i>Front Assembly Post</i>	86
54300521— <i>FRP Front Wall with Aerocap</i>	87
54301004— <i>FRP Front Walls</i>	87
55300578— <i>Rear Sill Extension, Chicago Style</i>	88
55300795— <i>Rear Structures Roll-up Doors</i>	89
<i>Index</i>	90

Introduction

This manual lists parts for Utilimaster® Truck Bodies and Utilivans® built beginning in 2001. It contains exploded-view drawings and parts lists to aid in ordering replacement parts. This manual covers only those assemblies manufactured by or installed by Utilimaster Corporation. Items such as chassis and drive train components or certain interior furnishings are covered by separate manufacturer-supplied information. For bodies built prior to 2001 see either the (1986–2001) *Truck Body—Body Parts Manual* or the *1981–2001 Utilivan Body Parts Manual*.



For the Metromaster®, Trademaster®, and Aeromaster® parts manuals, see our award-winning web site www.utilimaster.com.

All information, specifications, and illustrations contained in this manual are based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice.

Decoding Part Numbers


Finding Part Numbers

This manual contains exploded-view drawings and parts lists for standard factory parts. The drawings illustrate the various parts and their general locations. The parts list accompanying a drawing describes each part and gives the corresponding Utilimaster part number. Some parts may appear on multiple drawings and lists.

Item Numbers

Drawings have item numbers identifying each part in the drawing:

- Item numbers lead with the section number (e.g., all **7.X** numbers are Front Wall parts).
- The item numbers are listed numerically in the parts lists (e.g., **7.1**, **7.2**, **7.3**) followed by the Utilimaster part number and part descriptions.
- The corresponding side of the vehicle (if applicable) is identified by a **RH** (**R**ight **H**and) or **LH** (**L**eft **H**and) suffix. (See the directional icon here and on the parts list pages.)
- A numerical suffix (e.g., **1.2.1**) indicates a part variation, a component of the preceding part, or fasteners for the preceding part.
- Other item number suffixes might indicate vehicle height, width, or other information that specifies that part (e.g., **1.6-GM**).

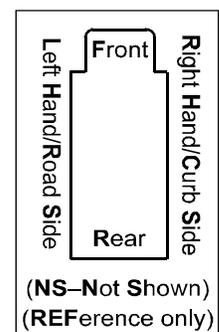

- Parts that are not shown have the **X.NS** suffix.
- Assembly numbers (**X.Ref**) are listed only for Utilimaster parts representatives to cross-reference.

Part Number with a Suffix

A **part number with a suffix** might require you to include more information:

- The **Width** suffix (e.g., 12345678-**W**) is asking for the **body width** (e.g., 90", 96", or 102").
- The **Height** suffix is asking for the **body height** (6'-0" to 9'-0").
- The **Length** suffix needs the **length of the part** being replaced.
- An **Appendix** suffix requires cross-referencing the number with an appendix in the back of this manual. (See the Table of Contents.)
- A part number with a **Chart** suffix depends on various body options to accurately replace the part. Customer Service will consult your vehicle body options from your supplied Body Serial Number.

In some cases specific part numbers are replaced by a code.

- **Parts Guide** refers to the *Utilimaster Quick Reference Parts Guide*. (See the More Information section.)
- **BSNR** means the **Body Serial Number is Required**. (See the Utilimaster Body Serial Number section.)
- **DSNR** means the Roll-up **Door Serial Number is Required**. This number is stamped on a metal plate on the interior side of the door.

Our Customer Service Department will gladly help if you need assistance.

Part Descriptions

Two asterisks (**) in front of the part description indicates that this part number is not currently used in Utilimaster production. These parts may take longer to deliver or may be replaced (superseded) by a different part number.

Vehicle Identification

Utilimaster builds several body styles. The two addressed in this manual are the Truck Body and Utilivan®. For these vehicles, three body construction options (aluminum sheet and post, FRP, and DuraPlate®) are available on a variety of cutaway or cab chassis. Utilivans are usually mounted on cutaway (“PDV”) chassis, and Truck Bodies are usually mounted on cab chassis. However, a “Utilivan” body can also be mounted on a cab chassis and a “Truck Body” can be mounted on a cutaway chassis.

The majority of the replaceable parts are designed to be interchangeable between construction types (e.g., FRP Truck Body and FRP Utilivan). However, since there are countless options and customer-specific upgrades, some specific parts cannot be interchanged. When communicating with Utilimaster, please specify the body type and construction style as well as the VIN Number, Unit (Body) Serial Number, or Work Order Number. See the sections on pages 9 and 10.

For the Metromaster®, Trademaster®, and Aeromaster® parts manuals, see our award-winning web site www.utilimaster.com.



LA-5
Vehicle Identification Number

MANUFACTURED BY:		GVWR 5216 KG (11500 LB)		TIRES		RIMS		COLD INFLATION PRESSURE		THIS VEHICLE CONFORMS TO ALL APPLICABLE FEDERAL MOTOR SAFETY STANDARDS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN.	
65906 STATE ROAD 19 P.O. BOX 985 WAKARUSA, INDIANA 46573-0585		FRONT	DAWR 1995 KG (4400 LB)	LT225/75R16E	16X6R			4+8 KPA (85 PSI)	VEHICLE ID. NO.: XXXXXXXXXXXXXXXXXXXX		
DATE OF MANUFACTURE: APRIL 2000		INTERM	N/A KG N/A LB	N/A	N/A			N/A KPA (N/A PSI)	VEHICLE TYPE: TRUCK		
INCOMPLETE VEHICLE MANUFACTURED BY:		REAR	3138 KG (7800 LB)	LT225/75R16E	16X6R			4+8 KPA (85 PSI)	UNIT SERIAL NO.: XXXXXXXXXXXXXXXXXXXX		
DATE INC. VEK. MFD.: FEBRUARY 2000									WXXXXXXXX		

LA-10
Federal Certification Label



LA-20
Label on the door post

Vehicle Identification Number (VIN)

The 17-digit chassis **Vehicle Identification Number (VIN)** is the legal identifier for this vehicle and is the number recorded in the license plate registration. The VIN may appear on a small metal plate on the dash on the driver's side. (See Illustration LA-5.) You can read the VIN if you look through the windshield. In vehicles over 10,000 lb. (4,536 kg.) GVWR, the plate may be mounted near the latch on the driver's door post or on the edge of the door. Open the door to see it. The number is also recorded on the Federal Certification Label. (See Illustrations LA-10 and LA-20.)

Unit (or Body) Serial Number and Federal Certification Label

The 15-digit **Utilimaster Unit (or Body) Serial Number** is recorded on the **Federal Certification Label**. This label is a plastic decal (about 11" long and 2" high) that contains a variety of manufacturing information (including the VIN). This label is found near the hinge, latch, or catch on the door or door post. Open the door to see it. (See Illustrations LA-10 and LA-20.)

Work Order Numbers


A 7-digit **Work Order Number** appears below the Unit Serial Number (without the leading W) on the Federal Certification Label and may also be stamped on the left-hand base rail. This number can be used when the body is no longer mounted on the original chassis. (See Illustrations LA-10 and LA-30.)



Illustration LA-30
Work Order Number


Utilivan and Truck Body Differences

Although Utilimaster Utilivans and Truck Bodies have many parts in common, in some areas (e.g., subframe, front wall, rear structure) you will need to know which body model your vehicle has to correctly order parts. The body model can be identified by looking at the subfloor (cargo floor) and its attachment to the sidewall. The floor of a Truck Body is built of structural I-beam crossmembers (visible from underneath) and is attached to the sidewall with **two** fasteners. The Utilivan uses formed-C crossmembers that attach to the sidewall with a **single** fastener. See Illustrations FL-10 and FL-20.

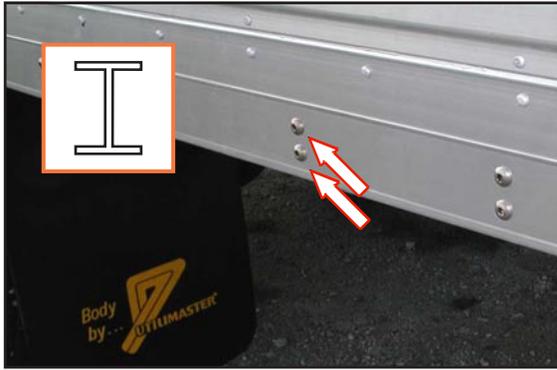

FL-10

Two Fasteners Attach the Truck Body Sidewall with an I-Beam Crossmember Floor

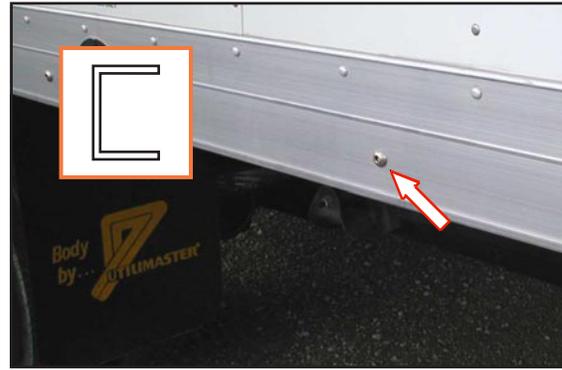


FL-20

One Fastener Attaches the Utilivan Sidewall with an Open C Crossmember Floor

Wall Construction Types

This manual documents the three different types of body construction in Utilivans and Truck Bodies. See Illustration FL-30.

- Aluminum (sheet and post) has an aluminum exterior skin joined to steel vertical interior studs with buck rivets. The studs might be covered with an optional interior liner.
- FRP (Fiberglass Reinforced Plastic) has no studs or panel seams and the surface has a little rougher texture than painted metal.
- DuraPlate has seams at the overlapping steel laminate panels, but no studs. The panels might be joined together with rivets or adhesive.

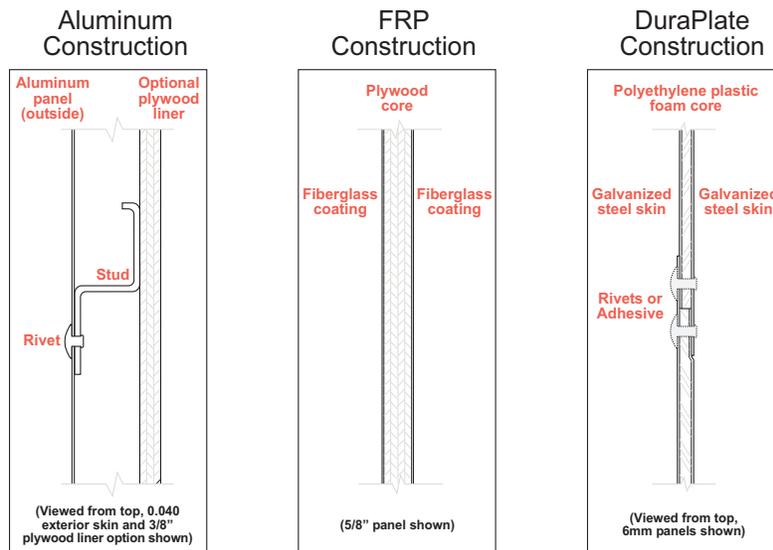

FL-30 Aluminum, DuraPlate, and FRP Construction

Ordering Parts

How to Order

To order parts for this vehicle, gather the following information:

- **Model and year of vehicle** (200x-*Customer name*).
- **Chassis VIN or Utilimaster Body Number** (see page 9).
- **Complete shipping address.**
- **Preferred method of shipping.**
- **Complete description of all the necessary parts** (see parts lists).
- **Method of payment.**

NOTE: Customer Service prefers payment by Visa, MasterCard, Discover, or American Express credit cards. Purchase Orders from customers with established open accounts are also accepted.



Then contact Utilimaster Customer Service by using one of the following methods:

- **Email** your order to CustSvc@Utilimaster.com. (See the Customizable Parts Order Form section.)
- **Fax** your order to **574-862-7637**.
- **Call 800-237-7806** (574-862-3219) and ask for the Parts Department.
- **Mail or express service** your order to the following address:

Utilimaster Corp.
Attn: Parts Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

Returns

To return parts for credit, call the Customer Service Department for prior authorization. All returns must be shipped prepaid freight. A restocking fee will be charged to all returns. Special-order parts are not returnable.

Customizable Parts Order Form

The **Parts Order Form** on the next page can be photocopied from this manual. Then one of the copies can be filled in with the relevant information and faxed or mailed to Utilimaster Customer Service.

You can also download a customizable form template file from the Utilimaster web site www.utilimaster.com. That template is similar to the form on the next page, but it has a header that you can customize with your name and address. Then, to order parts, you only have to enter the specific information about the vehicle—saving retyping the same address information repeatedly. After completing the form information, the file can be emailed as an attachment. That form can also be used for mailing or faxing.

Service Center Name _____

Address _____

Contact Person _____

City, State, Zip Code _____

Email _____

Phone _____

Fax _____

To Utilimaster Parts Department
(or mail to 65528 State Road 19, P.O. Box 585
Wakarusa, IN 46573-0585, U.S.A.)

FAX 574-862-7637

Date _____

Preferred Shipping _____
(i.e., type of carrier and service priority)

Re Parts Order ____
or
Request for Quote Only ____

Credit Card # _____
Exp. Date _____
(or) Purchase Order # _____
(For customers with open accounts)

Special Instructions _____
(e.g., different shipping address)

Signature _____
Service Center Representative's Signature

Vehicle Model		Utilimaster Body S/N or Chassis VIN		Application
				Maintenance __ Accident __ or Warranty __
Order Item #	Utilimaster Part Number	Part Description	Quantity	Comments (optional)
1.				
2.				
3.				
4.				
5.				
6.				
7.				
8.				
9.				
10.				
11.				
12.				
13.				
14.				
15.				

Filing Warranty Claims

If a problem on the Utilimaster body is caused by a defect in materials or workmanship during the warranty period, it will be covered by our Limited Warranty. Chassis, engine, tires, and battery failures are covered by the individual manufacturers.

Claims must meet the requirements listed below. Failure to meet these requirements may result in a denied or delayed claim.

Complete a repair order with the following information:

- **Chassis VIN or Utilimaster Body Serial Number** (see page 9).
- **Year and model of vehicle.**
- **Owner's and/or service facility's name and complete address.**
- **Service center representative's signature** (or name).
- **Date vehicle was repaired.**
- **Mileage at time of failure.**
- **Itemized description of the problem, including complaint, cause of failure** (if known), **and correction** (describe in detail).
- **Service center labor rate and total time of repair.**
- **Total claim amount, including cost of parts** (include Utilimaster P/Ns), **labor, miscellaneous charges, and sales tax** (if applicable).
- **Your claim or repair order number.**
NOTE: The claim or repair order number is the number used to match Utilimaster payment with the work done. It will be noted on your payment.
- **Utilimaster authorization number** (repairs costing over \$150 U.S. or for structural warranty require prior authorization from Utilimaster).

Other claim requirements:

- Any repairs **over \$150 U.S. or for structural warranty require prior authorization** from Utilimaster, and that number must appear on the repair order. Contact the Warranty Department.

- Any claim that is not **legible and complete** will be returned for completion.
- **All paint claims** require pictures, estimates, and prior authorization.
- **Shipping damage claims** also require pictures, estimates, and prior authorization. The damage must also be noted on the Delivery Acceptance form. This form requires the signature of the carrier driver.
- **Sublet work** must have the sublet repair order attached to the service facility's repair order that is being submitted.
- Claims must be **submitted within 30 days** after the repair is completed.

The claim can be mailed, faxed, emailed, or performed on-line on our web site (assuming all required information is included).

- Warranty claims should be **mailed** to:

**Utilimaster
Attn: Warranty Department
65528 State Road 19
P.O. Box 585
Wakarusa, IN 46573-0585
U.S.A.**

- Alternately, you can **fax** your claim (if no photographs are involved) with the above information to **574-862-7637**. (The resolution of the received copies must be acceptable, or you will be asked to mail your hard copies.)
- Or you can **email** your claim with the above information to **Warranty@Utilimaster.com**. (You can download a customizable **Warranty Claim Form template** from the Utilimaster web site **www.utilimaster.com**. The template has a header that you can customize with your name and address. Then, to file a claim, you only have to enter the specific information about the vehicle—saving retyping the same address information repeatedly. After completing the form information, the file can be emailed as an attachment. This form can also be used for mailing or faxing.)

Claims are paid semimonthly. Utilimaster generally does not pay sales tax on claims. If you do not have our tax exemption number on file, please call 800-582-3454 or 574-862-4561 and ask for the accounting department to obtain the number.

Before returning any parts, contact a Utilimaster Warranty representative.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.



CAUTION: Utilimaster vehicles are built to designed specifications. Improper use or overloading can cause damage to the equipment and void the warranty.



WARNING: Unauthorized alteration or improper maintenance or repair can result in possible dangerous driving conditions.

Reporting Safety Defects

United States Only

If you believe that your vehicle has a defect that could cause a crash, injury, or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA), in addition to notifying Utilimaster.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Utilimaster.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at **800-424-9393** (or **202-366-0123** in the Washington, D.C., area) or write to:

**NHTSA
U.S. Department of Transportation
400 Seventh Street
Washington, DC 20590**

You can also obtain other information about motor vehicle safety from the Hotline.

Canada Only

If you believe that your Canadian-registered vehicle has a defect that could cause a crash, injury, or death, you should immediately inform Transport Canada, in addition to notifying Utilimaster.


To contact Transport Canada, call **800-333-0510** (or **613-993-9851** in the Ottawa region) or write to:

**Transport Canada
Motor Vehicle Defect Investigation
PO Box 8880
Ottawa, Ontario, K1G 3J2**

More Information

Download Files

Many support documents, including those described here, are downloadable (as Adobe® Acrobat® PDF files) from our award-winning web site at www.utilimaster.com. **Click on the Technical Manuals button, to access the download page.** To view the files you must have the Adobe Acrobat Reader version 4.0 or higher installed on your computer. Acrobat readers are available free for all leading computer operating systems on the Adobe web site (www.adobe.com).

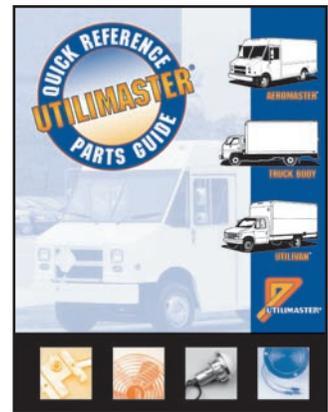


Utilimaster Quick Reference Parts Guide

Easily find commonly replaced parts for most Utilimaster vehicles in the *Utilimaster Quick Reference Parts Guide*. This illustrated document includes more part numbers for bumpers, door hardware, electrical components, mirrors, vents, mud flaps, windows, roll-up door parts, and many other parts. It also includes sealants and repair kits.

Utilimaster Glossary of Terms

If you are not familiar with some of the terminology used in this manual, you can find many Utilimaster and industry associated terms and definitions in the *Utilimaster Glossary of Terms—Body Information Guide*.

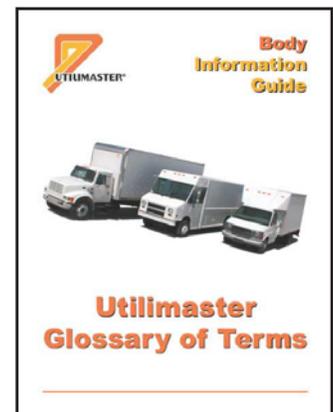

Utilimaster Body Service Manual

Find routine maintenance procedures, flat rates, wiring diagrams, troubleshooting, proper adjustment methods, vehicle repair, aftermarket upgrades, and much more in Utilimaster's *Truck Body and PDV—Body Service Manual*.

Contact Utilimaster

Browse our site for more information about Utilimaster and its products or contact Utilimaster Customer Service by using one of the following methods:

- Call 800-237-7806 (or 574-862-3219).
- Fax to 574-862-7637.
- Email to CustSvc@Utilimaster.com.
- Mail to the following address:

Utilimaster


Attn: Customer Service Department

65528 State Road 19

P.O. Box 585


Wakarusa, IN 46573-0585, U.S.A.

NOTE: When phoning Utilimaster, be aware that our 219 telephone area code changed to 574 in January 2002. The 800 numbers were unaffected.

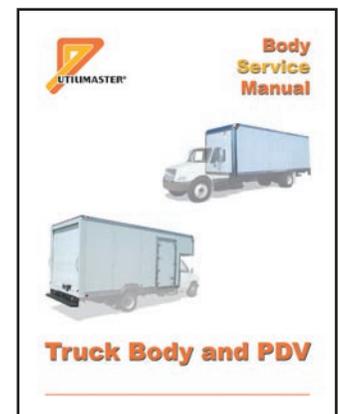

Diagrams and Parts Lists

1—Subframe and Cargo Floor, Utilivan

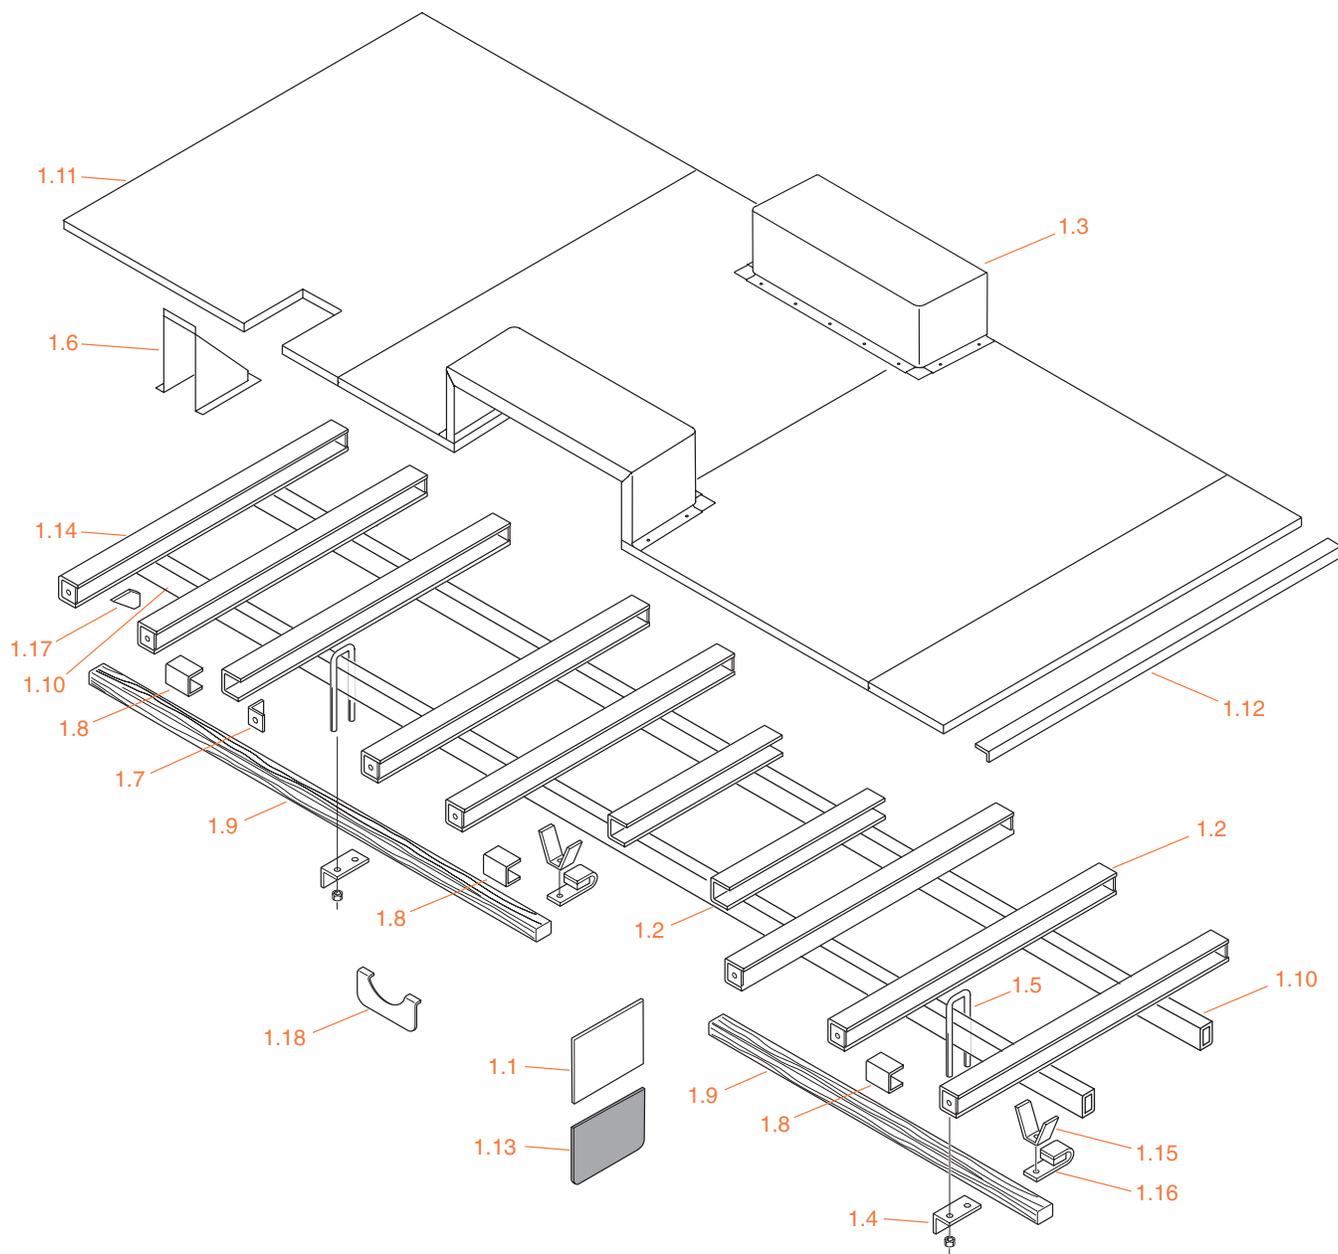


Subframe and Cargo Floor, Utilivan

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

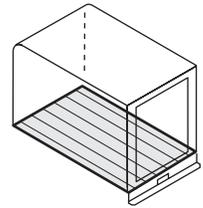


Item	Part Number	Description
1.0		Subframe and Cargo Floor, Utilivan Style
1.1	BSNR	SHIELD MUD
1.2.1	22817980-Width	CROSSMEMBER 2 x 3 FRMD C
1.2.2	22815744	XMBR WLDMT 12GA x 95.50
1.2.3	22814931-Length	XMBR FRMD 2 x 3
1.3.1	22817918	WHEELWELL BODY 80" WIDE TB
1.3.2	22814298	W/WELL BODY 12GA x 7.62 STD CUT
1.3.3	22819119-Chart	WELDMENT WHEELWELL BODY CHART
1.4	22300309	BAR ANGLE TIE .38 x 2 x 2 x 6 HP
1.5	BSNR	U-BOLT
1.6 GM	06625007	KNEE CVR GAS 14GA 9.5 x 6 x 10 PDV
1.6 FD	06625008	KNEE CVR GAS 14GA 3 x 6 x 10 PDV
1.7	22815537	CLIP END 10GA x 1.62 x 2 x 2.38
1.8.1	22816141	KEEPER WOOD RISER
1.8.2	22811237	KEEPER WOOD RISER
1.9.1	02805363	OAK MOUNTING 1.62 x 2 x 144.0
1.9.2	02805703	MOUNTING OAK 3" x 4-1/2" x 100"
1.10 .1	22250039-Length	TUBE 12GA x 2 x 4
1.10.2	22250033-Length	TUBE 12GA x 2 x 5
1.10.3	22819431	LONGSILL CHANNEL 2 x 5 x 197
1.11.1	02805175-Chart	PINE SO.YEL 1-1/8" x 6-5/8" FACE
1.11.2	02804002	PLYWD S/PINE T&G 1-1/8 x 48 x 94.12
1.12	22818123	CAP RR FLOOR 16GA GALV 1.12 x 1.12 x 78.00
1.13.1	01901684	MUDFLAP SRW 11-3/8 x 12 PLAIN
1.13.2	01902527	MUDFLAP .25 x 18 x 27.5 ANTI-SPRAY
1.14.1	22815782	XMBR WLDMT FRONT 12GA x 95.50 FORMED
1.14.2	BSNR	XMBR WLDMT FRONT FORMED
1.15	01712066	BACKET BODY SILL H DOWN 1.5"
1.16	01901996	J HOOK WLDMT 3/8" SHORT
1.17	01708912	GUSSET PDV CRSMBR 12GA x 5" x 5"
1.18-GM	06927714	SPACER GAS FILL DISH GMT LOWERED
1.18-FD	06926093	SPACER GAS FILL DISH FORD

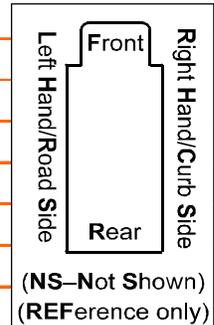

Continued

1—Subframe and Cargo Floor, Utilivan (Continued)

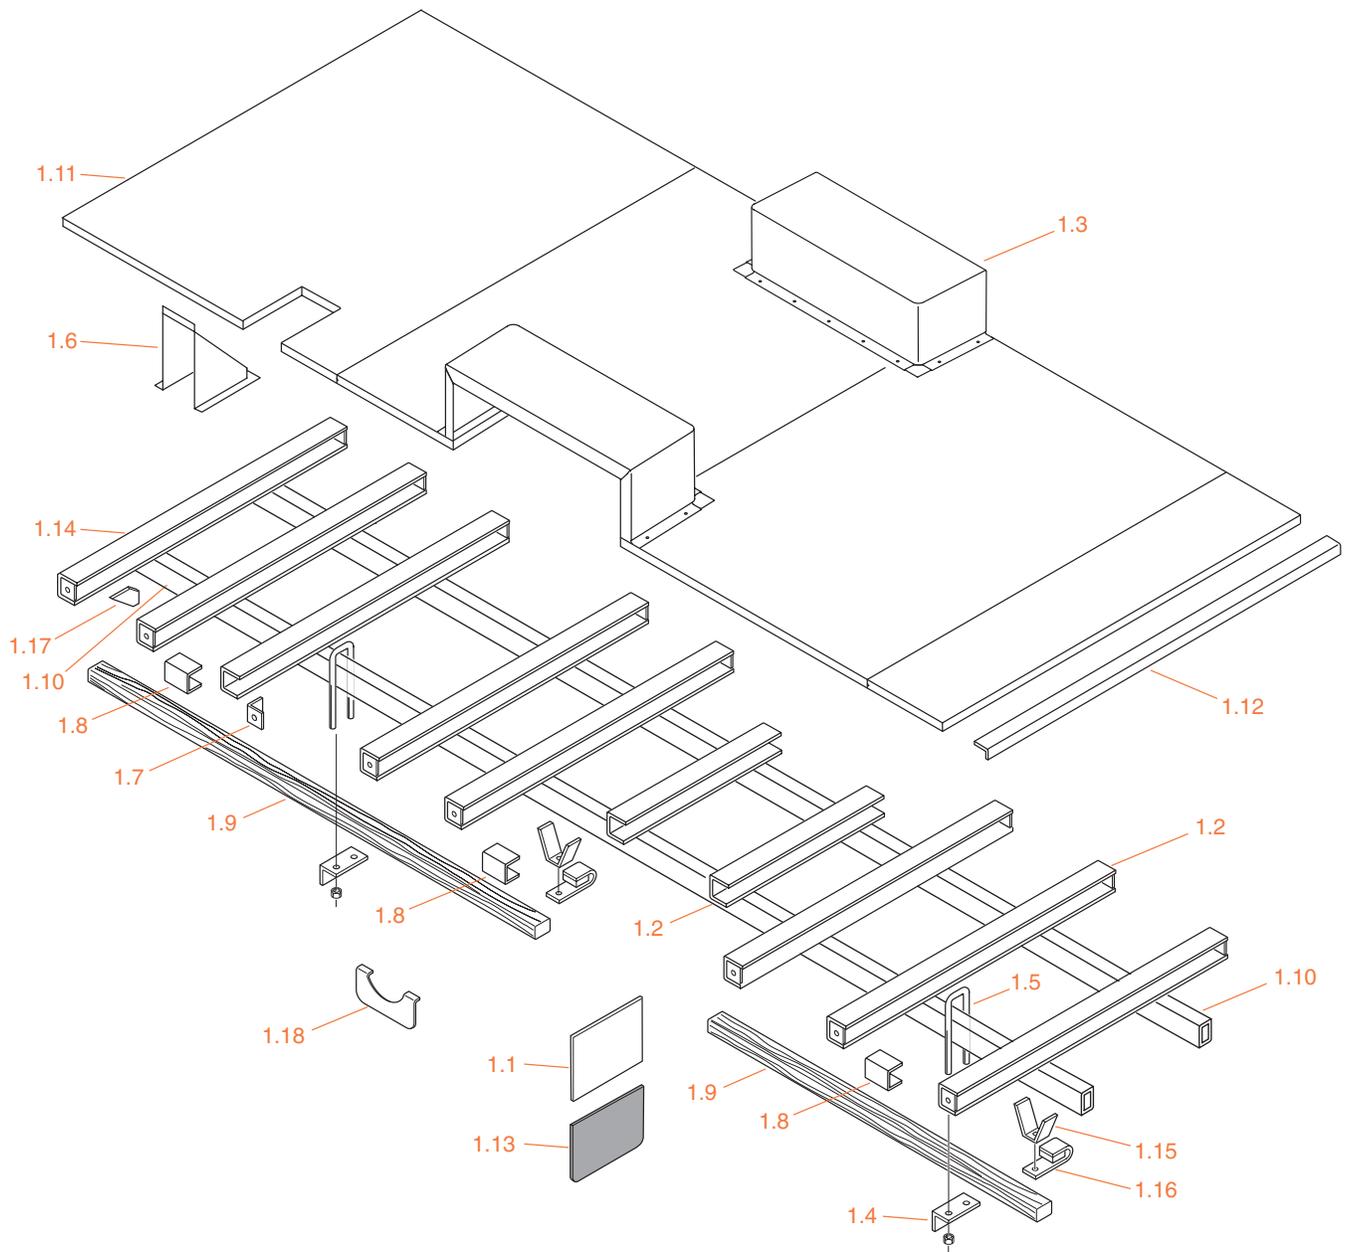


Subframe and Cargo Floor, Utilivan

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

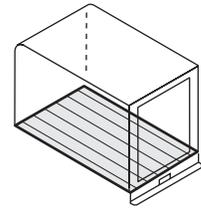

Item	Part Number	Description
1.NS	12002501	WD DOUGH DAP NAT
1.NS	12605952	SIKAFLEX GRAY ALUM
1.NS	12605987	BRITE WHT ADHESIVE
1.NS	08707582	CLAMP FRAME
1.NS	12303705	TAPE VINYL 3" WHITE
1.NS	12303706	TAPE VINYL 2" WHITE
1.Ref	51211021	RUBBER MOUNT LAYOUT 139"WB GM
1.Ref	64381004	LAYOUT GMT FUEL FILL FRP S/WALL LWRD
1.Ref	51305642	SUBFRAME WLDMNT 16'
1.Ref	52301100	FLOOR ASSEMBLY 16'-1"
1.Ref	64301087	FUEL FILL FORD E-350 E-450 S/P FF

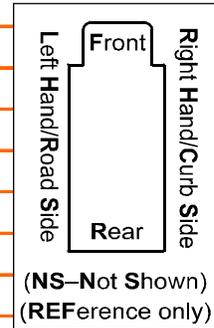

1—Subframe and Cargo Floor, Truck Body

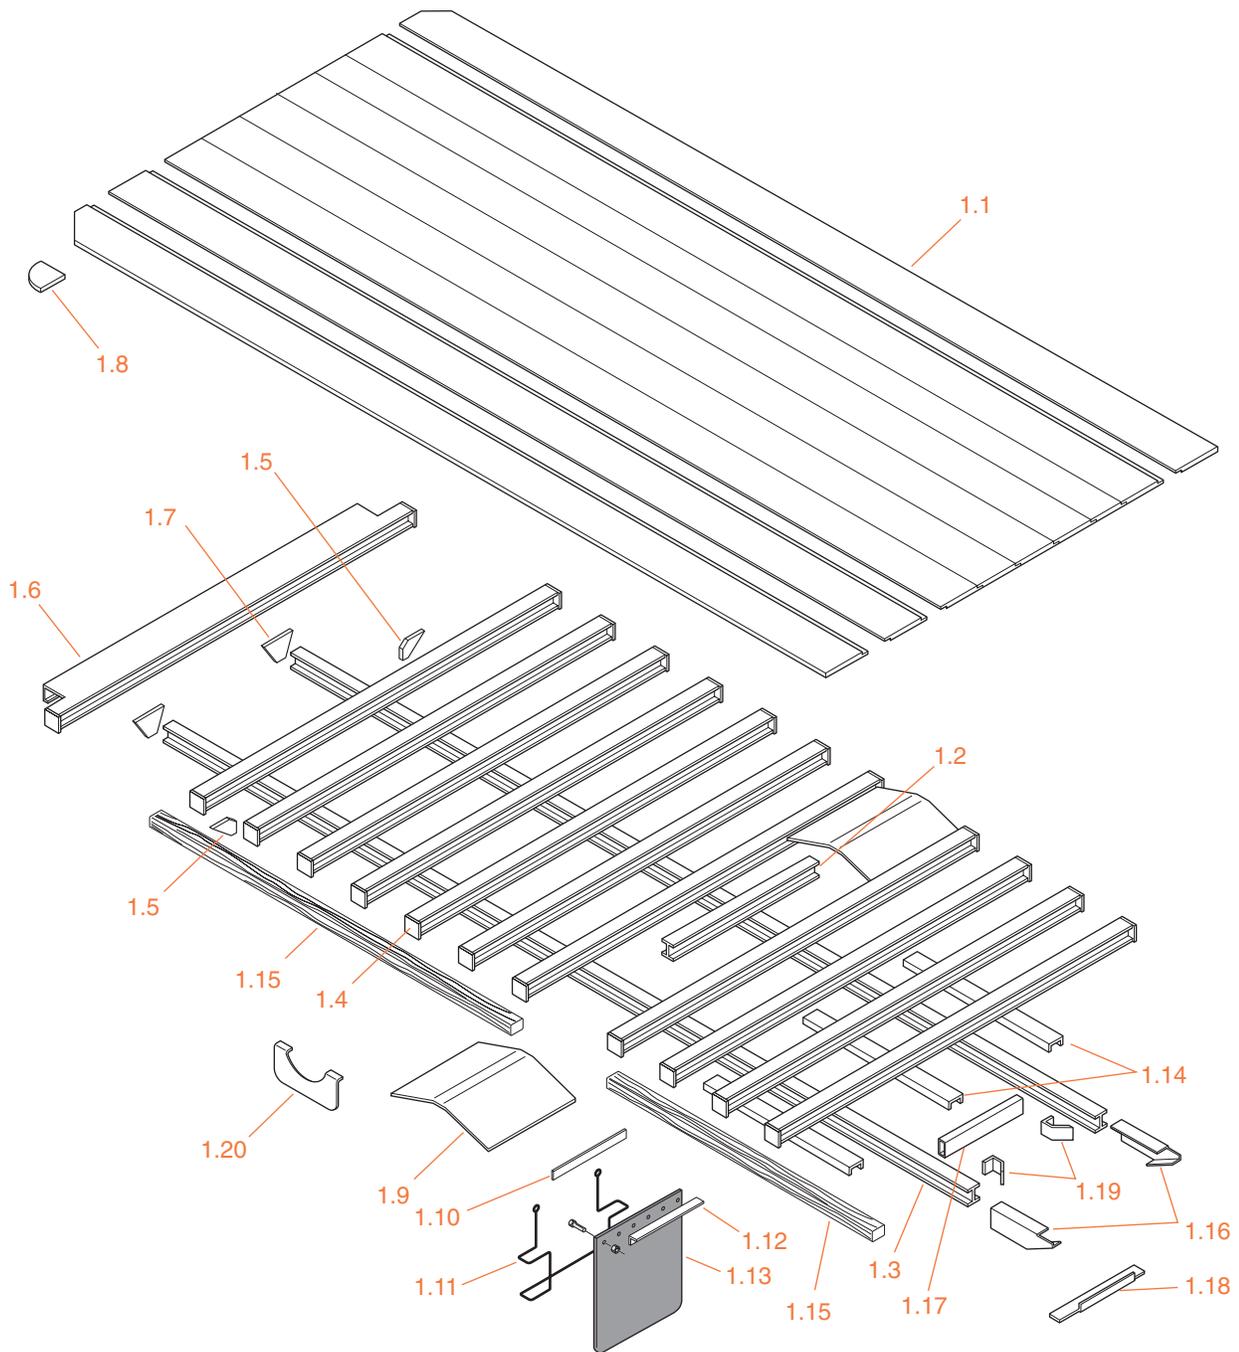


Subframe and Cargo Floor, Truck Body


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

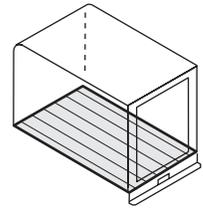


	Part Number	Description
1.0		Sub Frame and Cargo Floor, Truck Body Style
1.1.1	02804149-Length	HARDWOOD FLOOR KIT
1.1.2	02801359-Length	FILLER PLANK
1.1.3	02805175-Chart	PINE SO. YEL 1-1/8" x 6-5/8" FACE
1.1.4	02804972	PINE SOUTH YEL 1-1/8 x 4-7/8 FACE 24'
1.2	22770132-Length	3" I-BEAM x 2.9#FT
1.3.1	22700000-Length	4" I-BEAM LONG SILL
1.3.2	01705805-Length	CHANNEL C4 x 5.4#/FT
1.3.3	22400041-Length	CHANNEL C6 x 8.2#/FT
1.3.4	22811526	CHNL FRMD 10GA x 2 x 5 x 293
1.4.1	22500007	XMBR FRAME 2 x 3 PROFILE
1.4.2	22500006	CROSSMEMBER WELDMENT 3" x 95.5"
1.4.3	22815221	CLIP FRT END 10GA x 2 x 2.38 TB
1.4.4	11600926	NUT 3/8-16 HEX FLG SER
1.4.5	11600927	SCREW 3/8-16x3/4 SS TR TX W/PATCH
1.5.1	01708911	GUSSET L/SILL 2.50 x 6.88 10GA
1.5.2	22000228	GUSSET 12GA x 3 x 3 45*MITRE
1.6.0-3	22815221	CLIP END 10GA x 2 x 2.38 TB (End Clip Only)
1.6.1-90	22816624	XMBR FRONT WELDMENT 12GA x 89.50 x 3
1.6.1-96	22815782	XMBR FRONT WELDMENT 12GA x 95.50 x 3
1.6.1-102	22816626	XMBR FRONT WELDMENT 12GA x 101.50 x 3
1.7.1	01708910	GUSSET FRONT L/SILL 4 x 5 FRP 10GA
1.7.2	22000373	GUSSET FRONT L/SIL 10 GA x 5 x 6 (6"C)
1.7.3	01708913	GUSSET FRONT L/SILL 10G 5 x 6
1.8.1	06521138	PLATE CRNR SEAL C/O .125
1.8.2	06600069	PLATE CRNR SEAL .063 x 2 x 6.62
1.8.3	06531280	PLATE CRNR SEAL .063 x 4.88 RAD
1.9.1	Appendix 22813454	TIRE PLATES
1.9.2	22813454	PLT TIRE CLEARNCE 7GA 24 x 27
1.10.1	01700586	PLATE MUD FLAP BACKER 23" W/HOLES
1.10.2	22000724	PLATE 12GA x 1.5 x 17 HOLES TB

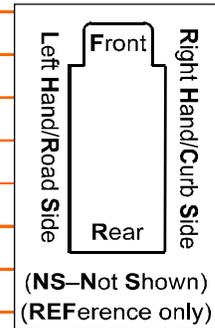

Continued

1—Subframe and Cargo Floor, Truck Body (Continued)

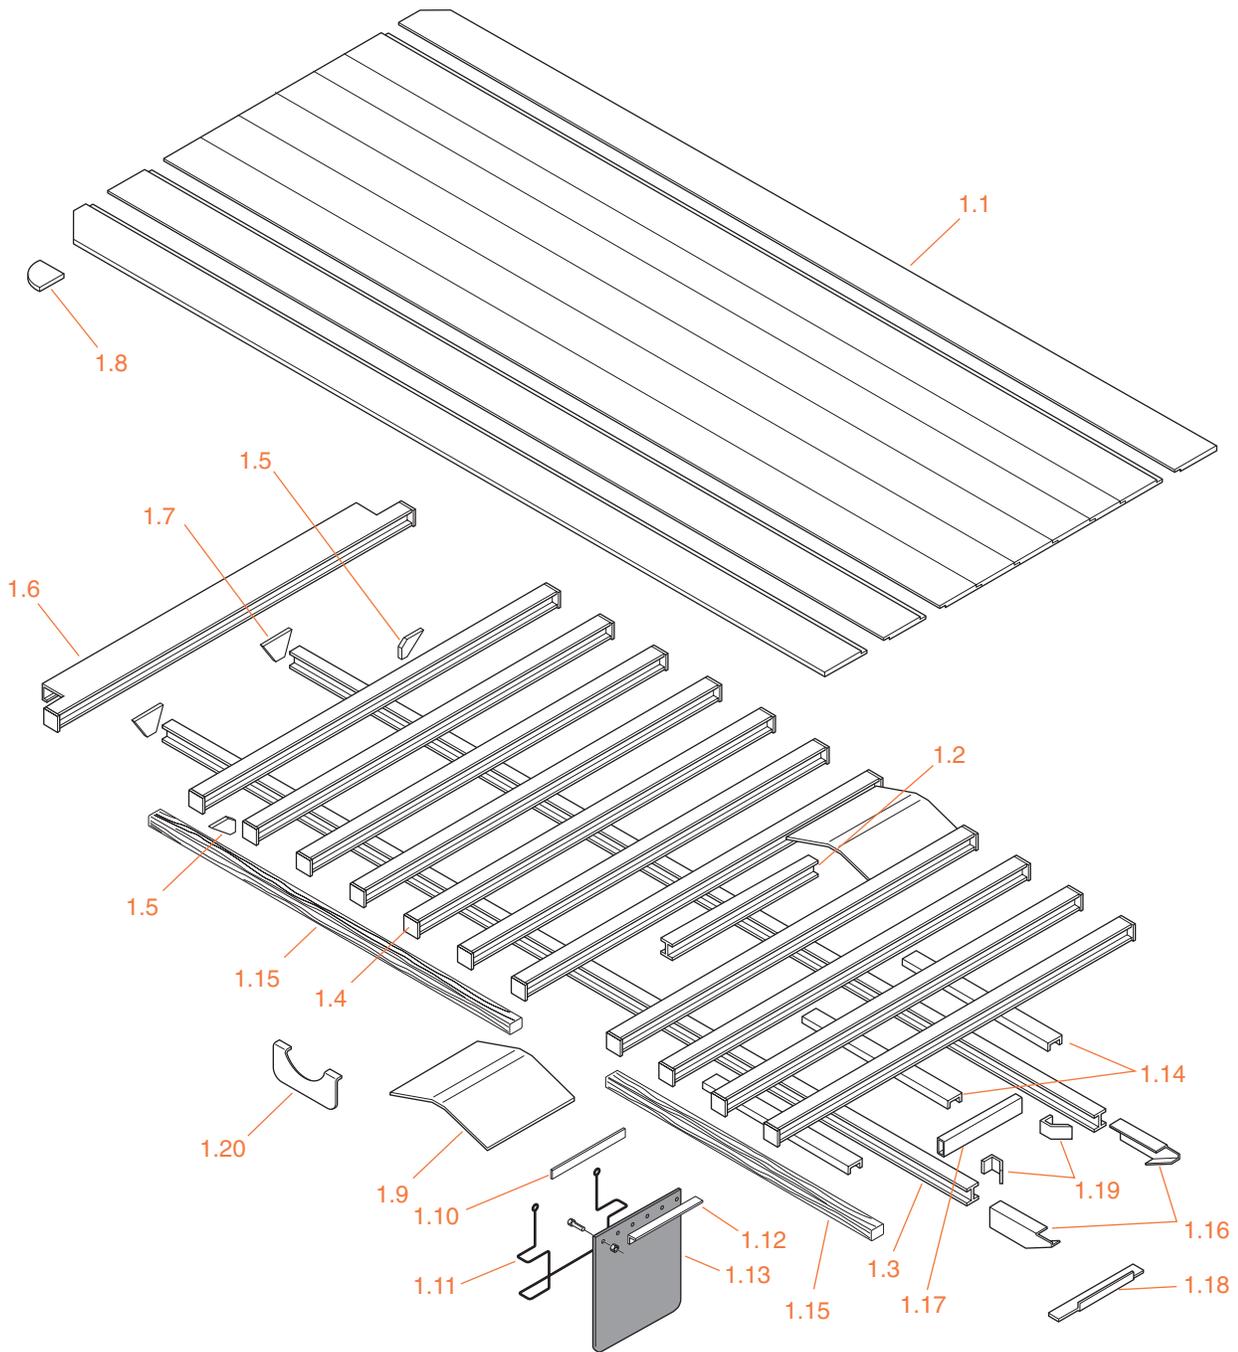


Subframe and Cargo Floor, Truck Body


Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.

Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.


Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

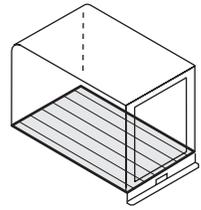

Item	Part Number	Description
1.11-18	01520043-Chart	ANTI-SAIL BRKT 18"
1.11-24	01520042	ANTI-SAIL BRKT 24"
1.12.1	22100829	BRKT MUD FLAP 12GA x 17"HLS TB
1.12.2	01700350	BRACKET MUD FLAP 23" 64300018
1.13.1	01505069-Chart	MUD FLAP CHART
1.13.2	01505056	MUDFLAP 18 x 27-1/2 W/NEW LOGO
1.13.3	01901287	MUD FLAP 24 x 36 CHNLD NEW LOGO
1.13.4	01901288	MUD FLAP 24 x 30 PLAIN CHNLD
1.13.5	01901289	MUD FLAP 24 x 30 CHNLD NEW LOGO
1.13.6	01901286	MUD FLAP 24 x 36 PLAIN CHANNELED
1.13.7	01902526	MUDFLAP .315 x 24 x 36 CHNL
1.14	01705802-02400	CHANNEL C3 x 4.1#/FT
1.15	02805703	MOUNTING OAK 3" x 4-1/2" x 100"
1.16 LH	22815873	EXTEN FRAME LH W/LIFTGATE
1.16 RH	22815872	EXTEN FRAME RH W/LIFTGATE
1.17	22250039-Length	TUBE 12GA x 2 x 4
1.18	22101670	ANGLE RAMP 12GA x 1 x 2.5 x 33
1.19.1	22810182	GUIDE RAMP 12GA x 4.0 x 1.88
1.19.2	22150020	RAMP GUIDE 12GA x 4.5
1.20-GM	06927714	SPACER GAS FILL DISH GMT LOWERED
1.20-FD	06926093	SPACER GAS FILL DISH FORD
1.NS	11002618	ROD THREADED 5/8-11 x 16"
1.NS	11006011	U-BOLT 5/8 x 2 x 3.5 x 19-1/2
1.NS	01901998	J HOOK WLDMT 1/2" SHORT
1.NS	12002501	WD DOUGH DAP NAT
1.NS	08707582	CLAMP FRAME
1.NS	12605952	SIKAFLEX GRAY ALUM
1.NS	12303705	TAPE VINYL 3" WHITE
1.NS	12303706	TAPE VINYL 2" WHITE
1.Ref	51305641	WLD 24' S/FRAE 183" EFCA
1.Ref	64301087	FUEL FILL FORD E-350 E-450 S/P FF
1.Ref	51300523	LONG SILL GUSSET INTAL
1.Ref	51300444	LONG SILL GUSSET INTAL
1.Ref	51305179	MUD FLAP INSTALL GENERIC TB

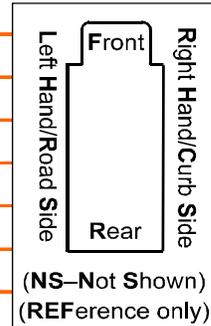

2—Rear Bumpers

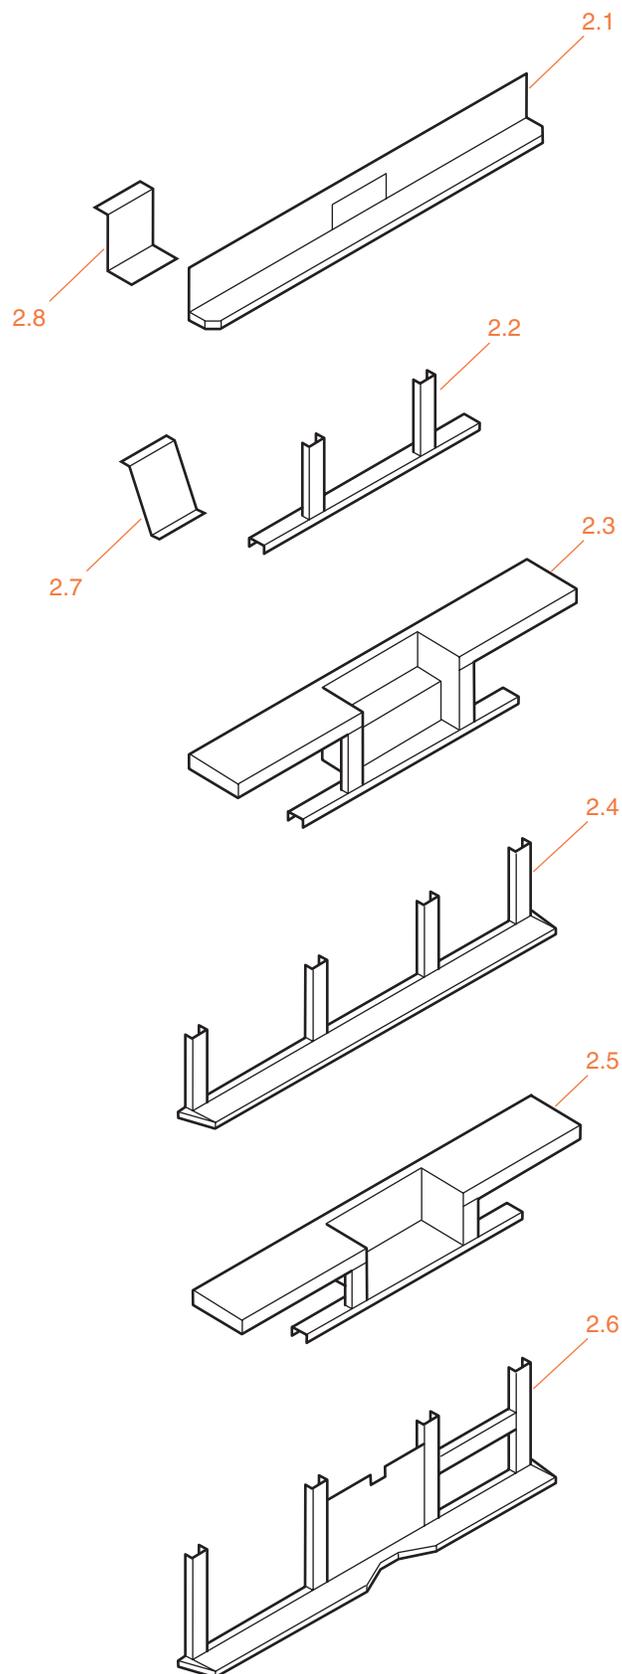


Rear Bumpers

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

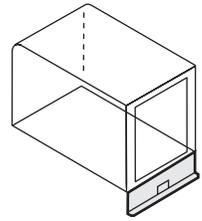

Item	Part Number	Description
2.0		Rear Bumpers
2.1	BSNR	BUMPER, 12 GAUGE FULL WIDTH STEP
2.2	BSNR	BUMPER, STRUCTURAL CHANNEL
2.3	BSNR	BUMPER, 2 STEP CHICAGO
2.4	BSNR	BUMPER, STRUCTURAL CHANNEL
2.5	BSNR	BUMPER, 1 STEP CHICAGO
2.6	BSNR	BUMPER, STRUCTURAL CHANNEL W/HITCH
2.7.1	51260110	SPLASH SHIELD WW
2.7.2	06926380	SPLASH SHIELD TAIL LIGHT
2.8	06925338	SHIELD SPLASH .063 x 12.00
2.Ref	51305235	BUMPER WLDMT POOCHED 8 x 95.5 '00 RYDER
	See also the Rear Bumper with Ramp and Ball Hitch section.	

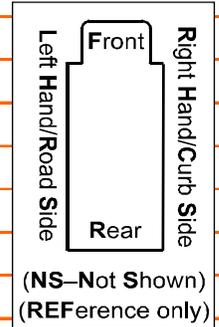

2—Rear Bumper with Ramp and Ball Hitch

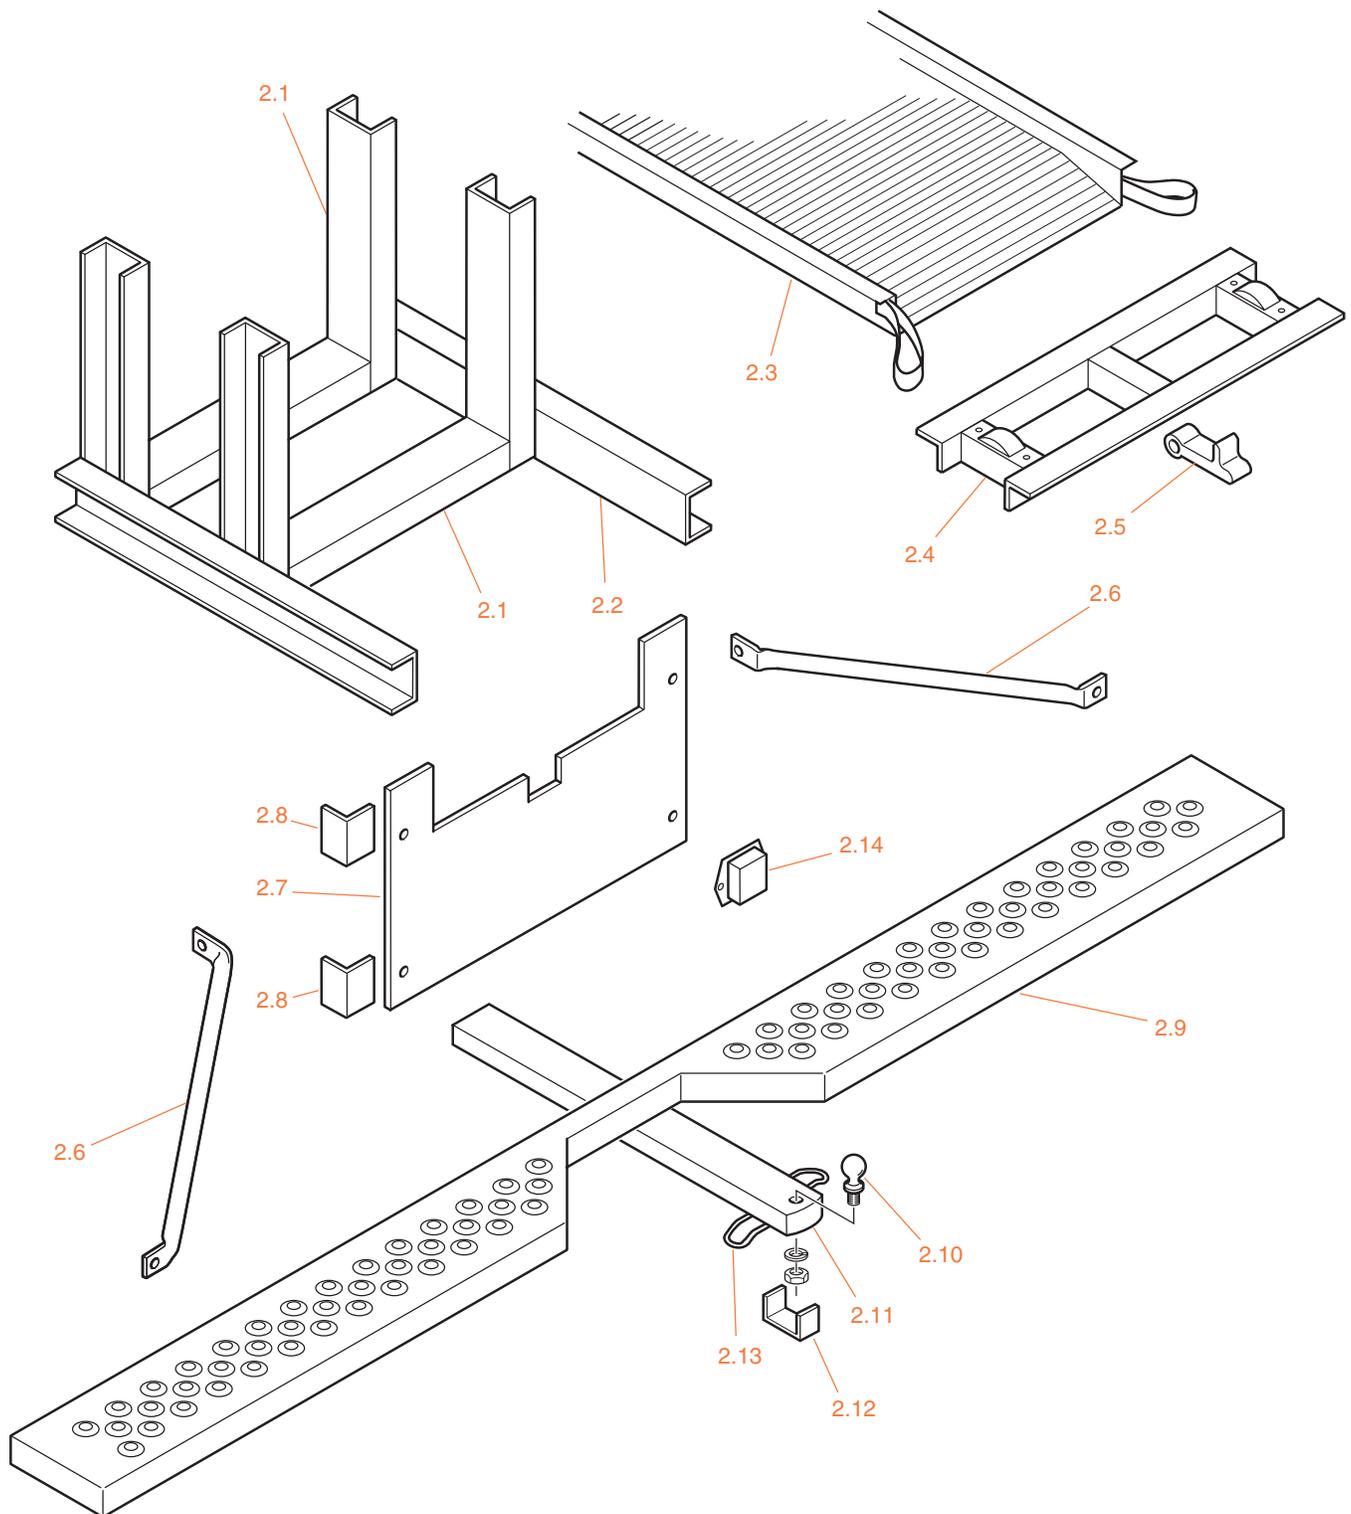


Bumper with Ramp and Ball Hitch

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

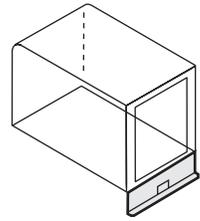


Item	Part Number	Description
2.0		Rear Hitch Bumper with Ramp
2.1	01705805-Length	CHANNEL C4 x 5.4# (Specify Length)
2.2	01705802-Length	CHANNEL C3 x 4.1# (Specify Length)
2.3.1	01902782	RAMP 12' WO/HOUSING
2.3.2	01902921	RAMP 14' WO/HOUSING
2.3.3	BSRR	RAMP, Other
2.4	Part of item 2.3	ROLLER, Supplied with Ramp Assembly
2.5	Part of item 2.3	LATCH, Supplied with Ramp Assembly
2.6-16	19901262	PIPE BUMPER BRACE 1.25 x 16
2.6-32	19901261	PIPE BUMPER BRACE 1.00 x 32
2.6-33	19901241	PIPE Bmpr BRACE 1.25 x 33.0
2.7	22815751	PLT Bmpr MID 15.06 x 42.5
2.8	22815756	ANGLE FRMD 12GA x 2 x 2 x 3
2.9	01902772	Bmpr POOCHED 7GA x 95.12
2.10	01205028	BALL HITCH 2"DIA x 1.38" 6,000LB
2.11-22	22815755	BAR HITCH 3" x 22"
2.11-24	22810180	BAR HITCH 3" x 24"
2.12	22819403	HITCH BALL PROTECTOR 10GA x 2 x 3
2.13	22815113	EYELET .50 DIA x 3 x 4 FRMD
2.14.1	16512890	BRACKET LIC PLT W/PTAIL
2.14.2	16512308	BOX CONNECTOR PHILLIPS
2.NS	01903491	WLDMT EXTEN HITCH (Ref 64381003)
2.NS	22819435	EXTENSION HITCH 7GA x 4.5 x 18
2.Ref	51305173	14' RAMP LA YOUT 24' DCK
2.Ref	55211012	REA R STR GRAB HANDLE INSL
2.Ref	01902783	12 RAMP LA YOUT
2.Ref	64381003	LA YOUT HITCH/BUMPER
2.Ref	51305635	LA YOUT BUMPER & HITCH
2.Ref	51305634	HITCH WELDMENT 24' INT'L
2.Ref	01903489	HITCH WELDMENT GM CUT

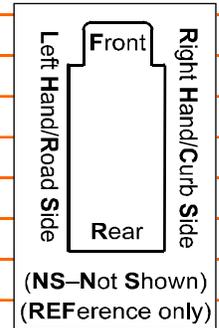

(NS—Not Shown)
(REFerence only)

3—Rear Structure, Medium-duty

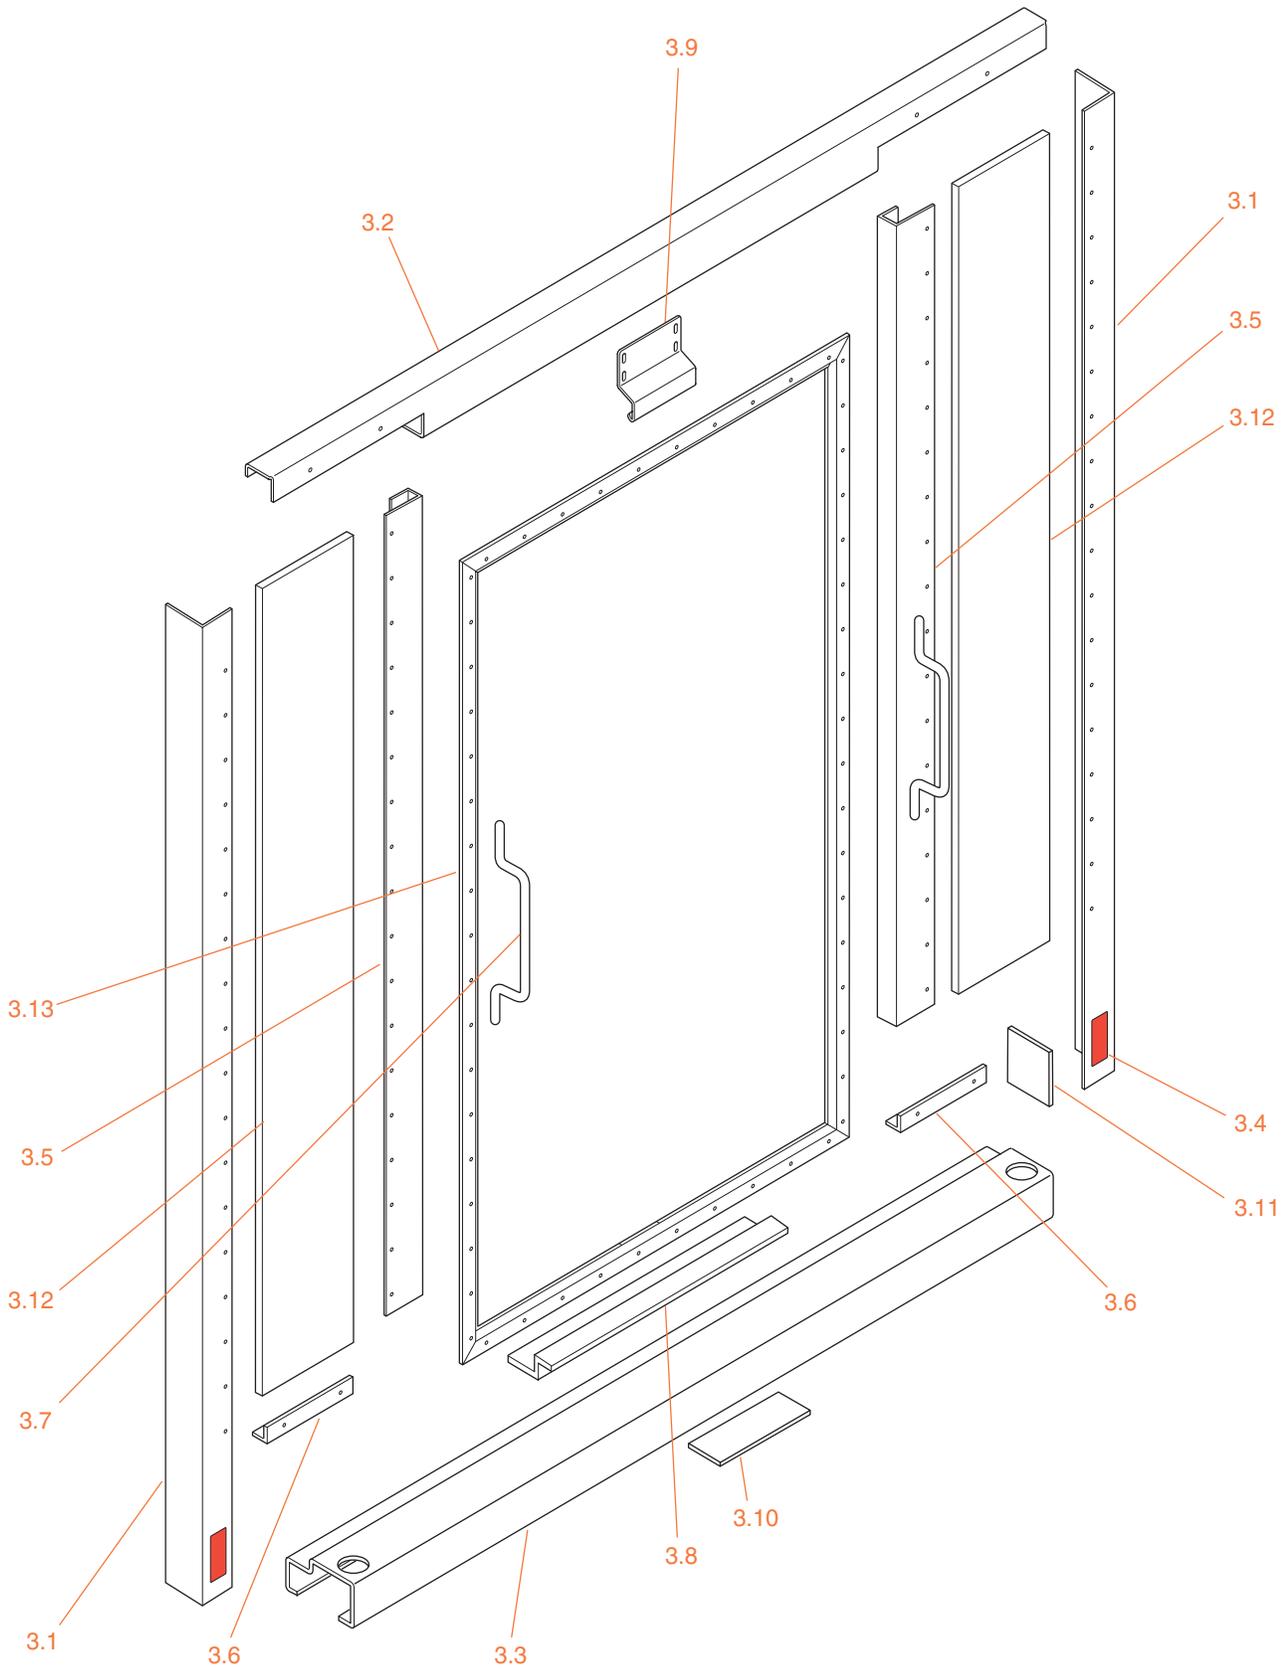


Rear Structure, Medium-duty

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

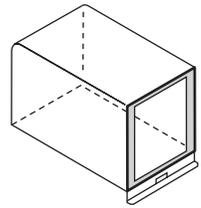

Item	Part Number	Description
3.0		Rear Structure, Utilivan Style
3.1	BSNR	POST REAR CORNER (Specify LH or RH)
3.2	BSNR	HEADER REAR
3.3	BSNR	THRESHOLD REAR
3.4.1	16200034	REFLECTOR RED TAPE ROUND
3.4.2	16511547	REFLECTOR RED 3"
3.4.3	15200498	REFLECTOR RED TAPE
3.5	22815363-Chart	DOOR POST (Specify Length)
3.6	01701950-Length	ANGLE 1/8 x 1.5 x 1.5
3.7.1	Parts Guide	HANDLE GRAB
3.7.2	08611358	HANDLE GRAB ALUM 1/2" x 13"
3.8	BSNR	FILLER THRHLD W/FLUSH DR OPNG
3.9	22818975	PLATE UPPER STRIKER
3.10	22001034	PLATE CRNR STIFFNER 10GA x 6.5 x 3
3.11	01700519	PLATE RAIL REAR ATCHMNT 2.5 x 2.5
3.12	BSNR	REAR PANEL
3.13	06003899	EXTR DOOR FRAME IA 7934
3.NS	12606027	SIKAFLEX WHITE
3.NS	12301160	TAPE GRAY PVC.06 x .75 150' ROLL
3.Ref	55281005	WLDMT REAR STR W/TWIN 20" DR
3.Ref	55311008	WLDMNT RR STRUCT 50" SWNG DBLT CHART
3.Ref	55311012	WLDMT RR STRCT CHART 40" OPNG DBLT
3.Ref	55311005	REAR STR WLDMNT SWING 78"H

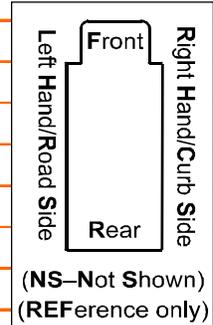

3—Rear Structure, Heavy-duty

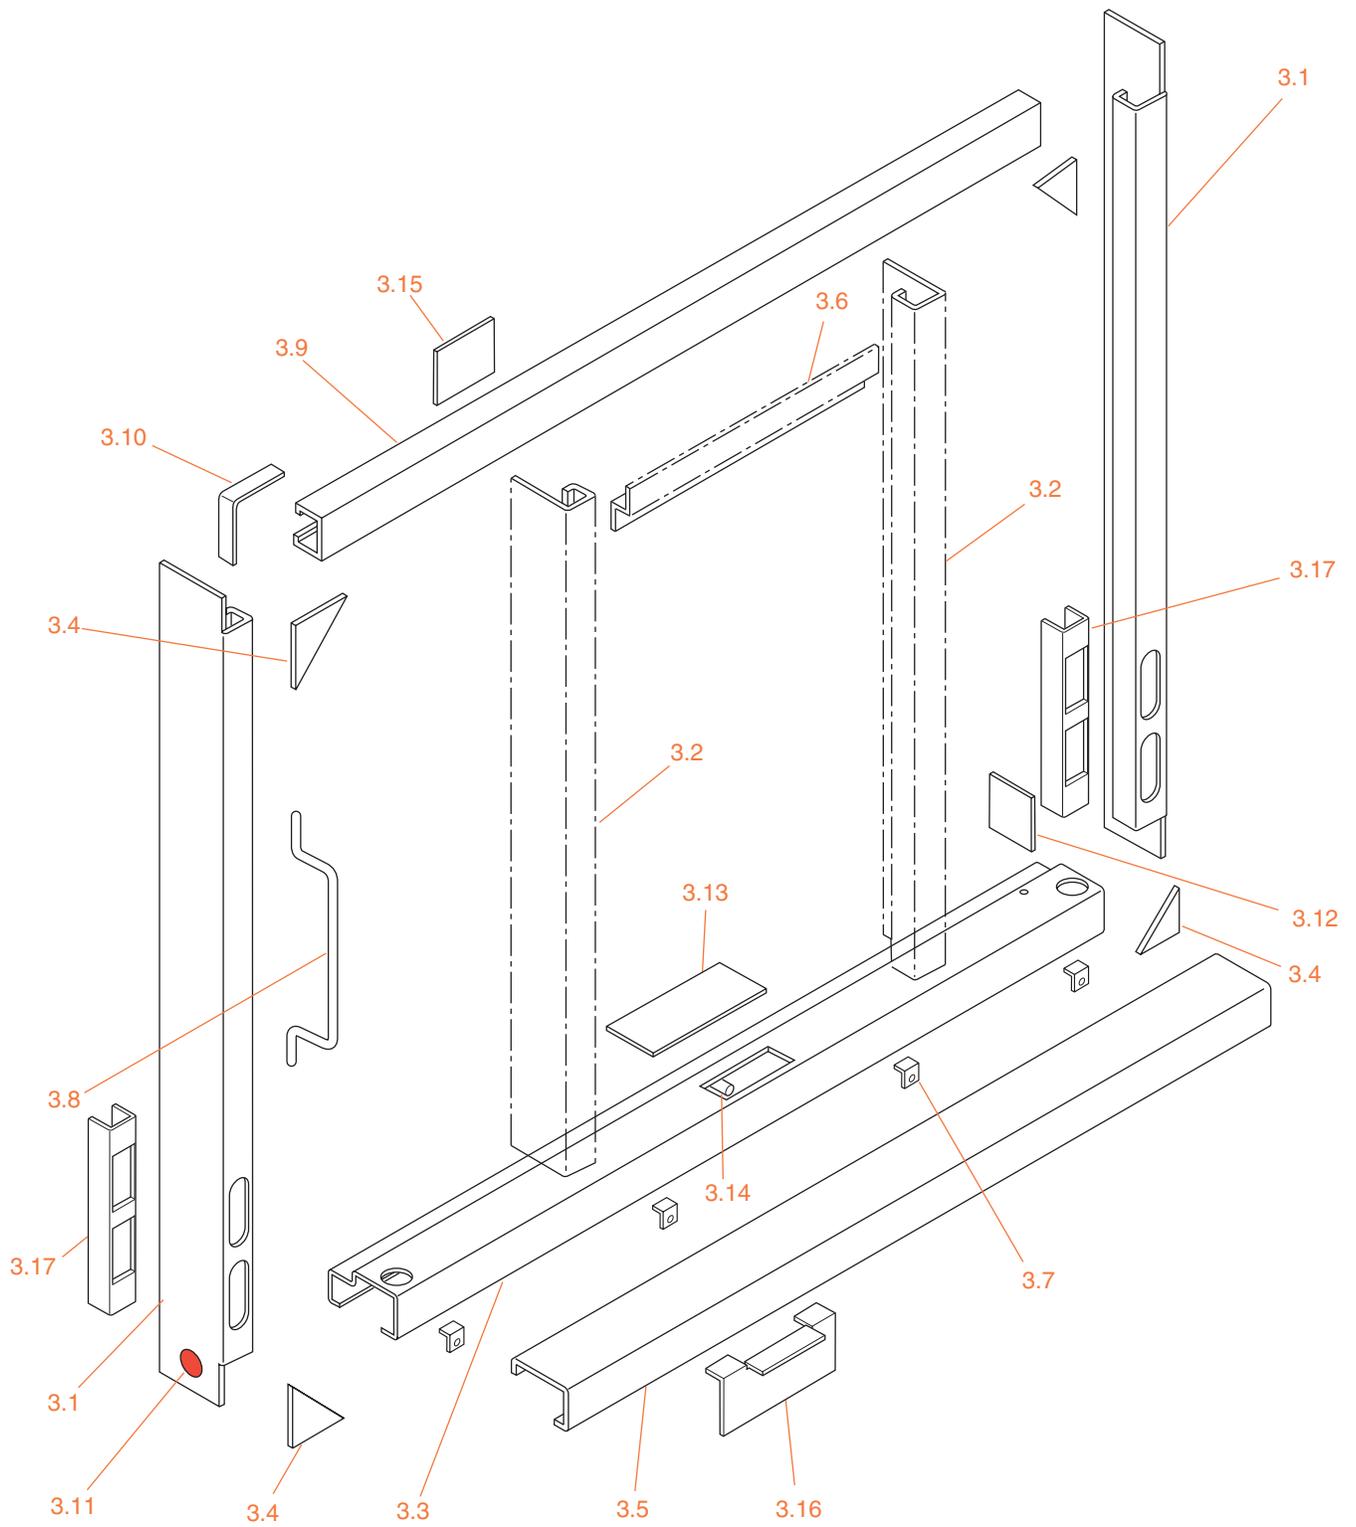


Rear Structure, Heavy-duty

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

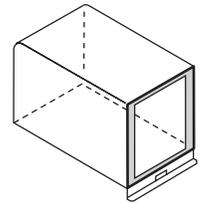

Item	Part Number	Description
3.0		Rear Structure, Truck Body Style
3.1.1	Appendix 2210024	POST REAR CORNER
3.1.2	BSNR	POST REAR CORNER
3.2.1	22819577-Chart	POST RR DOOR 12GA STEEL CHART
3.2.2	22819578-Chart	POST RR DOOR 12GA GALV CHART
3.3	BSNR	THRESHOLD REAR
3.4	22000211	GUSSET 7GA x 6.5 x 6.5 45° MITRE
3.5.1	Appendix 01901972	REAR DOCK EXTENSION
3.5.2	Appendix 55300578	REAR DOCK EXTENSION (CHICAGO STYLE)
3.6.1	06011300-Length	DRIP RAIL ALUM EXT Z .5 x 1 x .75 IA 1212 (Narrow Door)
3.6.2	06013170-Length	DRIP AE 3/8" PANEL CAP (Narrow Door)
3.7	01712077	BRKT VRT BMPR LEG 2"W/HOLE
3.8.1	Parts Guide	HANDLE GRAB
3.8.2	08700315	HANDLE GRAB 12" ALUM
3.8.3	08210060	HANDLE GRAB 18" ALUM 4 HLS
3.8.4	08611358	HANDLE GRAB 13" ALUM
3.9	Appendix 22100557	HEADER REAR CHART
3.10	22812638	BRACKET REAR STRUCTURE .38 x 6 x 6
3.11.1	16200034	REFLECTOR RED TAPE ROUND
3.11.2	16511547	REFLECTOR RED 3"
3.11.3	15200498	REFLECTOR RED TAPE
3.12	01700519	PLATE RAIL REAR ATCHMNT 2.5 x 2.5
3.13	22001034	PLATE CRNR STIFFNER 10GA x 6.5 x 3
3.14-1/2	22550009-00150	ROD 1/2" DIA x 1.50"
3.14-5/8	22500089-00150	ROD 5/8" DIA x 1.50"
3.15	22000397	STL SPRING ANCHOR PLATE 12GA x 4 x 6
3.16	22814972	BRACKET LICENSE PLATE
3.17	22811133	STIFNER COR POST 25.69
3.NS	12301160	TAPE GRAY PVC .06 x .75 x 150' ROLL
3.NS	12606027	SIKAFLEX WHITE
3.Ref	55301347	WLDMT REAR STR 76"
3.Ref	55211012	REAR STR ASSY G/HANDLE INSTL
3.Ref	55301178	REAR STR WLDMT 6'-6"
See the Sidewalls section for rear metal and FRP panels.		

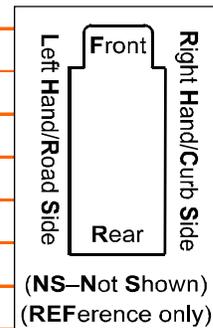

4—Rear Roll-up Door

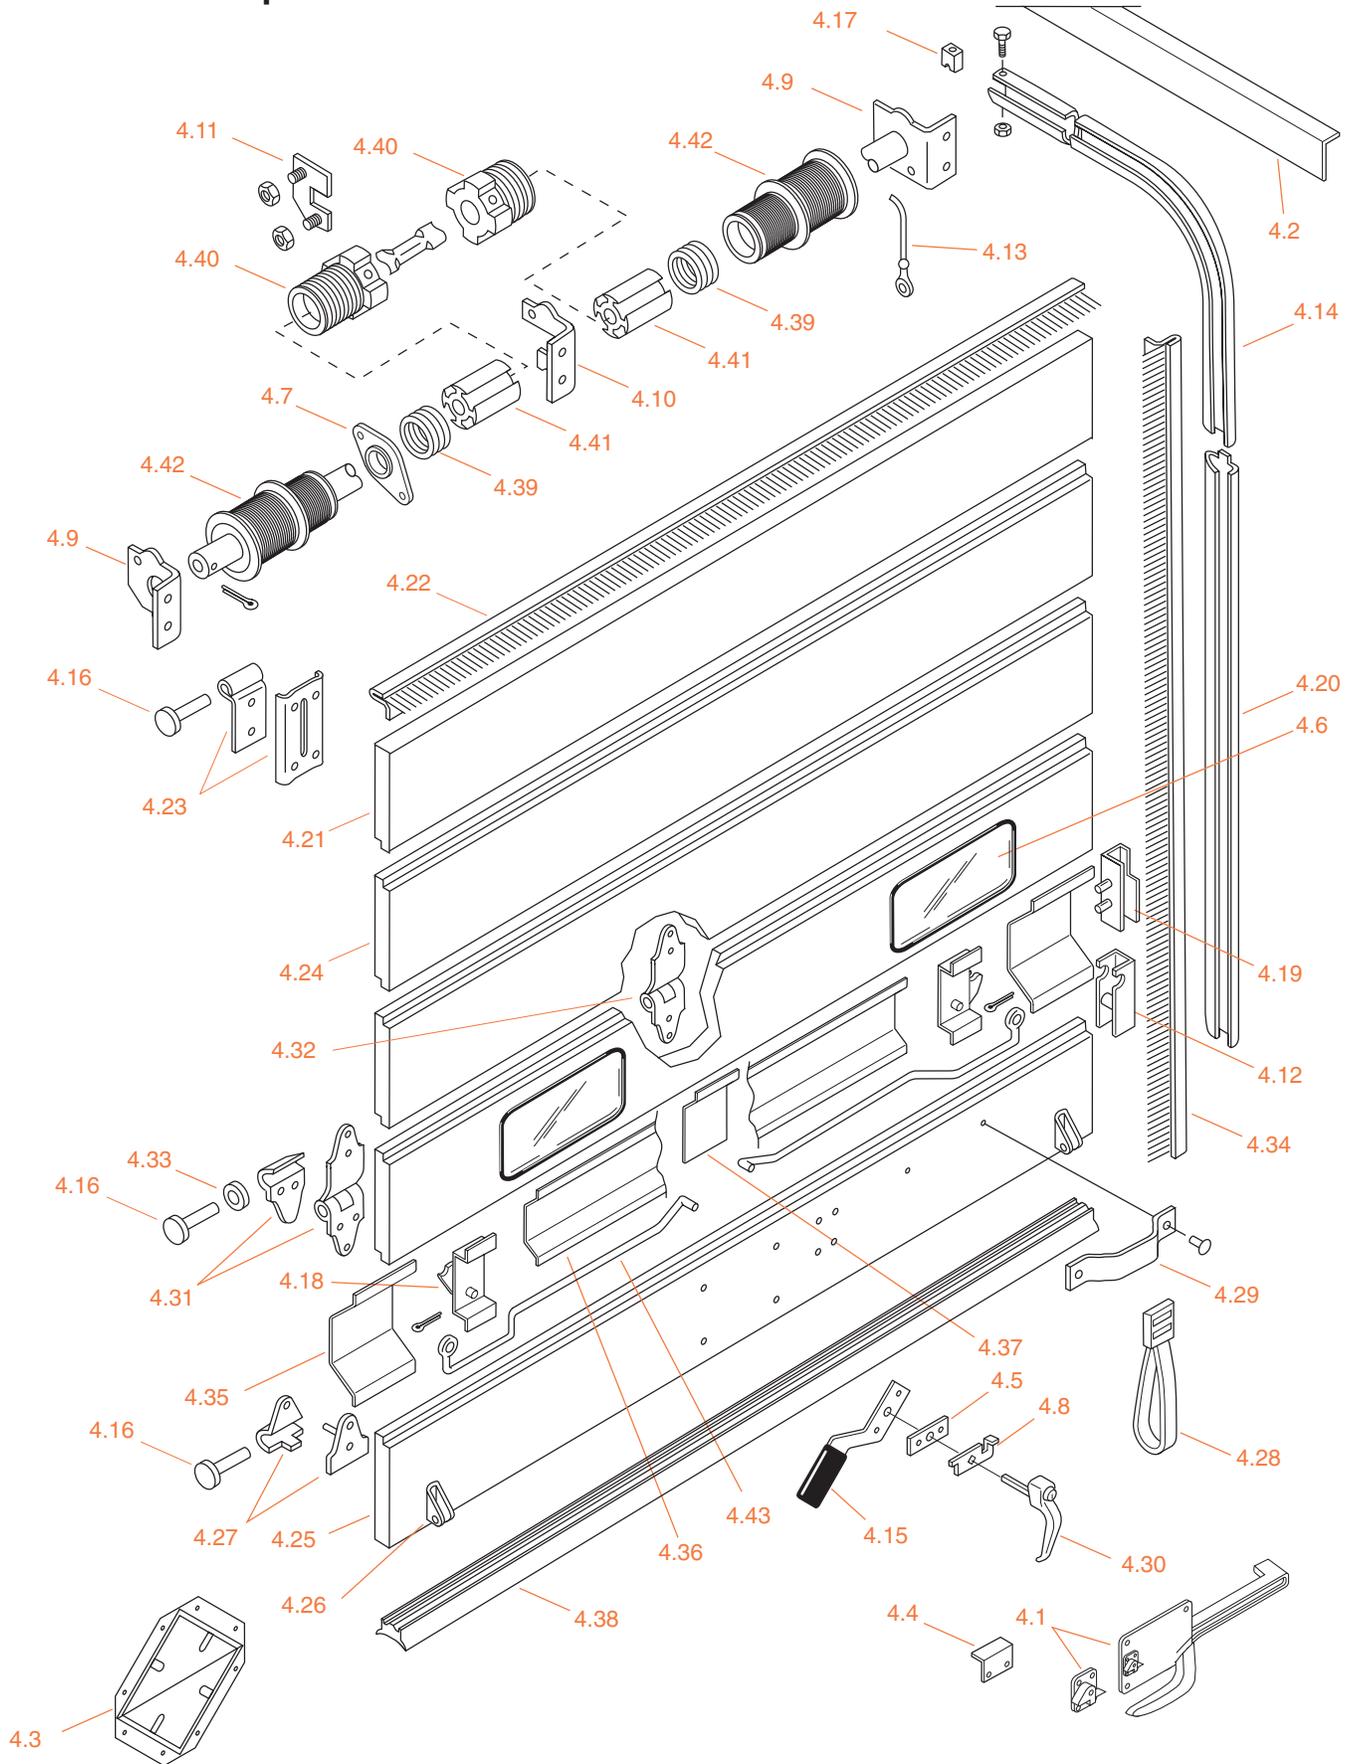


Rear Roll-up Door

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

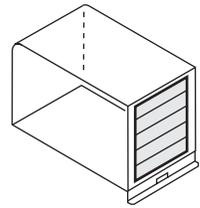


Item	Part Number	Description
4.0		Rear Roll-up Door
4.1	DSNR	MASTER SECURITY (BANANA) LOCK
4.2	DSNR	GUSSET RU DOOR
4.3.1	03102464	PLACARD HAZMAT SPLIT 10-Sign (Text)
4.3.2	03101864	PLACARD HAZMAT SPLIT 3-Sign (Symbol)
4.3.3	03101871	PLACARD HAZMAT SPLIT 10-Sign (Text and Symbol)
4.3.4	03102464	PLACARD HAZ-MAT SPLIT
4.3.5	11401221	RIVET FW 3/16 x 1/4-1/2
4.4	Reference Only	CATCH MSL See Rear Structure Section
4.5	DSNR	BOTTOM PLATE
4.6.1	09080405	GLASS 8" x 19" x .219 RAD R-UP DOOR
4.6.2	09080444	GLASS 1/4 x 17-5/8 x 11-5/8 Tmprd
4.6.3	09801338	GLASS 9 x 22 x .219 RAD RU DR
4.6.4	20600021	WINDOW CUTOUT WITH GASKET
4.6.5	05705480	RUBBER RU DR WDO 9 x 22
4.7.1	DSNR	BEARING ASSY
4.8	DSNR	ACTUATOR
4.9 LH	DSNR	BALANCER BRACKET LH
4.9 RH	DSNR	BALANCER BRACKET RH
4.10	DSNR	BALANCER BRACKET CENTER
4.11	DSNR	BALANCER BRACKET CLAMP (CENTER)
4.12	DSNR	LATCH PLATE
4.13	DSNR	STAINLESS STEEL CABLE
4.14	DSNR	HORIZONTAL TRACK
4.15	DSNR	HANDLE, INTERIOR WITH PLASTIC GRIP
4.16.1	10997091	2" STEEL ROLLERS
4.16.2	Parts Guide	ROLLERS DOOR (Other)
4.17	DSNR	2" TRACK STOP BUMPER
4.18 LH	DSNR	LATCH ASSY LH
4.18 RH	DSNR	LATCH ASSY RH
4.19 LH	DSNR	LATCH PLATE MOUNT LH
4.19 RH	DSNR	LATCH PLATE MOUNT RH
4.20	DSNR	VERTICAL TRACK AND MOUNTING ANGLE
4.21	DSNR	TOP PANEL ASSY

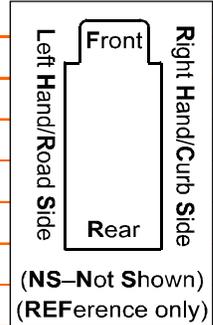

Continued

4—Rear Roll-up Door (Continued)

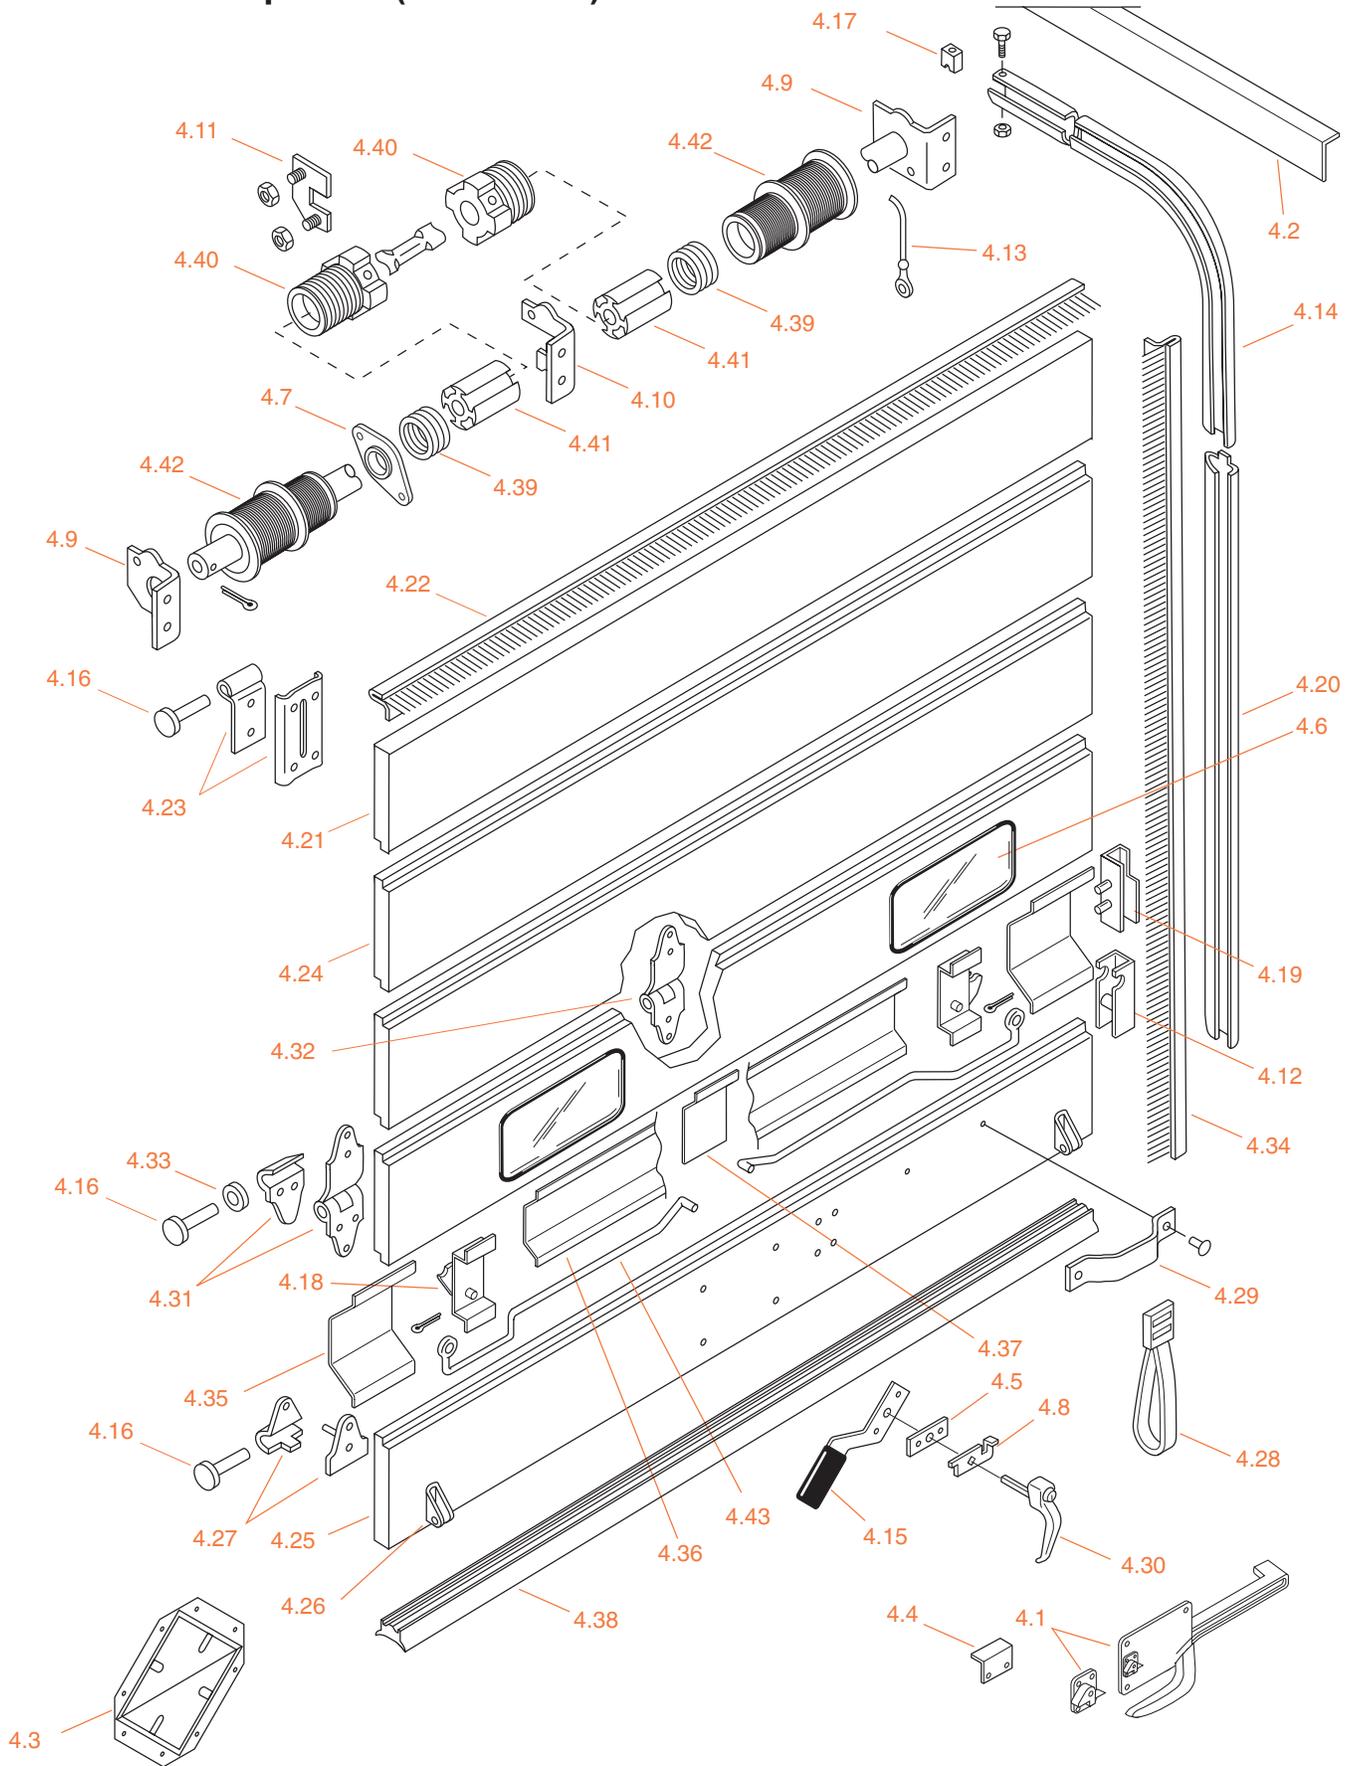


Rear Roll-up Door

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

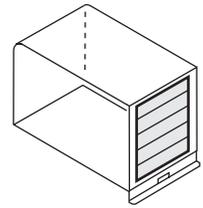

Item	Part Number	Description
4.22	DSNR	DOOR TOP BRUSH SEAL
4.23	DSNR	TOP CLOSURE ASSEMBLY
4.24	DSNR	INTERMEDIATE PANEL
4.25	DSNR	BOTTOM PANEL ASSEMBLY
4.26	DSNR	CABLE ANCHORS
4.27	DSNR	BOTTOM ROLLER BRACKET ASSEMBLY
4.28	DSNR	PULL STRAP
4.29	DSNR	GRAB HANDLE
4.30	DSNR	HANDLE, EXTERIOR
4.31.0	DSNR	ROLLER HINGE ASSEMBLY
4.31.1	DSNR	GASKET, ROLLER HINGE
4.32.0	DSNR	CENTER HINGE
4.32.1	DSNR	GASKET, ROLLER HINGE
4.33	DSNR	SPACER, W ASHER (FOR ROLLERS)
4.34	DSNR	SIDE BRUSH SEAL
4.35	DSNR	L ATCH COVER
4.36	DSNR	COVER ASSY, LOCK PANEL
4.37	DSNR	PLATE ASSY
4.38	DSNR	LOWER DOOR SEAL
4.39	DSNR	TORSION SPRING WOUND
4.40	DSNR	W INDING PLUG
4.41	DSNR	SPRING SPACER ANCOR PLUG
4.42	DSNR	W INDING CONE CABLE DRUM
4.43	DSNR	LOCK ROD
4.NS	10997310	QUICK RELEASE MECHANISM
4.NS	10997311	SAFETY CABLE QUICK RELEASE MECHANISM
4.Ref	57301105	ROLL-UP DOOR TRACK INSTL HORIZONTAL
	See also the <i>Rear Structure</i> section.	
	See also the <i>Utilimaster Quick Reference Parts Guide</i> .	

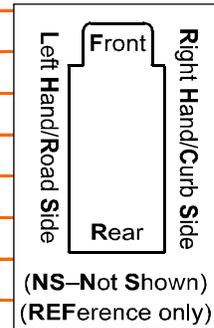

4—Rear Swing Doors, Cam Lock

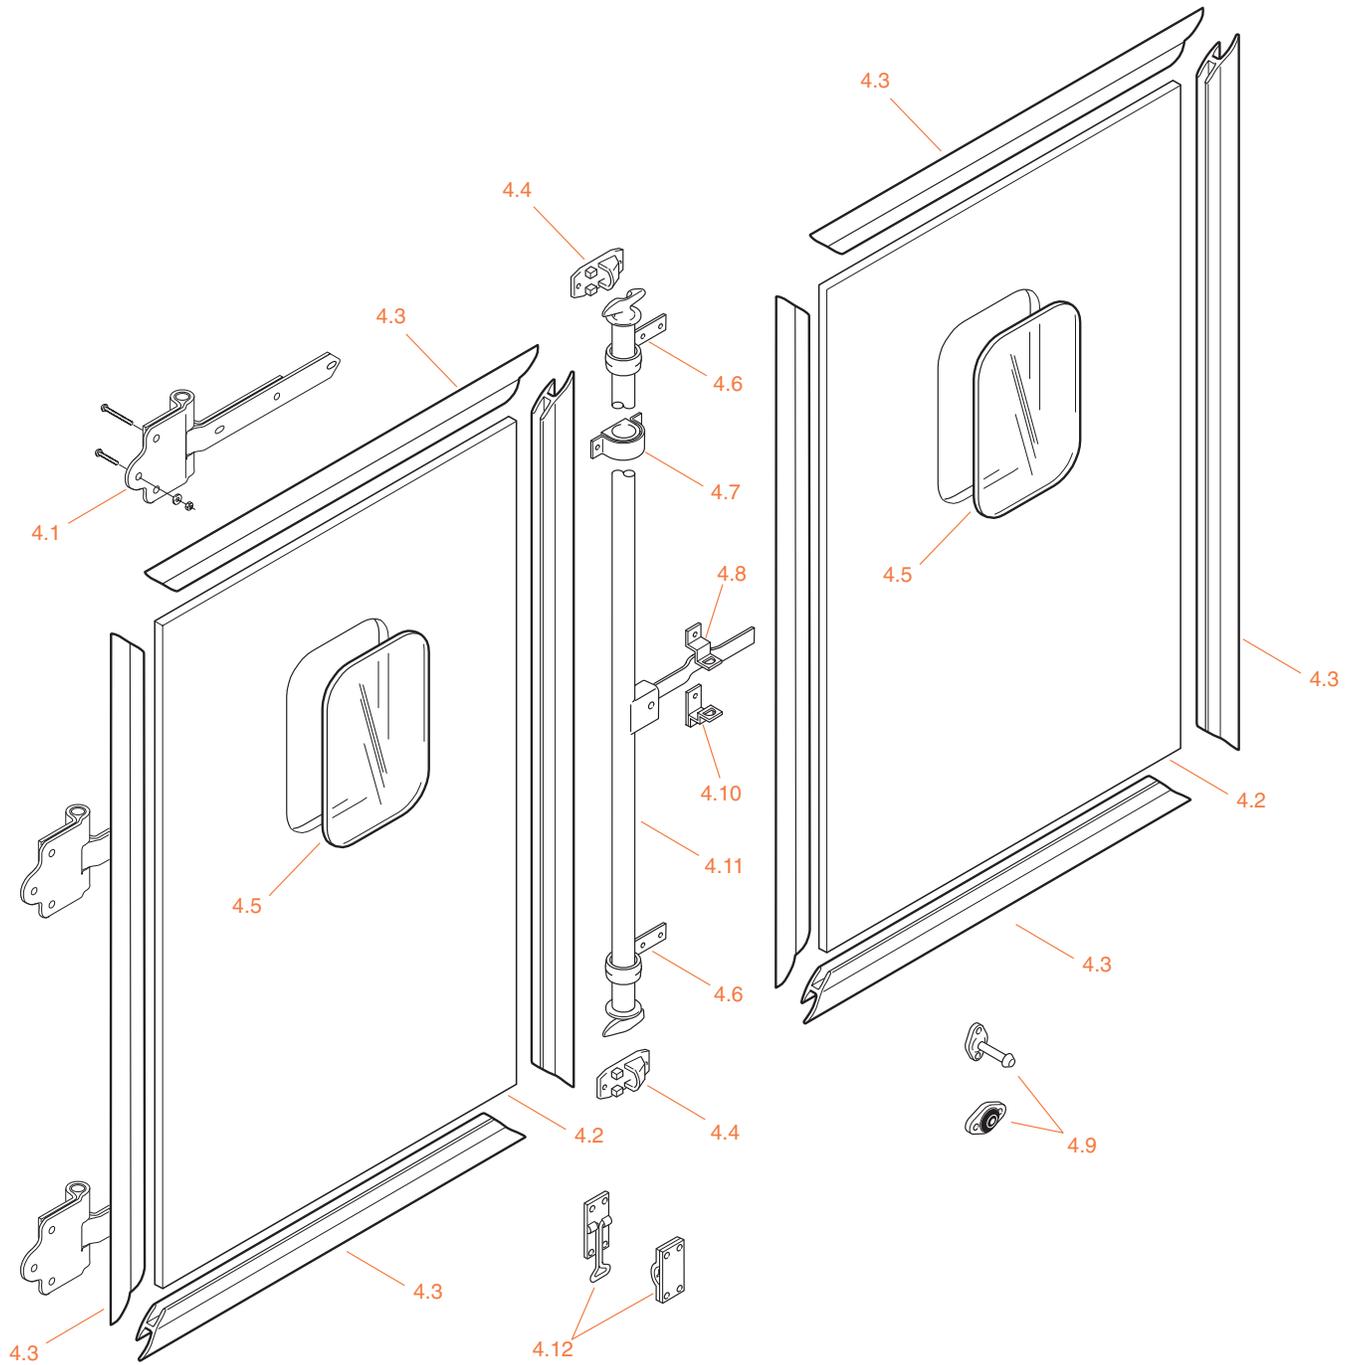


Rear Swing Doors, Cam Lock

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

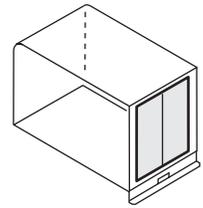

Item	Part Number	Description
4.0		Rear Swing Doors, C-Lock Style
4.1.1	Reference Guide	HINGE W/ZIRC
4.1.2	08705058	HINGE FLUSH MT LEAF W/ZIRC
4.2	Reference Only	PANEL SWING DR (See Sidewall Section)
4.3	05402089	SEAL DOOR
4.4	08706122	KEEPERS C/LOCK
4.5.1	09801607	WIND 12 x 18 SOLID
4.5.2	09801608	RING TRIM 12 x 18
4.5.3	Reference Guide	WINDOW
4.6.1	08770716	HOLDER PIPE 22
4.6.2	08770715	HOLDER PIPE 23
4.7	BSNR	BUSHING
4.8	08700300	SEAL PIN CAMLOCK HNDLE
4.9.1	08210003	PLUNGER-ZINC PLATED 3"
4.9.2	08610715	PLUNGER DOOR HOLDER 3.5"
4.9.3	08210045	PLUNGER DOOR HOLDER 4.5"LG
4.9.4	08210050	PLUNGER DOOR HOLDER 5.5"
4.9.5	08210004	SOCKET W/RUB.INSERT
4.10	08700302	RETAINER CAMLOCK HNDLE
4.11	BSNR	ROD
4.12	08703054	RETAINER T DOOR
4.NS	08706123	LOCK ROD ASSY LH KIT
4.NS	08706128	LOCK ROD ASSY RH KIT
4.NS	08706129	CAMLOCK LH 68" TUBE
4.NS	08706121	CAMLOCK RH 68" TUBE
4.NS	08700301	FASTNR KIT HANDLE CLIP
4.NS	08700309	KEEPER CAM
4.NS	087000301	SUPPORT DOOR CATCH ASY
		See also the <i>Utilimaster Quick Reference Parts Guide</i> .

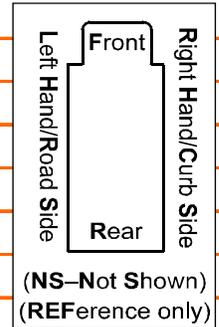

4—Rear Swing Doors, Slam Lock

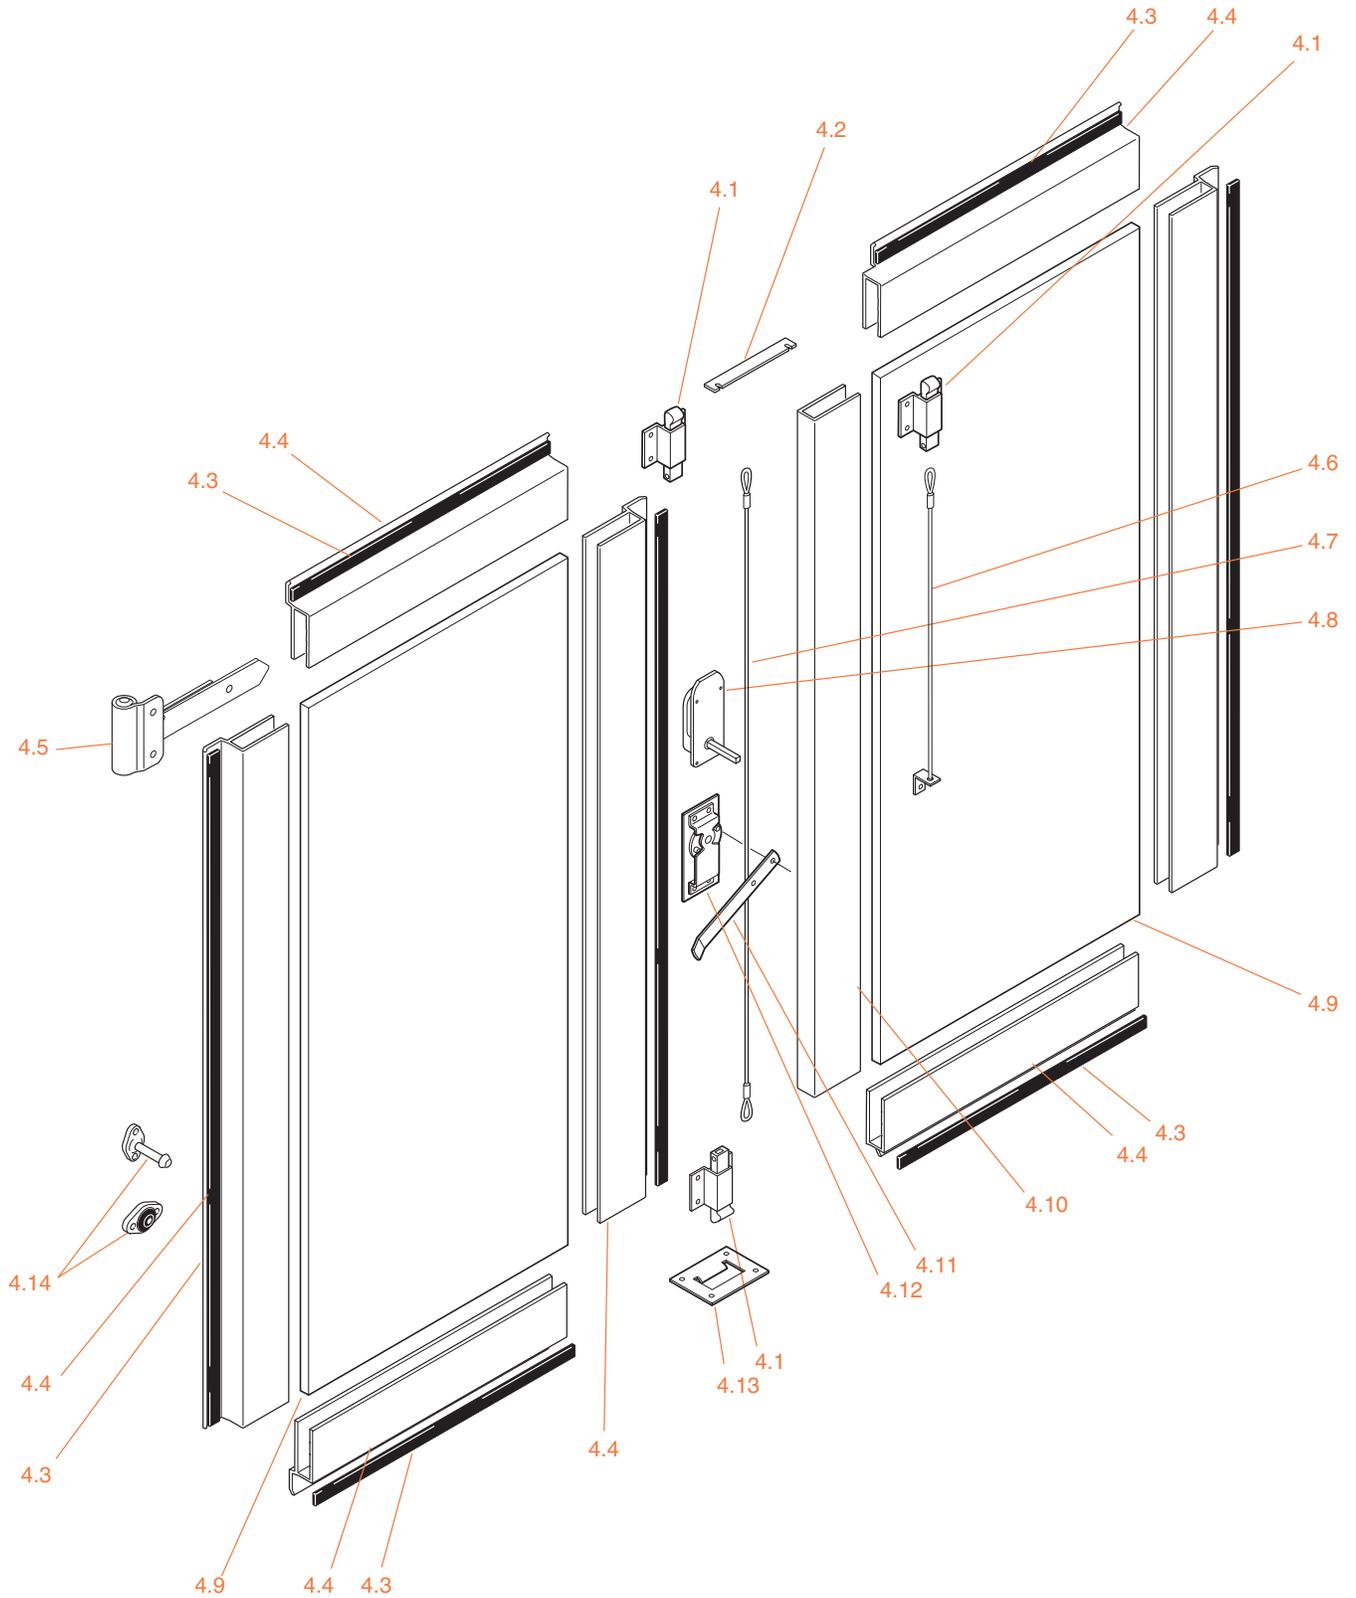


Rear Swing Doors, Slam Lock

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

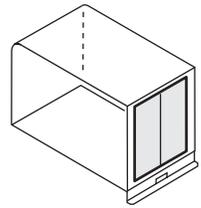

Item	Part Number	Description
4.0		Rear Swing Doors, Trade Style
4.1	08700336	DEADBOLT SLAM LOCK CONTROL ASY TONGUE
4.2	22819573	PLATE UPPER STRIKER
4.3	12300905	TAPE POLYFORM 3/16 x 1 x 50'
4.4	06000921-Length	AE IA 10153 PERIM DOOR RR SWG A
4.5	08705149	HINGE ALUM FLUSH W/ZERK NO/GST
4.6	08611051	LATCH FINGER PULL
4.7	08700303	CABLE LATCH RR DR
4.8	Parts Guide	HANDLE EXTR
4.9	BSNR	PANEL 5/8 FRP (Specify Size)
4.10	06000922-Length	AE IA 10154 PERIM DOOR RR SWG
4.11	08700337	INSIDE HNDL KASON
4.12	08780011	LATCH ASY SLAMLOCK
4.13	22101157	PLATE LOWER DEADBOLT STRIKER
4.14.1	08611054	MALE DOOR HOLDER
4.14.2	08611055	DR HOLDER SOCKET
4.Ref	55281013	STR RR LAYOUT W/KASON & SWG DRS
See also the <i>Utilimaster Quick Reference Parts Guide</i> .		

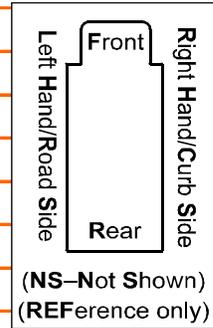

5—Sidewalls, Aluminum

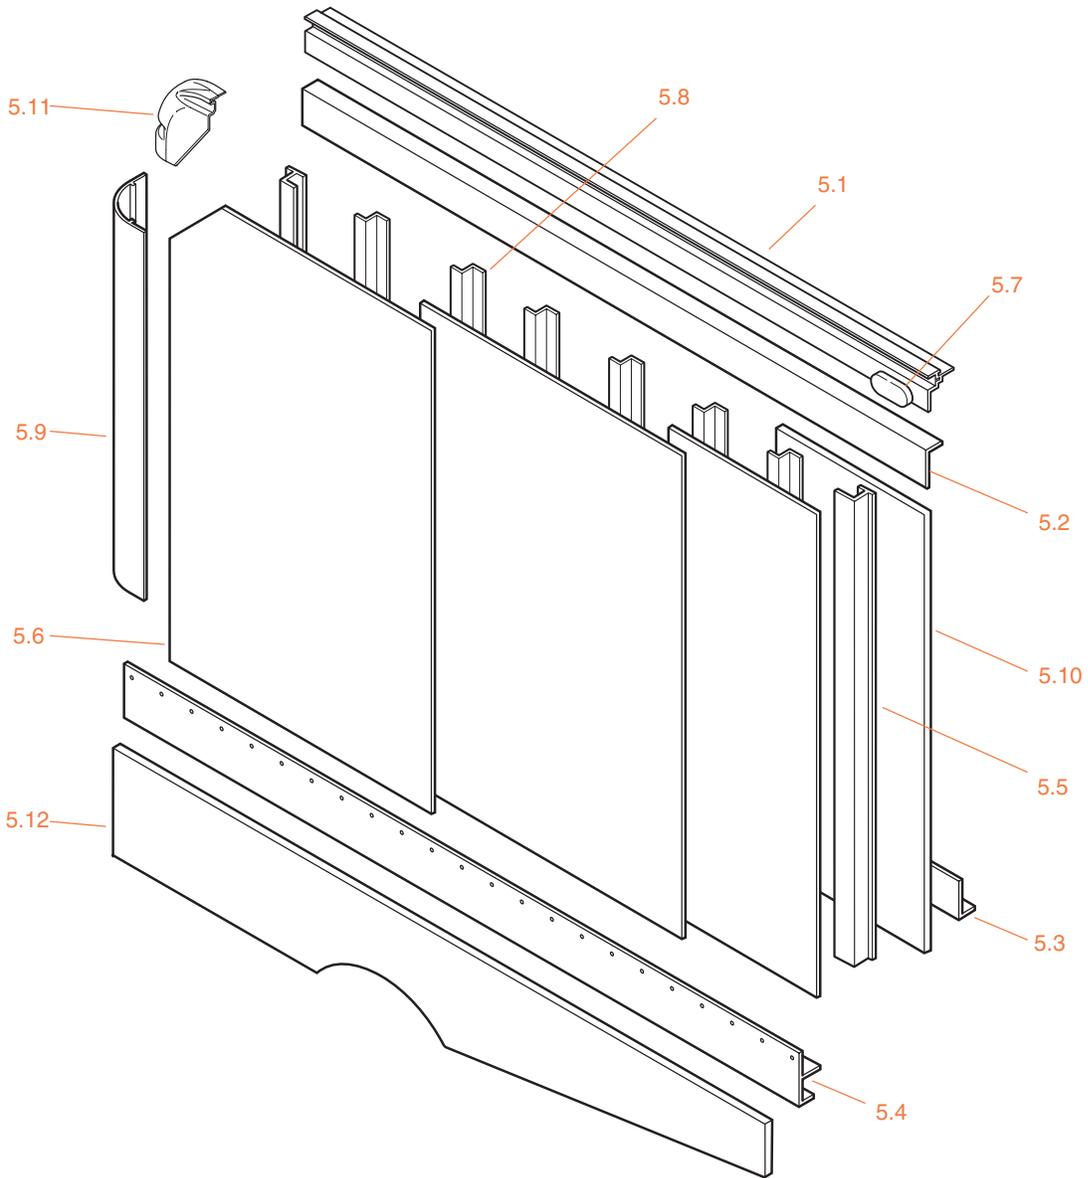


Sidewalls, Aluminum

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

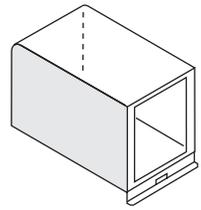

Item	Part Numbers	Description
5.0		Aluminum Sidewalls
5.1	06000846-Length	ROOF RAIL W/OUT GROOVE IA9401
5.2	06001985-Length	ANGLE ALUM .062 x 2" x 3/4 IA3735
5.3	06001985-Length	BOTTOM RAIL ANGLE EXTR
5.4	06000849-Length	BASERAIL 3"
5.5	06013089-Length	ALUM EXT SIDE POST IA4983
5.6.1	06920308-CHART	ALUM .040 x 19 x CHART PNCHD 2" CTR
5.6.2	06920312-Height	ALUM .040 x 49 FW PNC 2" CTR
5.7	See Electrical Harnesses	IDENTIFICATION LIGHT
5.8	Appendix 22101200	Z POST SIDE WALL
5.9	06013020-Length	POST, FRONT
5.10	02100501	PLYWD CDPTS 3/8 x 4 x 8
5.11	See Front Roof Caps	CASTING FRT ROOF RADIUS
5.12 LH	02805520-Chart	FRP SKIRTING W/CUTOUT LH 11" CHART
5.12 RH	02805521-Chart	FRP SKIRTING W/CUTOUT RH 11" CHART

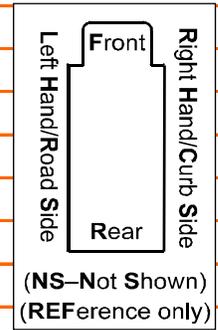

5—Sidewalls, FRP

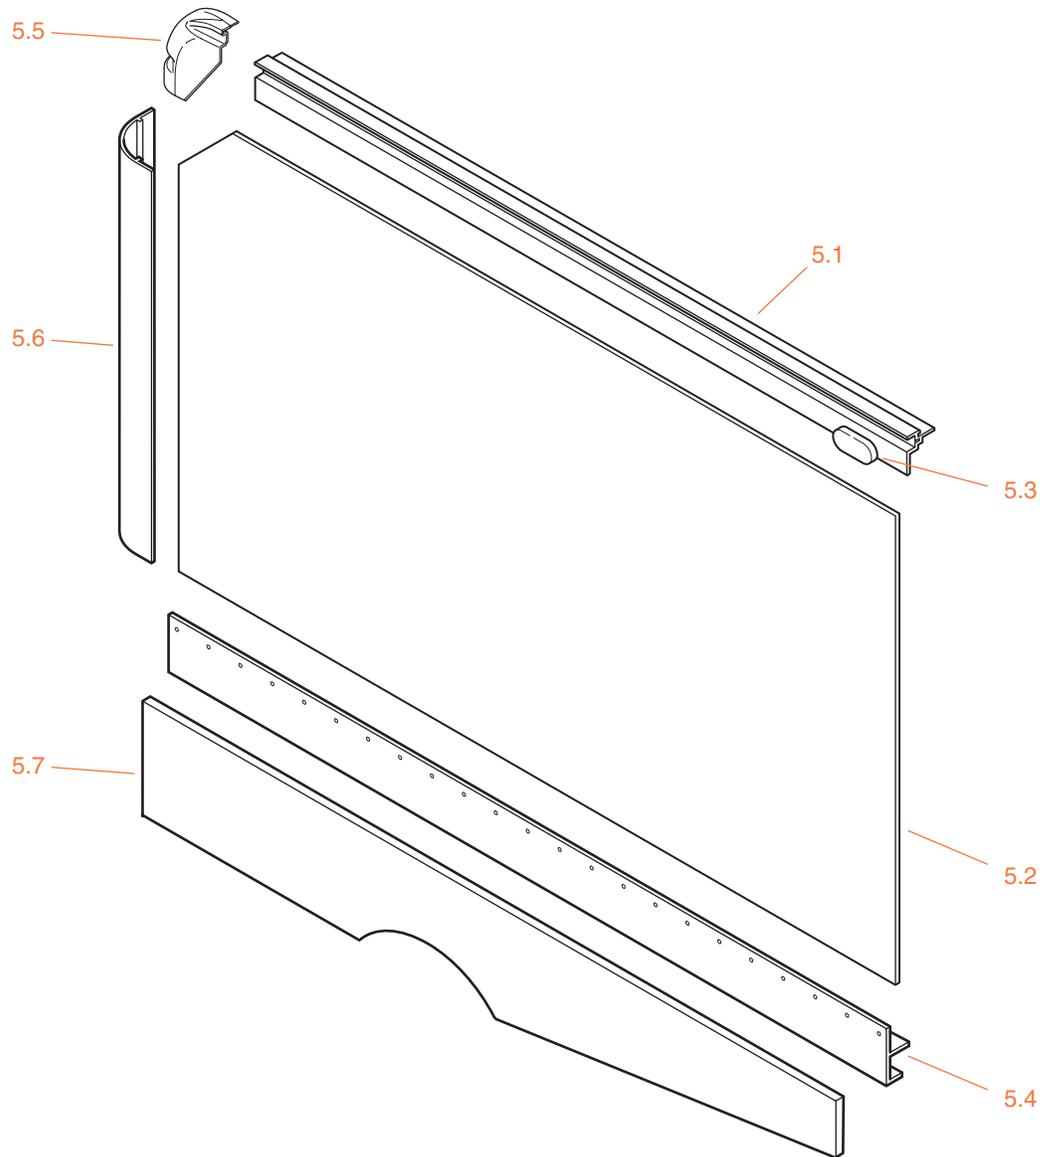


Sidewalls, FRP

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

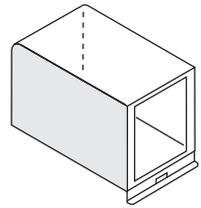

Item	Part Number	Description
5.0		FRP Sidewalls
5.1	06000846-Length	ROOF RAIL W/OUT GROOVE IA9401
5.2	Appendix 53231006	SHEET, SIDEWALL
5.3	See Electrical Harnesses	IDENTIFICATION LIGHT
5.4	06000849-Length	BASE RAIL (SPECIFY LENGTH)
5.5	See Front Roof Caps	CASTING FRT ROOF RADIUS
5.6	06013020-Length	POST, FRONT
5.7 LH	02805520-Chart	FRP SKIRTING W/CUTOUT LH 11" CHART
5.7 RH	02805521-Chart	FRP SKIRTING W/CUTOUT RH 11" CHART
5.Ref	53301219	L/OUT LH S/WALL HUCKTAINER
5.Ref	53301217	SLAT ASSY 24' SIDEWALL LH
5.Ref	53301216	SLAT ASSY 24' SIDEWALL RH
5.Ref	53301218	L/OUT RH S/WALL HUCKTAINER
5.Ref	53301221	SIDEWALL ASSY LH HUCK 16'
5.Ref	53301222	SIDEWALL ASSY RH HUCK 16'

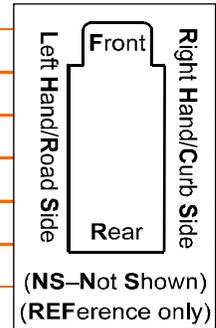

5—Sidewalls, DuraPlate

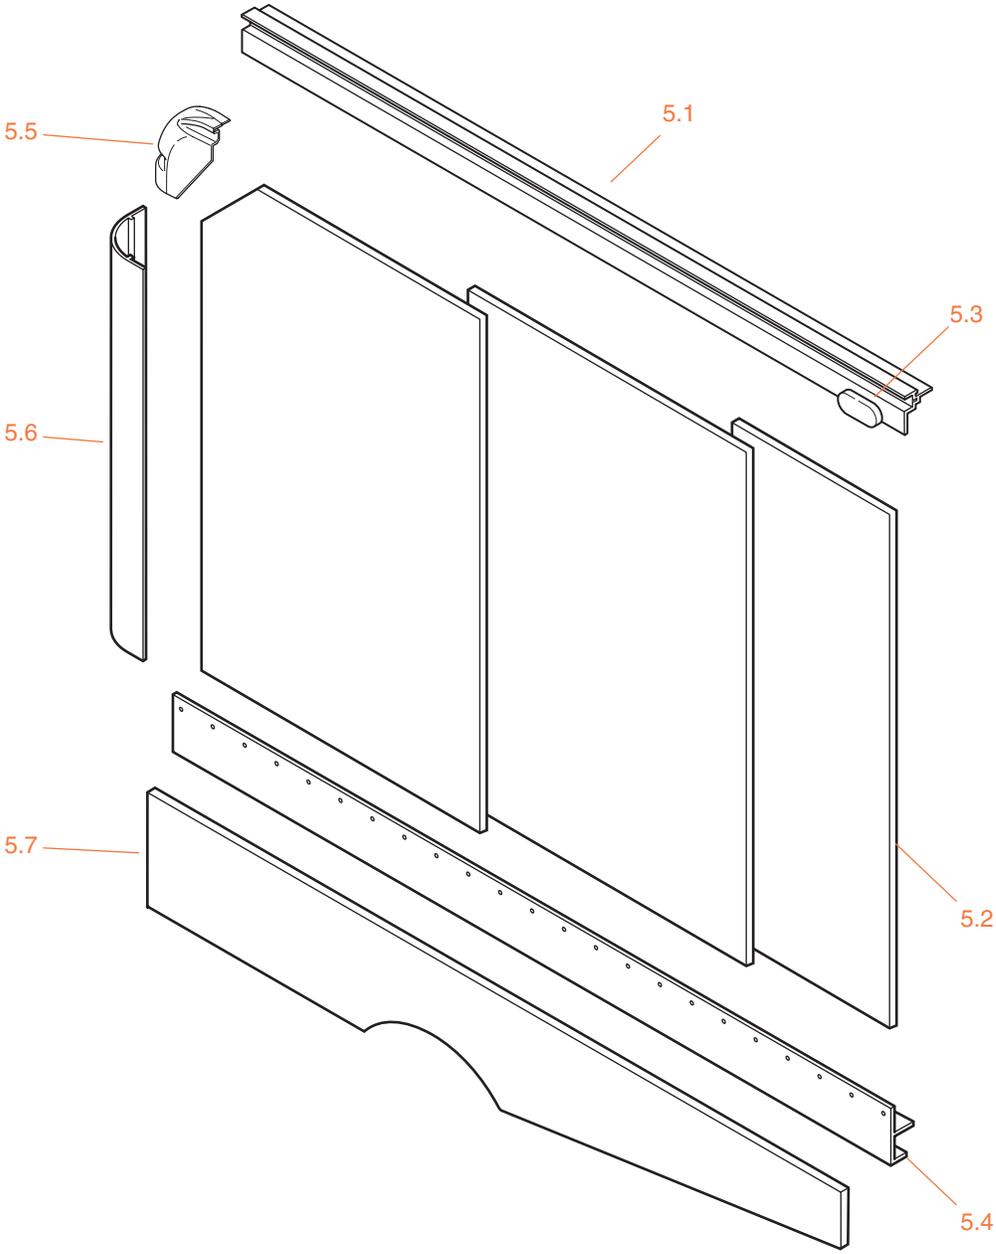


Sidewalls, DuraPlate

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

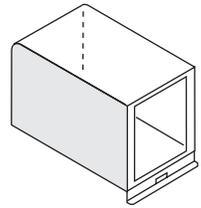

Item	Part Number	Description
5.0		Duraplate Sidewalls
5.1	BSNR	ROOF RAIL
5.2	Appendix 02805529	DURAPLATE PANEL
5.3	See Electrical Harnesses	IDENTIFICATION LIGHT
5.4	06000849-Length	AE BASE RAIL
5.5	See Front Roof Caps	CASTING FRT ROOF RADIUS
5.6	06013020-Length	POST, FRONT
5.7 LH	02805520-Chart	FRP SKIRTING W/CUTOUT LH 11" CHART
5.7 RH	02805521-Chart	FRP SKIRTING W/CUTOUT RH 11" CHART

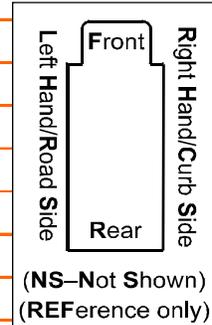

6—Roof Assembly

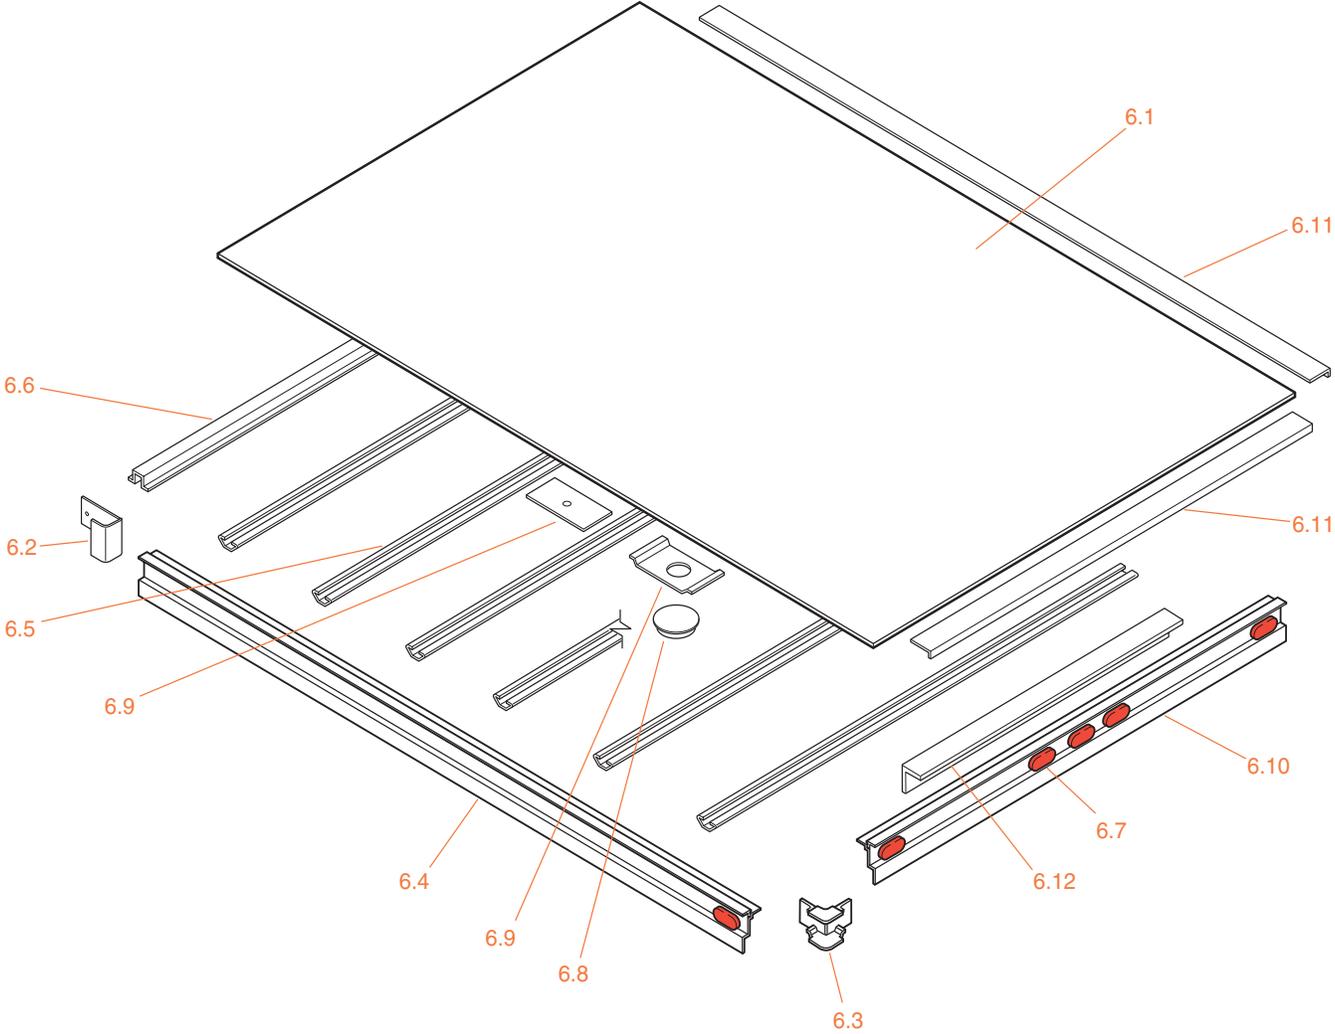


Roof Assembly

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

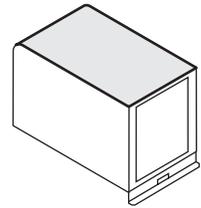

Item	Part Number	Description
6.0		Roof Assembly
6.1-A	06402104-Length	ALUM COIL .032 x 96W .456 (Specify Length)
6.1-T	20510883-Chart	EXT ROOF TRANSLUCENT CHART (Specify Width and Length)
6.2 LH	06916727	PLUG ROOF RAIL F/GLASS CAP LH
6.2 RH	06916731	PLUG ROOF RAIL F/GLASS CAP RH
6.3	06800029	CASTING REAR CORNER
6.4	06000846-Length	IA9401 ROOF RAIL 06000846
6.5	BSNR	ROOF BOW ANTI SNAG
6.6	BSNR	ROOF BOW FRONT
6.7	See Electrical Harnesses	CLEARANCE LIGHT
6.8.1	15202125	LIGHT-COMBO W/CLEAR
6.8.2	15202126	LIGHT KD12V CARGO
6.8.3	15202126	LIGHT CLEAR
6.9.1	06600675	PLATE LIGHT MNTG .100 x 9 x 25
6.9.2	BSNR	PLATE LIGHT MNTG (OTHER)
6.10	06000845-Length	IA9400 RR ROOF RAIL
6.11	06013008-Length	IA4161 ANGLE
6.12	06923447	ANGLE .063 ALUM x 1.12 x 1.5 x 88.50
6.NS	12605933	TAPE ADHESIVE 1/2"
6.NS	12606027	SIKAFLEX WHITE UV
6.NS	12605952	SIKAFLEX GRAY ALUM
6.NS	12605952	SEALANT GRAY ALUM
6.NS	12300841	TAPE ALUMI WRAP 4" X 50'
6.NS	12300840	TAPE BUTYL 1/8 x 1-1/4 50' RL
6.Ref	56301045	ROOF ASSEMBLY 24'
6.Ref	56301046	ROOF ASSEMBLY 16'

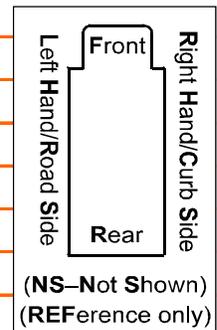

6—Roof Front Caps

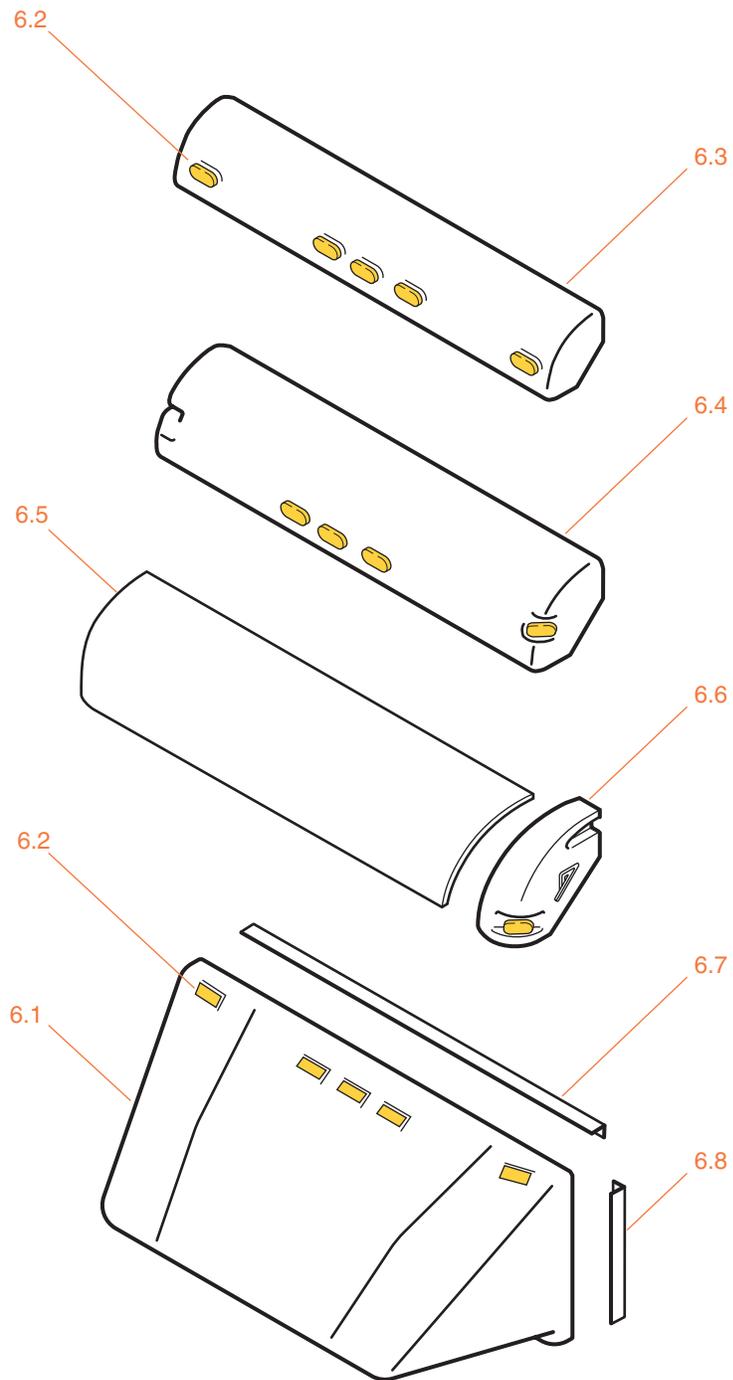


Roof Front Caps

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

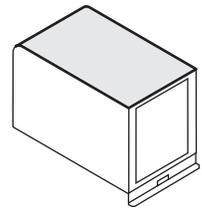

Item	Part Number	Description
6.0		Roof Caps
6.1-F	01903144	AEROCAP FORD DUAL REAR WHEELS
6.1-FN	01903191	AEROCAP FORD N/BODY SRW
6.1-G	01903145	AEROCAP GM DUAL REAR WHEELS
6.1-GN	01903192	AEROCAP GM NB SRW
6.2	See Electrical Harnesses	CLEARANCE LIGHT
6.3	20510701	CAP FIBERGLASS 5" RADIUS WHITE 80W
6.4-96 A	20510266	CAP F/GLASS 12" RAD ALUM/GRAY-COLOR
6.4-96 W	20510575	CAP F/GLASS 12"RAD WHITE-COLOR
6.5	Appendix 22800102	FRONT RADIUS
6.6 LH	06924889	CASTING 12" RAD FRONT CRNR L/H W/LOGO
6.6 RH	06924888	CASTING 12" RAD FRONT CRNR R/H W/LOGO
6.7	06002025-Length	ANGLE ALUM .75 x1.25 IA 1999
6.8	06002025-Length	ANGLE ALUM .75 x1.25 IA 1999
6.NS	64300493	NOSE CONE CHART 96"/102" WIDTHS
6.NS	06916612	ALUM .063 x2 x6
6.NS	06920499	ALUM .030 x4 x30
6.NS	12606027	SIKAFLEX WHITE
	See also the Aerocap Headliner section.	

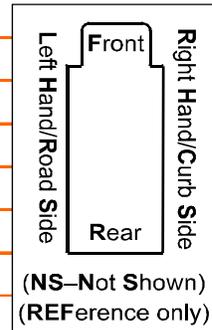

6—Aerocap Headliner

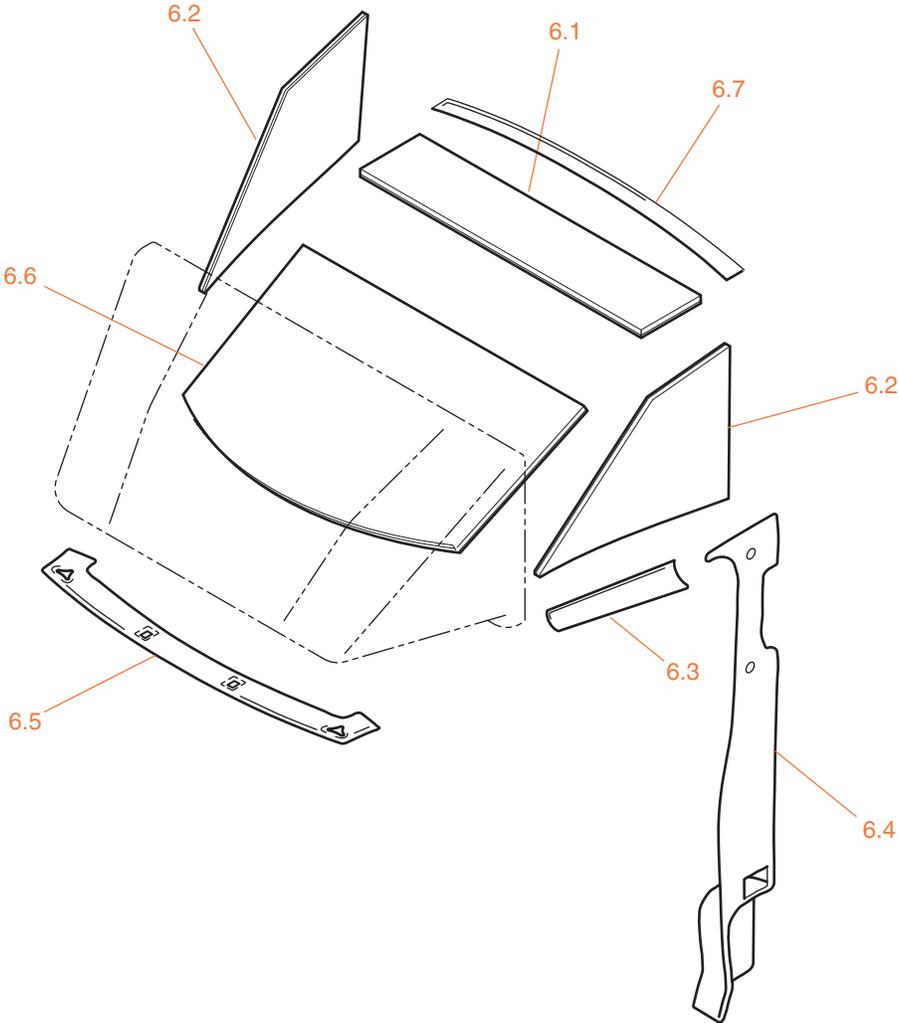


Aerocap Headliner

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

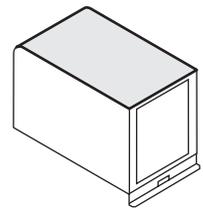

Item	Part Number	Description
6.0		Aerocap Headliners
6.1 GM	05705682	INT HEADLNR UPR AERO GM
6.1 FD	05705700	INT HEADLNR UPR AERO FORD
6.2.1 FD LH	05705699	TRIM INT LINER LH AEROCAP FORD
6.2.2 FD LH	05705645	TRIM INT LINER SIDE LH AEROCAP FORD
6.2.1 FD RH	05705698	TRIM INT LINER RH AEROCAP FORD
6.2.2 FD RH	05705646	TRIM INT LINER SIDE RH AEROCAP FORD
6.2.1 GM LH	05705680	TRIM INT LINR LH TRDMSTR AERO GM
6.2.2 GM LH	05705607	TRIM INT LINR LH AERO SIDE GMT
6.2.1 GM RH	05705681	TRIM INT LINR RH TRDMSTR AERO GM
6.2.2 GM RH	05705608	TRIM INT LINR RH AERO SIDE GMT
6.3 FD	Chassis Supplied	TRIM INT DR HEADER
6.3 GM	05705490	
6.4 GM	Chassis Supplied	TRIM INT B-PILLAR GM
6.4 FD LH	05705486	TRIM INT B-PILLAR FD LH
6.4 FD RH	05705487	TRIM INT B-PILLAR FD RH
6.5 GM	Chassis Supplied	TRIM CAB ABS HEADER GM
6.5 FD	Chassis Supplied	TRIM CAB ABS HEADER FORD
6.6.1 FD	05705697	TRIM INT LINER HEAD AEROCAP FORD
6.6.2 FD	05705647	TRIM INT LINER HEAD AEROCAP FORD
6.6.1 GM	05705679	TRIM INT LINER HEAD AEROCAP GM
6.6.2 GM	05705466	TRIM INTR LINER HEAD GMT
6.7	Part of 05705489	TRIM REAR ABS (Non-Aerocap)
6.NS	08611187	BUTTONS AEROCAP NEW FABRIC
6.NS	08501614	STUD LOW BASE
6.NS	05705488	TRIM INT ROOF FD
6.NS	02100098	LUAN 5/32 48 x 96 3.6
6.NS	14201042-Chart	FABRIC CHART (Specify Color)
6.Ref	05705489	TRIM CAB ABS FORMED SET '97 FD (Includes 05705486, 05705487, and 05705488)

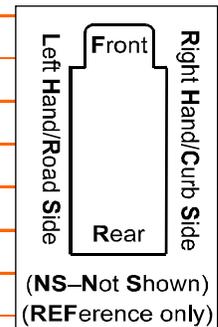

7—Front Wall, Aluminum

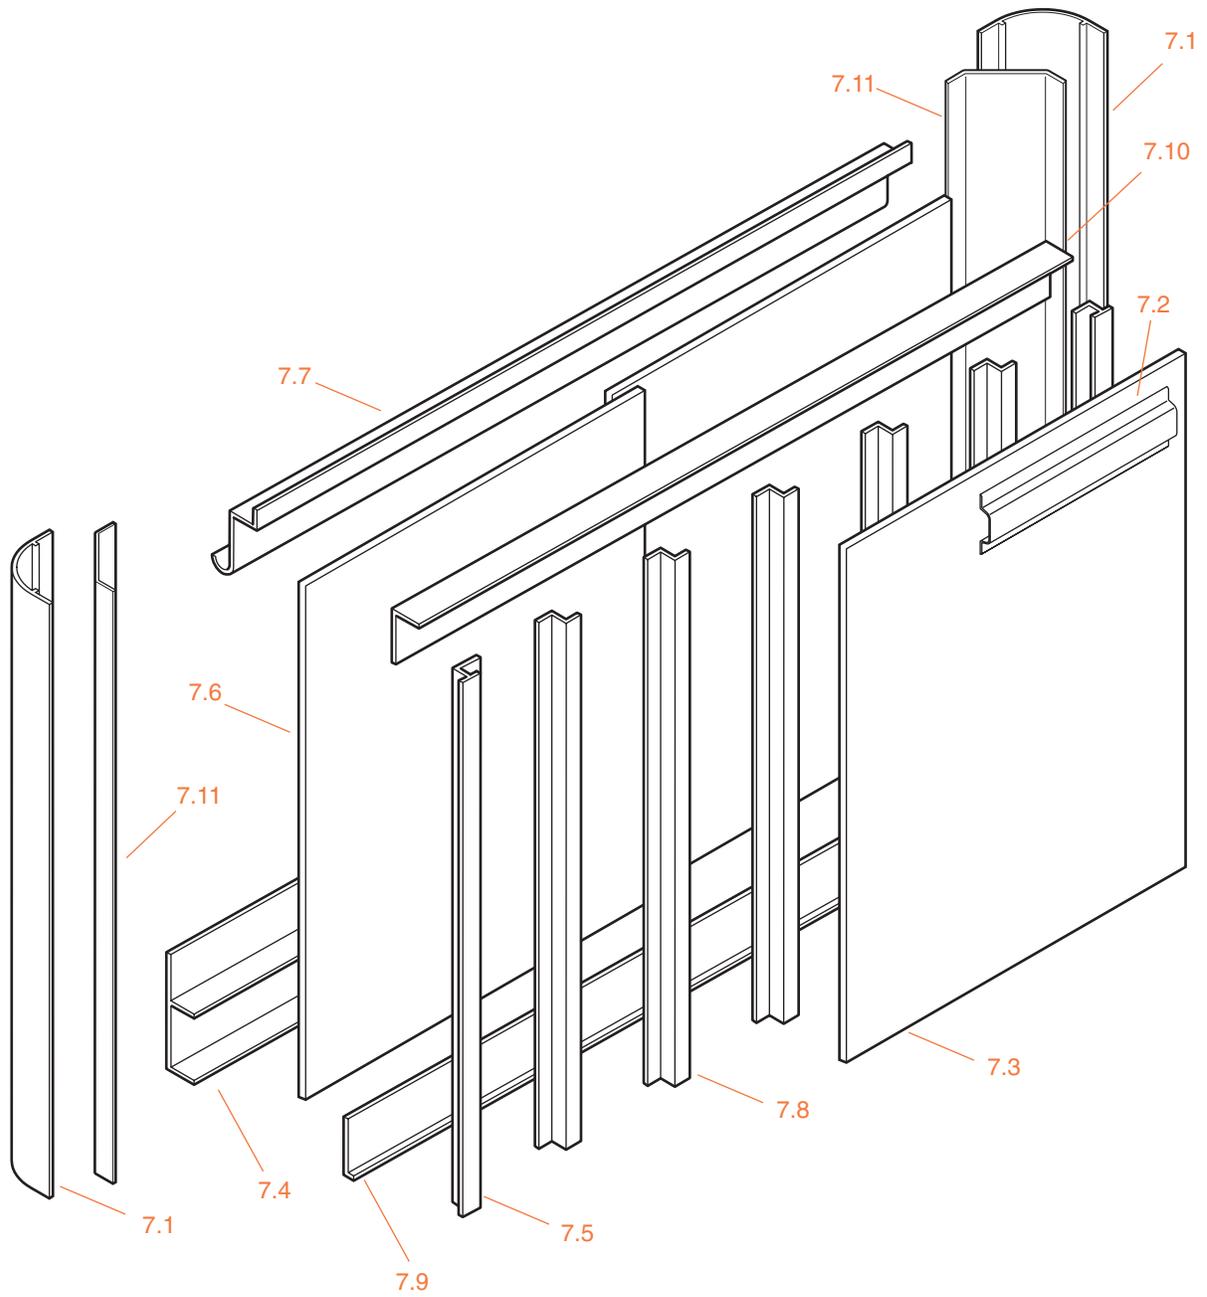


Front Wall, Aluminum

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

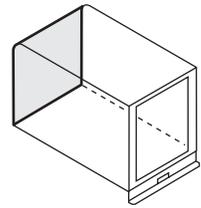

Item	Part Number	Description
7.0		Aluminum Front Wall
7.1	06013020-Length	ALUM EXT FRT COR IA4567
7.2	06000142-Length	AE RUBRAIL W/RAD IA6964 W14875
7.3	BSNR	LINER, INTERIOR
7.4	06000849-Length	3" BASE RAIL IA9397
7.5	06013089-Length	ALUM EXT SIDE POST IA4983
7.6-40	06919834-CHART	ALUM .040 x 40 PNCH 2" CTR FW CHT
7.6-42	06920314-CHART	ALUM .040 x 43 x CHRT PNC 2" CT NOSE
7.6-46	06919833-CHART	ALUM .040 x 46 PNCH 2" CTR FW CHT
7.7	06013130-Length	ALUM EXT CAP LWR IA5239
7.8	Appendix 54300274	ZPOST NOSE 2" CTR 18GA
7.9	06001985-Length	IA3735 ALUM ANGLE .0625 x 3/4 x 2
7.10	06000828-Length	AE TOP ANGLE FRONT WALL IA9278
7.11.1	06919667-CHART	GUSSET CRNR CHART .125 x 1.75 x 3.75
7.11.2	22813159-CHART	GUSSET, FRONT CORNER CHARTED
7.NS	05001605	REVERSE COVE 1-1/2 FW
7.NS	12301749	TAPE BLACK RBR 1/16 x 1"
7.NS	12301751	TAPE GREY BUTYL 1/16 x 1-1/2 50'

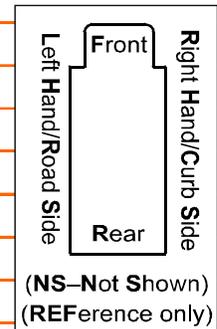

7—Front Wall, FRP Solid

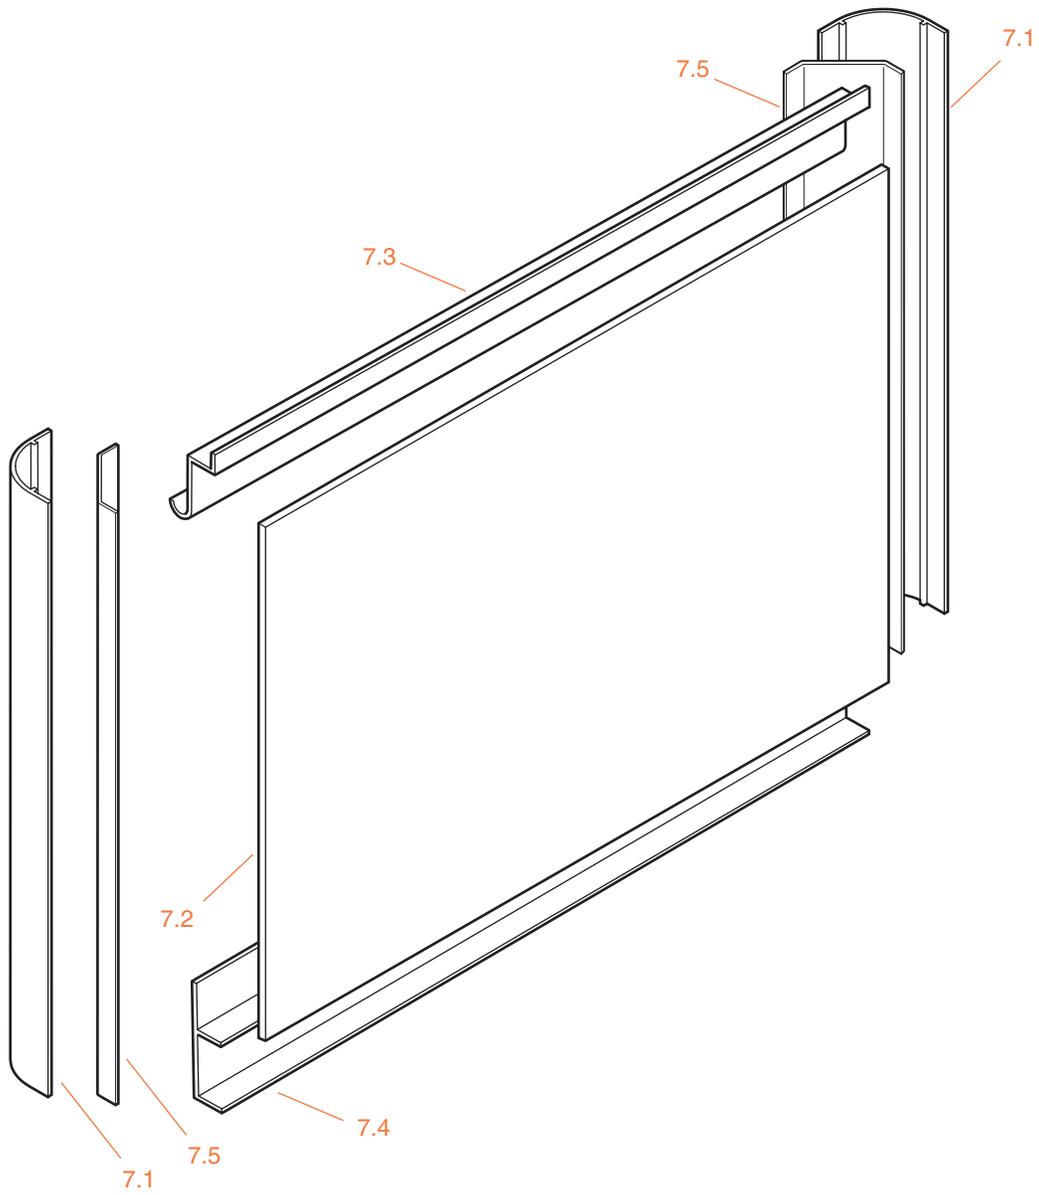


Front Wall, FRP Solid

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

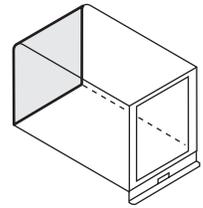

Item	Part Number	Description
7.0		FRP Front Wall
7.1	06013020-Length	ALUM EXT FRT COR IA4567
7.2.1	Appendix 54301004	FRONTWALL 3/8 GELCOAT FRP CHART
7.2.2	Appendix 54300521	FRP FRONTWALL AEROCAP CHART
7.3	06013130-Length	ALUM EXT CAP LWR IA5239
7.4	06000849-Length	3" BASERAIL IA9397
7.5.1	06919668-Length	GUSSET FRONT CORNER CHART
7.5.2	22813158-Length	GUSSET, FRONT CORNER CHARTED
7.NS	11305087	SCREW 1/4-20 x 11/16 TORX PAN EMPIGA
7.NS	11305093	SCREW 1/4-20 x 13/16 TRX PN EMPIGA
7.NS	11007502	NUT-T 1/4-20 x 7/16 RDBSE DOMESTC
7.NS	11306325	SCREW 3/8-16 x 1 TORX TR EMPIGARD
7.NS	11600771	NUT 3/8-16 FLG SER NYLON PATCH
7.NS	05001605	REVERSE COVE 1-1/2 FW
7.NS	12301749	TAPE BLACK RBR 1/16 x 1"
7.NS	12301751	TAPE GREY BUTYL 1/16 x 1-1/2 50'
7.Ref	54301096	FRONT WALL ASSY
7.Ref	54301097	WALL ASSY FRT 66 x 96" W

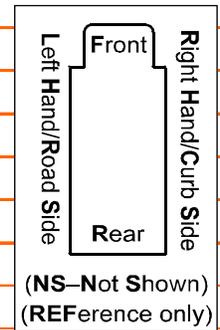

7—Front Wall, FRP Solid with Setback Wall

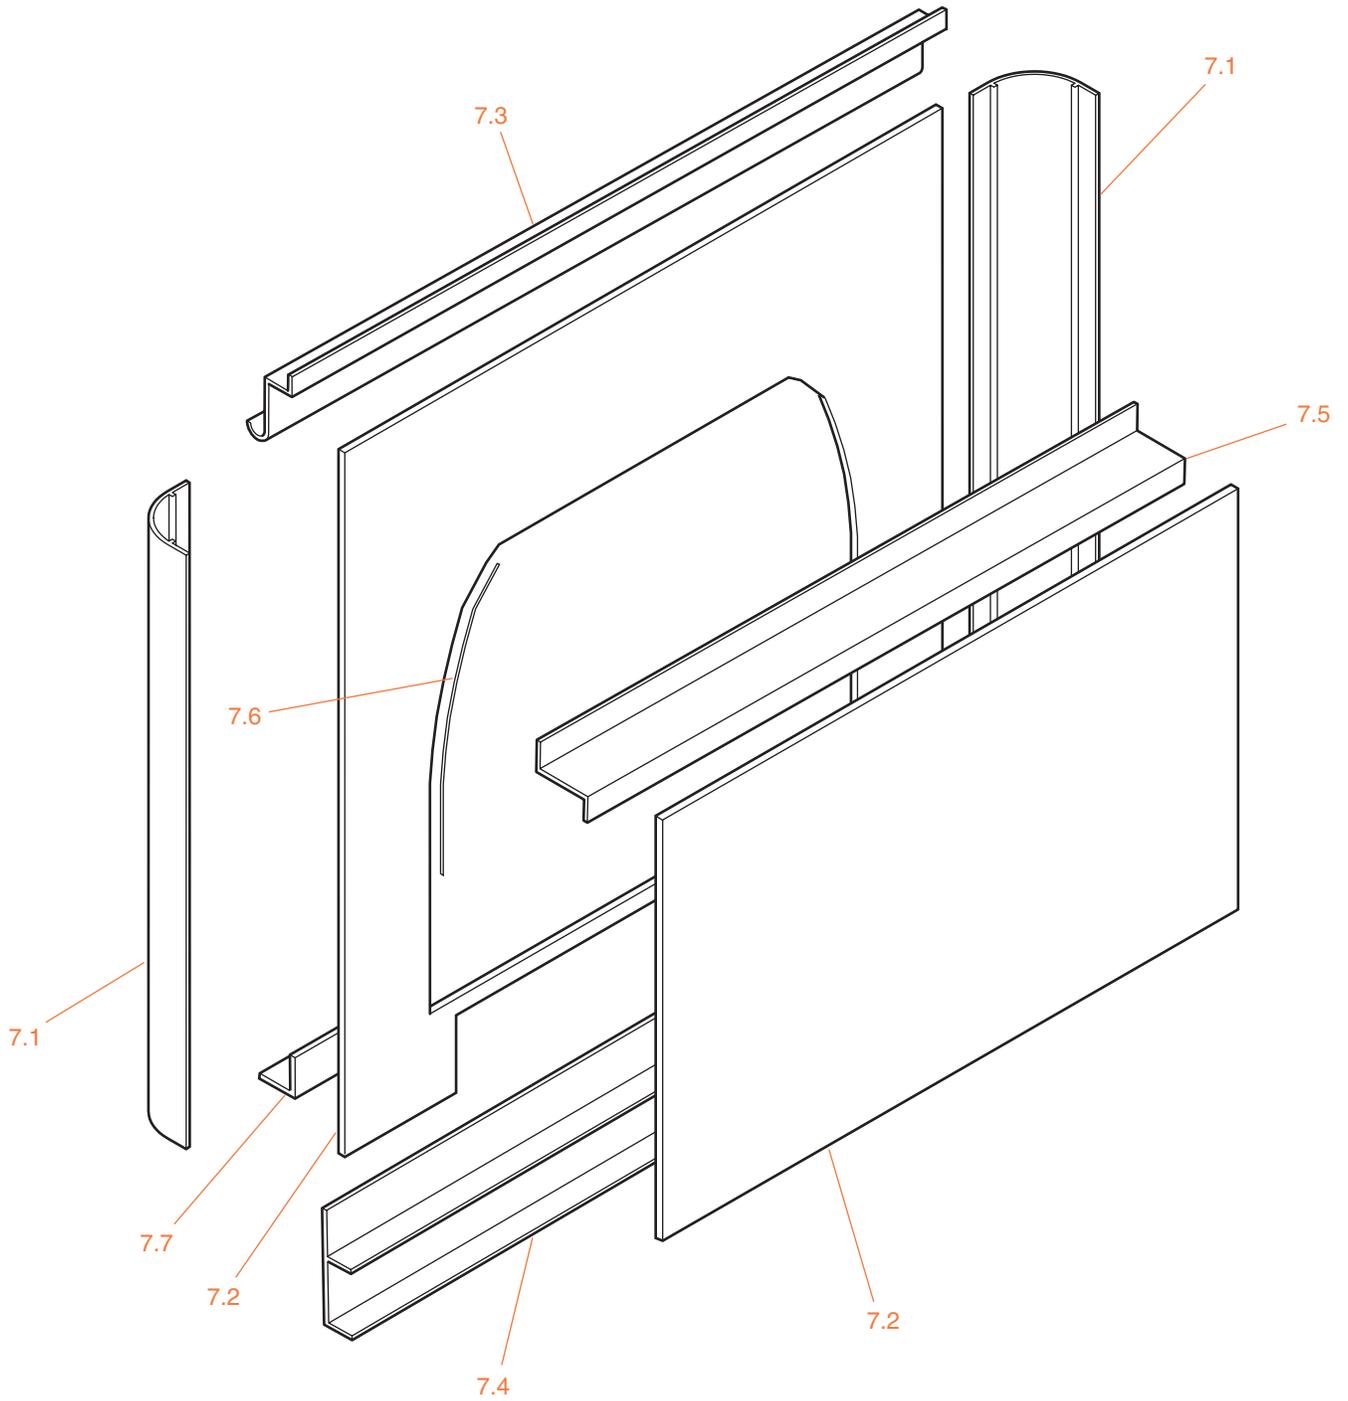


Front Wall, FRP Solid with Setback Wall

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

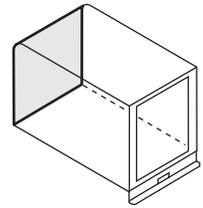

Item	Part Number	Description
7.0		FRP Front Wall with Set Back
7.1	06013020-Length	ALUM EXT FRT COR IA4567
7.2.1	Appendix 54301004	FRONTWALL 3/8 GELCOAT FRP CHART
7.2.2	Appendix 54300521	FRP FRONTWALL AEROCAP CHART
7.3	06013130-Length	ALUM EXT CAP LWR IA5239
7.4	06000849-Length	3" BASERAIL IA9397
7.5.1	06913402	Z BH ATTACH 4.31 x 92 ALUM TB
7.5.2	06910910	CLOSEOUT B/HEAD Z .125 x 5 x 90
7.6	05705636	TRIM PLASTIC U-CHNL 7/16"x14"x731S
7.7.1	06912818	CAP FRT FLR 2.5 x 6.13 x76.75 FD CUT
7.7.2	06912820	CAP FRT FLR 2.5x2.25 x77 FD/CWAY
7.NS	11305087	SCREW 1/4-20 x 11/16 TORX PAN EMPIGA
7.NS	11305093	SCREW 1/4-20 x 13/16 TRX PN EMPIGA
7.NS	11007502	NUT-T 1/4-20 x 7/16 RDBSE DOMESTC
7.NS	11306325	SCREW 3/8-16 x 1 TORX TR EMPIGARD
7.NS	11600771	NUT 3/8-16 FLG SER NYLON PATCH
7.NS	05001605	REVERSE COVE 1-1/2 FW
7.NS	12301749	TAPE BLACK RBR 1/16 x 1"
7.NS	12301751	TAPE GREY BUTYL 1/16 x 1-1/2 50'

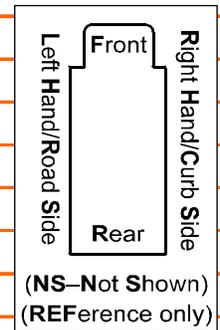

7—Front Wall, FRP with Sliding Door

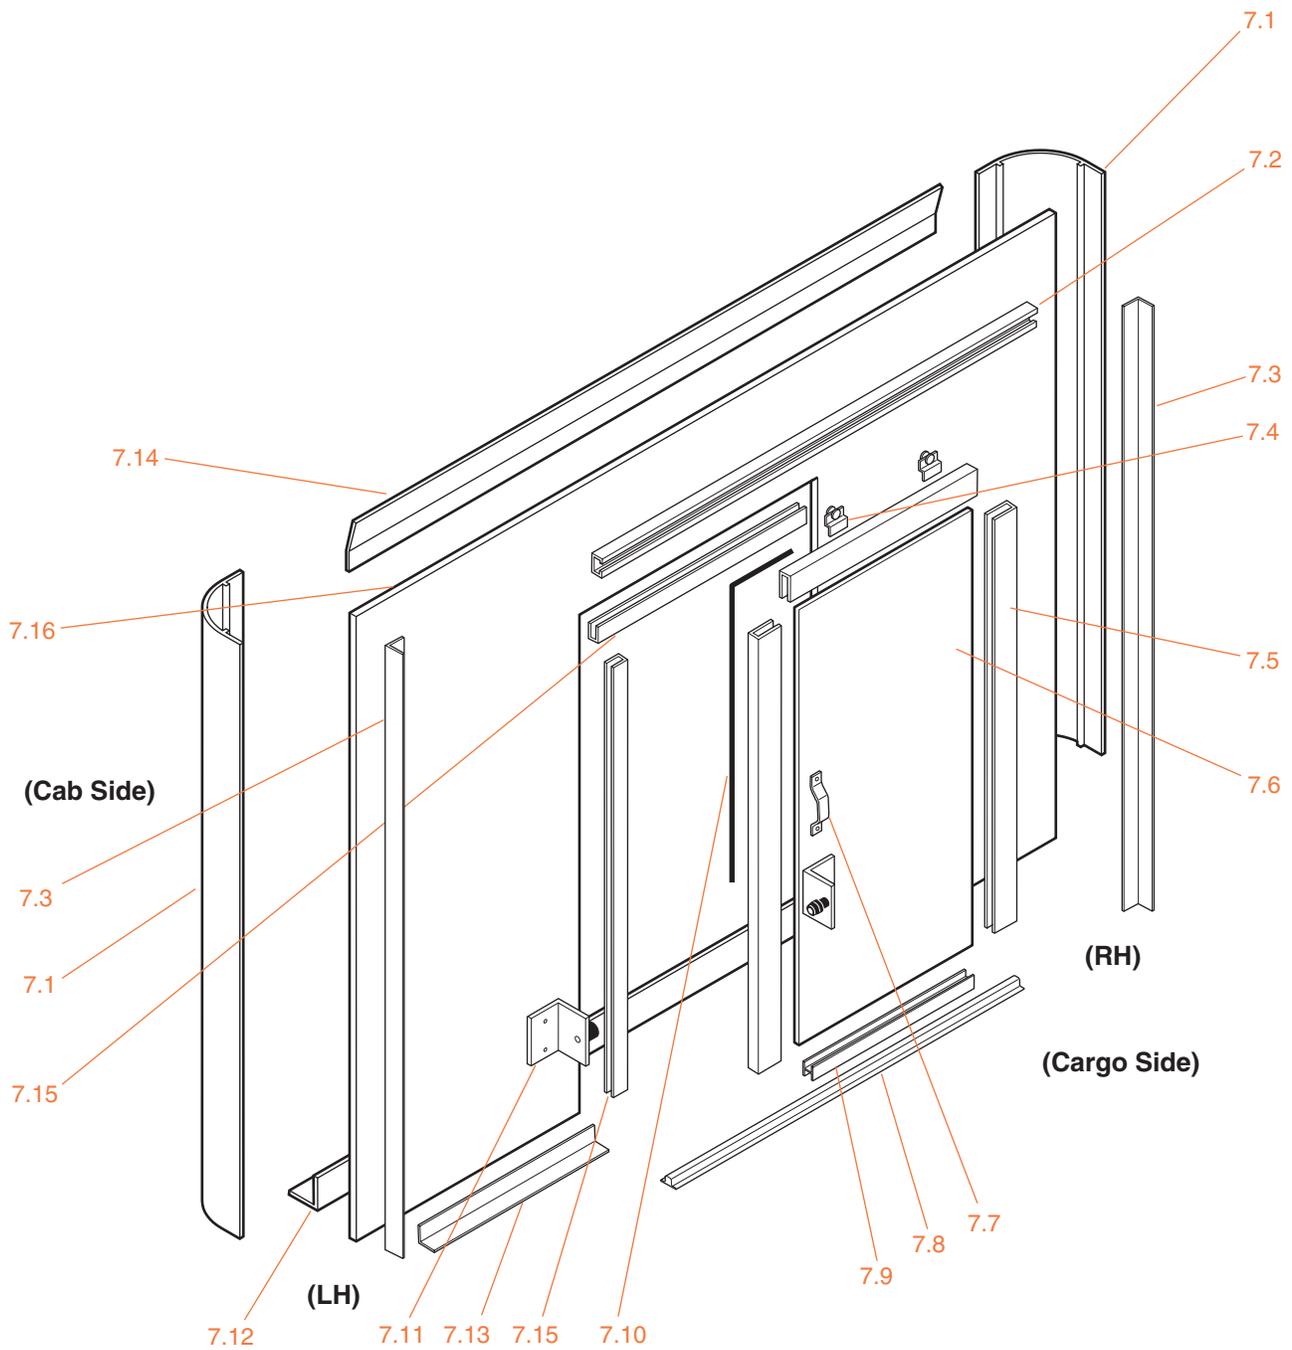


Front Wall, FRP with Sliding Door

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

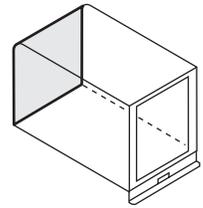

Item	Part Number	Description
7.0		FRP Front Wall, Std (GMStyle)
7.1	06013020-Length	IA4567 CORNER POST 06013020
7.2	08220020	TRACK DOOR UPPER 57-3/8
7.3	06923638	ANGLE BHD MOUNTING .125 x 2 x 2 x 38.38
7.4	08220102	HANGER B/H SLDR DR ECON
7.5	06000359	AE B/H DOOR W/SEAL
7.6	BSNR	PANEL DOOR FRP
7.7	08610122	HANDLE DOOR
7.8	06000270-04800	IA 7467 GUIDE 48.00 06000270
7.9	06013110-Length	IA5129 "I" -TRK 06013110
7.10	12300602	SEAL BLACK BULB (B/H)
7.11.1	08611172	DOOR HOLDER HARD W/MALE PLUG
7.11.2	06910943	BRKT DR STOP WITH/HOLES 06002047
7.12.1 FD	06912818	CAP FRT FLR 2.5 x 6.13 x 76.75 FD CUT
7.12.2 FD	06912820	CAP FRT FLR 2.5 x 2.25 x 77.00 FD CUT
7.12.1 GM	06918992	CAP FLOOR FRONT WW GM
7.12.2 GM	06917410	CAP FLOOR FRONT FF GM
7.13	06923638	ANGLE BHD MOUNTING .125 x 2 x 2 x 36.63
7.14	06919083	CLOSEOUT WIRE 4.5 x 85.62
7.15	05705636	TRIM PLASTIC U-CHNL 7/16" x 14' x 731S
7.16	BSNR	PANEL FRP
7.NS	05001605	REVERSE COVE 1-1/2 FW
7.NS	12301749	TAPE BLACK RBR 1/16 x 1"
7.NS	12301751	TAPE GREY BUTYL 1/16 x 1-1/2 50'

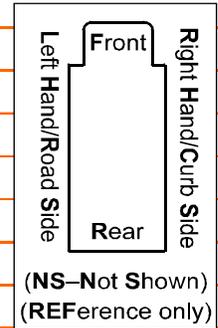

7—Front Wall, Narrow FRP Aerocap with Sliding Door

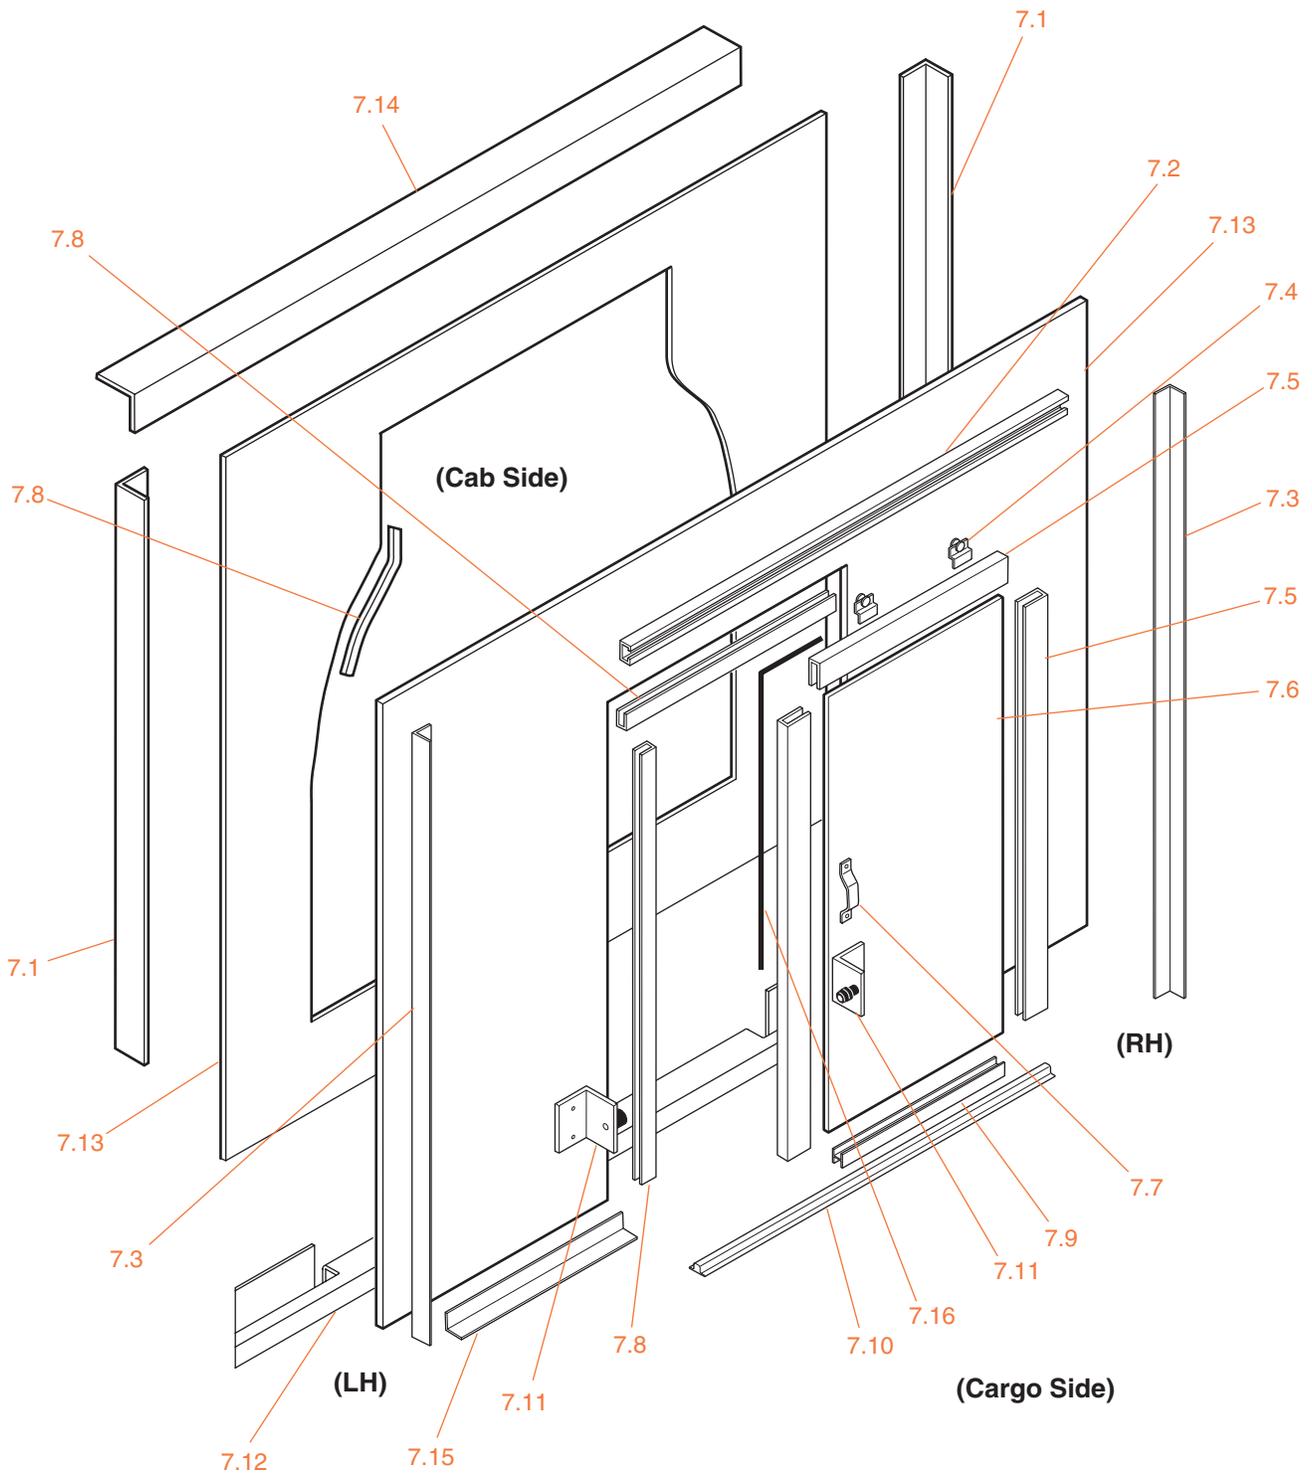


Front Wall, Narrow FRP Aerocap with Sliding Door

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

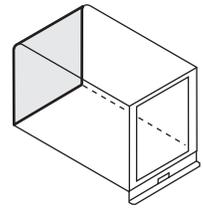

Item	Part Number	Description
7.0		FRP Front Wall, Aerocap
7.1 LH	06924715	ANGLE FRT CORNER L/H .125 x 2 x 2 x 88.09
7.1 RH	06924716	ANGLE FRT CORNER R/H .125 x 2 x 2 x 88.09
7.2	08220020	TRACK DOOR UPPER 57-3/8
7.3	06923638	ANGLE BHD MOUNTING .125 x 2 x 2 x 36.63
7.4	08220102	HANGER B/H SLDR DR ECON
7.5	06000359-Length	IA7246 BH W/SEAL 06000359
7.6	BSNR	FRP 3/8 BLHD DOOR
7.7	08610122	HANDLE DOOR
7.8	05705636	TRIM PLASTIC U-CHNL 7/16" x 14'
7.9	06013110-Length	IA5129 "I"-TRK 06013110
7.10	06000270-04800	IA7467 GUIDE 48.00 06000270
7.11.1	06910943	BRKT DR STOP WITH/HOLES 06002047
7.11.2	08611172	DOOR HOLDER HARD W/MALE PLUG
7.12.1 FD	06912818	CAP FRT FLR 2.5 x 6.13 x 76.75 FD CUT
7.12.2 FD	06912820	CAP FRT FLR 2.5 x 2.25 x 77.00 FD CUT
7.12.1 GM	06918992	CAP FLOOR FRONT WW GM
7.12.2 GM	06917410	CAP FLOOR FRONT FF GM
7.13	BSNR	FRP M/SHIP WALL AERO 3/8"
7.14	06923867	"U" B/HEAD ATTACH N/B AERO 77.50"
7.15	06923638	ANGLE BHD MOUNTING .125 x 2 x 2 x 36.63
7.16	12300602	SEAL BLACK BULB (B/H)
7.NS	05001605	REVERSE COVE 1-1/2 FW
7.NS	06922823	"Z" BULKHEAD ATTACHMENT 78 x 4.5
7.Ref	54351004	BULKHEAD WALL ASSY
7.Ref	57351027	DOOR ASSY SLDG B/HD 1/2" x 26 x 66

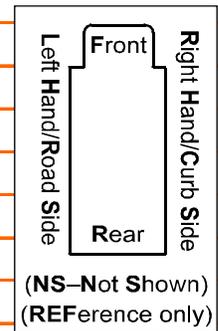

7—Front Wall, 96W FRP Aerocap with Sliding Door

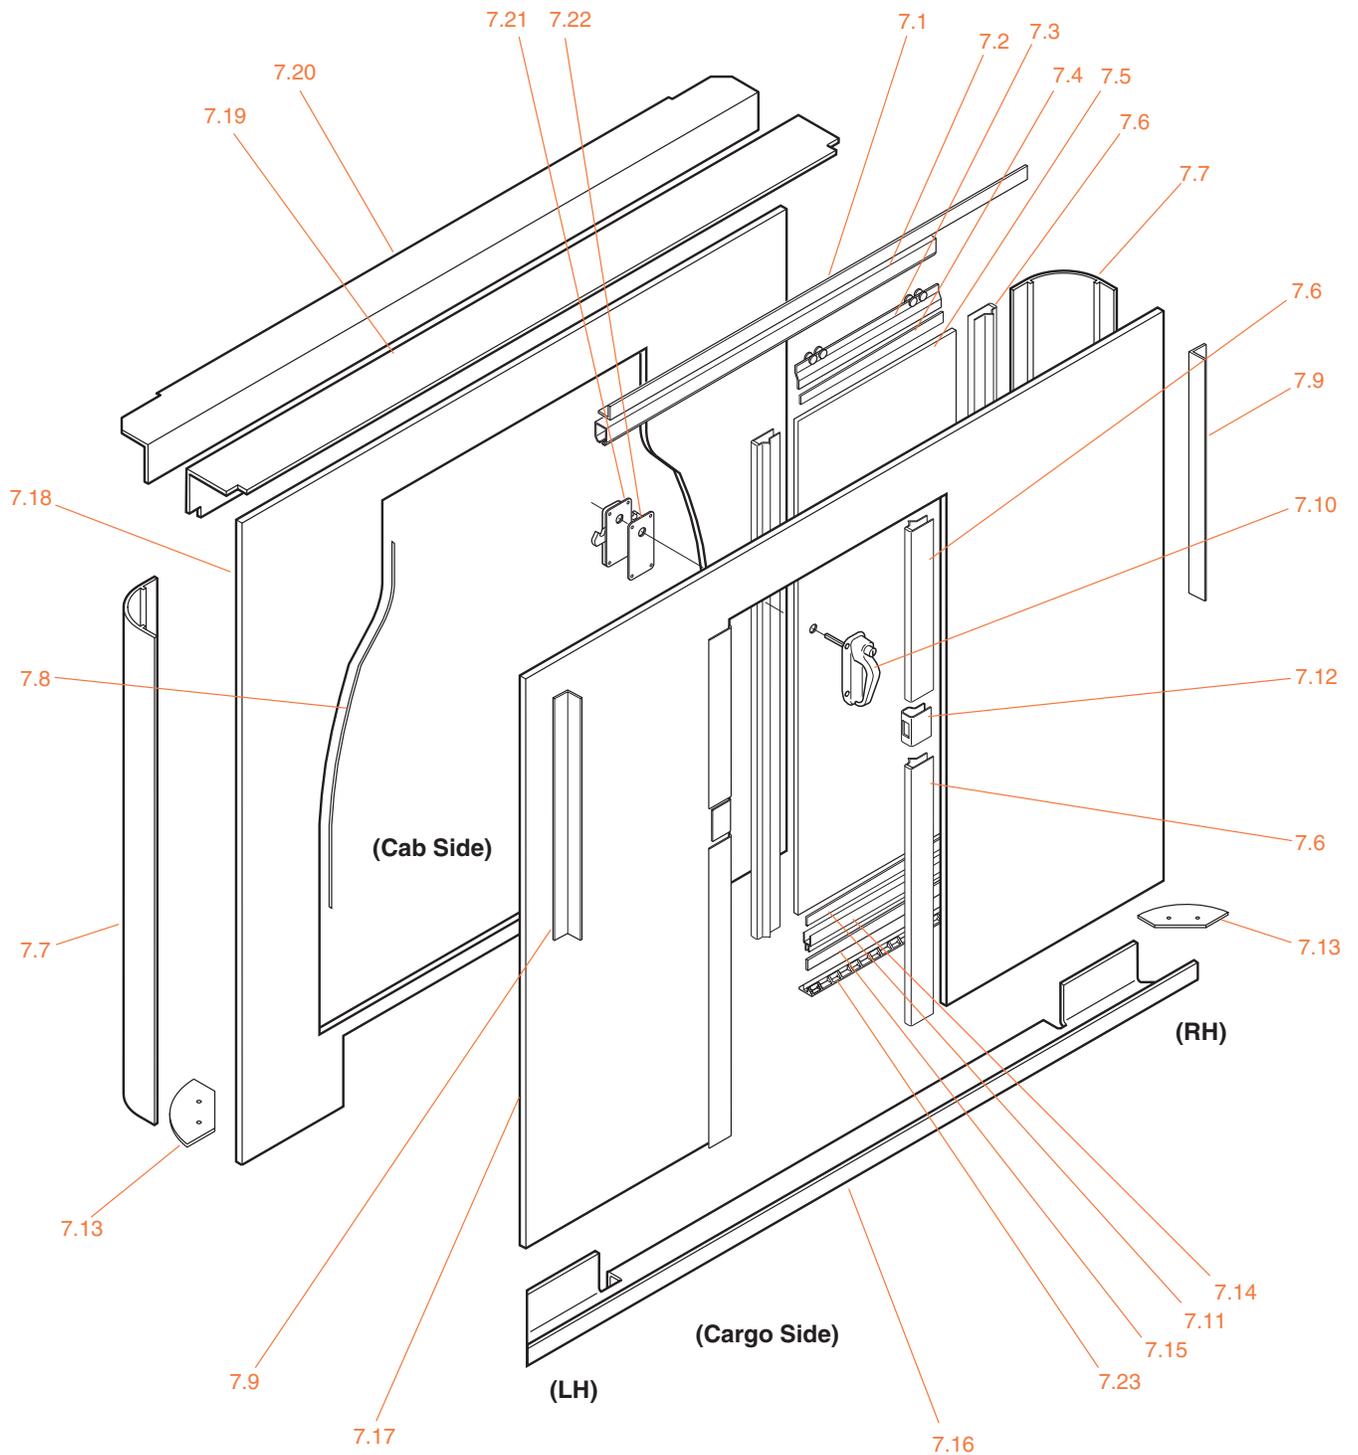


Front Wall, 96W FRP Aerocap with Sliding Door

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

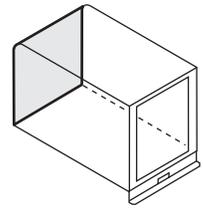

Item	Part Number	Description
7.0		FRP Front Wall, 96W Aerocap
7.1	06002050-06000	IA637 ANGLE 60.00 06002050
7.2	08220043	TRACK BH DR 16GA x 60"
7.3	08610351	ROLLER ASY BHD DR 33"
7.4	06922310	ALUM .100 x 1.25 x 28
7.5	02804982	FRP 3/8 x 31.62 x 65.38 TMSTR DOOR
7.6.1	06013164-Length	IA5349 SEAL BHD 06013164
7.6.2	05402091	SEAL DOOR
7.7	06923633	FRONT CRNR POST AERO 88.50 06013020
7.8	05705636	TRIM PLASTIC U-CHNL 7/16" x 14' x 731S
7.9	06923638	ANGLE BHD MOUNTING .125 x 2 x 2 x 38.38
7.10	08706641	HANDLE CRM 3/8 PUSH
7.11	06922309	ALUM .100 x .75 x 30
7.12.1	08401266	CATCH SLDG DR FRT
7.12.2	06922855	SHIM .125 x 3.0 x 4.0 W/SLOTS TRDMAS
7.13	06600069	PLATE CRNR SEAL .063 x 2 x 6.62
7.14	06013149-03481	IA5398 EDGE 34.81 06013149
7.15	08611001	GUIDE DOOR WHMW 1/4 x 2 x 34.5
7.16.1 FD	06912818	CAP FRT FLR 2.5 x 6.13 x 76.75 FD CUT
7.16.2 FD	06912820	CAP FRT FLR 2.5 x 2.25 x 77.00 FD CUT
7.16.1 GM	06918992	CAP FLOOR FRONT WW GM
7.16.2 GM	06917410	CAP FLOOR FRONT FF GM
7.17	02804977	FRP AERO MID 3/8 x 94 x 72.75 TMSTR W/DR
7.18	02804976	AEROCAP F/WALL 3/8 x 85.6 x 88.42 C/OUT
7.19	06923787	CLOSEOUT AERO MID WALL T/MSTR 93.25
7.2	06924057	"U" B/HEAD ATTACH T/MSTR 91.75
7.21	08704403	LATCH INT 3/8" SHAFT
7.22	01700696	SHIM DOOR .25 x 5.50 x 2.5
7.23	10002275	THRESHOLD CASTING
7.NS	05001605	REVERSE COVE 1-1/2 FW
7.Ref	57351026	SLIDING BLKHD DOOR ASSY 34 x 65.38
7.Ref	54351012	BLKHD WALL/DOOR ASSY 34 x 65.38 DR
7.Ref	54351011	WALL ASSY MIDSHIP 72.75 x 94

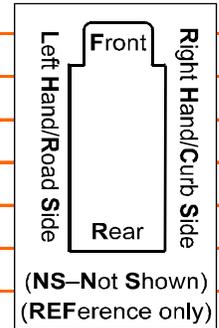

7—Front Wall, DuraPlate

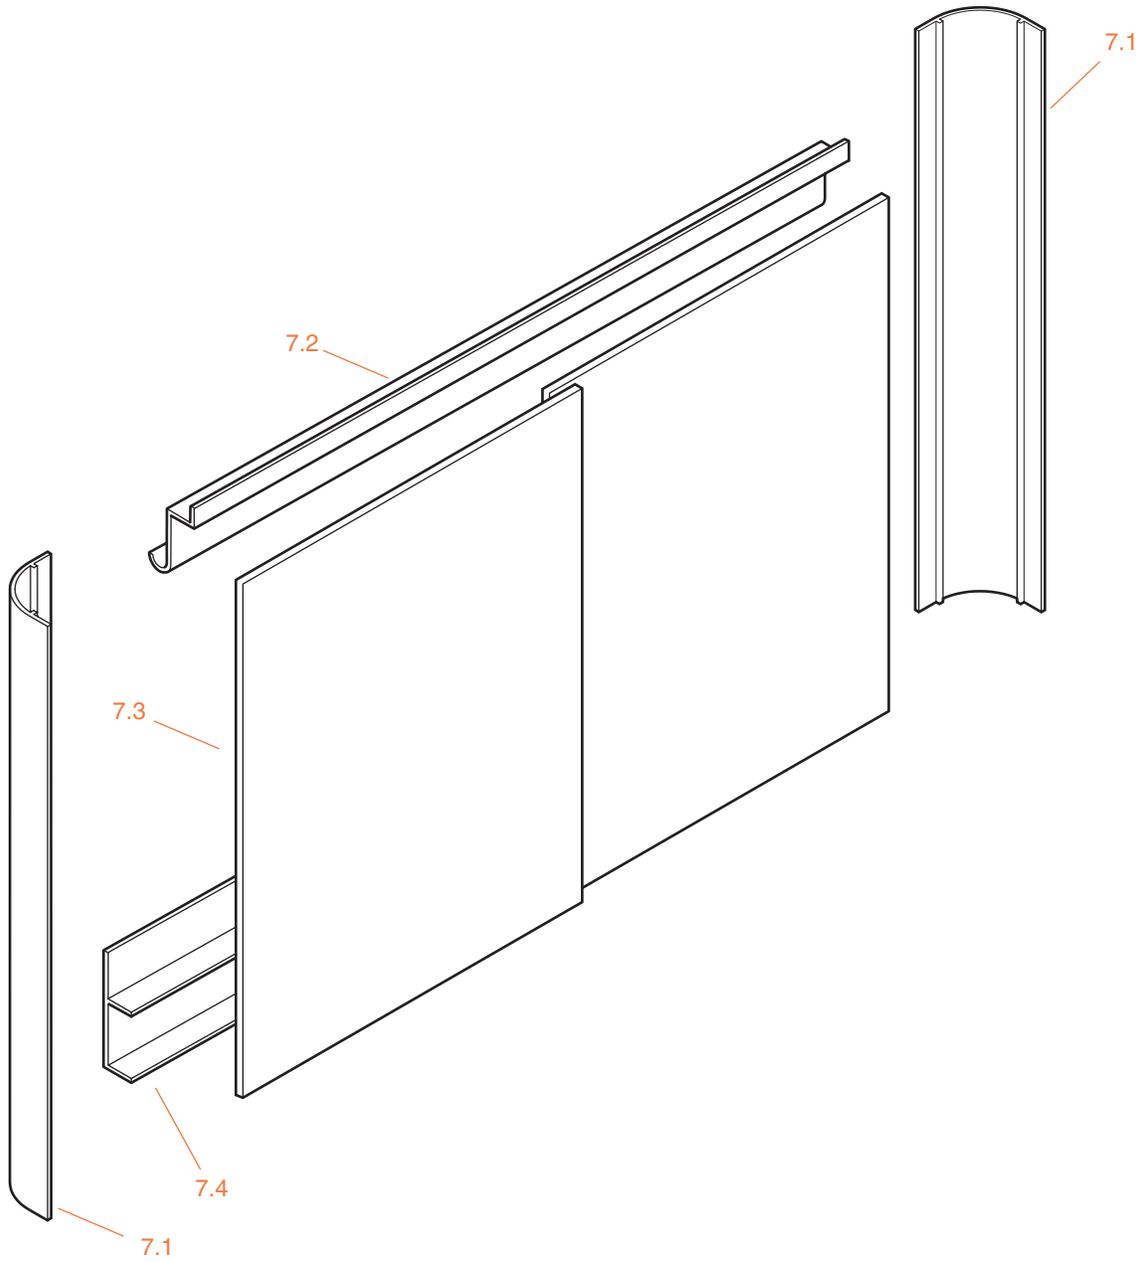


Front Wall, DuraPlate

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

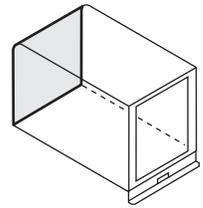

Item	Part Number	Description
7.0		DuraPlate Front Wall
7.1	06013020-Length	IA4567 CORNER POST 06013020
7.2	06013130-Length	FRONT RADIUS ATTACHMENT
7.3	Appendix 02805529	DURAPLATE PANEL
7.4	06000849-Length	AE BASERAIL 3"
7.NS	12301025	TAPE FOAM .06 x .25
7.NS	05001605	REVERSE COVE 1-1/2 FW
7.NS	12301749	TAPE BLACK RBR 1/16 x 1"
7.NS	12301751	TAPE GREY BUTYL 1/16 x 1-1/2 50'

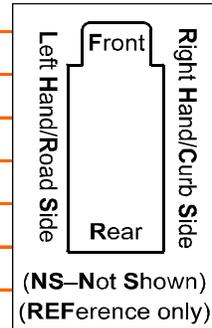

8—Electrical Harnesses

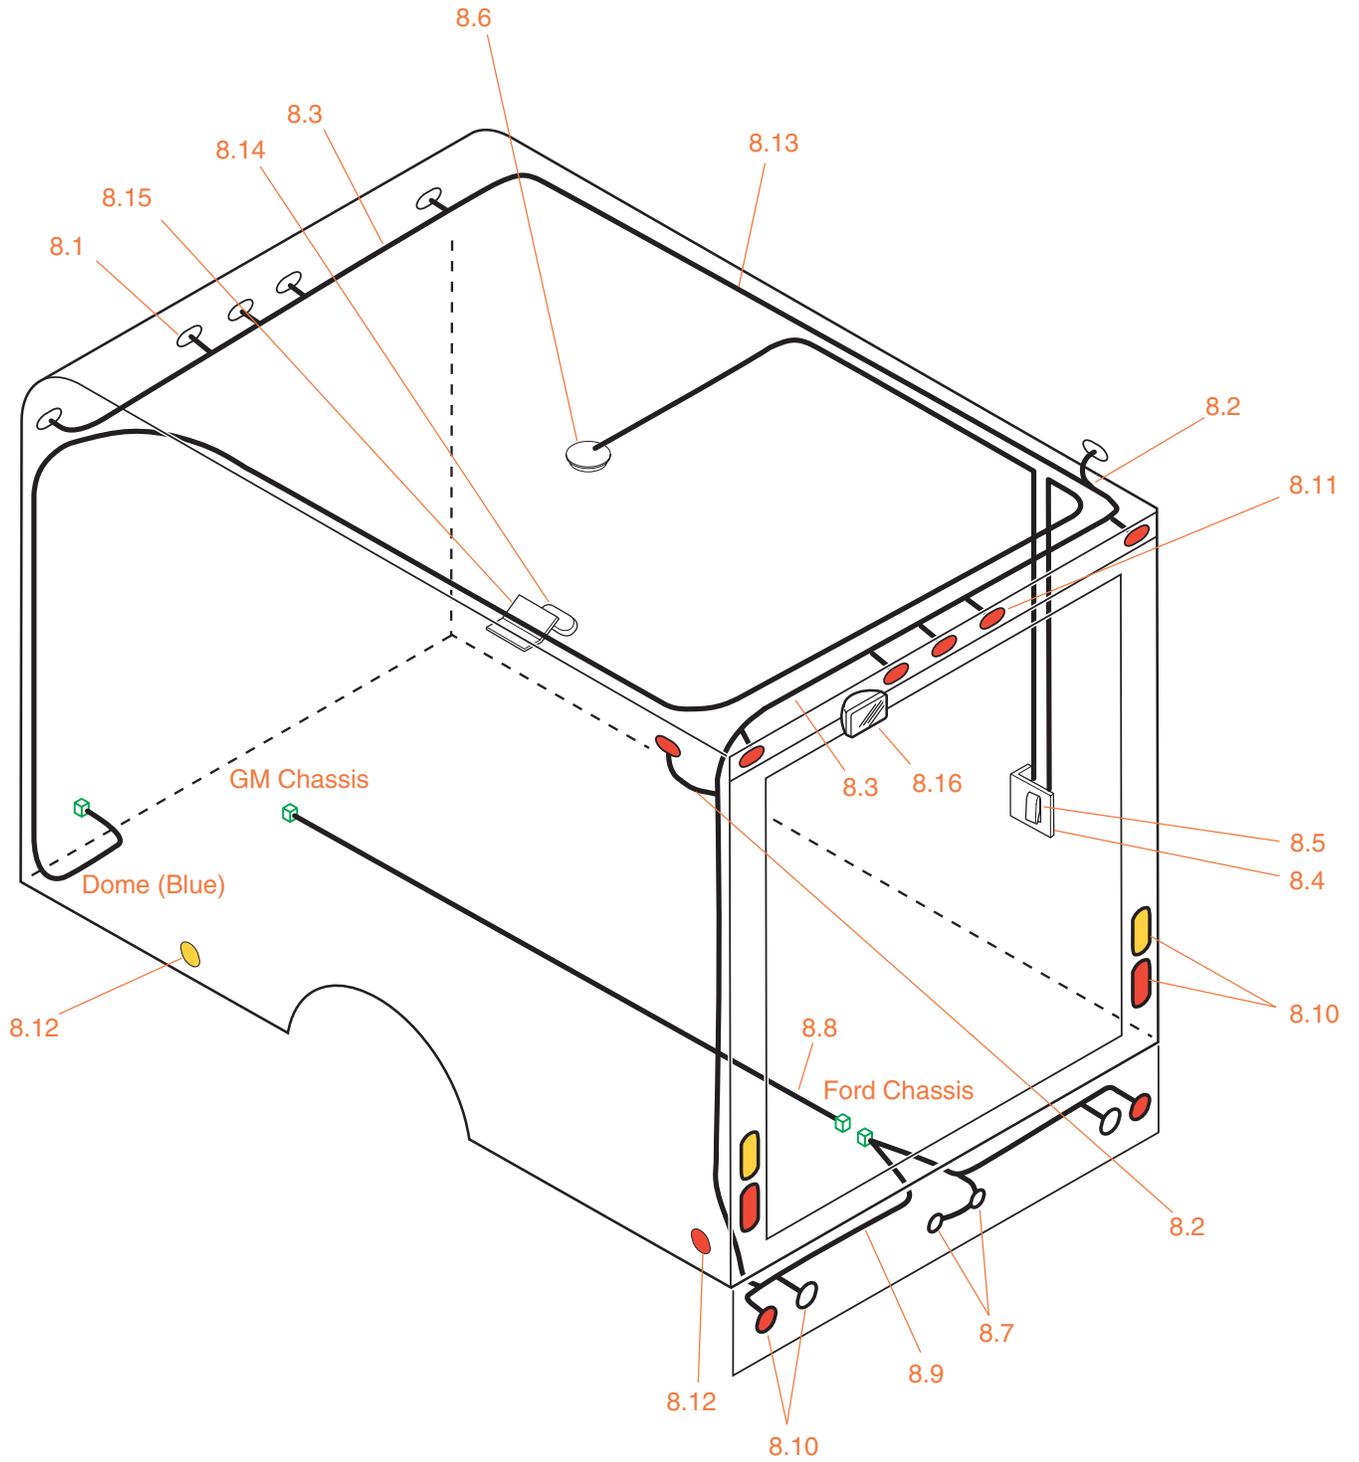


Electrical Harnesses

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

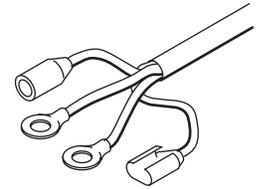


Item	Part Number	Description
8.0		Electrical Layout
8.1.1	16513067	LENS OVAL CLR/MKR YELLOW (STD)
8.1.2	16513068	LAMP BASE CLR/MKR W/PTAIL (STD)
8.1.3	11600002	SCREW CAP BLK .137 x 3/4 (STD)
8.1.4	Parts Guide	LIGHT, AMBER MARKER (OTHER)
8.1.5	16512673	LIGHT CLEARANCE LED YEL
8.1.6	16513884	YELLOW 3" LED P2 SIDE MARKER LAMP
8.1.7	16513886	PIGTAIL CLRNC/MRKR 60"
8.1.8	16512675	HARNESS PIGTAIL MARKER
8.2.1	16513052	HARNESS LH CLEARANCE LIGHTS
8.2.2	16513053	HARNESS RH CLEARANCE LIGHTS
8.2.3	16513056	HARNESS LH CENTER HIGH MNT STOP LT
8.3.1	16512637	HARNESS CLEARANCE LIGHTS
8.3.2	16513055	HARNESS REAR CLEARANCE LIGHTS
8.3.3	16513879	HARNESS UPPER RAIL 24'
8.3.4	16513878	HARNESS UPPER RAIL 16'
8.4	BSNR	BRACKET CARGO LIGHT SWITCH
8.5	16000377	SWITCH 2WAY ROCKR
8.6	Parts Guide	LIGHT, DOME
8.7.1	16500153	LIGHT LICENSE PLATE (STD)
8.7.2	16511463	LENS LICENSE PLT LITE
8.7.3	16512676	LIGHT LICENSE LAMP
8.7.4	16513887	BRACKET LIC PLATE LAMP
8.7.5	16512649	PIGTAIL LIC LAMP
8.7.6	Parts Guide	LAMP, LICENSE PLATE (OTHER)
8.8	Reference Only	HARNESS, CHASSIS SUPPLIED
8.9.1-FD	16400381	**WIRE HARNESS 10'-16' FORD '92 PDV
8.9.2-FD	16513853	HARNESS TAILLIGHT FORD CUT
8.9-GM	BSNR	HARNESS TAILLIGHT GM CUT
8.9-B16	16513877	HARNESS RR SILL LOWER
8.9-B24	16513880	HARNES RR SILL LWR BUDGET
8.9-OT	BSNR	HARNESS, REAR SILL LOWER

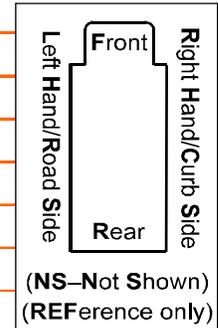

Continued

8—Electrical Harnesses (Continued)

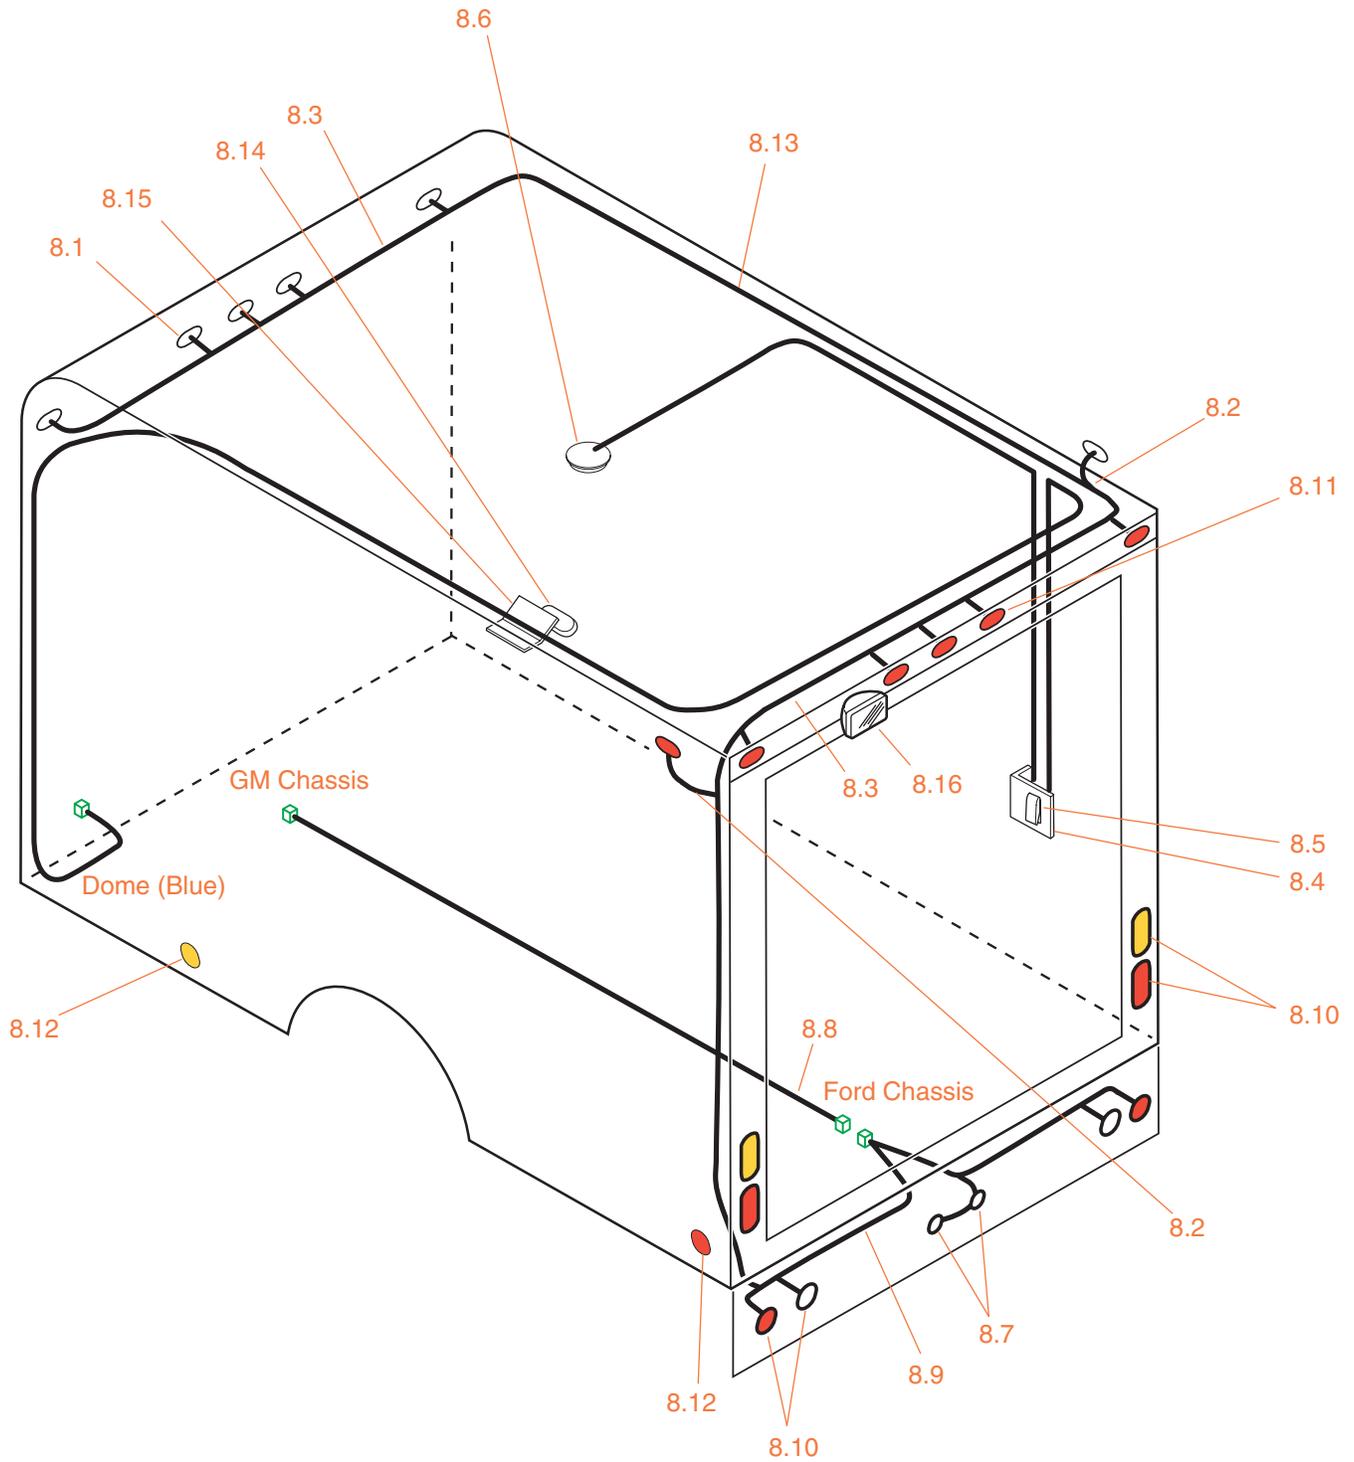


Electrical Harnesses

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

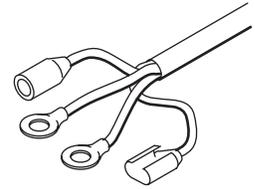


Item		Description
8.10.01	15202114	LIGHT TAIL W/GRND (STD)
8.10.02	Parts Guide	STOP/TURN/TAIL LIGHT (OTHER)
8.10.03	15202115	LIGHT B/UP W/GRD (STD)
8.10.04	Parts Guide	LIGHT, BACK-UP (OTHER)
8.10.05	15200407	GROMMET OVAL
8.10.06	15206136	LIGHT BACK-UP OVAL
8.10.07	16200023	LIGHT OVAL MTG GRMT
8.10.08	16513876	LIGHT OVAL S/T/T LED
8.10.09	16512542	LIGHT OVAL BACK-UP
8.10.10	16513890	LITE LED RED S/T/T BK FLG
8.11.1	16513068	LAMP BASE CLR/MKR W/PTAIL (STD)
8.11.2	16513066	LENS OVAL CLR/MKR RED (STD)
8.11.3	11600002	SCREW CAP BLK .137 x 3/4 (STD)
8.11.4	16512674	LIGHT CLEARANCE LED RED
8.11.5	16513885	RED 3" LED P2 REAR CLR/MARKER LAMP
8.11.6	Parts Guide	LIGHT CLEARANCE RED (OTHER)
8.11.7	16513886	PIGTAIL CLRNC/MRKR 60"
8.12.1	16200034	REFLECTOR RED TAPE ROUND
8.12.2	16511547	REFLECTOR RED 3"
8.12.3	15200498	REFLECTOR RED TAPE
8.13.1	16512638	HARNESS RH CLEARANCE LIGHTS
8.13.2	16512639	HARNESS LH CLEARANCE LIGHTS
8.14.1	16512679	LIGHT DOME
8.14.2	16513889	CARGO DOME LAMP
8.15	06918832	BRACKET CARGO LIGHT INTNL/TKLT
8.16	16513353	EXT FLOOD LIGHT HALOGEN 1-WAY

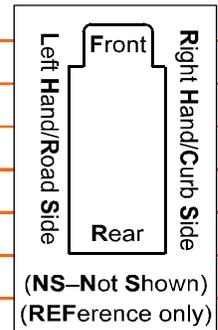

Continued

8—Electrical Harnesses (Continued)

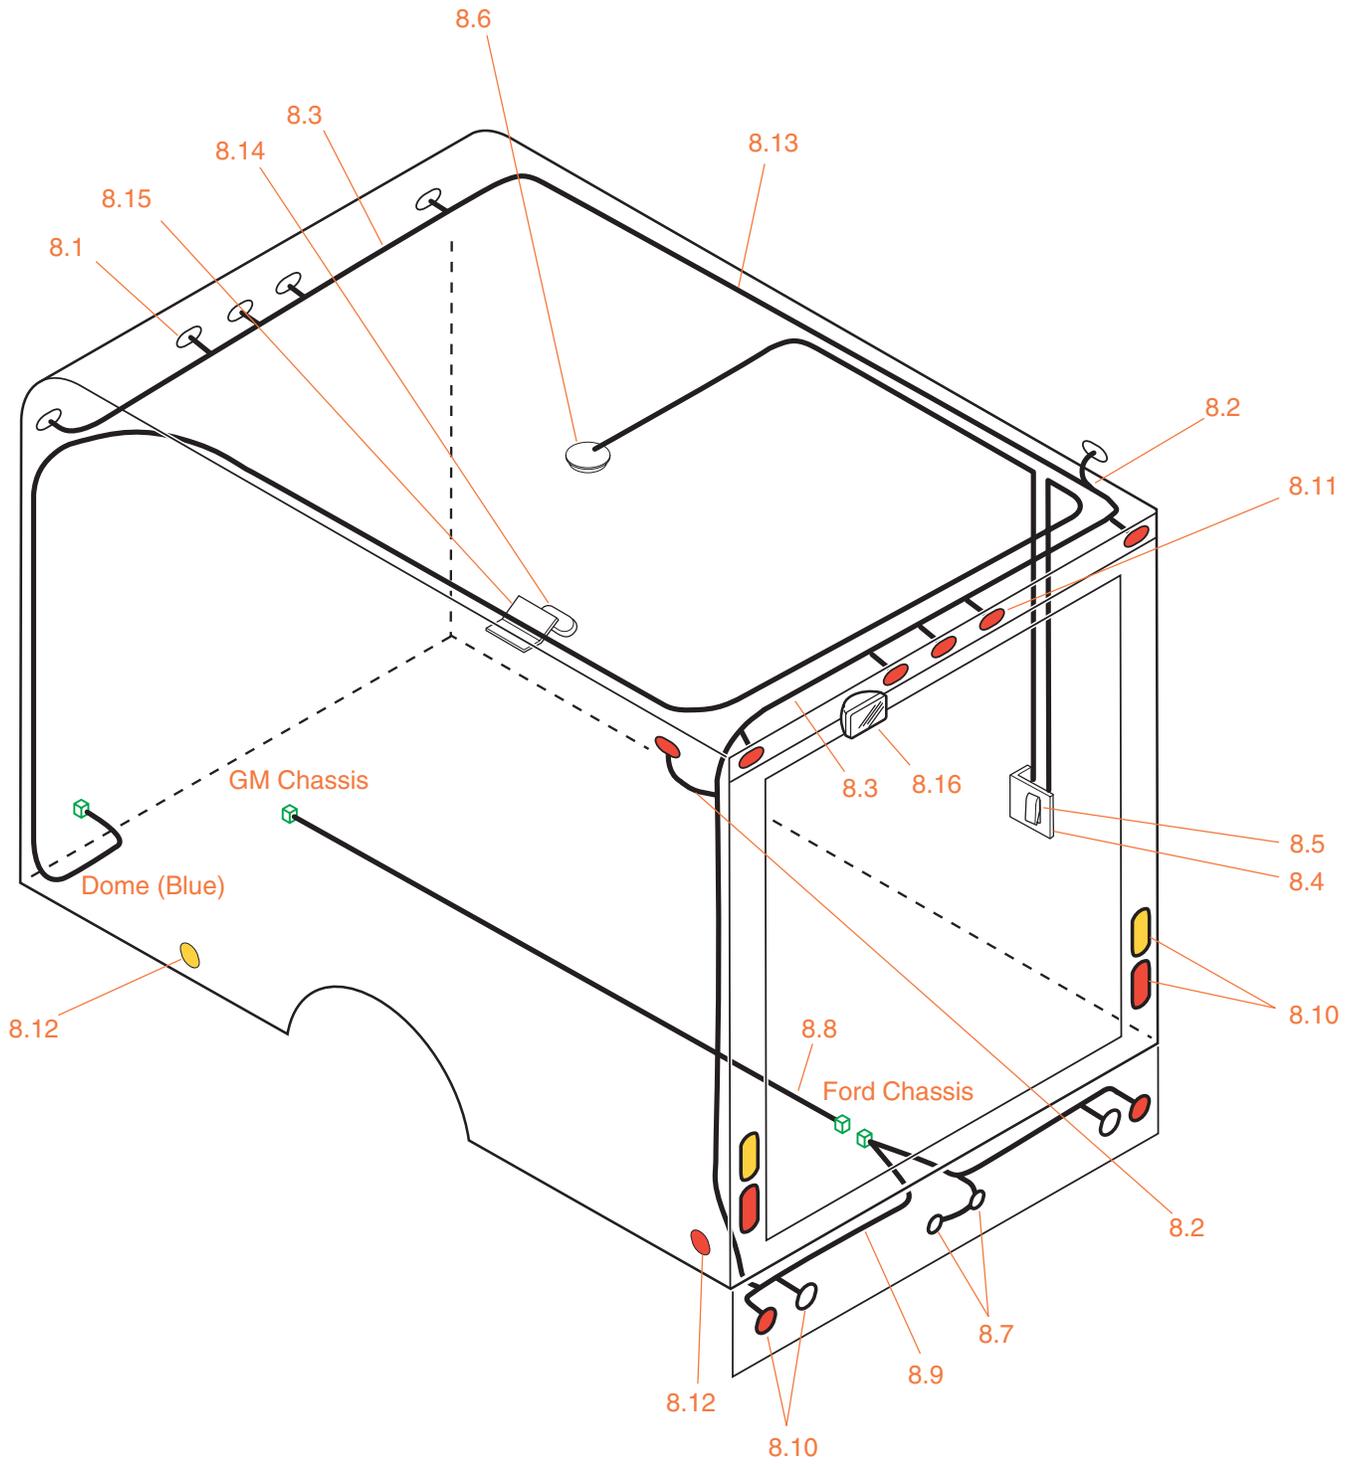


Electrical Harnesses

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

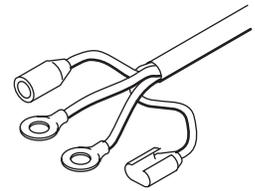

Item		Description
8.NS	16512640	HARNESS CLR LTS 48" JUMPER
8.NS	16512650	INLINE FUSE HOLDER 15 AMP
8.NS	16512651	INLINE FUSE HOLDER 20 AMP
8.NS	16510020	CONDUIT 5/8"ID PLAST 5/8" SLIT
8.NS	16510019	CONDUIT PLASTIC 3/8"SLIT
8.NS	16602350	CLAMP "P" 1/2" PLASTIC
8.NS	08707481	CLAMP VINYL COATED 7/8"
8.NS	16100885	BREAKER CIRCUIT 15A
8.NS	16511738	CONDUIT PLASTIC 1/4" SLIT
8.NS	16500071	BUSHING SNAP 1/2"
8.NS	16101122	FUSE 15 AMP
8.NS	16500073	BUSHING SNAP 7/8"
8.NS	16500082	BUSHING SNAP 1-1/2"
8.NS	16511848	HARNESS 70" (LIFTGATE)
8.NS	16513881	HARNESS ADAPTER INT'L
8.Ref	16513870	KIT ELEC 24' CONSMR GROTE BUDGET 04
8.Ref	16513873	KIT ELEC 16' CONSMR T/LIT
8.Ref	16513057	WIRINGLAYOUT ROOF SHORT CAB (W/L.D. LIGHTS)
8.Ref	16513058	WIRINGLAYOUT ROOF LONG CAB (W/L.D. LIGHTS)
8.Ref	16513059	WIRINGLAYOUT ROOF SHORT CAB (16 AND UNDER)
8.Ref	16513060	WIRINGLAYOUT ROOF MEDIUM CAB (17-19'-6)
8.Ref	16513061	WIRINGLAYOUT ROOF LONG CAB (20'-21'-6)
8.Ref	16513062	WIRINGLAYOUT ROOF SHORT CAB CHASSIS (22'-25'-6)
8.Ref	16513063	WIRINGLAYOUT ROOF MED CAB CHASSIS (26'-29'-6)
8.Ref	16513064	WIRINGLAYOUT ROOF LONG CAB CHASSIS (30' AND OVER)
8.Ref	16513065	WIRINGLAYOUT ROOF CUTAWAY/CAB (CHMSL)
See also the <i>Utilimaster Quick Reference Parts Guide</i> .		

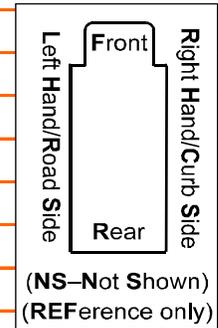

9—Cargo Options

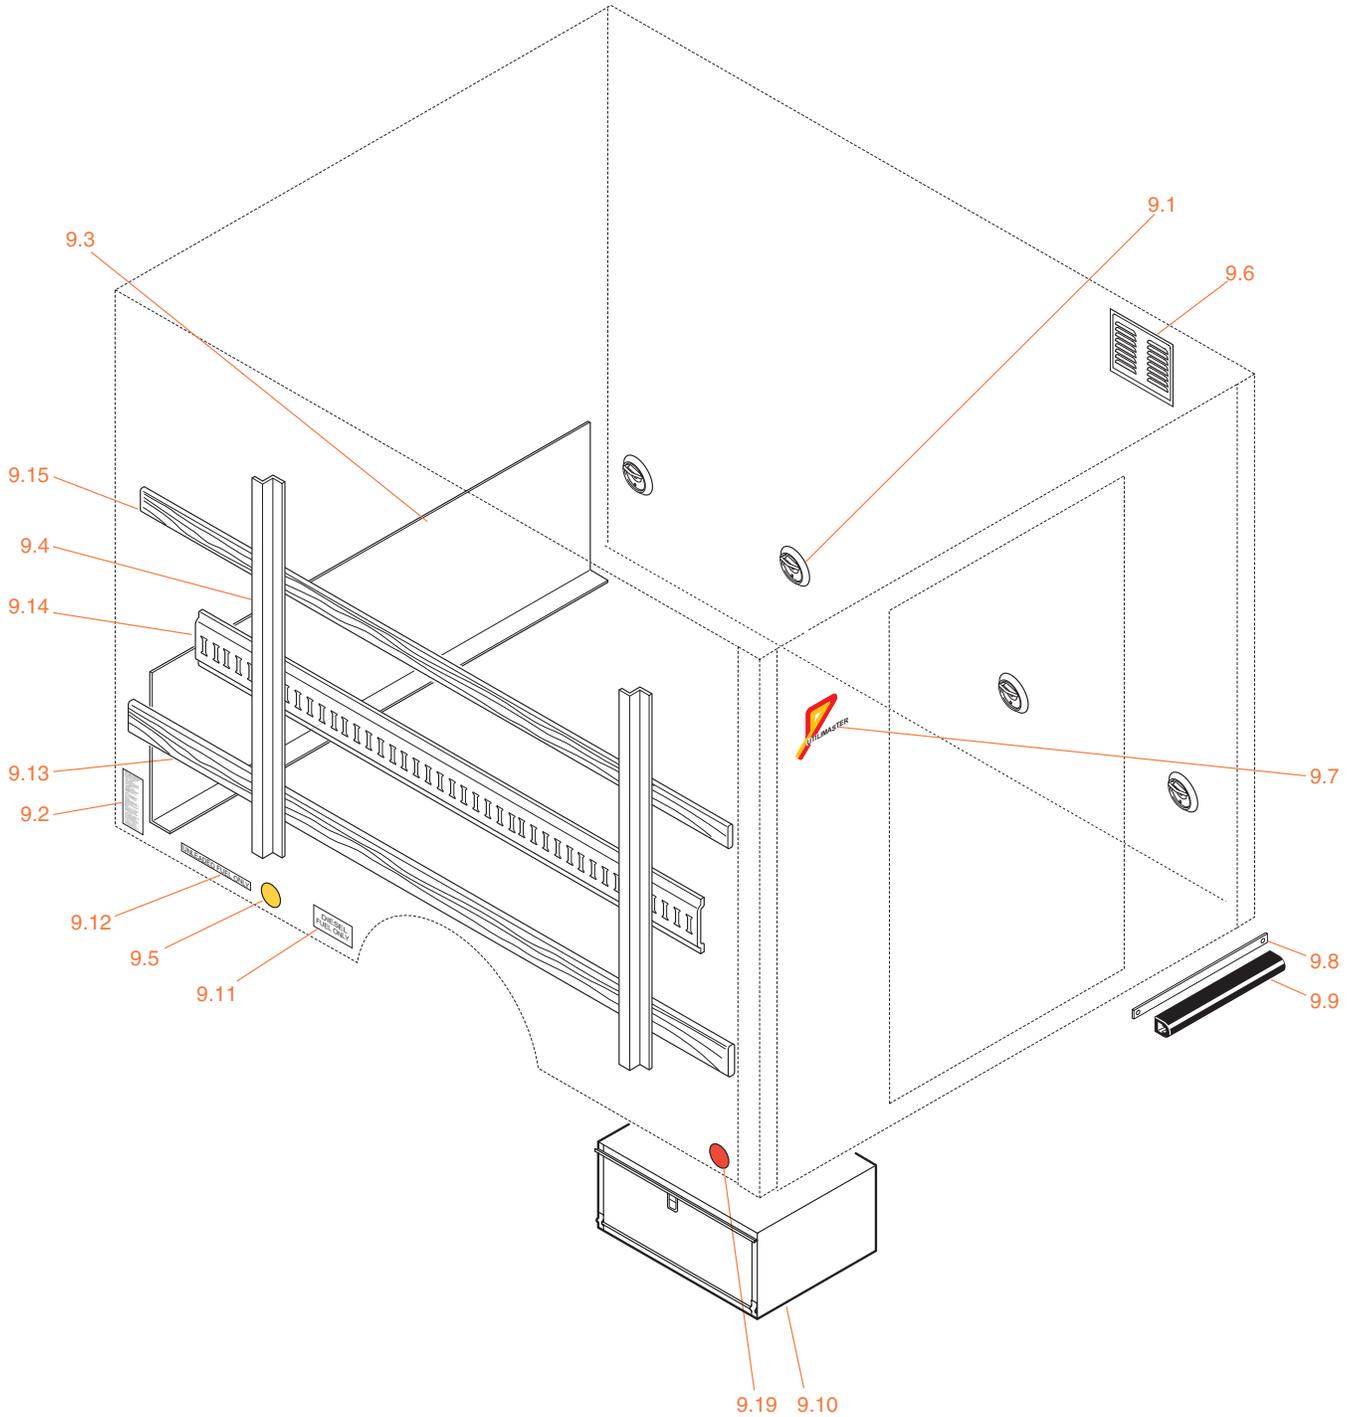


Cargo Options

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

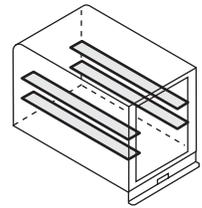

Item	Part Number	Description
9.0		Cargo Options
9.1.1	08708902	RING W/SPACER
9.1.2	08708900	ROPE RING RECESSED
9.2	03000855	DECAL MAINTENANCE
9.3	22817399	ANGLE NOSE REINF 12GA x4 x20 x85.62
9.4-62	22815760	STUD 16GA x .75 x2.44 x61.37 GLVZD
9.4-76	22815778	STUD 18GA x .75 x2.44 x75.50 GLVZD (FRP SIDEWALL)
9.4-89	22819406	STUD 18GA x .75 x2.44 x88.75 GLVZD (FRP SIDEWALL)
9.5-A1	16200033	REFLECTOR AMBER TAPE RND
9.5-R1	16511547	REFLECTOR RED 3"
9.5-R2	15200498	REFLECTOR RED TAPE
9.6.1	07200278	VENTILATOR ALUM 10 x12 (W/Closer)
9.6.2	07200275	VENTILATOR ALUM 10 x12 (Louver Only)
9.6.3	03102154	DECAL BUTTERFLY VENT OPEN/CLOSED
9.7	03000346	DECAL UTILIMASTER LOGO
9.8	BSNR	WASHER RIBBON
9.9	BSNR	BUMPER RUBBER DOCK (SPECIFY LENGTH)
9.10.1	15300358	BOX TOOL STEEL 24 x18 x12
9.10.2	22815919	BOX TOOL 14GA x12H x16D x32L
9.10.3	22815920	BOX TOOL 14GA x18H x16D x48L
9.10.4	06927741	TOOL BOX 24 x14 x16
9.11.1	03000824	DECAL DIESEL FUEL ONLY
9.11.2	01400004	DIESEL FUEL GAL/LTD
9.12	03000607	DECAL UNLEADED FUEL ONLY
9.13	02000244-Length	SCUFF RAIL 1 x6 x APITONG
9.14	08610453-11200	E-TRACK GALV 112"
9.15	02006028-Length	SLATS 1 x3 xLENGTH APITONG
9.NS	03101462	DECAL PARTS & WARRANTY 2.31 x4.00
9.Ref	21310640	KWIK ZIP SIGN SYSTEM
9.Ref	53301224	SIDEWALL ASSY RH 16'
9.Ref	53301223	SIDEWALL ASSY LH 16'
9.Ref	64301029	LAYOUT STD DECAL/LABEL

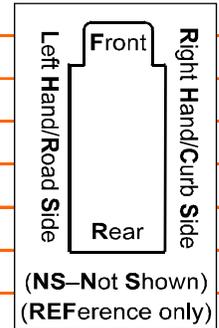

10—Cabover Option

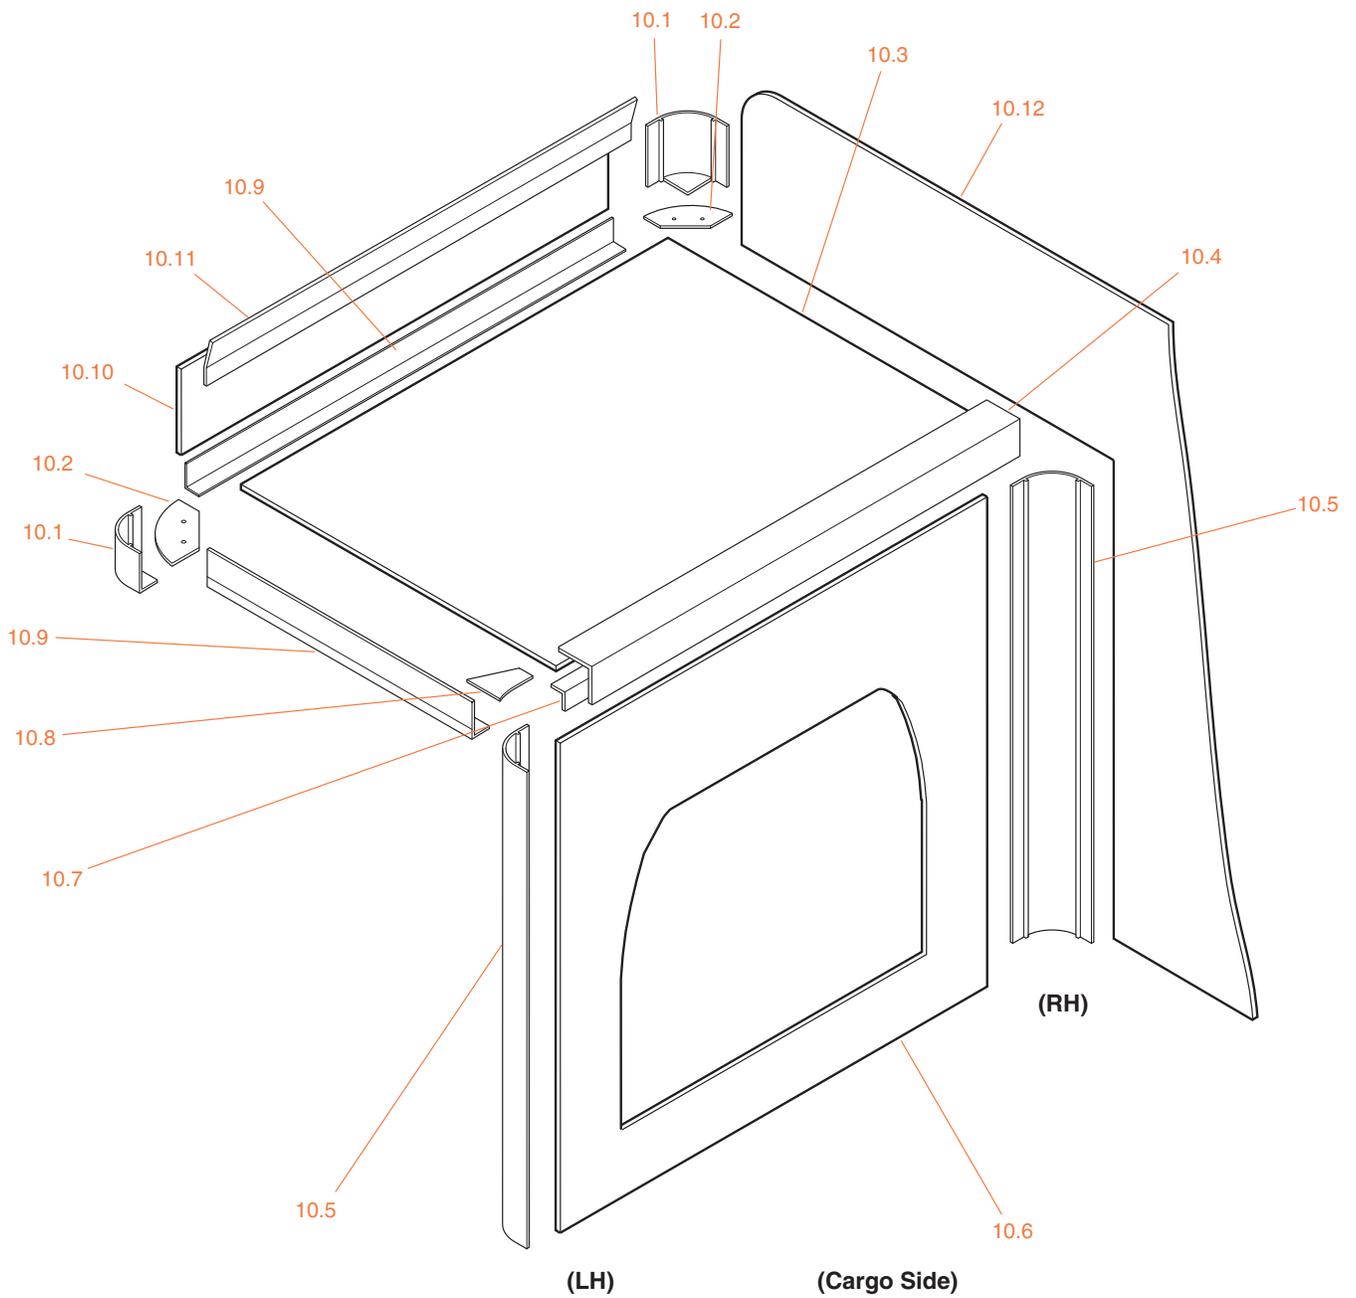


Cabover Option

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.


(See the Decoding Part Numbers section for Item, Part, and Description codes.)

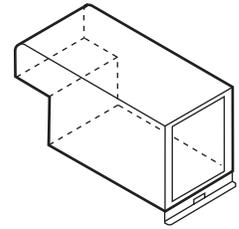

Item	Part Number	Description
10.0		Cabover Option
10.1	06013020-Length	POST WLDMNT UPPER VERT W /06521138
10.2	06921496	PLATE CRNR SEAL .063 x 2.5 x 6.22
10.3	BSNR	LAM 1-1/8 PLY/040
10.4	06600919	ANGLE .080 x 3.5 x 3.5 x 94 NTCH
10.4-N	06600918	ANGLE .080 x 3.5 x 3.5 x 92 NTCH
10.5	06013020-Length	FRONT CRNR POST 06013020
10.6	Reference Only	See Front Wall Section
10.7	06002050-Length	IA 637 ANGLE 06002050
10.8	06531281	GUSSET C/O .125 x 5.5 x 2.5 x 4.62
10.9	06003006-Length	ALUM EXT CABOVER B/RAIL IA 5762
10.10	BSNR	FRP FRT WALL C/O
10.11	06919083	CLOSEOUT WIRE 4.5 x 85.62
10.12	Reference Only	See Sidewall Section
10.NS	12301751	TAPE GREY BUTYL 1/16 x 1-1/2 50'
10.Ref	06923266	BASERAIL WLDMT C/O LH 71.0 42" DECK
10.Ref	06923267	BASERAIL WLDMT C/O RH 71.0 42" DECK

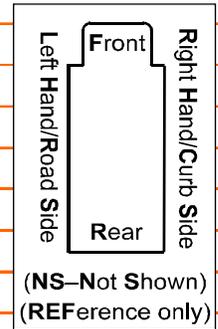

11—Roof Ladder Option

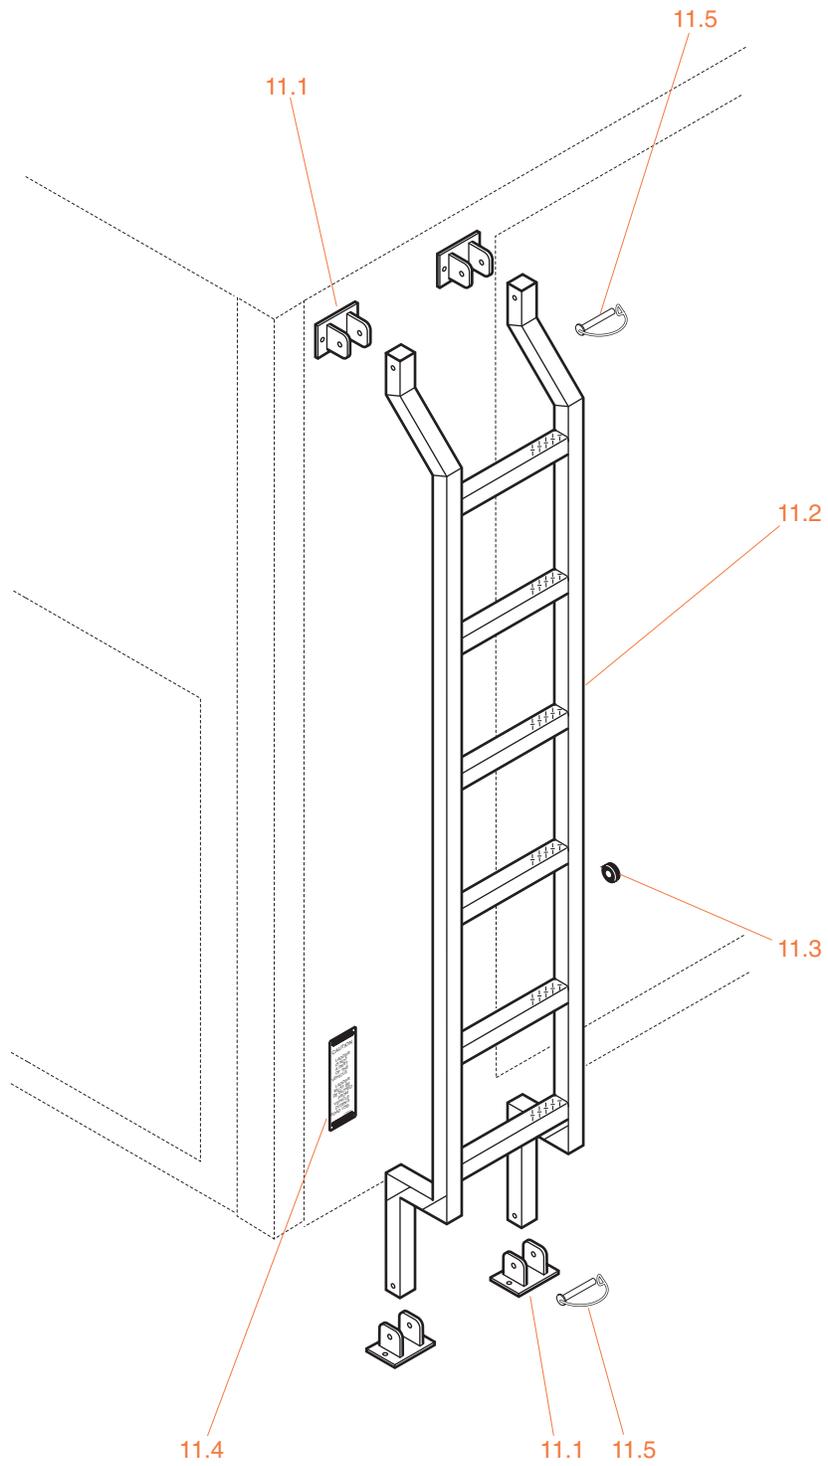


Roof Ladder Options

Utilimaster, 65528 State Road 19, P.O. Box 585, Wakarusa, IN 46573-0585, U.S.A.


Email CustSvc@Utilimaster.com or Browse the web site www.utilimaster.com.

Call 800-237-7806 (or 574-862-3219) or Fax to 574-862-7637.

(See the Decoding Part Numbers section for Item, Part, and Description codes.)

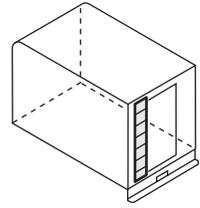

Item	Part Number	Description
11.0		Trademaster Ladder
11.1	01903283	BRKT LADDER TOP MNTG WLD ALUM .188
11.2.1	64351011	ALUM LADDER ACCESS 11"W x 87.25"L
11.2.2	64351016	LADDER ALUM ACCESS 11"W x CHART (Cab)
11.3	05705473	RUBBER BMPR 1.5 DIA x .625
11.4	03102615	DECAL TM LADDER REMOVAL CAUTION
11.5	08611079	SNAP PIN 5/16 x 2.50

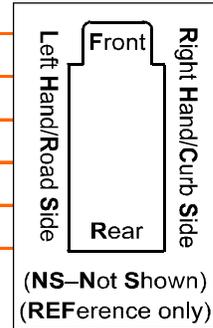

Appendixes

01901972—Rear Dock Extension

APPENDIX 01901972: REAR DOCK EXTENSION			
Part Number	Width	Crossmember	Ramp
01901538	90"	3"	6" Std
22813153	90"	3"	6" Nar
01901541	90"	3"	12" Std
22813154	90"	3"	12" Nar
01901539	96"	3"	6" Rmp
01100218	96"	3"	6" Std
01901475	96"	3"	12" Rmp
01100222	96"	3"	12" Std
01901941	96"	4"	12" Std
01901937	96"	4"	—
01901935	96"	4"	—
01901939	96"	4"	—
01100219	102"	3"	6" Std
01901540	102"	3"	6" Rmp
01900223	102"	3"	12" Std
01901476	102"	3"	12" Rmp
01901938	102"	4"	—
01901936	102"	4"	—
01901940	102"	4"	—
01901942	102"	4"	12" Std
01901476	120"	3"	12" Std

Parts in grayed-out areas are nonstocked items and may be substituted.

02805529—DuraPlate Panels

APPENDIX 02805529 DURAPLATE PANELS

Core Width	Part Number	6 MM DuraPlate Wall Panels BLANKS
8" Wide	02805534-Height	DURAPLATE 6MM x 8" PANEL NO HOLES
20" Wide	02805533-Height	DURAPLATE 6MM x 20" PANEL NO HOLES
24" Wide	02805532-Height	DURAPLATE 6MM x 24" PANEL NO HOLES
32" Wide	02805531-Height	DURAPLATE 6MM x 32" PANEL NO HOLES
42.81" Wide	02805536-Height	DURAPLATE 6MM x 42.81" PANEL NO HOLES (FRONT)
44" Wide	02805530-Height	DURAPLATE 6MM x 44" PANEL NO HOLES
45.81" Wide	02805535-Height	DURAPLATE 6MM x 45.81" PANEL NO HOLES (FRONT)
48" Wide	02805529-Height	DURAPLATE 6MM x 48 PANEL HO HOLES

Core Width	Part Number	6MM DuraPlate Front Wall Panels for Aerocaps
42.81" Wide	02805537-Height	DURAPLATE 6MM AEROCAP FRT NO HOLES
42.81" Wide	02805413-Height	DURAPLATE 6MM 42.81" AERO FRONT CHART

Core Width	Part Number	6MM DuraPlate Wall Panels with Pre-punched Holes
8" Wide	02805394-Height	DURAPLATE 6MM WHITE 8" FINISH CHART
20" Wide	02805395-Height	DURAPLATE 6MM WHITE 20" FINISH CHART
24" Wide	02805399-Height	DURAPLATE 6MM WHITE 24" FINISH CHART
32" Wide	02805393-Height	DURAPLATE 6MM WHITE 32" FINISH CHART
42.81" Wide	02805397-Height	DURAPLATE 6MM WHITE 42.81" FINISH CHART
44" Wide	02805396-Height	DURAPLATE 6MM WHITE 44" FINISH CHART
45.81" Wide	02805398-Height	DURAPLATE 6MM WHITE 45.81" FINISH CHART
48" Wide	02805379-Height	DURAPLATE 6MM WHITE 48" FINISH CHART

06402141—Roof Metal

APPENDIX 06402141: ROOF METAL		
Part Number	Replacement Number	Description
06402141	06402104-Length	ALUM .032 x 90W x 10' ROOF METAL
06402143	06402104-Length	ALUM .032 x 90W x 12' ROOF METAL
06402145	06402104-Length	ALUM .032 x 90W x 14' ROOF METAL
06402147	06402104-Length	ALUM .032 x 90W x 16' ROOF METAL
06402149	06402104-Length	ALUM .032 x 90W x 18' ROOF METAL
06402151	06402104-Length	ALUM .032 x 90W x 20' ROOF METAL
06402153	06402104-Length	ALUM .032 x 90W x 22' ROOF METAL
06402155	06402104-Length	ALUM .032 x 90W x 24' ROOF METAL
06402157	06402104-Length	ALUM .032 x 90W x 26' ROOF METAL
06402159	06402104-Length	ALUM .032 x 90W x 28' ROOF METAL
06402121	06402104-Length	ALUM .032 x 96W x 10' ROOF METAL
06402122	06402104-Length	ALUM .032 x 96W x 12' ROOF METAL
06402123	06402104-Length	ALUM .032 x 96W x 14' ROOF METAL
06402124	06402104-Length	ALUM .032 x 96W x 16' ROOF METAL
06402125	06402104-Length	ALUM .032 x 96W x 18' ROOF METAL
06402126	06402104-Length	ALUM .032 x 96W x 20' ROOF METAL
06402120	06402104-Length	ALUM .032 x 96W x 22' ROOF METAL
06402127	06402104-Length	ALUM .032 x 96W x 24' ROOF METAL
06402128	06402104-Length	ALUM .032 x 96W x 26' ROOF METAL
06402129	06402104-Length	ALUM .032 x 96W x 28' ROOF METAL
06402171	06502013-Length	ALUM .040 x 102W x 10' ROOF METAL
06402173	06502013-Length	ALUM .040 x 102W x 12' ROOF METAL
06402175	06502013-Length	ALUM .040 x 102W x 14' ROOF METAL
06402177	06502013-Length	ALUM .040 x 102W x 16' ROOF METAL
06402179	06502013-Length	ALUM .040 x 102W x 18' ROOF METAL
06402181	06502013-Length	ALUM .040 x 102W x 20' ROOF METAL
06402183	06502013-Length	ALUM .040 x 102W x 22' ROOF METAL
06402185	06502013-Length	ALUM .040 x 102W x 24' ROOF METAL
06402187	06502013-Length	ALUM .040 x 102W x 26' ROOF METAL
06402189	06502013-Length	ALUM .040 x 102W x 28' ROOF METAL

Parts in grayed-out areas are nonstocked items and may be substituted.

10300865—Rear Door Assembly

APPENDIX 10300865: REAR ROLL-UP DOOR ASSEMBLY	
Chart Number	Description
10300865	DOOR RU FW WHITING PREMIUM PLASTIC
10300866	DOOR RU FW WHITING PREMIUM ALUM
10301449	DOOR RU CHART SS RIVTS EX PNT TODCO TGH SHL
10301457	DOOR RU CHART SS RIVETS DIAMOND
10301458	DOOR RU CHART LONG LIFE BEARINGS TODCO
10301487	DOOR RU 4PT/SS TODCO CHARTTGH SHL
10301515	DOOR RU ALUM SS RIVET CHART WHITING
57300247	DOOR RU CHART PLASTIC TODCO FW
57300248	DOOR RU CHART ALUMINUM TODCO FW
57300249	DOOR RU CHART PLASTIC WHITING FW
57300250	DOOR RU CHART ALUM GP WHITING FW
57300416	DOOR RU PLASTIC FW CHART DIAMOND

This list is not all inclusive. Body Serial Number Required to verify door configuration.

22100241—Rear Corner Post

APPENDIX 22100241: CORNER POST		
Part Number	Description	Crossmember
22100241	POST REAR CORNER 10GA REAR LH SWING	3"
22100242	POST REAR CORNER 10GA REAR RH SWING	3"
22816937	POST REAR CORNER L/H S/STL SWG	3"
22816938	POST REAR CORNER L/H S/STL SWG	3"
22812959	POST REAR CORNER GVNL REAR LH SWING	3"
22812958	POST REAR CORNER GVNL REAR RH SWING	3"
22812934	POST REAR CORNER 10GA SOLID REAR WALL RH	3"
22812933	POST REAR CORNER 10GA SOLID REAR WALL LH	3"
22816920	POST REAR CORNER GVNL SOLID REAR WALL RH	3"
22814750	POST REAR CORNER LH 4" CTR 10G FLUSH	3"
22814751	POST REAR CORNER RH 10G FLUSH	3"
22815364	POST REAR CORNER LH 10GA 2/LIGHTS FLUSH	3"
22815365	POST REAR CORNER RH 10GA 2/LIGHTS FLUSH	3"
22814752	POST REAR CORNER LH GALVANEAL FLUSH	3"
22814753	POST REAR CORNER RH GALVANEAL FLUSH	3"
22815366	POST REAR CORNER LH GVNL 2/LIGHTS FLUSH	3"
22815367	POST REAR CORNER RH GVNL 2/LIGHTS FLUSH	3"
22816932	POST REAR CORNER L/H S/STL FLUSH	3"
22816931	POST REAR CORNER R/H S/STL FLUSH	3"
22816934	POST REAR CORNER 2/LIGHTS S/STL L/H	3"
22816933	POST REAR CORNER 2/LIGHTS S/STL R/H	3"
22815564	POST REAR CORNER 10GA REAR LH 3/LIGHTS FRGN	3"
22815565	POST REAR CORNER 10GA REAR RH 3/LIGHTS FRGN	3"
22815566	POST REAR CORNER GVNL REAR LH 3/LIGHTS FRGN	3"
22815567	POST REAR CORNER GVNL REAR RH 3/LIGHTS FRGN	3"
22816936	POST REAR CORNER 3/LIGHTS S/STL L/H FRGN	3"
22816935	POST REAR CORNER 3/LIGHTS S/STL R/H FRGN	3"
22812961	POST REAR CORNER 10GA REAR LH SWG	4"
22812960	POST REAR CORNER 10GA REAR RH SWG	4"
22812963	POST REAR CORNER GVNL REAR LH SWG	4"
22812962	POST REAR CORNER GVNL REAR RH SWG	4"
22814754	POST REAR CORNER LH 10GA	4"
22814755	POST REAR CORNER RH 10GA	4"
22814756	POST REAR CORNER LH GVNL	4"
22814757	POST REAR CORNER RH GVNL	4"
Prepunched holes 4" O.C. replaces posts with holes 8" O.C.		

22100557—Rear Header

APPENDIX 22100557: REAR HEADER	
Part Number	Description
22100557	HEADER RR 12GA x 4.88 x 89.5 NTCHD
22100558	HEADER RR 12GA x 4.88 x 95.5 NTCHD
22100559	HEADER RR 12GA x 4.88 x 101.5 NTCHD
22100560	HDR RR 12GA x 4.88 x 89.5 NTC GLVNLD
22100561	HDR RR 12GA x 4.88 x 95.5 NTC GLVNLD
22100562	HDR RR 12GA x 4.88 x 101.5 NTC GLVNLD
22100685	HEADER REAR 83.5
22100940	HDR 12GA x 9.5 BE SS SO#21634
22810268	HEADER 12GA x 95.5 W/CO D/BOLT
22810831-CHART	HEADER REAR 90W DR NTCH TB
22811031	HDR RR 12GA x 4.88 x 91.5 RYDER
22812232-CHART	HEADER RR SWG DRS 96W TB
22812704-CHART	HEADER RR SWG DRS 102W TB
22812965-CHART	HEADER REAR 90W DR GALVN TB
22812966-CHART	HEADER REAR 96W DR GALVN TB
22812967-CHART	HEADER REAR 102W DR GALV TB
22813717	HEADER 12GA x 101.5 W/CO D/BOLT
22814621	HDR RR 12GA x 95.5 30" SWG W/DBLT
22815404	HEADER RR DB HDWE BIFLD DRS
22815637	HEADER RR SWG DRS 40" OPNG SS
22815665	HDR RR 12GA x 101.5 *BE SS
22815568	HDR RR 12GA x 95.5 20" SWG W/DBLT
22816572	HEADER REAR SWING 50" OPENING 96W
22816724	HEADER, RR SWING DR 42" OPENING
22816912	HEADER REAR 12GA x 95.5 24" SWG DBLT
22817012	HEADER RR TWIN 25" SWING DOORS

22101200—Front Z-post

APPENDIX 22101200: Z-POST CHART	
Part Number	Body Height
22150161	6'-6"
22150162	7'-0"
22101200	7'-6"
22150163	8'-0"
22150164	8'-6"
22150165	9'-0"

22800102—Front Sheet Radius

APPENDIX 22800102: FRONT SHEET RADIUS		
Part Number	Description	Width
22800102	STAINLESS 12" FRT RADIUS 86"L	86"
06701226	CAP FRT 12" RADIUS 88"L	88"
06701230	CAP FRT 12" RADIUS 96"W	92"
22800101	CAP RADIUS FRT 12" S.STEEL 96W	92"
06701232	CAP FRT 12" RADIUS 102"W	98"
22800103	CAP RADIUS FRT 12" S.STEEL 102W	98"

22813454—Tire Plates

APPENDIX 22813454: TIRE PLATE CHART			
PART NUMBER	GAUGE	PLATE WIDTH	CROSS MEMBER
22813454	7GA	26.38"	3"
22813455	7GA	29.38"	3"
22813456	7GA	23.38"	3"
22813464	7GA	26.38"	4"
22813465	7GA	29.38"	4"
22813467	7GA	20.38"	3"

51304294—Crossmember Weldments

Appendix 51304294: I-BEAM CROSSMEMBER WELMENT CHART			
Body Size	I-beam Size	Part Number	Crossmember Size
72"	3"	22811125	71.5"
80"	3"	22500009	79.5"
82"	3"	22811127	81.5"
84"	3"	22500008	83.5"
90"	3"	22500005	89.5"
92"	3"	22811126	91.5"
96"	3"	22500006	95.5"
102"	3"	22500007	101.5"
96"	4"	22810795	95.5"
102"	4"	22810712	101.5"

Parts in grayed-out areas are nonstocked items and may be substituted.

52300250—Wide Threshold Plate

APPENDIX 52300250: WIDE THRESHOLD PLATE					
12" WIDE THRESHOLD PLATE					
PART NO.	DEPTH	BODY WIDTH	DESCRIPTION	WIDTH	LENGTH
22101223	11	84	12 GA .SMOOTH STL.	12	80
22101224	11	84	12 GA .STL.TREADPLATE	12	80
52300252	11	84	10 GA .SMOOTH STL.	12	80
52300253	11	84	10 GA .STL.TREADPLATE	12	80
22101225	11	90	12 GA .SMOOTH STL.	12	86
22101226	11	90	12 GA .STL.TREADPLATE	12	86
52300256	11	90	10 GA .SMOOTH STL.	12	86
52300257	11	90	10 GA .STL.TREADPLATE	12	86
22101227	11	96	12 GA .SMOOTH STL.	12	92
22101228	11	96	12 GA .STL.TREADPLATE	12	92
52300260	11	96	10 GA .SMOOTH STL.	12	92
52300261	11	96	10 GA .STL.TREADPLATE	12	92
22101229	11	102	12 GA .SMOOTH STL.	12	98
22101230	11	102	12 GA .STL.TREADPLATE	12	98
52300264	11	102	10 GA .SMOOTH STL.	12	98
52300265	11	102	10 GA .STL.TREADPLATE	12	98
12" WIDE THRESHOLD PLATE					
22815266	11	90	12 GA .SMOOTH STL.	12	86.75
22815267	11	90	12 GA .STL.TREADPLATE	12	86.75
22815268	11	96	12 GA .SMOOTH STL.	12	92.75
22815269	11	96	12 GA .STL.TREADPLATE	12	92.75
22815270	11	102	12 GA .SMOOTH STL.	12	98.75
22815271	11	102	12 GA .STL.TREADPLATE	12	98.75
18" 36" 48" WIDE THRESHOLD PLATE					
22810891	17	96	12 GA .STL.TREADPLATE	18	92
22811319	35	96	12 GA .STL.TREADPLATE	36	92
22815278	35	96	12 GA .STL.TREADPLATE	36	92.75
22815380	35	102	12 GA .STL.TREADPLATE	36	98.75
22810349	47	96	12 GA .STL.TREADPLATE	48	92
22815279	47	96	12 GA .STL.TREADPLATE	48	92.75
22811038	47	102	12 GA .STL.TREADPLATE	48	98
22815381	47	102	12 GA .STL.TREADPLATE	48	98.75
24" WIDE THRESHOLD PLATE					
22101231	23	84	12 GA .SMOOTH STL.	24	80
22101232	23	84	12 GA .STL.TREADPLATE	24	80
52300268	23	84	10 GA .SMOOTH STL.	24	80
52300269	23	84	10 GA .STL.TREADPLATE	24	80
22101233	23	90	12 GA .SMOOTH STL.	24	86
22101234	23	90	12 GA .STL.TREADPLATE	24	86
52300272	23	90	10 GA .SMOOTH STL.	24	86
52300273	23	90	10 GA .STL.TREADPLATE	24	86
22815272	23	90	12 GA .SMOOTH STL.	24	86.75
22815273	23	90	12 GA .STL.TREADPLATE	24	86.75
22101235	23	96	12 GA .SMOOTH STL.	24	92
22101236	23	96	12 GA .STL.TREADPLATE	24	92
52300276	23	96	10 GA .SMOOTH STL.	24	92
52300277	23	96	10 GA .STL.TREADPLATE	24	92
22815274	23	96	12 GA .SMOOTH STL.	24	92.75
22815275	23	96	12 GA .STL.TREADPLATE	24	92.75
22101237	23	102	12 GA .SMOOTH STL.	24	98
22101238	23	102	12 GA .STL.TREADPLATE	24	98
52300280	23	102	10 GA .SMOOTH STL.	24	98
52300281	23	102	10 GA .STL.TREADPLATE	24	98
22815276	23	102	12 GA .SMOOTH STL.	24	98.75
22815277	23	102	12 GA .STL.TREADPLATE	24	98.75

53301006—FRP Sidewalls

APPENDIX 53301006: FRP SIDEWALL										
Description	72" H	78" H	84" H	90" H	96" H	102" H	108" H	Core	Int Finish	Ent Finish
FRP 3/8 TEDLAR	02804069	02804070	02804071	02804072	02804073	NA	NA	3/8 Ply	Wht Resin	Wht Tedlar
FRP 3/8 GEL	02804074	02804075	02804076	02804077	02804078	NA	NA	3/8 Plywd	Wht Resin	Wht Gelc
FRP 3/8 GEL/GEL	02804155	02804156	02804157	02804158	02804159	NA	NA	3/8 Plywd	Wht Gelc	Wht Gelc
FRP 1/2 TEDLAR	02804079	02804080	02804081	02804082	02804083	02804084	02804085	1/2 Plywd	Wht Resin	Wht Tedlar
FRP 1/2 GEL	02804086	02804087	02804088	02804089	02804090	02804091	02804092	1/2 Plywd	Wht Resin	Wht Gelc
FRP 5/8 TEDLAR	02804093	02804094	02804095	02804096	02804097	02804098	02804099	5/8 Plywd	Wht Resin	Wht Tedlar
FRP 5/8 GEL	02804100	02804101	02804102	02804103	02804104	02804105	02804106	5/8 Plywd	Wht Resin	Wht Gelc
FRP 5/8 GEL/GEL	02804107	02804108	02804109	02804110	02804111	02804112	02804113	5/8 Plywd	Wht Gelc	Wht Gelc

54300274—Front Wall Z-post

APPENDIX 54300274: NOSE Z-POST		
Part Number	Description	Unit Height
22150166	ZPOST NOSE 2" CTR 18GA x 61.5 PNCH	6'-0"
22150167	ZPOST NOSE 2" CTR 18GA x 67.5 PNCH	6'-6"
22150168	ZPOST NOSE 2" CTR 18GA x 73.5 PNCH	7'-0"
22150169	ZPOST NOSE 2" CTR 18GA x 79.5 PNCH	7'-6"
22150170	ZPOST NOSE 2" CTR 18GA x 85.5 PNCH	8'-0"
22150172	ZPOST NOSE 2" CTR 18GA x 91.5 PNCH	8'-6"
22150173	Z POST NOSE 2" CTR 18GA x 97.5 PNCH	9'-0"

Parts in grayed-out areas are nonstocked items and may be substituted.

54300346—Front Assembly Post

APPENDIX 53300346: POST, FRONT ASSEMBLY 06013089						
Unit Height	Weldment LH	Weldment RH	Upper LH	Upper RH	Lower LH	Lower RH
6'-0"	53300879	53300880	06010202	06010203	06010204	06010205
6'-6"	53300881	53300882	06010202	06010203	06010206	06010207
7'-0"	53300883	53300884	06010202	06010203	06010208	06010209
7'-6"	53300885	53300886	06010202	06010203	06010210	06010211
8'-0"	53300887	53300888	06010202	06010203	06010212	06010213
8'-6"	53300889	53300890	06010202	06010203	06010214	06010215
9'-0"	53300891	53300892	06010202	06010203	06010216	06010217

Parts in grayed-out areas are nonstocked items and may be substituted.

54300521—FRP Front Wall with Aerocap

APPENDIX 54300521: FRP FRONT WALL WITH AEROCAP					
Part No.	Height	Core	Exterior Finish	Int Finish	Where Used
02803640	84"	3/8"	TEDLAR	WHITE RESIN	7' WHEELWELL
02803642	84"	3/8"	GELCOAT	WHITE RESIN	7' WHEELWELL
02804134	83"	3/8"	TEDLAR	WHITE RESIN	7' WHEELWELL
02804135	83"	3/8"	GELCOAT	WHITE RESIN	7' WHEELWELL
02803644	84"	1/2"	TEDLAR	WHITE RESIN	7' WHEELWELL
02803646	84"	1/2"	GELCOAT	WHITE RESIN	7' WHEELWELL
02804136	83"	1/2"	TEDLAR	WHITE RESIN	7' WHEELWELL
02804137	83"	1/2"	GELCOAT	WHITE RESIN	7' WHEELWELL
02803650	84"	5/8"	GELCOAT	WHITE RESIN	7' WHEELWELL
02804138	83"	5/8"	TEDLAR	WHITE RESIN	7' WHEELWELL
02804139	83"	5/8"	GELCOAT	WHITE RESIN	7' WHEELWELL
02803652	78"	3/8"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02803654	78"	3/8"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02804140	77"	3/8"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02804141	77"	3/8"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02803655	78"	1/2"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02803656	78"	1/2"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02804142	77"	1/2"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02804143	77"	1/2"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02803657	78"	5/8"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02803658	78"	5/8"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR
02804144	77"	5/8"	TEDLAR	WHITE RESIN	6'-6" FLT/FLR
02804145	77"	5/8"	GELCOAT	WHITE RESIN	6'-6" FLT/FLR

54301004—FRP Front Walls

APPENDIX 54301004: FRP FRONT WALL						
Part No. 90" W	Part No. 96" W	Part No. 102" W	Core	Interior Finish	Exterior Finish	Description
02804048	02804049	02804050	3/8 Plywood	White Resin	White Gelcoat	FRP 3/8 GELCOAT
02804051	02804052	02804053	3/8 Plywood	White Resin	White Tedlar	FRP 3/8 TEDLAR
02804054	02804055	02804056	1/2 Plywood	White Resin	White Gelcoat	FRP 1/2 GELCOAT
02804057	02804058	02804059	1/2 Plywood	White Resin	White Tedlar	FRP 1/2 TEDLAR
02804060	02804061	02804062	5/8 Plywood	White Gelcoat	White Gelcoat	FRP 5/8 GEL/GEL
02804063	02804064	02804065	5/8 Plywood	White Resin	White Gelcoat	FRP 5/8 GELCOAT
02804066	02804067	02804068	5/8 Plywood	White Resin	White Tedlar	FRP 5/8 TEDLAR
02804257	02804258	02804259	1/2 Encore	White Resin	White Tedlar	FRP 1/2 ENCORE/TEDLAR
02804311	02804312	02804313	1/2 Plywood	White Gelcoat	White Gelcoat	FRP 1/2 GEL/GEL

55300578—Rear Sill Extension, Chicago Style

APPENDIX 55300578: REAR SILL EXTENSION, CHICAGO STYLE				
Part Number	Depth	Frame Width	Body Width	Sill Width
01100200	12"	27.50	84"	31.25
01100201	12"	27.50	90"	34.25
01100202	12"	27.50	96"	37.25
01100203	12"	29.50	84"	30.25
01100204	12"	29.50	90"	33.25
01100205	12"	29.50	96"	36.25
01100206	12"	21.50	90"	32.25
01100207	12"	21.50	96"	35.25
01100208	12"	21.50	102"	38.25
01100200	12"	33.50	90"	31.25
01100201	12"	33.50	96"	34.25
01100202	12"	33.50	102"	37.25
01100209	12"	34.00	90"	31.00
01100210	12"	34.00	96"	34.00
01100211	12"	34.00	102"	37.00
01100203	12"	35.50	90"	30.25
01100204	12"	35.50	96"	33.25
01100205	12"	35.50	102"	36.25
01100212	12"	37.50	90"	29.25
01100206	12"	37.50	96"	32.25
01100207	12"	37.50	102"	35.25
01100213	24"	34.00	90"	31.00
01100214	24"	34.00	96"	34.00
01100215	24"	34.00	102"	37.00
01902070	12"	41.75	90"	27.12
01902071	12"	41.75	96"	30.12
01902072	12"	43.00	90"	26.50
01902073	12"	43.00	96"	29.50

55300795—Rear Structures Roll-up Doors

APPENDIX 55300795: STD REAR STRUCTURE WITH ROLL-UP DOORS			
Part Number	Height	Sill to Header	Post to Post
55300656	6'-0"	66.4	88.0
55300658	6'-6"	72.4	88.0
55300659	7'-0"	78.4	88.0
55300660	7'-6"	84.4	88.0
55300661	8'-0"	90.4	88.0
55300662	8'-6"	96.4	88.0
55300663	9'-0"	102.4	88.0
55300639	6'-0"	66.4	94.0
55300640	6'-6"	72.4	94.0
55300641	7'-0"	78.4	94.0
55300642	7'-6"	84.4	94.0
55300643	8'-0"	90.4	94.0
55300644	8'-6"	96.4	94.0
55300645	9'-0"	102.4	94.0



A

Address

- National Highway Traffic Safety Administration 14
- Transport Canada 14
- U.S. Department of Transportation 14
- Utilimaster
 - Customer service 15
 - Parts department 11
 - Publications department 3
 - Warranty department 13

Aerocap 48, 87

Aeromaster 7

Aluminum

- Front wall 52, 86
- Sidewalls 40

Appendixes 8, 78

B

Body serial number 9

Box, tool 72

BSNR 8

Bulkhead. *See* Front wall

Bumpers 24, 26, 72

C

Cabover 74

Cargo options 72

Chart 8. *See also* Appendixes

Compartment, tool box 72

Corner post, rear 82

Crossmembers 16, 20, 84

Customer service. *See* Utilimaster
Customer Service

D

Dock extension 78

Door

- Bulkhead 58, 60, 62
- Hardware 15, 58, 60, 62
- Mid-ship wall 58, 60, 62
- Rear roll-up 32, 81, 89
- Rear swing 36, 38

DSNR 8

DuraPlate

- Front wall 64
- Sidewalls 44

E

E-track 72

Electrical components 15, 66

Electrical harnesses 66

Email 11, 13, 15

F

Federal Certification Label 9

Floor, cargo 16

Forms 11, 13

Front assembly post 40, 86

Front sheet radius 48

Front wall

- Aluminum 52, 86
- DuraPlate 64
- Front sheet radius 48, 84
- FRP 54, 56, 58, 60, 62, 87
- Z-post 83, 86

FRP

- Front wall 58, 60, 62, 87
- Sidewalls 42, 86

G

Glossary of terms 15

Grab handles 28

H

Harnesses, electrical 66
Hazardous material placard 32
Header, rear 28, 83

I

Item numbers 7

L

Ladder 76
Lights 48, 66. *See also* Quick
Reference Parts Guide

M

Metromaster 7
Mid-ship wall 58, 60, 62
Mud flaps 15, 20

N

Numbers
Body (unit) serial 9
Item 7
Part 7
Phone 11, 13, 14, 15
Unit (body) serial 9
VIN 9
Work order 9

O

Options, cargo 72

P

Parts
Guide 15
Lists 16
Numbers 7
Order form 12
Ordering 11
Returns 11
Phone numbers 11, 15
NHTSA 14
Transport Canada 14
Warranty claims (fax) 13
Placard, hazardous material 32
Post, front assembly 40, 86

R

Rear
Bumpers 24, 26, 72
Corner post 28, 82
Dock extension 78, 79
Header 83
Roll-up door 32, 81
Structure
28, 30, 78, 79, 82, 83, 88
Swing doors 36, 38
Reflectors 28, 72
Revision 3
Roof 46, 48, 80
Roof ladder 76

S

Safety defects, reporting 14
Serial number 9
Service manual 15
Shelving 72
Sidewalls
 Aluminum 40
 DuraPlate 44
 FRP 42, 86
Sill, rear 88
Slats 72
Subfloor 20
Subframe 16, 20

T

Threshold plate 85
Tire plates 20, 84
Tool box 72
Trademaster 7
Treadplate 16

U

Unit serial number 9
Utilimaster Body Service Manual 15
Utilimaster Customer Service
 11, 13, 15
Utilimaster Glossary of Terms 15
Utilimaster Quick Reference Parts
 Guide 15

V

Vents 72
VIN 9

W

Warranty claims 13
Web site 3, 11, 13, 15
Windows 15, 32, 36
Wiring. See Electrical harnesses
Work order number 9

Z

Z-post
 Front wall 83, 86
 Sidewalls 40



Part Number: 03102101-PY01EN

©Utilimaster Corporation, 65906 State Road 19, P.O. Box 585, Wakarusa, Indiana, 46573-0585, USA
